


Structural Elements for Architects and Builders

Design of columns, beams, and tension elements in wood, steel, and reinforced concrete

Jonathan Ochshorn

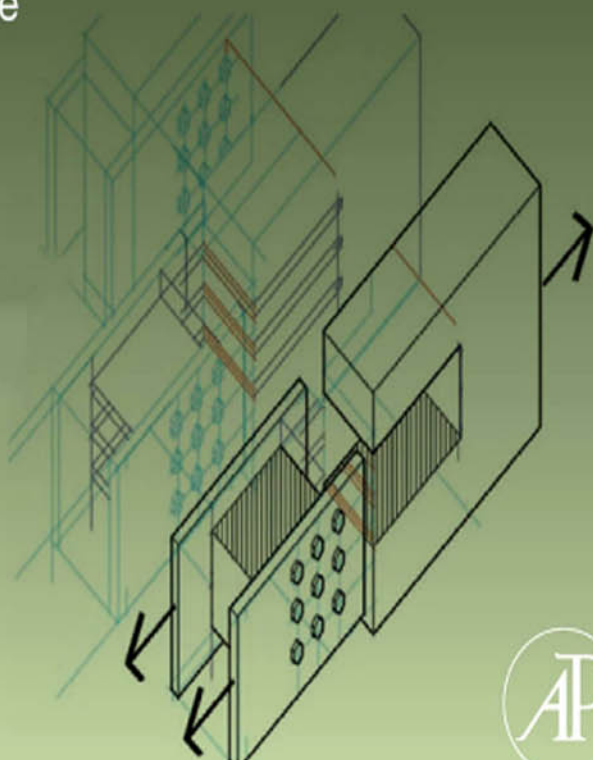

Structural Elements for Architects and Builders

This page intentionally left blank

Structural Elements for Architects and Builders

Design of Columns, Beams and
Tension Elements in Wood, Steel and
Reinforced Concrete

Jonathan Ochshorn

Department of Architecture,
Cornell University



AMSTERDAM • BOSTON • HEIDELBERG • LONDON
NEW YORK • OXFORD • PARIS • SAN DIEGO
SAN FRANCISCO • SINGAPORE • SYDNEY • TOKYO

Butterworth-Heinemann is an imprint of Elsevier



Butterworth-Heinemann is an imprint of Elsevier
30 Corporate Drive, Suite 400, Burlington, MA 01803, USA
Linacre House, Jordan Hill, Oxford OX2 8DP, UK

Copyright © 2010 Elsevier Inc. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or any information storage and retrieval system, without permission in writing from the publisher. Details on how to seek permission, further information about the Publisher's permissions policies and our arrangements with organizations such as the Copyright Clearance Center and the Copyright Licensing Agency, can be found at our website: www.elsevier.com/permissions.

This book and the individual contributions contained in it are protected under copyright by the Publisher (other than as may be noted herein).

Notices

Knowledge and best practice in this field are constantly changing. As new research and experience broaden our understanding, changes in research methods, professional practices, or medical treatment may become necessary.

Practitioners and researchers must always rely on their own experience and knowledge in evaluating and using any information, methods, compounds, or experiments described herein. In using such information or methods they should be mindful of their own safety and the safety of others, including parties for whom they have a professional responsibility.

To the fullest extent of the law, neither the Publisher nor the authors, contributors, or editors, assume any liability for any injury and/or damage to persons or property as a matter of products liability, negligence or otherwise, or from any use or operation of any methods, products, instructions, or ideas contained in the material herein.

Library of Congress Cataloging-in-Publication Data

Application submitted

British Library Cataloguing-in-Publication Data

A catalogue record for this book is available from the British Library.

ISBN: 978-1-85617-771-9

For information on all Butterworth-Heinemann publications visit our Web site at www.elsevierdirect.com

Printed in the United States of America

09 10 11 12 13 10 9 8 7 6 5 4 3 2 1

Working together to grow
libraries in developing countries

www.elsevier.com | www.bookaid.org | www.sabre.org

ELSEVIER

BOOK AID
International

Sabre Foundation

Contents

Preface..... vii

List of examples.....ix

List of appendices xi

CHAPTER 1 Statics..... 1

 Tributary areas 2

 Equilibrium 7

 Reactions..... 10

 Internal forces and moments 17

 Indeterminate structures..... 31

 Strength of materials 33

CHAPTER 2 Loads..... 39

 Dead loads..... 39

 Live loads 41

 Environmental loads..... 46

CHAPTER 3 Material properties..... 61

 Wood..... 63

 Steel..... 68

 Reinforced concrete 70

CHAPTER 4 Sectional properties..... 73

 Wood..... 73

 Steel..... 74

 Reinforced concrete 75

CHAPTER 5 Design approaches..... 79

 Allowable stress design 79

 Strength design 80

CHAPTER 6 Tension elements..... 87

 Wood..... 89

 Steel..... 96

 Reinforced concrete 104

CHAPTER 7 Columns..... 107

 Wood..... 109

 Steel..... 115

 Reinforced concrete 120

CHAPTER 8	Beams	129
	Deflection.....	129
	Bending stress	130
	Shear stress.....	136
	Wood.....	139
	Steel.....	150
	Reinforced concrete	164
CHAPTER 9	Connections	193
	Wood.....	194
	Steel.....	226
	Reinforced concrete	238
Appendix 1:	Tables for Chapter 1 (statics)	249
Appendix 2:	Tables for Chapter 2 (loads)	251
Appendix 3:	Tables for Chapter 3 (material properties).....	265
Appendix 4:	Tables for Chapter 4 (sectional properties).....	287
Appendix 5:	Tables for Chapter 5 (design approaches)	309
Appendix 6:	Tables for Chapter 6 (tension elements)	311
Appendix 7:	Tables for Chapter 7 (columns).....	315
Appendix 8:	Tables for Chapter 8 (beams)	329
Appendix 9:	Tables for Chapter 9 (connections).....	345
Appendix 10:	Unit abbreviations and conversion.....	373
References		375
Glossary		377
Index		383

Preface

As is well known, architects and builders rarely design the structural elements and systems within their buildings, instead engaging the services of (and, it is to be hoped, collaborating with) structural engineers, or relying upon standard practices sanctioned by building codes. Where architects or builders wish to be adventurous with their structures, some knowledge of structural behavior and the potential of structural materials is certainly useful. On the other hand, where they are content to employ generic structural systems—platform framing in wood, simple skeletal frames in steel or reinforced concrete—one can get by with little actual knowledge of structural design, relying instead on the expertise of structural consultants and the knowledge of common spans, heights, and cross-sectional dimensions around which many ordinary buildings can be planned.

The heroic stage of modernism, in which architects often sought to reconcile structural behavior and overall building form—some finding inspiration in the structural frame or the load-bearing wall—was also the heroic stage of structural education for architects: it was hardly necessary, in that context, to explain why architects needed to learn about structures. Some of the same excitement about the potential of structure in architecture still remains, but it is also true that a “mannerist” tendency has emerged, interested not necessarily in renouncing the role of structure in architecture, but rather reveling in its potential to distort, twist, fragment, and otherwise subvert modernist conventions and the architectural forms they support.

Yet all structures, whether hidden from view or boldly expressed, follow the same laws of equilibrium, are exposed to the same types of forces, and are constrained by the same material properties and manufacturing practices. It is, therefore, appropriate for architects and builders to study structures in such a way that the basic principles underlying all structural form become clear. This can be accomplished in three phases: (1) by studying the concepts of statics and strength of materials, (2) by learning how these concepts are applied to the design of common structural elements fabricated from real materials, and (3) by gaining insight into the design of structural systems comprised of structural elements interconnected in a coherent pattern.

Much of the material presented in this text can be found elsewhere; the basic conditions of equilibrium, historical insights into structural behavior that form the basis for structural design, and recommendations for design procedures incorporated into building codes are all widely disseminated through industry-published manuals, government-sanctioned codes, and academic texts. Many excellent structures texts have been written specifically for architects and builders. Thus, the question naturally arises: Why write another one?

The primary motivation for writing this text is to organize the material in a manner consistent with the structures curriculum developed within the Department

of Architecture at Cornell University, based on the three sequential “phases” just described—structural concepts, elements, and systems. While this text does contain a concise introduction to structural concepts (statics), it is primarily concerned with the design and analysis of structural elements: columns, beams, and tension members, and their connections. This material is organized into a single volume that is concise, comprehensive, and self-sufficient, including all necessary data for the preliminary design and analysis of these structural elements in wood, steel, and reinforced concrete.

A second motivation for writing this text is to present material in a manner consistent with my own priorities and sensibilities. Every chapter contains insight, speculation, or forms of presentation developed by the author and generally not found elsewhere. Additionally, the Appendices included at the end of the text contain numerous tables and graphs, based on material contained in industry publications, but reorganized and formatted especially for this text to improve clarity and simplicity—without sacrificing comprehensiveness.

Methods for designing structures and modeling loads are constantly being refined. Within the past several years, important changes have occurred in the design of wood, steel, and reinforced concrete structures, as well as in the modeling of loads. These changes include revised procedures for beam and column design in wood; the replacement of the standard specification for 36-ksi steel with a new standard based on 50-ksi steel for wide-flange sections; a major modification in the load factors used in reinforced concrete design, aligning them with those recommended by SEI/ASCE 7 and already used in the design of wood and steel structures; and numerous refinements in the modeling of environmental loads. These changes have all been incorporated into this text.

Finally, a disclaimer: This text is intended to be used only for the preliminary (schematic) design and understanding of structural elements. For the design of an actual structure, a competent professional should be consulted.

List of examples

- 1.1 Find reactions for simply supported beam
- 1.2 Find reactions for three-hinged arch
- 1.3 Find reactions for a cable
- 1.4 Find internal shear and bending moment for simply supported beam with “point” loads
- 1.5 Find internal shear and bending moments for a simply supported cantilever beam with distributed loads
- 1.6 Find internal axial forces in a truss (section method)
- 1.7 Find internal axial forces in a three-hinged arch
- 1.8 Find internal axial forces in a cable

- 2.1 Calculate dead loads
- 2.2 Calculate live loads
- 2.3 Calculate snow loads
- 2.4 Calculate wind loads
- 2.5 Calculate seismic loads

- 5.1 Load combinations (Part I)
- 5.2 Load combinations (Part II)
- 5.3 Load combinations (Part III)

- 6.1 Find elongation in tension element
- 6.2 Analyze wood tension element
- 6.3 Design wood tension element
- 6.4 Analyze steel tension element
- 6.5 Design steel tension element

- 7.1 Analyze wood column
- 7.2 Design wood column
- 7.3 Analyze steel column
- 7.4 Design steel column
- 7.5 Analyze axially loaded reinforced concrete column
- 7.6 Design axially loaded reinforced concrete column with cross-sectional dimensions assumed
- 7.7 Design axially loaded reinforced concrete column with reinforcement ratio assumed

- 8.1 Analyze wood beam, dimension lumber
- 8.2 Analyze wood beam, timbers
- 8.3 Design wood beam, glulam

x List of examples

- 8.4 Design wood beam, dimension lumber
- 8.5 Find capacity of beam web based on block shear
- 8.6 Design steel beam
- 8.7 Analyze rectangular HSS (hollow structural section)
- 8.8 Analyze reinforced concrete beam
- 8.9 Design reinforced concrete beam, with steel ratio assumed
- 8.10 Design reinforced concrete slab and T-beam, with cross-sectional dimensions assumed
- 8.11 Design shear reinforcement (stirrups) for reinforced concrete beam

- 9.1 Analyze wood single-shear connection using one bolt
- 9.2 Analyze wood single-shear connection using multiple bolts
- 9.3 Analyze wood double-shear connection using multiple bolts
- 9.4 Analyze wood double-shear connection using multiple bolts and steel side plates
- 9.5 Analyze wood single-shear connection using multiple lag screws
- 9.6 Design wood single-shear connection using common nails
- 9.7 Analyze wood double-shear bolted connection using yield limit and group action equations
- 9.8 Design wood connection in withdrawal, using lag screws
- 9.9 Analyze wood connection in withdrawal, using common nails
- 9.10 Check wood connection in bearing
- 9.11 Design bolted connection for steel tension element
- 9.12 Find capacity of welded connectors with transverse or longitudinal welds
- 9.13 Find capacity of welded connector with angled load
- 9.14 Design a welded connector with both longitudinal and transverse welds
- 9.15 Find required development length for straight bar and 90° hook in reinforced concrete structure
- 9.16 Find required length of compression column splice in reinforced concrete structure

List of appendices

Appendix 1: Tables for chapter 1 (statics)

A-1.1 Derivation of rules for drawing shear and moment diagrams

Appendix 2: Tables for chapter 2 (loads)

A-2.1 Dead loads

A-2.2 Live loads

A-2.3 Environmental loads

A-2.4 Snow load Importance factor, I_s

A-2.5 Wind coefficients

A-2.6 Seismic coefficients

Appendix 3: Tables for chapter 3 (material properties)

A-3.1 Design values for tension, F_t (psi) for visually graded lumber and glued laminated timber

A-3.2 Adjustments to allowable stress in tension, F_t , for visually graded lumber and glued laminated softwood timber

A-3.3 Design values for compression (psi), parallel to grain (F_c) and perpendicular to grain (F_{c-per}) for visually graded lumber and glued laminated softwood timber

A-3.4 Adjustments to allowable stress in compression, F_c , for visually graded lumber and glued laminated softwood timber

A-3.5 Design values for bending, F_b (psi) for visually graded lumber and glued laminated softwood timber

A-3.6 Adjustments to allowable stress in bending, F_b , for visually graded lumber and glued laminated softwood timber

A-3.7 Design values for shear, F_v (psi) for visually graded lumber and glued laminated softwood timber

A-3.8 Adjustments to allowable stress in shear, F_v , for visually graded lumber and glued laminated softwood timber

A-3.9 Design values for modulus of elasticity, E and E_{min} (psi) for visually graded lumber and glued laminated softwood timber (values and adjustments)

A-3.10 Use of load duration factor, C_D , for wood elements

A-3.11 Specific gravity for selected wood species

A-3.12 Steel properties

A-3.13 Steel allowable stresses and available strengths

Appendix 4: Tables for chapter 4 (sectional properties)

A-4.1 Dimensions and properties of lumber

A-4.2 Dimensions of typical glulam posts and beams

- A-4.3 Dimensions and properties of steel W-sections
- A-4.4 Dimensions and properties of selected steel C and MC channels
- A-4.5 Dimensions and properties of selected steel L angles
- A-4.6 Dimensions and properties of selected steel rectangular and square hollow structural sections (HSS)
- A-4.7 Dimensions and properties of selected steel round hollow structural sections (HSS)
- A-4.8 Dimensions and properties of selected steel pipe
- A-4.9 Dimensions of reinforced concrete beams, columns, and slabs
- A-4.10 Steel reinforcement — rebar — areas (in²) for groups of bars
- A-4.11 Reinforced concrete minimum width or diameter (in.) based on bar spacing

Appendix 5: Tables for chapter 5 (design approaches)

- A-5.1 Combined load factors
- A-5.2 Reinforced concrete strength reduction factors, ϕ and α

Appendix 6: Tables for chapter 6 (tension elements)

- A-6.1 Shear lag coefficient, U , for bolted and welded steel connections in tension
- A-6.2 Allowable force (lb) based on row and grid tear-out

Appendix 7: Tables for chapter 7 (columns)

- A-7.1 Effective length coefficient, K , for wood and steel columns
- A-7.2 Allowable axial loads (kips), A992 steel wide-flange columns ($F_y = 50$ ksi)
- A-7.3 Allowable stresses for A992 steel columns ($F_y = 50$ ksi)
- A-7.4 Allowable stresses for A500 Grade B HSS rect. columns ($F_y = 46$ ksi)
- A-7.5 Allowable stresses for A500 Grade B HSS round columns ($F_y = 42$ ksi)
- A-7.6 Allowable stresses for A36 steel columns ($F_y = 36$ ksi)
- A-7.7 Specifications for steel ties and spirals in reinforced concrete columns

Appendix 8: Tables for chapter 8 (beams)

- A-8.1 Allowable deflection for span, L
- A-8.2 Deflection calculations
- A-8.3 “Adjusted” section modulus ($C_F S_x$) values for wood sections in bending (lightest shown in bold face)
- A-8.4 Plastic section modulus (Z_x) values: lightest laterally braced steel compact shapes for bending, $F_y = 50$ ksi
- A-8.5 Available moment for A992 wide-flange (W) shapes
- A-8.6 “Shear” equations for reinforced concrete beams
- A-8.7 Moment values for continuous reinforced concrete beams and slabs
- A-8.8 Limits on steel ratio for “tension-controlled” reinforced concrete beams
- A-8.9 Values of R and ρ for reinforced concrete beams, T-beams, and one-way slabs (using 60 ksi steel)

Appendix 9: Tables for chapter 9 (connections)

- A-9.1 Selected lag screw (lag bolt) dimensions
- A-9.2 Selected common wire nail dimensions
- A-9.3 Penetration and dowel bearing length
- A-9.4 Duration of load adjustment factor, C_D , for wood connectors
- A-9.5 Wet service adjustment factor, C_M , for wood connectors
- A-9.6 Group action adjustment factor, C_g , for wood connectors
- A-9.7 Geometry adjustment factor, C_{Δ} , for wood connectors (bolts and lag screws)
- A-9.8 Toe-nail adjustment factor, C_m , for nails
- A-9.9 Temperature factor, C_t , for wood fasteners
- A-9.10 Lateral design value, Z (lb) for bolts: single-shear connections, with $1\frac{1}{2}$ in. side member thickness, both members same species (or same specific gravity)
- A-9.11 Lateral design value, Z (lb) for bolts: double-shear connections, with $1\frac{1}{2}$ in. side member thickness, both members same species (or same specific gravity)
- A-9.12 Lateral design value, Z (lb) for bolts: double-shear connections, with two $\frac{1}{4}$ in. A36 steel side plates
- A-9.13 Lateral design value, Z (lb) for lag screws: single-shear connections, both members same species (or same specific gravity)
- A-9.14 Lateral design value, Z (lb) for common nails: single-shear connections, both members same species (or same specific gravity)
- A-9.15 Method for determining lateral design value, Z , based on yield limit equations
- A-9.16 Withdrawal design value, W , per inch of penetration (lb) for lag screws
- A-9.17 Withdrawal design value, W , per inch of penetration (lb) for nails
- A-9.18 Shear capacity, or available strength, for a high-strength bolt subjected to single shear with threads excluded from shear plane (kips)
- A-9.19 Bearing capacity, or available strength, for a high-strength bolt bearing on material 1 in. thick, with clear spacing between bolts (or edge) ≥ 2 in. (kips)
- A-9.20 Minimum and maximum spacing and edge distance measured from bolt centerline for standard holes
- A-9.21 Size limitations (leg size, w) for fillet welds (in.)
- A-9.22 Development length in inches, l_d , for deformed bars in tension, uncoated, normal-weight concrete, with adequate spacing and/or stirrups
- A-9.23 Development length for standard hooks in inches, l_{db} , for uncoated bars, normal-weight concrete
- A-9.24 Development length in inches, l_{dc} , for deformed bars in compression

Appendix 10: Unit abbreviations and conversion

- A-10.1 Unit abbreviations
- A-10.2 Conversions from SI (international system) to inch-pound units
- A-10.3 Conversions from inch-pound to SI (international system) units

This page intentionally left blank

Statics


1

The study of structural behavior and structural design begins with the concept of load. We represent loads with arrows indicating direction and magnitude. The magnitude is expressed in pounds (lb), kips (1 kip = 1000 lb), or appropriate SI units of *force*; the direction is usually vertical (gravity) or horizontal (wind, earthquake), although wind loads on pitched roofs can be modeled as acting perpendicular to the roof surface (Figure 1.1).

Where loads are distributed over a surface, we say, for example, 100 pounds per square foot, or 100 psf. Where loads are distributed over a linear element, like a beam, we say, for example, 2 kips per linear foot, or 2 kips per foot, or 2 kips/ft (Figure 1.2). Where loads are concentrated at a point, such as the vertical load transferred to a column, we say, for example, 10 kips or 10 k.

Finding out what the loads are that act on a structure and how these loads are supported is the prerequisite to all structural design. There are two main reasons for this. First, the fact that a structural element is supported at all means that the supporting element is being stressed in some way. To find the magnitude of the reactions of an element is thus to simultaneously find the magnitude of the loads acting on the supporting element. Each action, or load, has an equal reaction; or, as Newton said in defense of this third law: "If you press a stone with your finger, the finger is also pressed by the stone."

The second reason for finding reactions of the structural element is that doing so facilitates the further analysis or design of the element itself. That is, determining reactions is the prerequisite to the calculation of internal loads and internal stresses,

**FIGURE 1.1**

Direction of loads can be (a) vertical, (b) horizontal, or (c) inclined

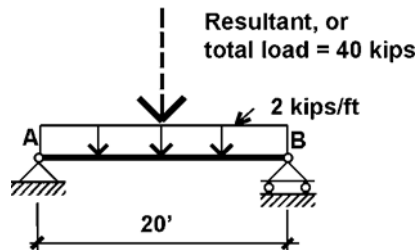


FIGURE 1.2

Distributed loads on a beam

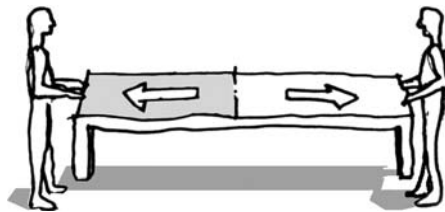


FIGURE 1.3

Tributary areas divide the load among the various supports

values of which are central to the most fundamental questions of structural engineering: Is it strong enough? Is it safe?

TRIBUTARY AREAS

When loads are evenly distributed over a surface, it is often possible to “assign” portions of the load to the various structural elements supporting that surface by subdividing the total area into *tributary areas* corresponding to each member. In Figure 1.3, half the load of the table goes to each lifter.

In Figure 1.4, half the 20-psf snow load on the cantilevered roof goes to each column; the tributary area for each column is $10\text{ ft} \times 10\text{ ft}$, so the load on each column is $20(10 \times 10) = 2000\text{ lb} = 2\text{ kips}$.

Figure 1.5 shows a framing plan for a steel building. If the total floor load is 100 psf, the load acting on each of the structural elements comprising the floor system can be found using appropriate tributary areas. Beam *A* supports a total load of $100(20 \times 10) = 20,000\text{ lb} = 20\text{ kips}$; but it is more useful to calculate the distributed load acting on any linear foot of the beam—this is shown by the shaded tributary area in Figure 1.6*a* and is $100(1 \times 10) = 1000\text{ lb} = 1\text{ kip}$. Since 1000 lb is acting on a 1-ft length of beam, we write 1000 lb/ft or 1.0 kip/ft, as shown in Figure 1.6*b*.

As shown in Figure 1.7*a*, Beam *B* (or Girder *B*) supports a total tributary area of $17.5 \times 20 = 350\text{ ft}^2$. The load at point *a* is not included in the beam’s tributary area. Rather, it is assigned to the edge, or *spandrel*, girder where it goes directly into a

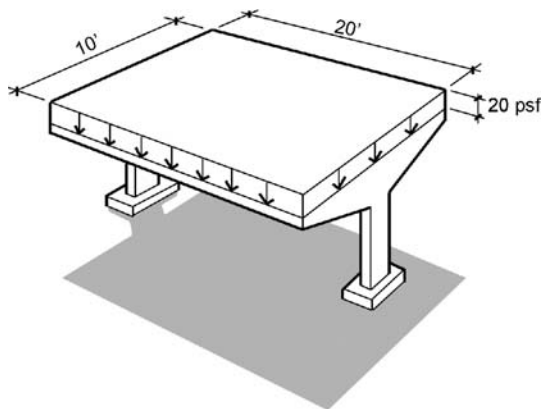


FIGURE 1.4
Distributed load on a floor carried by two columns

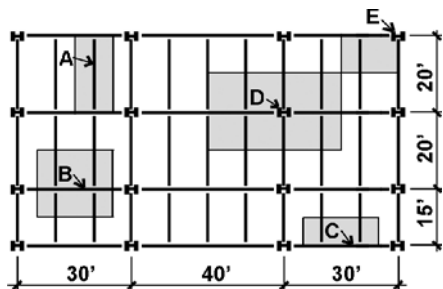


FIGURE 1.5
Framing plan showing tributary areas for beams, girders, and columns

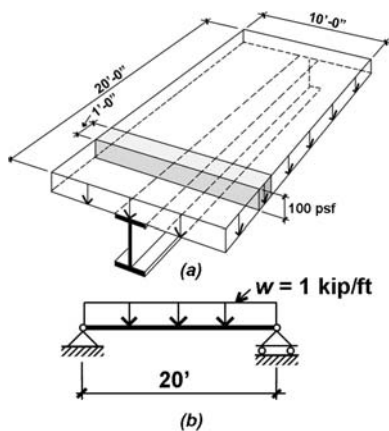


FIGURE 1.6
Distributed load on a steel beam, with (a) one linear foot of its tributary area shown and (b) load diagram showing distributed load in kips per foot

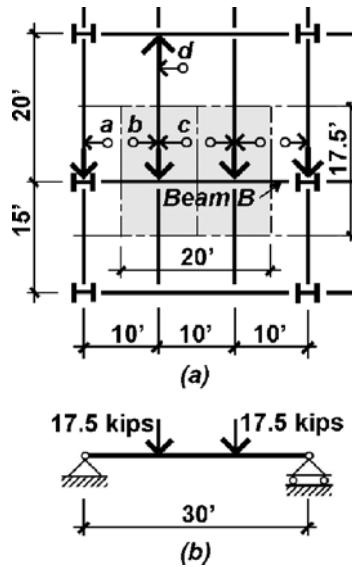


FIGURE 1.7

Concentrated loads on a girder (a) derived from tributary areas on framing plan and (b) shown on load diagram

column, having no effect on Beam *B*. Unlike Beam *A*, the floor loads are transferred to Beam *B* at two points: each concentrated load corresponds to a tributary area of $17.5 \times 10 = 175 \text{ ft}^2$; therefore, the two loads each have a magnitude of $100 \times 175 = 17,500 \text{ lb} = 17.5 \text{ kips}$. The load diagram for Beam *B* is shown in Figure 1.7b.

Spandrel girders

Beam *C* (or Spandrel Girder *C*), shown in Figure 1.5, is similar to Beam *B* except that the tributary area for each concentrated load is smaller, $7.5 \times 10 = 75 \text{ ft}^2$, as shown in Figure 1.8a. The two concentrated loads, therefore, have a magnitude of $100 \times 75 = 7500 \text{ lb} = 7.5 \text{ kips}$, and the load diagram is as shown in Figure 1.8b.

There are three reasons spandrel girders are often larger than otherwise similar girders located in the interior of the building, even though the tributary areas they support are smaller. First, spandrel girders often support cladding of various kinds, in addition to the floor loads included in this example. Second, aside from the added weight to be supported, spandrels are often made bigger so that their *deflection*, or vertical movement, is reduced. This can be an important consideration where non-structural cladding is sensitive to movement of the structural frame. Third, when the girders are designed to be part of a moment-resisting frame, their size might need to be increased to account for the stresses introduced by lateral forces such as wind and earthquake.

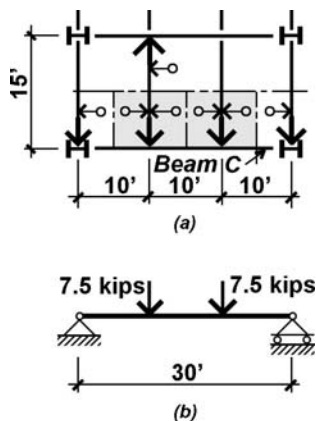


FIGURE 1.8
Concentrated loads on a spandrel girder (a) derived from tributary areas on framing plan and (b) shown on load diagram

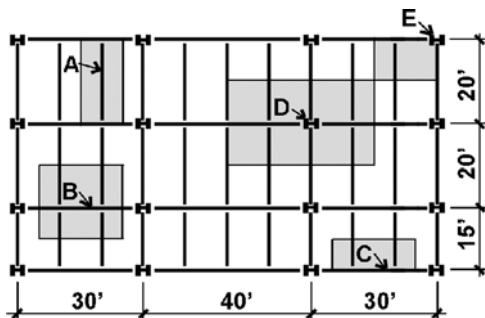
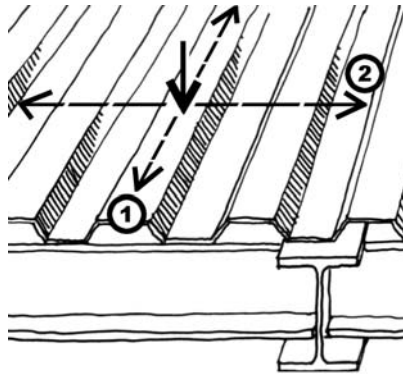


FIGURE 1.9
Framing plan showing tributary areas for columns (one floor only)

Columns

One way or another, all of the load acting on the floor must be carried by columns under that floor. For most structures, it is appropriate to subdivide the floor into tributary areas defined by the centerlines between columns so that every piece of the floor is assigned to a column.

It can be seen from Figure 1.9 that typical interior columns carry twice the load of typical exterior columns, and four times the load of corner columns. However, two of the conditions described earlier with respect to the enlargement of spandrel girders can also increase the size of exterior and corner columns: the need to support

**FIGURE 1.10**


Competing load paths on a corrugated steel deck

additional weight of cladding and the possibility of resisting wind and earthquake forces through rigid connections to the spandrel girders.

Column *D* supports a tributary area of $35 \times 20 = 700 \text{ ft}^2$ so that the load transferred to Column *D* from the floor above is $100 \times 700 = 70,000 \text{ lb} = 70 \text{ kips}$, assuming that the floor above has the same shape and loads as the floor shown. But every floor and roof above also transfers a load to Column *D*. Obviously, columns at the bottom of buildings support more weight than columns at the top of buildings, since all the tributary areas of the floors and roof above are assigned to them. As an example, if there are nine floors and one roof above Column *D*, all with the same distributed load and tributary area, then the total load on Column *D* would be, not 70 k, but $(9 + 1) \times 70 = 700 \text{ kips}$.

In practice, the entire load as previously calculated is not assigned to columns or to other structural elements with large total tributary areas. This is because it is unlikely that a large tributary area will be fully loaded at any given time. For example, if the live load caused by people and other movable objects is set at 60 psf, and one person weighed 180 lb, then a tributary area of 7000 ft^2 (as in the example of Column *D*) would have to be populated by more than 2000 people, each occupying 3 ft^2 , in order to achieve the specified load. That many people crowded into that large a space is an unlikely occurrence in most occupancies, and a *live load reduction* is often allowed by building codes. As the tributary area gets smaller, however, the probability of the full live load being present increases, and no such reduction is permitted. Permanent and immovable components of the building, or dead loads, have the same probability of being present over large tributary areas as small tributary areas, so they are never included in this type of probability-based load reduction. Calculations for live load reduction are explained in the next chapter.

The path taken by a load depends on the ability of the structural elements to transfer loads in various directions. Given the choice of two competing load paths such as (1) and (2) in Figure 1.10, the load is divided between the two paths in

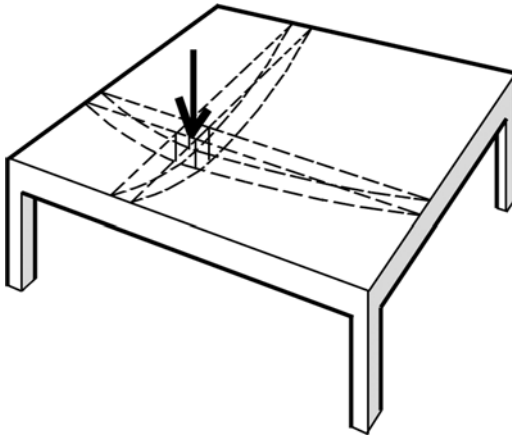**FIGURE 1.11**


Competing load paths on a two-way slab

proportion to the *relative stiffness* of each path. Since the corrugated steel deck shown in Figure 1.10 is much stiffer in the direction of load path (1), and, in fact, is designed to carry the entire load in that direction, we neglect the possibility of the load moving along path (2).

For “two-way” systems, generally only used in reinforced concrete (Figure 1.11), or for indeterminate systems in general, the assignment of loads to beams and columns also becomes a function of the relative stiffness of the various components of the system. Stiffer elements “attract” more load to them, and the simplistic division into tributary areas becomes inappropriate, except in certain symmetrical conditions.

EQUILIBRIUM

Where loads or structural geometries are not symmetrical, using tributary areas may not accurately predict the effects of loads placed on structures, and other methods must be used. We can determine the effects of loads placed on statically determinate structures by assuming that such structures remain “at rest,” in a state of equilibrium. The implication of this condition, derived from Newton’s second law, is that the summation of all forces (or moments) acting on the structure along any given coordinate axis equals zero. For a plane structure—that is, one whose shape and deflection under loads occurs on a planar surface—three equations uniquely define this condition of equilibrium: two for loads (forces) acting along either of the perpendicular axes of the plane’s coordinate system and one for moments acting “*about*” the axis perpendicular to the structure’s plane. Some examples of plane structures are shown in Figure 1.12.

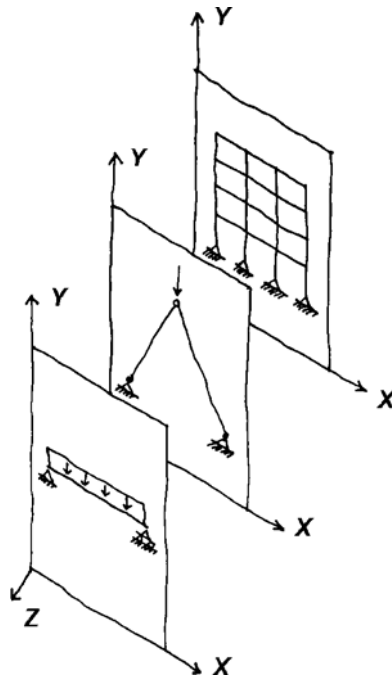
**FIGURE 1.12**

Examples of plane structures: simply supported beam, three-hinged arch, and rigid (moment-resisting) frame


In words, the equations of equilibrium state that the sum of all “horizontal” forces is zero; the sum of all “vertical” forces is zero; and—take a deep breath here—the sum of all moments about any point, including those resulting from any force multiplied by its distance (measured perpendicular to the “line of action” of the force) to the point about which moments are being taken, is zero.

“Horizontal” and “vertical” can be taken as any perpendicular set of coordinate axes. Where x is used for the horizontal axis and y for the vertical, moments in the plane of the structure are acting about the z -axis. This conventional way of representing coordinate systems for the consideration of equilibrium is inconsistent with the labeling typically used to distinguish between axes of bending. Compare the typical axes of bending shown in Figure 1.13 with the “equilibrium” coordinate axes in Figure 1.12. Written symbolically, the equations are:

$$\begin{aligned}\Sigma F_x &= 0 \\ \Sigma F_y &= 0 \\ \Sigma M_{pt.} &= 0\end{aligned}\tag{1.1}$$

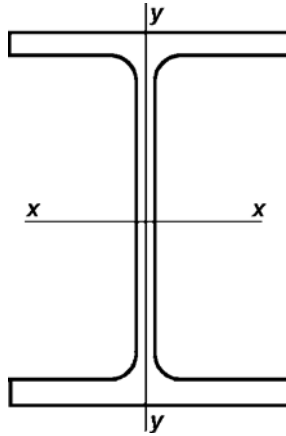**FIGURE 1.13**

Coordinate axes for a steel W-shape

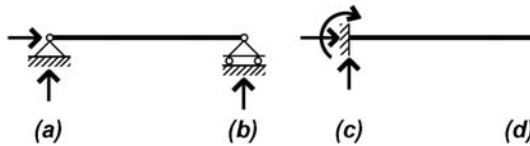**FIGURE 1.14**

Abstract symbols for reactions, including (a) hinge or pin-end, (b) roller, (c) fixed, and (d) free end

For any plane, rigid-body structure (just “structure” or “structural element” from now on) subjected to various loads, the three equations of equilibrium provide the mathematical basis for determining values for up to three unknown forces and moments—the *reactions* of the structure to the loads. Structural elements of this type are statically determinate because the magnitudes of the unknown reactions can be determined using only the equations of static equilibrium.

Free-body diagrams

Any structure (or part of a structure) so defined can be represented as a *free-body diagram* (FBD). All “external” loads acting on the FBD, all unknown “external” moments or forces at the points where the FBD is connected to other structural elements (i.e., all reactions), and all unknown “internal” moments or forces at points where a FBD is “cut” must be shown on the diagram.

Single or multiple reactions occurring at a given point are often represented by standard symbols. These pictures graphically indicate the types of forces and moments that can be developed (Figure 1.14). Other combinations of forces and moments can

be represented graphically; the three symbols shown, however, cover most commonly encountered conditions.

Where an FBD is “cut” at a point other than at the reactions of the structural element, an internal moment as well as two perpendicular internal forces are typically present, unless an internal constraint, such as a hinge, prevents one or more of those forces (or moments) from developing.

Where there are more reactions than equations of equilibrium, the structure is said to be statically indeterminate, and equilibrium alone is insufficient to determine the values of the reactions; other techniques have been developed to find the reactions of indeterminate structures, but these are beyond the scope of this text.

REACTIONS

The following examples show how the equations of equilibrium can be used to find reactions of various common determinate structures. The procedures have been developed so that the equations need not be solved simultaneously. Alternatively, where determinate structures are symmetrical in their own geometry as well as in their loading (assumed to be vertical), reactions can be found by assigning half of the total external loads to each vertical reaction.

Example 1.1 Find reactions for simply supported beam

Problem definition


Find the three reactions for a simply supported beam supporting a distributed load of 100 kips/ft over a span of 20 ft. *Simply supported* means that the beam is supported by a hinge and a roller, and is therefore determinate.

Solution overview

Draw load diagram with unknown forces and/or moments replacing the reaction (constraint) symbols; use the three equations of equilibrium to find these unknown reactions.

Problem solution

1. Redraw load diagram (Figure 1.15a) by replacing constraint symbols with unknown forces, H_A , R_A , and R_B , and by showing a resultant for all distributed loads (Figure 1.15b).
2. The solution to the horizontal reaction at point A is trivial, since no horizontal loads are present: $\Sigma F_x = H_A = 0$. In this equation, we use a sign convention, where *positive* corresponds to forces pointing to the right and *negative* to forces pointing to the left.
3. The order in which the remaining equations are solved is important: moment equilibrium is considered before vertical equilibrium in order to reduce the number of unknown variables in the vertical equilibrium equation. Moments can be taken about any point in the plane; however, unless you wish to solve the two remaining equations simultaneously, it is suggested that the point be chosen strategically to eliminate all but one of the unknown

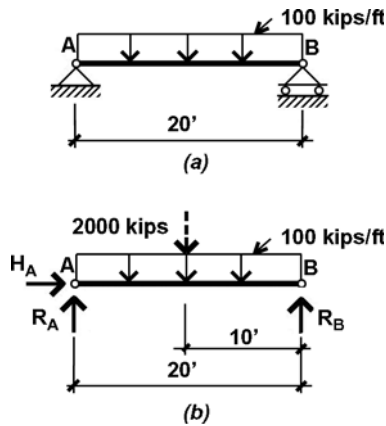**FIGURE 1.15**

Load diagram for simply supported beam for Example 1.1 showing (a) constraint symbols and (b) unknown forces replacing constraint symbols, and resultant corresponding to distributed load

variables. Each moment is the product of a force times a distance called the moment arm; this moment arm is measured from the point about which moments are taken to the “line of action” of the force and is measured perpendicular to the line of action of the force.

Where the moment arm equals zero, the moment being considered is also zero, and the force “drops out” of the equation. For this reason, it is most convenient to select a point about which to take moments that is aligned with the line of action of either of the two unknown vertical reactions so that one of those unknown forces drops out of the equation of equilibrium. The sign of each moment is based on an arbitrary sign convention, with *positive* used when the moment causes a clockwise rotation of the beam considered as a free-body diagram and *negative* when a counterclockwise rotation results (the opposite convention could be chosen as well). In the equation that follows, each product of two numbers represents a force times a distance so that, taken together, they represent the sum of all moments acting on the beam. Forces whose moment arm is zero are left out.

$$\Sigma M_B = R_A(20) - 2000(10) = 0$$


Solving for the vertical reaction at point A, we get: $R_A = 1000$ kips.

4. Finally, we use the third equation of equilibrium to find the last unknown reaction. Another sign convention is necessary for vertical equilibrium equations: we arbitrarily choose *positive* to represent an upward-acting force and *negative* to represent a downward-acting force.

$$\Sigma F_y = R_A + R_B - 2000 = 0$$

or, substituting $R_A = 1000$ kips:

$$1000 + R_B - 2000 = 0$$

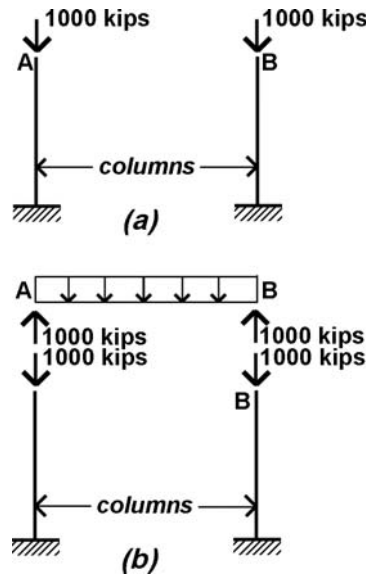**FIGURE 1.16**

Support for the beam from Example 1.1 showing (a) load on column supports and (b) reactions from beam corresponding to load on column supports

Solving for the vertical reaction at point B , we get $R_B = 1000$ kips.

The two vertical reactions in this example are equal and could have been found by simply dividing the total load in half, as we did when considering tributary areas. Doing this, however, is only appropriate when the structure's geometry and loads are symmetrical.

If the reactions represent other structural supports such as columns or girders, then the “upward” support they give to the beam occurs simultaneously with the beam’s “downward” weight on the supports: in other words, if the beam in Example 1.1 is supported on two columns, then those columns (at points A and B) would have load diagrams as shown in Figure 1.16a. The beam and columns, shown together, have reactions and loads as shown in Figure 1.16b. These pairs of equal and opposite forces are actually inseparable. In the Newtonian framework, each action, or load, has an equal reaction.

Example 1.2 Find reactions for three-hinged arch

Problem definition

Find the reactions for the three-hinged arch shown in Figure 1.17a.

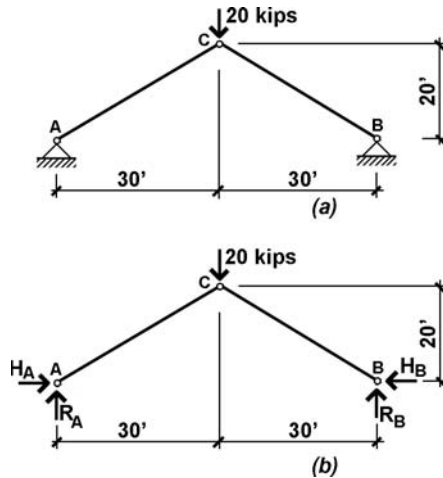


FIGURE 1.17

Load diagram for three-hinged arch for Example 1.2 showing (a) constraint symbols and (b) unknown forces replacing constraint symbols

Solution overview

Draw load diagram with unknown forces and/or moments replacing the reaction (constraint) symbols; use the three equations of equilibrium, plus one additional equation found by considering the equilibrium of another free-body diagram, to find the four unknown reactions.

Problem solution

- The three-hinged arch shown in this example appears to have too many unknown variables (four unknowns versus only three equations of equilibrium); however, the *internal hinge* at point C prevents the structure from behaving as a rigid body, and a fourth equation can be developed out of this condition. The initial three equations of equilibrium can be written as follows:

- $\Sigma M_B = R_A(60) - 20(30) = 0$, from which $R_A = 10$ kips.
- $\Sigma F_y = R_A + R_B - 20 = 0$; then, substituting $R_A = 10$ kips from the moment equilibrium equation solved in step a, we get $10 + R_B - 20 = 0$, from which $R_B = 10$ kips.
- $\Sigma F_x = H_A - H_B = 0$.

Sign conventions are as described in Example 1.1. This last equation of horizontal equilibrium (step c) contains two unknown variables and cannot be solved at this point. To find H_A , it is necessary to first cut a new FBD at the internal hinge (point C) in order to examine the equilibrium of the resulting partial structure shown in Figure 1.18.

With respect to this FBD, we show unknown internal forces H_C and V_C at the cut, but we show no bending moment at that point since none can exist at a hinge. This condition of zero moment is what allows us to write an equation that can be solved for the unknown, H_A :

$$\Sigma M_C = 10(30) - H_A(20) = 0$$

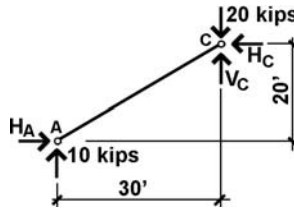


FIGURE 1.18

Free-body diagram cut at internal hinge at point C, for Example 1.2

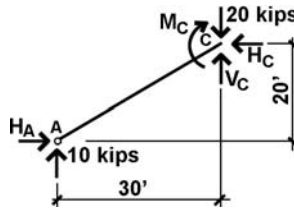


FIGURE 1.19

Free-body diagram for a two-hinged arch (with internal moment at point C)

from which $H_A = 15$ kips.

Then, going back to the “horizontal” equilibrium equation shown in step c that was written for the entire structure (not just the cut FBD), we get:

$$\Sigma F_x = H_A - H_B = 15 - H_B = 0$$

from which $H_B = 15$ kips.

While the moment equation written for the FBD can be taken about any point in the plane of the structure, it is easier to take moments about point C, so that only H_A appears in the equation as an unknown. Otherwise, it would be necessary to first solve for the internal unknown forces at point C, using “vertical” and “horizontal” equilibrium.

If there were no hinge at point C, we would need to add an unknown internal moment at C, in addition to the forces shown (Figure 1.19). The moment equation would then be $\Sigma M_C = 10(30) - H_A(20) + M_C = 0$. With two unknown variables in the equation (H_A and M_C), we cannot solve for H_A . In other words, unlike the three-hinged arch, this two-hinged arch is an *indeterminate* structure.

Example 1.3 Find reactions for a cable

Problem definition

Find the reactions for the flexible cable structure shown in Figure 1.20a. The actual shape of the cable is unknown: all that is specified is the maximum distance of the cable below the level of the supports (reactions): the cable’s *sag*.

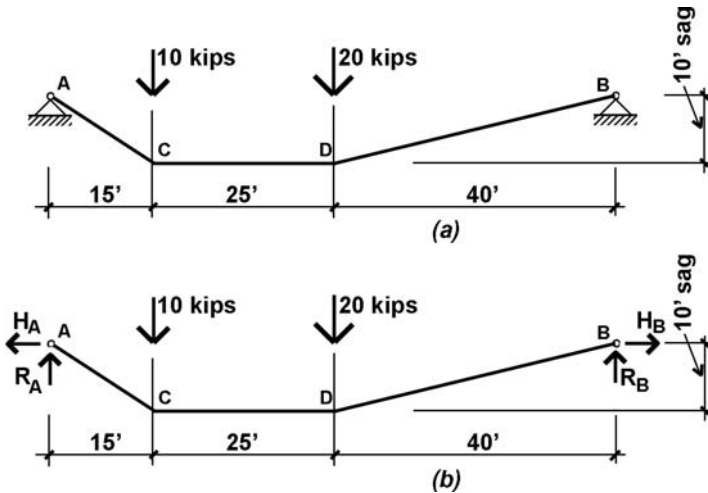


FIGURE 1.20

Load diagram for cable for Example 1.3 showing (a) constraint symbols and (b) unknown forces replacing constraint symbols

Solution overview

Draw load diagram with unknown forces and/or moments replacing the reaction (constraint) symbols; use the three equations of equilibrium, plus one additional equation found by considering the equilibrium of another free-body diagram, to find the four unknown reactions.

Problem solution

1. The cable shown in this example appears to have too many unknown variables (four unknowns versus only three equations of equilibrium); however, the cable's flexibility prevents it from behaving as a rigid body, and a fourth equation can be developed out of this condition. The three equations of equilibrium can be written as follows:

- $\Sigma M_B = R_A(80) - 10(65) - 20(40) = 0$, from which $R_A = 18.125$ kips.
- $\Sigma F_y = R_A + R_B - 10 - 20 = 0$; then, substituting $R_A = 18.125$ kips from the moment equilibrium equation solved in step a, we get $18.125 + R_B - 10 - 20 = 0$, from which $R_B = 11.875$ kips.
- $\Sigma F_x = H_A - H_B = 0$.

Sign conventions are as described in Example 1.1. This last equation of horizontal equilibrium (step c) contains two unknown variables and cannot be solved at this point. By analogy to the three-hinged arch, we would expect to cut an FBD and develop a fourth equation. Like the internal hinge in the arch, the entire cable, being flexible, is incapable of resisting any bending moments. But unlike the arch, the cable's geometry is not predetermined; it is conditioned by the particular loads placed upon it. Before cutting the FBD, we need to figure out where the maximum specified sag of 10ft occurs: without this information,

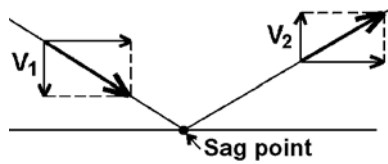


FIGURE 1.21

Sag point occurs where the vertical component of internal cable forces changes direction (sign), for Example 1.3

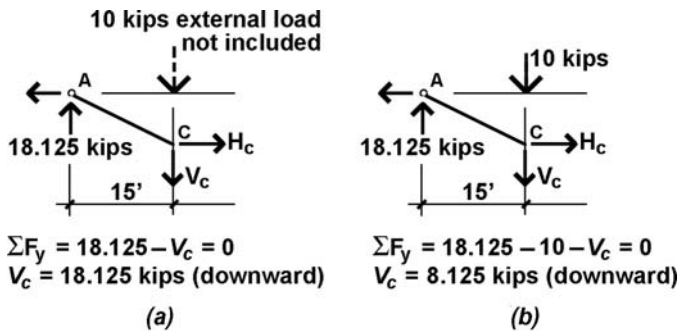


FIGURE 1.22

Vertical component of cable force for Example 1.3 is found (a) just to the left of the external load at point C and (b) just to the right of the load

we would be writing a moment equilibrium equation of an FBD in which the moment arm of the horizontal reaction, H_A , was unknown.

2. We find the location of the sag point by looking at internal vertical forces within the cable. When the direction of these internal vertical forces changes, the cable has reached its lowest point (Figure 1.21). Checking first at point C, we see that the internal vertical force does not change direction on either side of the external load of 10 kips (comparing Figures 1.22a and 1.22b), so the sag point cannot be at point C.

However, when we check point D, we see that the direction of the internal vertical force does change, as shown in Figure 1.23.

Thus, point D is the sag point of the cable (i.e., the low point), specified as being 10 ft below the support elevation.

We can also find this sag point by constructing a diagram of cumulative vertical loads, beginning on the left side of the cable (Figure 1.24). The sag point then occurs where the “cumulative force line” crosses the baseline.

3. Having determined the sag point, we cut an FBD at that point (Figure 1.25a) and proceed as in the example of the three-hinged arch, taking moments about the sag point: $\Sigma M_D = 18.125(40) - 10(25) - H_A = 0$, from which $H_A = 47.5$ kips.

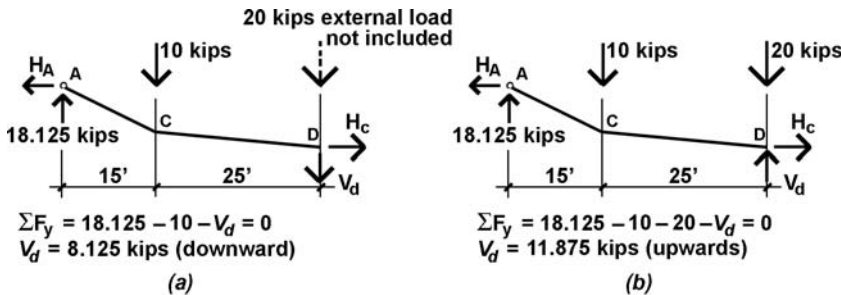


FIGURE 1.23

Vertical component of cable force for Example 1.3 is found (a) just to the left of the external load at point *D* and (b) just to the right of the load

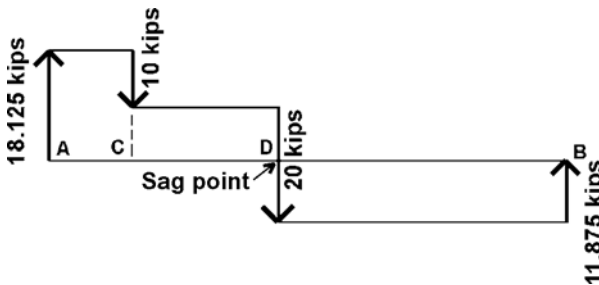


FIGURE 1.24

Diagram of cumulative vertical loads for Example 1.3

Once the location of the sag point is known, a more accurate sketch of the cable shape can be made, as shown in Figure 1.25*b*.

Then, going back to the “horizontal” equilibrium equation shown in step 1*c* that was written for the entire structure (not just the cut FBD), we get $\Sigma F_x = H_A - H_B = -47.5 + H_B = 0$, from which $H_B = 47.5$ kips. In this last equation, H_A is written with a minus sign since it acts toward the left (and our sign convention has *positive* going to the right).

We have thus far assumed particular directions for our unknown forces—for example, that H_A acts toward the left. Doing so resulted in a positive answer of 47.5 kips, which confirmed that our guess of the force’s direction was correct. Had we initially assumed that H_A acted toward the right, we would have gotten an answer of -47.5 kips, which is equally correct, but less satisfying. In other words, both ways of describing the force shown in Figure 1.26 are equivalent.

INTERNAL FORCES AND MOMENTS

Finding internal forces and moments is no different than finding reactions; one need only cut an FBD at the cross section where the internal forces and moments are to

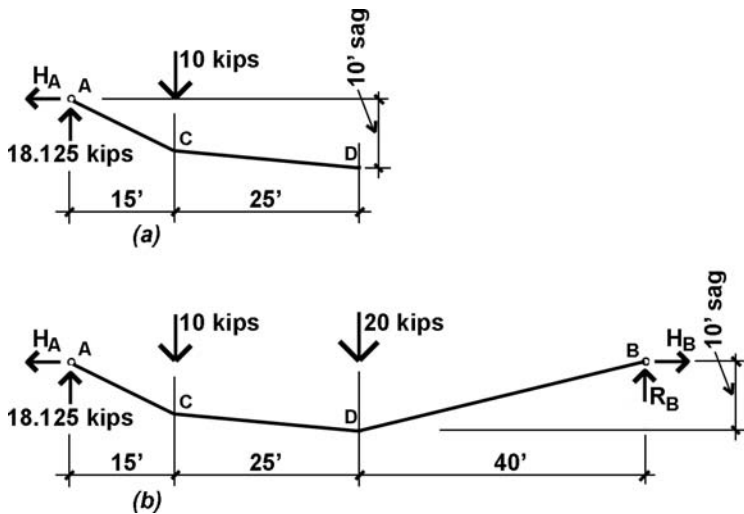


FIGURE 1.25
Free-body diagram cut at the sag point for Example 1.3





FIGURE 1.26
Negative and positive signs on force arrows going in opposite directions represent equivalent loads

be computed (after having found any unknown reactions that occur within the diagram). At any cut in a rigid element of a plane structure, two perpendicular forces and one moment are potentially present. These internal forces and moments have names, depending on their orientation relative to the axis of the structural element where the cut is made (Figure 1.27). The force parallel to the axis of the member is called an *axial force*; the force perpendicular to the member is called a *shear force*; the moment about an axis perpendicular to the structure's plane is called a *bending moment*.

In a three-dimensional environment with x -, y -, and z -axes as shown in Figure 1.27, three additional forces and moments may be present: another shear force (along the z -axis) and two other moments, one about the y -axis and one about the x -axis. Moments about the y -axis cause bending (but bending perpendicular to the two-dimensional plane); moments about the x -axis cause twisting or *torsion*. These types of three-dimensional structural behaviors are beyond the scope of this discussion.

Internal shear forces and bending moments in beams

Where the only external forces acting on beams are perpendicular to a simply supported beam's longitudinal axis, no axial forces can be present. The following

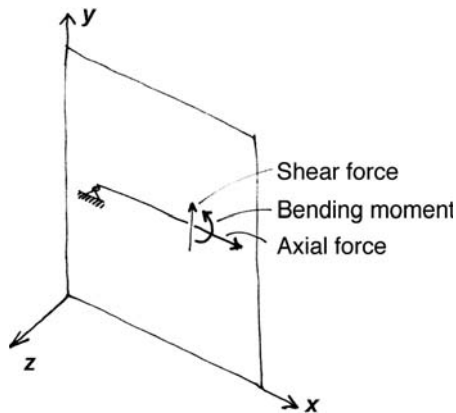**FIGURE 1.27**

Internal shear and axial forces and internal bending moment

examples show how internal shear forces and bending moments can be computed along the length of the beam.

Example 1.4 Find internal shear and bending moment for simply supported beam with “point” loads

Problem definition

Find internal shear forces and bending moments at key points along the length of the beam shown in Figure 1.28, that is, under each external load and reaction. Reactions have already been determined.

Solution overview

Cut free-body diagrams at each external load; use equations of equilibrium to compute the unknown internal forces and moments at those cut points.

Problem solution

1. To find the internal shear force and bending moment at point A, first cut a free-body diagram there, as shown in Figure 1.29.

Using the equation of vertical equilibrium, $\Sigma F_y = 5 - V_A = 0$, from which the internal shear force $V_A = 5$ kips (downward).

Moment equilibrium is used to confirm that the internal moment at the hinge is zero: $\Sigma M_A = M_A = 0$. The two forces present (5 kips and $V_A = 5$ kips) do not need to be included in this equation of moment equilibrium since their moment arms are equal to zero. The potential internal moment, M_A , is entered into the moment equilibrium equation as it is (without being multiplied by a moment arm) since it is already, by definition, a moment.

2. Shear forces must be computed on “both sides” of the external load at point C; the fact that this results in two different values for shear at this point is not a paradox: it simply

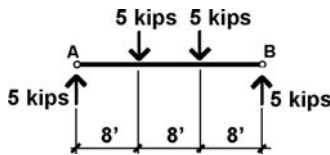


FIGURE 1.28

Load diagram for Example 1.4




FIGURE 1.29

Free-body diagram cut at left reaction for Example 1.4

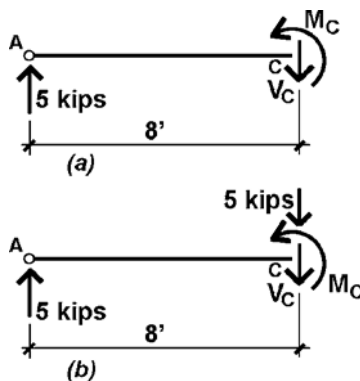


FIGURE 1.30

Free-body diagram for Example 1.4 (a) cut just to the left of the external load at point C; and (b) just to the right of the load

reflects the discontinuity in the value of shear caused by the presence of a concentrated load. In fact, a truly concentrated load acting over an area of zero is impossible, since it would result in an infinitely high stress at the point of application; all concentrated loads are really distributed loads over small areas. However, there is only one value for bending moment at point C, whether or not the external load is included in the FBD. In other words, unlike shear force, there is no discontinuity in moment resulting from a concentrated load.

- a. Find internal shear force and bending moment at point C, just to the left of the external load by cutting an FBD at that point, as shown in Figure 1.30a. Using the equation of vertical equilibrium: $\Sigma F_y = 5 - V_C = 0$, from which the internal shear force $V_C = 5$ kips (downward). Using the equation of moment equilibrium, $\Sigma M_C = 5(8) - M_C = 0$, from which $M_C = 40$ ft-kips (counterclockwise).

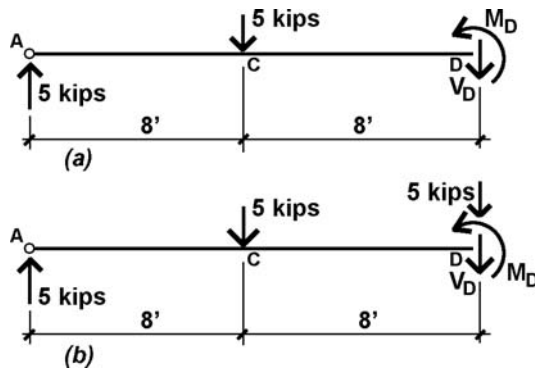


FIGURE 1.31

Free-body diagram for Example 1.4 (a) cut just to the left of the external load at point D and (b) just to the right of the load

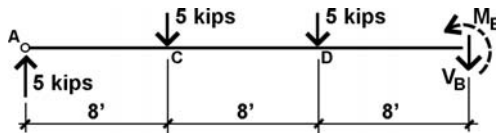


FIGURE 1.32

Free-body diagram cut just to the left of the reaction at point B for Example 1.4

- b. Find internal shear force and bending moment at point C , just to the right of the external load by cutting an FBD at that point, as shown in Figure 1.30b. Using the equation of vertical equilibrium: $\Sigma F_y = 5 - 5 - V_C = 0$, from which the internal shear force $V_C = 0$ kips. Using the equation of moment equilibrium, $\Sigma M_C = 5(8) - M_C = 0$, from which $M_C = 40$ ft-kips (counterclockwise), as before.
 3. Find shear and moment at point D .
 - a. Find internal shear force and bending moment at point D , just to the left of the external load by cutting an FBD at that point, as shown in Figure 1.31a. Using the equation of vertical equilibrium: $\Sigma F_y = 5 - 5 - V_D = 0$, from which the internal shear force $V_D = 0$ kips. Using the equation of moment equilibrium, $\Sigma M_D = 5(16) - 5(8) - M_D = 0$, from which $M_D = 40$ ft-kips (counterclockwise).
 - b. Find internal shear force and bending moment at point D , just to the right of the external load by cutting an FBD at that point, as shown in Figure 1.31b. Using the equation of vertical equilibrium, $\Sigma F_y = 5 - 5 - 5 - V_D = 0$, from which the internal shear force $V_D = -5$ kips (downward), which is equivalent to 5 kips (upward). Using the equation of moment equilibrium, $\Sigma M_D = 5(16) - 5(8) - M_D = 0$, from which $M_D = 40$ ft-kips (counterclockwise), as before.
 4. Find shear and moment at point B by cutting a free-body diagram just to the left of the reaction at point B , as shown in Figure 1.32. Using the equation of vertical equilibrium,

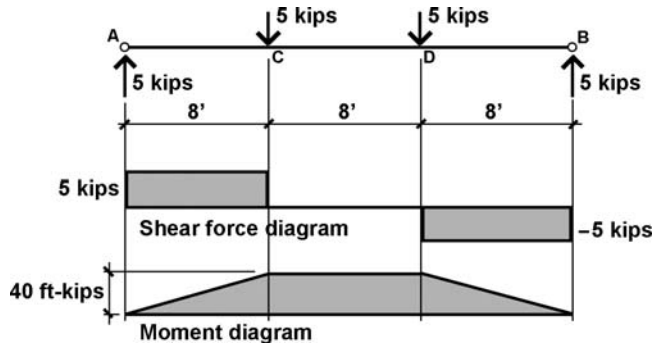


FIGURE 1.33

Load, shear, and moment diagrams for Example 1.4

$\Sigma F_y = 5 - 5 - 5 - V_B = 0$, from which the internal shear force $V_B = -5$ kips (downward), which is equivalent to 5 kips (upward).

Moment equilibrium is used to confirm that the internal moment at the hinge is zero: $\Sigma M_B = 5(24) - 5(16) - 5(8) - M_B = 0$, from which $M_B = 0$. The internal shear force, V_B , does not need to be included in this equation of moment equilibrium since its moment arm is equal to zero.

The forces and moments can be graphically displayed as shown in Figure 1.33, by connecting the points found earlier.

Some important characteristics of internal shear forces and bending moments may now be summarized: (1) Internal axial forces are always zero in a horizontally oriented simply supported beam with only vertical loads. (2) Moments at hinges at the ends of structural members are zero. Only when a continuous member passes over a hinge can the moment at a hinge be nonzero. (3) A shear force acting downward on the right side of an FBD is arbitrarily called “positive”; a bending moment acting counterclockwise on the right side of an FBD is arbitrarily called “positive.” As will be discussed later in Chapter 8 (beams), positive bending corresponds to “tension” on the bottom and “compression” on the top of a horizontal structural element.

General strategy for finding internal shear forces and bending moments

Shear and moment diagrams can also be drawn by noting the following rules: (1) At any point along the beam, the slope of the shear diagram equals the value of the load (the “infinite” slope of the shear diagram at concentrated loads can be seen as a shorthand approximation to the actual condition of the load being distributed over some finite length, rather than existing at a point). (2) Between any two points along a beam, the change in the value of shear equals the total load (between those points). (3) The slope of the moment diagram at any point equals the value of the shear force at that point. (4) The change in the value of bending moment between

any two points equals the “area of the shear diagram” between those points. These rules are derived by applying the equations of equilibrium to an elemental slice of a beam, as shown in Table A-1.1.

Example 1.5 Find internal shear and bending moments for a simply supported cantilever beam with distributed loads

Problem definition

Find the distribution of internal shear forces and bending moments for the beam shown in Figure 1.34, first by using FBDs and then by applying the rules from Table A-1.1.

Solution overview

Find reactions using the equations of equilibrium; find internal shear force and bending moment at key points (at reactions and at location of zero shear).

Problem solution

1. Find the resultant of the distributed load, equal to $1 \text{ kip/ft} \times 25 \text{ ft} = 25 \text{ kips}$.
2. To find reactions, first take moments about either point A or point B; we choose point B: $\Sigma M_B = R_A(20) - 25(12.5) = 0$, from which $R_A = 15.625 \text{ kips}$. Next, use the equation of vertical equilibrium to find the other reaction: $\Sigma F_y = R_A + R_B - 25 = 15.625 + R_B - 25 = 0$, from which $R_B = 9.375 \text{ kips}$.
3. Find shear and moment at point A.
 - a. Find internal shear force and bending moment at point A, just to the left of the reaction by cutting an FBD at that point, as shown in Figure 1.35a. Using the equation of vertical equilibrium, $\Sigma F_y = -5 - V_A = 0$, from which the internal shear force, $V_A = -5 \text{ kips}$ (downward) or 5 kips (upward). Using the equation of moment equilibrium, $\Sigma M_A = -5(2.5) - M_A = 0$, from which $M_A = -12.5 \text{ ft-kips}$ (counterclockwise) or 12.5 ft-kips (clockwise).
 - b. Find internal shear force and bending moment at point A, just to the right of the reaction by cutting an FBD at that point, as shown in Figure 1.35b. Using the equation of vertical equilibrium, $\Sigma F_y = 15.625 - 5 - V_A = 0$, from which the internal shear force $V_A = 10.625 \text{ kips}$ (downward). Using the equation of moment equilibrium, $\Sigma M_A = -5(2.5) - M_A = 0$, from which $M_A = -12.5 \text{ ft-kips}$ (counterclockwise) or 12.5 ft-kips (clockwise), as before.

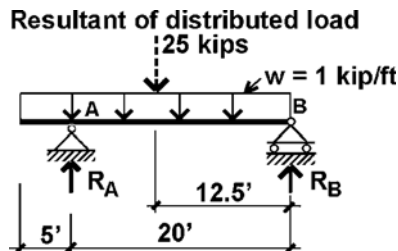


FIGURE 1.34

Load diagram for Example 1.5

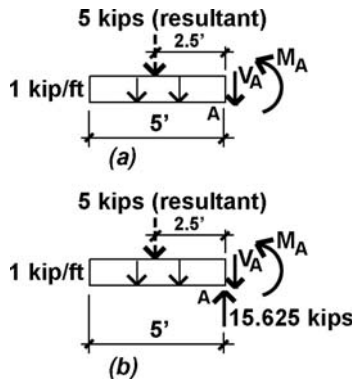


FIGURE 1.35

Free-body diagram for Example 1.5 (a) cut just to the left of the reaction at point A and (b) just to the right of the reaction

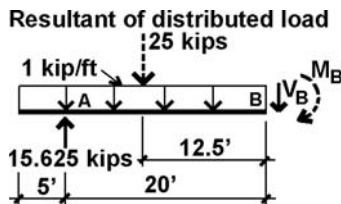



FIGURE 1.36

Free-body diagram cut just to the left of the reaction at point B for Example 1.5


The moment at point A is *not* zero, even though there is a hinge at that point. The reason is that the beam itself is continuous over the hinge. This continuity is essential for the stability of the cantilevered portion of the beam.

4. Find shear and moment at point B by cutting a free-body diagram just to the left of the reaction at point B, as shown in Figure 1.36. Using the equation of vertical equilibrium, $\Sigma F_y = 15.625 - 25 - V_B = 0$, from which the internal shear force $V_B = -9.375$ kips (downward), which is equivalent to 9.375 kips (upward). Moment equilibrium is used to confirm that the internal moment at the hinge is zero: $\Sigma M_B = 15.625(20) - 25(12.5) + M_B = 0$, from which $M_B = 0$. The internal shear force, V_B , does not need to be included in this equation of moment equilibrium since its moment arm is equal to zero.
5. The internal shear forces can be graphically displayed as shown in Figure 1.37, by connecting the points found earlier. The slope of the shear diagram at any point equals the value of the load; since the load is *uniformly distributed*, or constant, the slope of the shear diagram is also constant.

The bending moment cannot be adequately diagrammed until one more point is determined and analyzed: the point somewhere between the two reactions where the shear is zero. Since the slope of the moment diagram at any point equals the value of the shear force, a change from positive to negative shear indicates at least a “local” minimum or maximum moment (Figure 1.38).

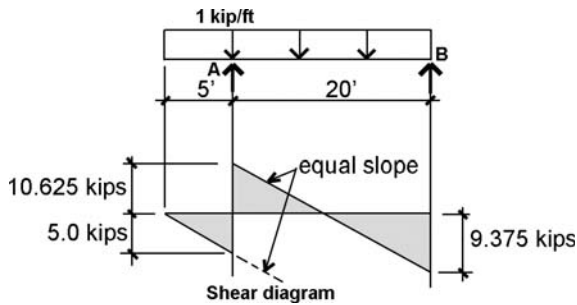**FIGURE 1.37**

Load and shear diagrams for Example 1.5

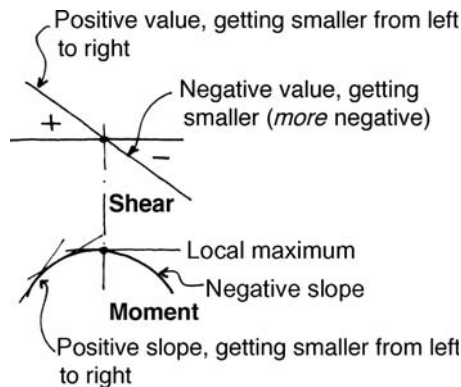**FIGURE 1.38**

Relationship between value of shear diagram and slope of moment diagram

This key point, labeled *C* in Figure 1.39, can be located by dividing the value of shear just to the right of the reaction at point *A* by the distributed load: the distance of point *C* from point *A*, then, is $x = 10.625/1.0 = 10.625$ ft.

The length, x , can also be found using similar triangles: $x/10.625 = 20/20$. Solving for x , we get the same value as earlier: $x = 10.625$ ft.

The moment at this point can be found by cutting an FBD at point *C*, as shown in Figure 1.40, and applying the equation of moment equilibrium: $\Sigma M_C = 15.625(10.625) - 15.625(7.8125) - M_C = 0$, from which $M_C = 43.9$ ft-kips (counterclockwise).

6. Alternatively, shear and moment diagrams may be drawn based on the rules listed in Table A-1.1, and illustrated in Figure 1.41. The critical points of the shear diagram are derived from the load diagram based on Rule 2: the “areas” of the load diagram (with concentrated loads or reactions counting as areas *b* and *d*) between any two points equal the change in shear between those points. These “area” values are summarized in the box between the load and shear diagrams. Connecting the points established using Rule 2 is facilitated by reference to Rule 1: the slope of the shear diagram equals the value of the load at that point. Therefore, where the load diagram is “flat” (i.e., has constant value), the shear diagram has constant

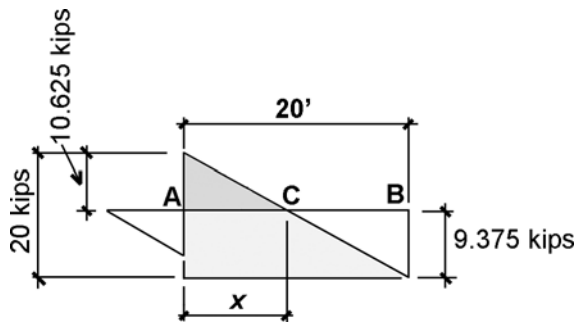


FIGURE 1.39

Shear diagram for Example 1.5, showing distance from reaction at point A to the point where the shear diagram crosses the baseline, going from positive to negative value

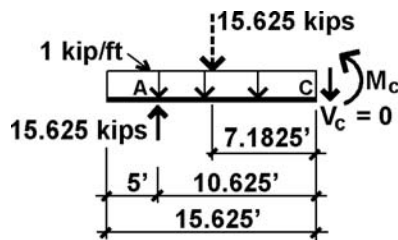


FIGURE 1.40

Free-body diagram for Example 1.5, cut at the point of zero shear (where the shear diagram crosses the baseline, going from positive to negative value)

slope represented by a straight line that has positive slope for positive values of load, and negative slope corresponding to negative values of load. Since almost all distributed loads are downward-acting (negative value), shear diagrams often have the characteristic pattern of negative slope shown in Figure 1.41.

Once the shear diagram has been completed, and any critical lengths have been found (see step 5), the moment diagram can be drawn based on Rules 3 and 4 of Table A-1.1. Critical moments are first found by examining the “areas” under the shear diagram, as described in Rule 4 of Table A-1.1. These “areas”—actually forces times distances, or moments—are shown in the box between the shear and moment diagrams in Figure 1.41 and represent the *change* in moment between the two points bracketed by the shear diagram areas—not the value of the moments themselves. For example, the first “area e” of -12.5 ft-kips is added to the initial moment of zero at the free end of the cantilever, so that the actual moment at point A is $0 + -12.5 = -12.5$ ft-kips. The maximum moment (where the shear is zero), is found by adding “area f” to the moment at point A: $56.45 + -12.5 = 43.95$ ft-kips, as shown in Figure 1.41. Finally, slopes of the moment diagram curve can be determined based on Rule 3 of Table A-1.1: the slope of the moment diagram is equal to the value of the shear force at any point, as illustrated in Figure 1.38.

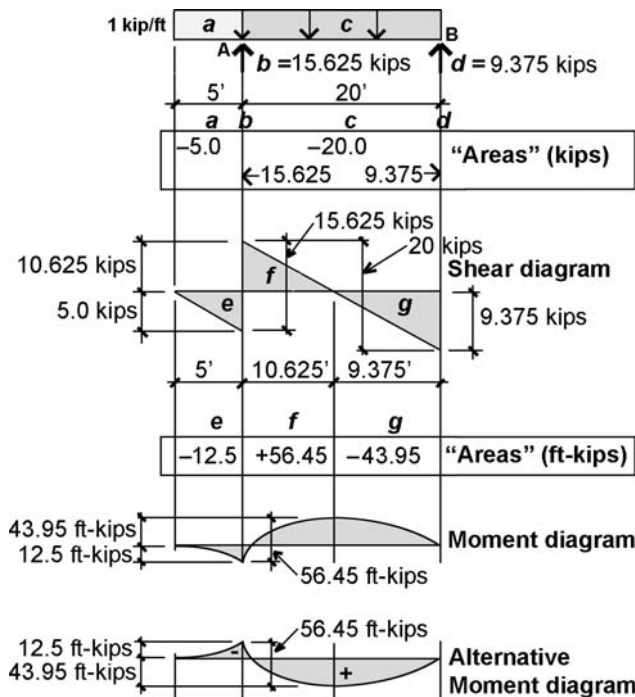


FIGURE 1.41

Load, shear, and moment diagrams for Example 1.5, using load diagram “areas” to find shear values, and shear diagram “areas” to find moment values

In drawing the moment diagram, it is important to emphasize the following:

- (1) The area under the shear diagram between any two points corresponds, not to the value of the moment, but to the *change* in moment between those two points. Therefore, the triangular shear diagram area, f , of 56.45 ft-kips in Example 1.5 does not show up as a moment anywhere in the beam; in fact, the maximum moment turns out to be 43.95 ft-kips.
- (2) The particular curvature of the moment diagram can be found by relating the slope of the curve to the changing values of the shear diagram.
- (3) The moment and shear diagrams are created with respect to the actual distribution of loads on the beam, not the resultants of those loads, which may have been used in the calculation of reactions. The location of the maximum moment, therefore, has nothing to do with the location of any resultant load but occurs at the point of zero shear.
- (4) Moment diagrams can also be drawn in an alternate form, as shown at the bottom of Figure 1.41, by reversing the positions of negative and positive values. This form has the benefit of aligning the shape of the moment diagram more closely with the deflected shape of the beam (although it still remains significantly different from the deflected shape), at the expense of being mathematically inconsistent.
- (5) Finally, it may be important in some cases to account for both positive and negative

moments, and not just the maximum moment. In this example, the maximum positive moment is 43.95 ft-kips, while the maximum negative moment is 12.5 ft-kips.

Internal axial forces in trusses, arches, and cables

There is a class of determinate structures that cannot sustain internal shear forces or bending moments, either because their component elements are pinned together or because they are inherently flexible. We will examine three types of these axial-force structures. Trusses are made from individual elements organized in a triangular pattern and assumed to be pinned at the joints so that they may be analyzed using only equations of equilibrium. Reactions of trusses are found just like the reactions of beams, while the reactions of three-hinged arches and cables—the other two axial-force structures already examined—require special treatment. In general, the axial forces within trusses, three-hinged arches, and cables are found using the three equations of equilibrium. The following examples illustrate specific techniques and strategies.

Example 1.6 Find internal axial forces in a truss (section method)

Problem definition

Find the internal axial forces in truss bars $C-F$, $C-E$, and $D-E$ for the truss shown in Figure 1.42. Assume pinned joints, as shown.

Solution overview

Find reactions; then, using the so-called section method, cut a free-body diagram through the bars for which internal forces are being computed. As there are only three equations of equilibrium, no more than three bars may be cut (resulting in three unknown forces); use equations of equilibrium to solve for the unknown forces.

Problem solution

1. Find reactions: by symmetry, $R_A = R_B = (10 + 10 + 10)/2 = 15$ kips. Alternatively, one could take moments about point A or B , solve for the unknown reaction, and then use the equation of vertical equilibrium to find the other unknown reaction.
2. Cut a free-body diagram through the bars being evaluated (cutting through no more than three bars) as shown in Figure 1.43. Bar forces are labeled according to the nodes that are at either end of their bars, so, for example, F_{CF} is the force between nodes C and F .
 - a. Show unknown axial forces as tension forces; a negative result indicates that the bar is actually in compression. Tension means that the force is shown “pulling” on the bar or node within the free-body diagram.
 - b. Use equilibrium equations, chosen strategically, to solve for unknown bar forces. To find F_{CF} : $\Sigma M_E = 15(16) - 10(8) + F_{CF}(8) = 0$; solving for the unknown bar force, we get $F_{CF} = -20$ k (compression).
 - c. To find F_{DE} : $\Sigma M_C = 15(8) - F_{DE}(8) = 0$; solving for the unknown bar force, we get $F_{DE} = 15$ k (tension).
 - d. Finally, to find F_{CE} : find force “components” of inclined internal axial force F_{CE} . The components can be found using principles of trigonometry, based on the geometry of

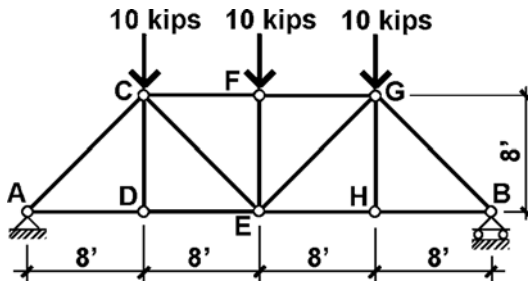


FIGURE 1.42

Loading diagram for, and geometry of, truss for Example 1.6

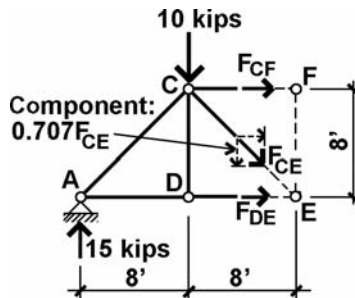


FIGURE 1.43

Free-body diagram cut through bars based on the section method for Example 1.6

the triangle determined by the 8ft $\times$ 8ft truss panels. For example, the vertical (or horizontal) component equals F_{CE} times $\sin 45^\circ = 0.707F_{CE}$. We then use the equation of vertical equilibrium: $\Sigma F_y = 15 - 10 - 0.707F_{CE} = 0$; solving for the unknown bar force, we get $F_{CE} = 7.07$ kips (tension).

The assumption that only axial forces exist within a truss is valid when the following conditions are met: (1) all bar joints are “pinned” (hinged), and (2) external loads and reactions are placed only at the joints or nodes. Under these circumstances, no internal shear forces or bending moments are possible. In practice, modern trusses are rarely pinned at each joint; nevertheless, the assumption is often used for preliminary design since it facilitates the calculation of internal forces. What is more, actual bar forces in *indeterminate* trusses (i.e., where the members are continuous rather than pinned) are often reasonably close to the approximate results obtained by assuming pinned joints.

Example 1.7 Find internal axial forces in a three-hinged arch

Problem definition

Find the internal axial force in bar AC of the three-hinged arch analyzed in Example 1.2.

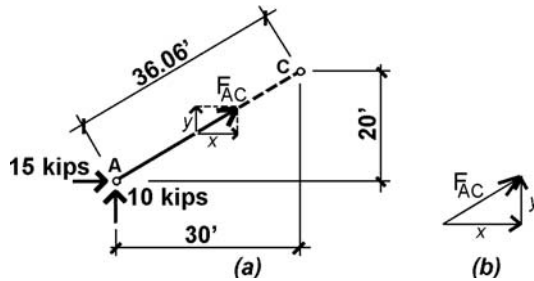


FIGURE 1.44

Internal bar force for Example 1.7 shown (a) in free-body diagram and (b) as a “force” triangle with components x and y

Solution overview

Cut a free-body diagram through the bar in question, as shown in Figure 1.44a; label unknown bar force as if in tension; use the equations of equilibrium to solve for the unknown force.

Problem solution

1. Because the bar force, F_{AC} , is inclined, it is convenient to draw and label its horizontal and vertical component forces, x and y . Using the equations of vertical and horizontal equilibrium, we can find these component forces directly: $\Sigma F_y = 10 + y = 0$, from which $y = -10$ kips; $\Sigma F_x = 15 + x = 0$, from which $x = -15$ kips. In both cases, the negative sign indicates that our initial assumption of tension was incorrect; the bar force is actually in compression, as one would expect in such an arch.
2. To find the actual bar force, F_{AC} , the most direct approach is to use the Pythagorean theorem, with the unknown force being the hypotenuse of a right triangle, as shown in Figure 1.44b. Therefore, $F_{AC} = (x^2 + y^2)^{0.5} = (15^2 + 10^2)^{0.5} = 18.03$ kips. The signs of the forces are omitted in this calculation.

Example 1.8 Find internal axial forces in a cable

Problem definition

Find the internal axial force in segment AC of the cable analyzed in Example 1.3.

Solution overview

Cut a free-body diagram through the segment in question, as shown in Figure 1.45; label unknown cable force as if in tension; use the equations of equilibrium to solve for the unknown force.

Problem solution

1. Because the cable force, F_{AC} , is inclined, it is convenient to draw and label its horizontal and vertical component forces, x and y . Using the equations of vertical and horizontal

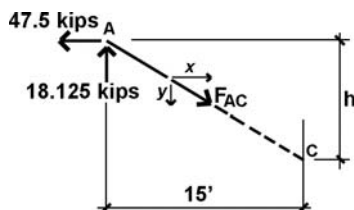


FIGURE 1.45

Internal bar force for Example 1.8 shown in free-body diagram with components x and y

equilibrium, we can find these component forces directly: $\Sigma F_y = 18.125 - y = 0$, from which $y = 18.125$ kips; $\Sigma F_x = -47.5 + x = 0$, from which $x = 47.5$ kips. In both cases, the positive sign indicates that our initial assumption of tension was correct, as one would expect in any cable structure.

2. To find the actual cable force, F_{AC} , the most direct approach is to use the Pythagorean theorem, with the unknown force being the hypotenuse of a right triangle. Therefore, $F_{AC} = (x^2 + y^2)^{0.5} = (47.5^2 + 18.125^2)^{0.5} = 50.84$ kips. The signs of the forces are omitted in this calculation.
3. Since the cable is flexible, the height, h , is unknown and, in fact, will change if the loads are changed. To find h , we can use the fact that the “force triangle” and “geometry triangle” are similar; therefore, the ratio of their sides must be equal: $h/15 = y/x = 18.125/47.5$, from which $h = 5.72$ ft. Because the height will change if the loads change, the cable is an *unstable* structure. ■

INDETERMINATE STRUCTURES

Where there are more reactions, or constraints, than there are equations of equilibrium, a structure is said to be statically indeterminate or redundant. Each added constraint adds one degree of indeterminacy or redundancy to the structure, making it that much more difficult to solve mathematically. To understand the basis of the mathematical solution to indeterminate structures, we will examine a simply supported beam with a single concentrated load that has been made 1-degree redundant (indeterminate) by adding a hanger at midspan: the structure now has four unknown reactions (constraints), and only three equations of equilibrium are available, as shown in Figure 1.46.

The key to the solution is to find an *additional* equation that includes one or more of the structure’s constraint variables; that equation will not be concerned with equilibrium, but rather with the compatibility of structural deformations or deflections. Looking at the simply supported beam and the tension hanger separately, it is possible to write equations relating the loads acting on them to their deflection (such equations are developed in Chapter 6 for tension elements and Chapter 8 for beams). For now, we will simply note that $\Delta_1 = P_1 S_1$, and $\Delta_2 = P_2 S_2$

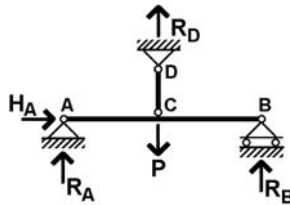


FIGURE 1.46
Load diagram for a simply supported beam with an added hanger at midspan

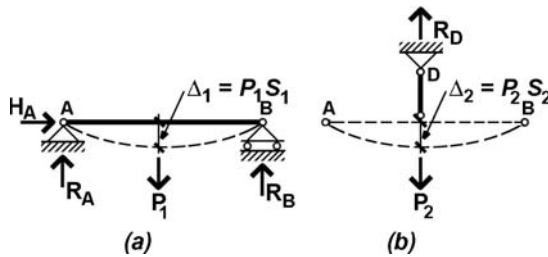


FIGURE 1.47
Deflection diagrams for the two components of the structure shown in Figure 1.46: (a) a simply supported beam with a concentrated load, P_1 , and (b) a tension hanger with load P_2

as shown in Figure 1.47, where Δ_1 and Δ_2 are the deflections of the beam and hanger, respectively; P_1 and P_2 are the loads assumed to act separately on the beam and hanger; and S_1 and S_2 are deflection constants that include the length or span of the elements as well as their stiffness (i.e., their resistance to deformation).

These deflections, calculated separately for the beam and hanger, must actually be equal in the real structure, and the loads P_1 and P_2 that correspond to these equal deflections are actually only the parts of the total load, P , that the beam and hanger separately resist. In other words, $\Delta_1 = \Delta_2$; and $P_1 + P_2 = P$. This can be rewritten as follows:

$$P_1 S_1 = P_2 S_2 \tag{1.2}$$

$$P_1 = P - P_2 \tag{1.3}$$

Solving Equation 1.2 for P_1 , and substituting the result into Equation 1.3, we get:

$$\frac{P_2 S_2}{S_1} = P - P_2 \tag{1.4}$$

Solving for P_2 , we get:

$$P_2 = \frac{P}{S_1/S_2 + 1} \quad (1.5)$$

Since the load P and coefficients S_1 and S_2 are all known, the force P_2 can be determined from Equation 1.5. Then, from Figure 1.47*b*, it can be seen that the vertical reaction, $R_D = P_2$. With this “fourth” reaction solved, the other vertical reactions at A and B can easily be determined using the equations of equilibrium.

Equation 1.5 also clarifies the relationship between the element load-deformation constants, represented by S_1 and S_2 , and the overall behavior of the structure. For example, if the constants are equal, it can be seen that $P_2 = P/2$; that is, half the load is resisted by the hanger and half by the beam. On the other hand, if S_1 is small compared to S_2 (i.e., if the hanger is more effective in resisting deformation than the beam), then P_2 approaches the value of P , and the hanger begins to resist virtually all of the total load, with the beam’s share approaching zero. This is of crucial importance in understanding the behavior of indeterminate structures: loads tend to follow the path of greatest stiffness, or, put another way, loads follow various competing load paths in proportion to the stiffness of those paths. In these formulations, “stiffness” is used as shorthand for the load-deformation relationship, which includes both the actual element stiffness (involving only material and cross-sectional properties) as well as element length or span.

For highly redundant structures, a greater number of equations, based on compatibility of deformations, need to be solved simultaneously. While this becomes unwieldy if done by hand, structural analysis software has been developed to solve such problems: the designer need only indicate the geometry of the structure (including lengths and spans), the nature of each constraint (hinged, fixed, etc.), and the relative stiffness of each element. This last requirement presents a bit of a dilemma, since relative member stiffnesses must be assumed *before* the structure can be designed. The stiffnesses assumed for the structure determine how the structure will respond to its loads, unlike determinate structures, whose internal forces and moments are independent of member cross sections and material properties. For this reason, experience, trial and error, or a bit of both are crucial in the design of indeterminate structures.

Once internal forces and moments have been determined, however, the same strategies for the design of structural elements outlined in this book can be used, whether the structure is statically determinate or indeterminate.

STRENGTH OF MATERIALS

The magnitudes of internal forces and bending moments do not, by themselves, give any indication as to whether a particular structural element is safe or unsafe. Instead,

the load or moment that an element can safely resist can only be determined when information about the element’s cross section is considered: clearly, a large cross section is stronger than a small one. But “large” in what way? The cross-sectional properties relevant to the determination of structural safety and serviceability are different for tension elements, columns, and beams and are, therefore, discussed more fully in their appropriate context (Chapters 6, 7, and 8, respectively). What follows is a brief overview and summary of the major cross-section properties encountered in structural analysis and design.

Area

Cross-sectional areas are easily determined: for rectangles, the area $A = B \times H$ (Figure 1.48a) and for circles, $A = \pi R^2$ (Figure 1.48c). What may not be as immediately clear is that the I-shaped cross section (Figure 1.48b) has an area, $A = (B \times H) - (b \times h)$, and the circular ring (Figure 1.48d) has an area, $A = \pi R^2 - \pi r^2$, where R is the outer and r is the inner radius.

Moment of inertia

The moment of inertia, I_x , is defined as the sum of all elemental areas above or below the centroid (x -axis) of the cross section multiplied by the square of the distance from each of the individual elemental centroids to the centroid of the cross section as a whole, or

$$I_x = \int_{-H/2}^{H/2} y^2 dA \tag{1.6}$$

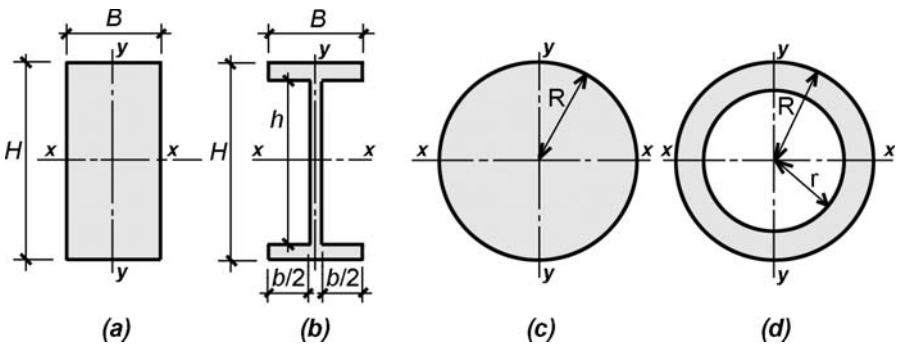


FIGURE 1.48 Cross sections typically encountered as structural elements include (a) rectangles, (b) I-shaped sections, (c) circles, and (d) circular rings

where y is the distance from each elemental area (the elemental areas being $dA = \text{width} \times dy$) to the centroid of the cross section, while $H/2$ and $-H/2$ represent the limits over which the integral is taken for the rectangle and I-shaped section shown in Figure 1.48 (the same equation holds for the circular sections as well, except with the integral taken from $R/2$ to $-R/2$).

This property is useful in understanding the stiffness of a cross section when bent. It can be seen that placing a good deal of the cross-sectional material *away* from the centroid—as in the I-shaped section or, to a lesser extent, in the circular ring—increases the moment of inertia, and therefore the stiffness, since more “area” is multiplied by the square of a *greater* distance from the centroidal axis. Equation 1.6 can be solved as follows for rectangular and circular shapes:

$$I_x = \frac{BH^3}{12} \text{ (rectangles); } I_x = \frac{\pi R^4}{4} \text{ (circles)} \quad (1.7)$$

Moments of inertia for the I-shaped section and circular ring can be easily found by subtracting the smaller rectangle (or circle) from the larger one: for the I-shaped section, $I_x = BH^3/12 - bh^3/12$; for the circular ring, $I_x = \pi R^4/4 - \pi r^4/4$.

For moments of inertia taken about the y -axis, the equations for rectangles and circles are easily modified:

$$I_y = \frac{HB^3}{12} \text{ (rectangles); } I_y = \frac{\pi R^4}{4} \text{ (circles)} \quad (1.8)$$

Moments of inertia for circular rings (Figure 1.48d) are determined as before: by subtracting the moment of inertia of the smaller from that of the larger circle. For the I-shaped section, however, it is not possible to simply subtract the smaller rectangles from the larger, as was done when computing the moment of inertia about the x -axis, since the centroids of the various parts being subtracted do not coincide. Instead, one must *add* the three moments of inertia of the two flanges and web, as shown in Figure 1.49, each taken about the y -axis:

$$I_y = \frac{t_f B^3}{12} + \frac{bt_w^3}{12} + \frac{t_f B^3}{12} \quad (1.9)$$

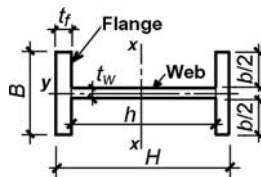


FIGURE 1.49

Dimensions of an I-shaped section oriented about its y -axis, for the calculation of moment of inertia

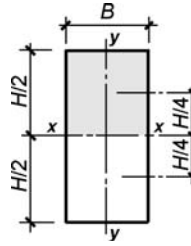


FIGURE 1.50

Rectangular cross section showing shaded area and distance from centroid of shaded area to centroid of the whole cross section, for calculation of plastic section modulus, Z_x

Section modulus

The elastic section modulus, S_x , is a single parameter that measures a cross section's strength in bending. For symmetrical sections, such as those shown in Figures 1.48a and 1.48b:

$$S_x = \frac{I_x}{(H/2)} \quad (1.10)$$

For the circular shapes, $S_x = I_x/R$ (Figures 1.48c and 1.48d). In each case, the moment of inertia is divided by half the cross-sectional height, or thickness. From Equations 1.7 and 1.10, it can be seen that the section modulus for a rectangular cross section is $S_x = (BH^3/12)/(H/2) = BH^2/6$.

Plastic section modulus

The plastic section modulus, Z_x , is used to determine the limit-state of steel beams, defined as the point when the entire cross section has yielded. This property is unique to steel, since neither of the other materials we are considering (wood and reinforced concrete) has the necessary ductility to reach this state. Unlike the elastic section modulus, S_x , the plastic section modulus has no fixed relationship to the moment of inertia of the cross section. Rather, it is defined as the sum of all elemental areas above or below the centroid (x -axis) of the cross section multiplied by the distance from each of the individual elemental centroids to the centroid of the cross section as a whole. The plastic section modulus for a rectangular cross section can be determined by multiplying each section half (e.g., the shaded area shown in Figure 1.50) by the distance from its centroid to the centroid for the whole section: $Z_x = B(H/2)(H/4) + B(H/2)(H/4) = BH^2/4$.

Radius of gyration

The radius of gyration of a cross section, r or ρ , is a distance—but one without any obvious physical meaning. It measures the cross section's resistance to buckling, when compressed, and is defined as follows:

$$r_x = \sqrt{\frac{I_x}{A}} \quad (1.11)$$

where I_x is the moment of inertia about the x -axis, and A is the cross-sectional area. Since buckling might occur about either of the cross-sectional axes, it is the cross section's *smaller* radius of gyration, taken about the y -axis (the *weaker* axis), that is often critical:

$$r_y = \sqrt{\frac{I_y}{A}} \quad (1.12)$$

From Equation 1.8, the moment of inertia about the y -axis used to compute the minimum radius of gyration for a rectangular cross section is $I_y = HB^3/12$.

This page intentionally left blank

Loads

2

There are three broad categories of loads on building structures: dead loads, live loads, and “environmental” loads.

DEAD LOADS


Dead loads consist of the weight of the building itself, including structure, partitions, cladding, roofing materials, and permanent interior finishes such as carpet, ceiling systems, etc. These gravity loads are always downward-acting and can be calculated with a reasonable degree of accuracy, being the summation of various building material weights, which are easily determined and quite predictable. That being said, it is sometimes prudent to anticipate unpredictable scenarios that call for additional dead load, so that future building modifications (such as the addition of a heavy tile floor or a change from a mechanically attached to a ballasted roof) can be made without major structural modifications.

Dead loads are calculated by multiplying the unit weight of the materials by their quantity. Weights of some common materials and assemblies are listed in Table A-2.1.

Example 2.1 Calculate dead loads

Problem definition

Assume a typical steel structure with corrugated steel deck and concrete slab, tile floor, suspended ceiling system, and allowances for partitions and mechanical ducts, as shown in Figure 2.1. The spandrel girders carry an additional cladding load consisting of a brick and block cavity wall, 12 ft high from floor to floor. Find the dead load distribution on Beam *A* and Spandrel Girder *B*.

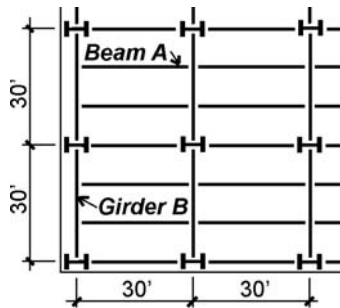**FIGURE 2.1**

Framing plan for Example 2.1

Solution overview

Find weights of building elements; compute total dead load on beams and girders.


Problem solution**Beam A**

1. From Table A-2.1, find weights of building elements:
 - a. Steel deck, finish floor, ducts, and ceiling system = 47 psf.
 - b. Partitions = 8 psf.
 - c. Subtotal = 55 psf.
2. Compute weight per linear foot of beam by multiplying unit weight by tributary area on one linear foot of the beam: $55 \times 10 = 550 \text{ lb/ft}$.
3. From Table A-2.1, assume weight of beam: 40 lb/ft.
4. Add beam weight to superimposed dead load to get total dead load, $D = 550 + 40 = 590 \text{ lb/ft}$, as shown in Figure 2.2.


Girder B

1. Find concentrated dead loads at third points caused by typical beam reactions, equal to the distributed load on the beam times the beam span divided by 2: $P = 590(30)/2 = 8850 \text{ lb}$.
2. From Table A-2.1, find weight of cladding = 1000 lb/ft.
3. From Table A-2.1, assume weight of girder: 80 lb/ft.
4. Add girder weight to cladding weight = $80 + 1000 = 1080 \text{ lb/ft}$.
5. The dead load on the girder consists of the distributed load in addition to the concentrated loads transferred by typical beams, as shown in Figure 2.3.

Dead loads also figure prominently in the evaluation of various environmental loads, such as those caused by wind and earthquakes. Seismic loads, for example, are directly proportional to the inertial mass of the building so that large dead loads

**FIGURE 2.2**

Beam A load diagram for Example 2.1

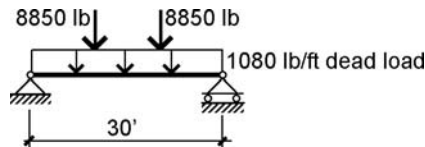**FIGURE 2.3**

Girder B load diagram for Example 2.1

are associated with large seismic forces. The effects of wind, on the other hand, can often be mitigated by the addition of dead load, since overturning and uplift—tendencies that act opposite to the force of gravity—are reduced as the building's weight increases.

LIVE LOADS

Live loads are nonpermanent, or movable, loads within buildings caused by the weight of people, furnishings, storage of objects, etc. They are relatively unpredictable; vary over time; and are often dynamic, rather than static, in their application. Since it is not possible to measure these loads absolutely, a probabilistic approach is used: values are assigned to various types of occupancies based on “worst-case” expectations, taking into consideration actual observed loading conditions and the historical record of structural failures.

Since these determinations are generic to various occupancy classifications, and are not unique to each structure, the problem of determining live loads is taken out of the hands of building designers altogether and appears as a mandate of government in the form of building codes. Within these codes, the actual complex behavior of live loads is reduced to an array of uniformly distributed values, one for each type of occupancy. Examples of these live load values are listed in Table A-2.2.

As floor areas become larger, it becomes increasingly improbable that the full live load will ever be present; therefore, a reduction in live load is generally permitted for structural elements “influenced” by relatively large floor areas. These so-called influence areas are different from the tributary areas used to compute “unreduced” loads—they are, in fact, four times larger for columns and two times larger for beams (Figure 2.4). For this reason, a single reduction equation based on tributary areas

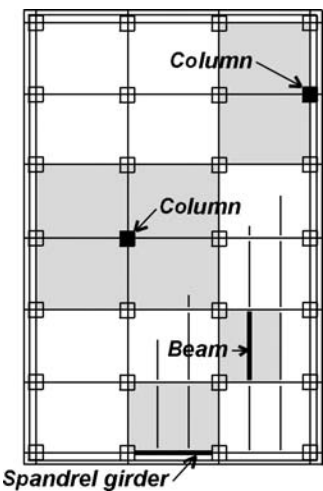



FIGURE 2.4
“Influence areas” for beams and columns

cannot be derived for both columns and beams; instead, such a formula is written in terms of what used to be called the influence area, A_i , but is now defined in terms of the tributary area, A_T (ft²), times a “live load element factor,” K_{LL} :

$$\text{live load reduction coefficient} = 0.25 + \frac{15}{\sqrt{K_{LL}A_T}} \tag{2.1}$$

Live loads are thus calculated by multiplying the tabulated values from Table A-2.2 by the area-dependent reduction coefficients (Equation 2.1), where K_{LL} is defined in Table A-2.2 but equals 2.0 for most beams and 4.0 for most columns. The reduction coefficient is subject to the following limitations: (1) no reduction is allowed for values of $K_{LL}A_T$ smaller than 400 ft²; (2) no live load reduction is permitted for elements supporting a single floor with live loads greater than 100 psf (and for elements supporting more than one floor with live loads greater than 100 psf, no reduction greater than 20% is permitted); (3) no reduction coefficient smaller than 0.5 is allowed for ordinary beams or columns supporting one level only; and (4) no reduction coefficient smaller than 0.4 is allowed for any other condition—that is, for columns or beams supporting more than one level.

Live load reduction coefficients are plotted in Figure 2.5 for various tributary areas, shown separately for beams and columns. Notice that as the tributary area gets larger (and the likelihood of the full live load being present decreases), the live load reduction increases.

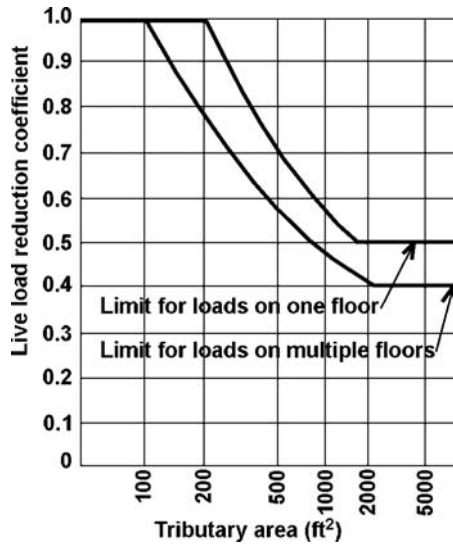**FIGURE 2.5**

Live load reduction coefficient graph

There are a few obvious exceptions to the rules governing live load reductions, most importantly for structural elements supporting large areas that are expected to be fully loaded. In such cases (e.g., in places of public assembly or in garages), no live load reduction is allowed. Additionally, reductions are restricted for one- and two-way slabs since the failure mode of such slabs is not directly a function of tributary area, but rather corresponds more closely to any given “strip” within which reinforcing bars are placed. These are minimum values for live loads: other than exposing oneself to the potential wrath of developers, owners, project managers, and contractors, nothing prevents a designer from using larger, or unreduced, values if warranted by the particular conditions of the project.

Example 2.2 Calculate live loads

Problem definition

Find the live loads for typical Beam *A* and Girder *B* in the 6-story office building shown in Figure 2.6. What is the live load on first floor interior Column *C* (ignoring roof loads)?

Solution overview

Find unreduced live loads; apply live load reduction coefficient where applicable.

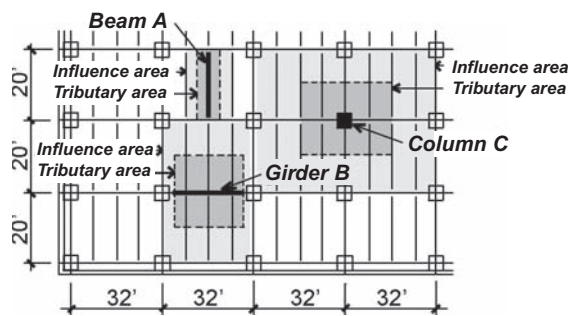


FIGURE 2.6
Framing plan for Example 2.2

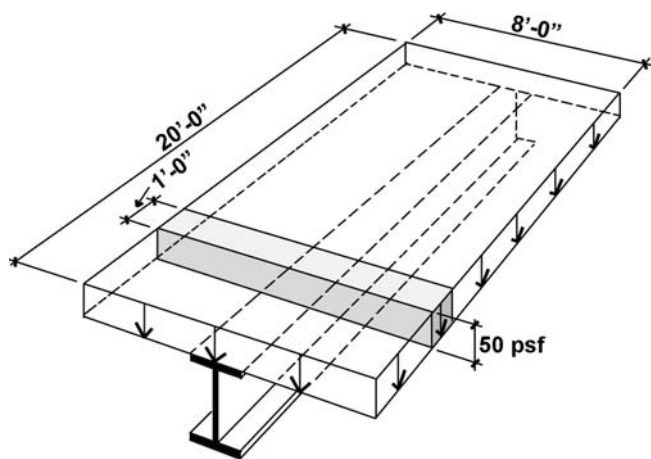
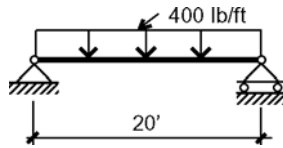



FIGURE 2.7
Tributary area for live load on one linear foot of beam for Example 2.2, with shaded “stress block” volume of $50 \times 8 \times 1 = 400\text{lb/ft}$ being the unreduced live load on one linear foot of the beam

Problem solution
Beam A

1. From Table A-2.2, the unreduced live load for office occupancy = 50psf. The load on a linear foot of the beam, found by multiplying the unit load by the tributary area on 1 linear foot of the beam, is $50(8) = 400\text{lb/ft}$ (as shown in the shaded region of Figure 2.7).
2. From Table A-2.2, consider live load reduction, based on the beam’s tributary area, $A_T = 8 \times 20 = 160\text{ft}^2$, and a live load element factor, $K_{LL} = 2$. Since $K_{LL}A_T = 2(160) =$

**FIGURE 2.8**

Beam *A* load diagram for Example 2.2

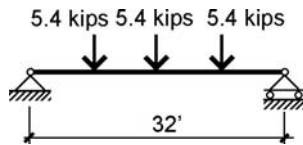**FIGURE 2.9**

Girder *B* load diagram for Example 2.2

$320\text{ ft}^2 < 400\text{ ft}^2$, no reduction is allowed, and the loading diagram remains as shown in Figure 2.8.

Girder *B*

1. Find the unreduced live load on the girder, applied at the quarter-points by the reactions of the beams, each of which equals the unit load on the beam times its span divided by two, or $400(20)/2 = 4000\text{ lb}$. Since two beams frame into the girder at each point, the unreduced live load is $4000(2) = 8000\text{ lb}$ at each of the quarter-points.
2. Consider live load reduction:
 - a. Find $K_{LL}A_T = 2(20 \times 32) = 1280\text{ ft}^2$. The tributary area is taken as $20\text{ ft} \times 32\text{ ft}$ rather than $20\text{ ft} \times 24\text{ ft}$ since the loads placed outside the middle 24 ft will have a structural effect on the girder.
 - b. From Equation 2.1, apply a reduction coefficient of $0.25 + 15/(1280^{0.5}) = 0.67$. The concentrated live loads at each quarter-point become $0.67 \times 8000 = 5354\text{ lb} = 5.4\text{ kips}$ as shown in Figure 2.9.

Column *C*, first floor

1. Find the unreduced live load on the column: Since the first-floor column of a six-story building supports five floors (not including the roof), and the tributary area of each floor is $32 \times 20 = 640\text{ ft}^2$, the total tributary area supported by the column is $5 \times 640 = 3200\text{ ft}^2$. This results in an unreduced live load of $50 \times 3200 = 160,000\text{ lb}$.
2. Consider live load reduction:
 - a. Find $K_{LL}A_T = 4(3200) = 12,800\text{ ft}^2$.
 - b. From Equation 2.1, apply a reduction coefficient of $0.25 + 15/(12,800^{0.5}) = 0.38$. Since the minimum reduction coefficient for columns supporting more than one level is 0.4, we use a total live load of $0.4(160,000) = 64,000\text{ lb} = 64\text{ kips}$.

ENVIRONMENTAL LOADS

Environmental loads are those due to snow, wind, rain, soil (and hydrostatic pressure), and earthquake. Unlike live loads, which are assumed to act on all floor surfaces equally, independent of the geometry or material properties of the structure, most of these environmental loads depend not only upon the environmental processes responsible for producing the loads, but upon the geometry or weight of the building itself. For snow, wind, and earthquake loads, the “global” environmental considerations can be summarized by location-dependent numbers for each phenomenon: ground snow load for snow, basic wind speed for wind, and maximum ground motion (acceleration) for earthquake (Table A-2.3). Considerations specific to each building are then combined with these “global” environmental numbers to establish the magnitude and direction of forces expected to act on the building. Like live loads, the actual procedures for calculating environmental loads are not derived independently for each building, but are mandated by local building codes. For the actual design of real buildings in real places, the governing building code must be consulted; for the preliminary design of real or imaginary buildings, the following guidelines will do.

Snow loads

Determining the weight of snow that might fall on a structure starts with a ground snow load map or a ground snow load value determined by a local building code official. These values range from 0 to 100 psf for most regions, although weights of up to 300 psf are possible in locations such as Whittier, Alaska. Some typical ground snow load values are listed in Table A-2.3. Flat-roof snow loads are generally considered to be about 30% less than these ground snow load values, and both wind and thermal effects—as well as the “importance” of the structure—are accounted for in further modifying this roof load. A thermal factor, $C_t = 1.2$, is included in the flat-roof load for unheated structures ($C_t = 1.0$ for heated structures and 1.1 for heated structures with ventilated roofs protected with at least R-25 insulation below the ventilated plenum or attic); we will assume a nominal value of 1.0 for both wind (“exposure”) and “importance.” Other possible values for the snow load importance factor, I_s , are listed in Table A-2.4. However, the major parameter in determining snow loads is the slope of the surface expected to carry the load. As the slope increases, more snow can be expected to slide off the roof surface, especially if the surface is slippery and if the space immediately below the surface is heated. The slope-reduction factor, C_s , which is multiplied by the flat-roof snow load to obtain the actual roof snow load, takes these factors into account:

- a. $C_s = 1.0$ for roof angles from 0° to A° .
- b. $C_s = 1.0 - \frac{\text{roof angle} - A^\circ}{70^\circ - A^\circ}$ for roof angles from A° to 70° . (2.2)
- c. $C_s = 0$ for roof angles greater or equal to 70° .

The parameter A (degrees Fahrenheit) depends on how slippery the roof surface is and whether that surface is allowed to become warm or cold: $A = 5^\circ$ for warm, slippery roofs (where the R-value must be at least 30 for unventilated roofs and at least 20 for ventilated roofs); 30° for warm, nonslippery roofs (or for slippery roofs not meeting the R-value criteria); 15° for cold, slippery roofs; 45° for cold, nonslippery roofs; and, for the intermediate condition, where a roof remains somewhat cold because it is ventilated (with at least R-25 insulation below the ventilated space), $A = 10^\circ$ for slippery roofs and 37.5° for nonslippery roofs. Neglecting variations due to exposure, the snow load can be written as:

$$0.7C_sC_tI_s(\text{ground snow load}) \quad (2.3)$$

As an example, for “ordinary” buildings ($I_s = 1.0$) with nonslippery (e.g., asphalt shingle) roofs having slopes no greater than 37.5° , kept cold by proper ventilation (with at least R-25 insulation below the ventilated space), the sloped roof snow load, deployed on the horizontal projection of the inclined structural roof members, becomes:

$$0.7(1.0)(1.1)(1.0)(\text{ground snow load}) \quad (2.4)$$

Judgment should be used where the building geometry provides opportunities for drifting snow to accumulate on lower roofs, or when sliding snow from higher roofs might fall on lower roofs. Most building codes provide guidelines for these situations.

Example 2.3 Calculate snow loads

Problem definition

Find the snow load on a house in Portland, Maine, with a conventional roof with an 8:12 slope, that is, with an angle $= \tan^{-1} (8/12) = 33.7^\circ$. The roof is kept cold by having a ventilated attic, with R-30 insulation separating the ventilated attic space from the heated house below. Calculate for both asphalt shingles and metal roofing.

Solution overview

Find ground snow load; compute roof snow load.

Problem solution

1. From Table A-2.3, the ground snow load = 50 psf.
2. Find the roof snow load:
 - a. *Nonslippery surface (asphalt shingles)*: From Equation 2.4, for this condition only, the snow load $= 0.7(1.1)(1.0)(\text{ground snow load}) = 0.7(1.1)(1.0)(50) = 38.5$ psf.

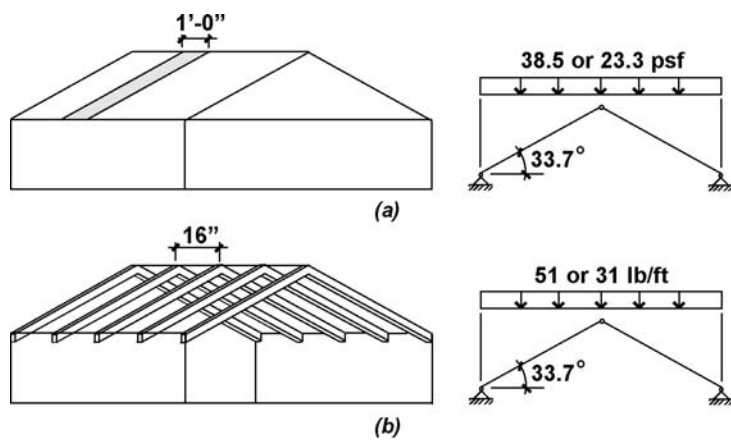


FIGURE 2.10

Snow load diagram showing (a) distributed snow load and (b) snow load on a typical rafter, for Example 2.3

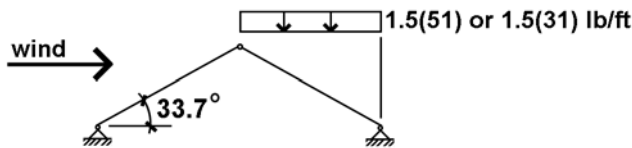
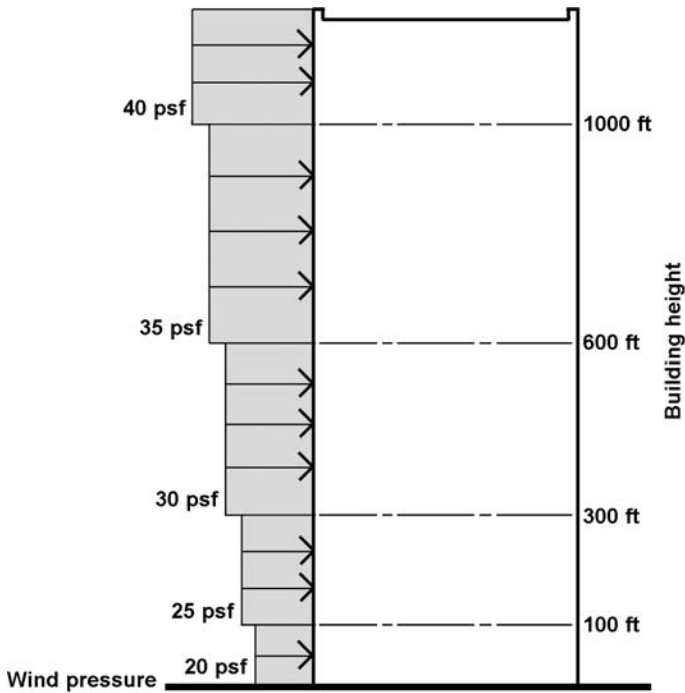


FIGURE 2.11

Unbalanced snow load for Example 2.3

- b. *Slippery surface (metal roofing)*: From Equation 2.2, find the coefficient, C_s for roof angles from A° to 70° , where $A = 10^\circ$ for cold, slippery roofs (kept cold by ventilation). In this case, $C_s = 1.0 - (\text{roof angle} - A^\circ)/(70^\circ - A^\circ) = 1.0 - (33.7 - 10)/(70 - 10) = 0.61$. From Equation 2.3, the snow load $= 0.7C_sC_t(\text{ground snow load}) = 0.7(0.61)(1.1)(50) = 23.3 \text{ psf}$.
- For rafters (sloped roof beams) spaced at 16 in. on center, the snow load on each rafter becomes:
 - $38.5(16/12) = 51 \text{ lb/ft}$ for the nonslippery roof.
 - $23.3(16/12) = 31 \text{ lb/ft}$ for the slippery roof.
 - Both of these loading diagrams are shown in Figure 2.10.
 - To account for the effects of wind acting simultaneously with snow on gable-type roofs, it is prudent to also check the unbalanced snow load, which can be taken as 1.5 times the snow load acting on the leeward side of the gable, with zero snow load on the windward side. For this example, the rafter snow load diagram is shown in Figure 2.11.

**FIGURE 2.12**

Historic values for wind loads, based on 1969–1981 New York City Building Codes

Wind loads

Building codes take one of two approaches to the mathematical calculation of wind pressure on building surfaces: either these pressures are simply given as a function of height, or they are calculated as a function of the basic wind speed, modified by numerous environmental and building-specific factors.

The Building Code of the City of New York historically took the first approach, specifying a 30-psf horizontal wind pressure on the surfaces of buildings more than 100 ft tall. This number was actually reduced to 20 psf in the 1930s and 1940s. Then, as buildings grew consistently taller and more data were assembled about wind speed at various elevations above grade, wind pressure began to be modeled as a discontinuous function, increasing from 20 psf below 100 ft to 40 psf above 1000 ft (Figure 2.12).

In contrast to this approach, wind pressure can also be calculated directly from wind speed: the relationship between the velocity or “stagnation” pressure, q , and the basic wind speed, V , is derived from Bernoulli’s equation for streamline flow:

$$q = 0.5\rho V^2 \quad (2.5)$$

where p is the mass density of air. Making some assumptions about air temperature to calculate p , and converting the units to pounds per square inch (psf) for q and miles per hour (mph) for V , we get:

$$q = 0.00256(K)K_dK_tV^2I_W \quad (2.6)$$

where K accounts for heights above ground different from the 10m above ground used to determine nominal wind speeds as well as different “boundary layer” conditions, or exposures, at the site of the structure; $K_d = 0.85$ is used only when computing the effects of load combinations (see Chapter 5) to account for the lower probability that an actual wind direction will produce the worst-case outcome when the effects of load combinations—not just wind alone—are simultaneously measured; and K_t is a factor used only in special cases of increased wind speeds caused by hills, ridges, escarpments, and similar topographic features. An “importance factor,” I_W , is taken as 1.0 for normal buildings but can be lowered to 0.77 for low hazard occupancies (minor storage, etc.) in hurricane-prone regions, or raised to 1.15 for occupancies defined as essential (hospitals, fire stations, etc.) or where a substantial hazard to human life is likely (schools, jails, places of assembly with 300 or more people, etc.).

For a building with normal occupancy at a height of 10m above grade in open terrain, that is, with $K = K_d = K_t = I_W = 1.0$, a wind speed of 90mph corresponds to a velocity pressure equal to:

$$q = 0.00256(1.0)(1.0)(1.0)(90^2)(1.0) = 20.7\text{psf} \quad (2.7)$$

The external design wind pressure, p_e , can be found at any height and for various environmental and building conditions by multiplying the velocity pressure, q , by a series of coefficients corresponding to those conditions:

$$p_e = qGC_p \quad (2.8)$$

where q is the velocity pressure as defined in Equation 2.6; G accounts for height-dependent gustiness; and C_p is a pressure coefficient accounting for variations in pressure and suction on vertical, horizontal, and inclined surfaces. Combining Equations 2.6 and 2.8, we get:

$$p_e = 0.00256(K)K_dK_tGC_pV^2I_W \quad (2.9)$$


where:

p_e = the external design wind pressure (psf)

V = the basic wind speed (mph)

K = the velocity pressure exposure coefficient

$K_d = 0.85$ is a wind directionality factor (for use only when computing load combinations)

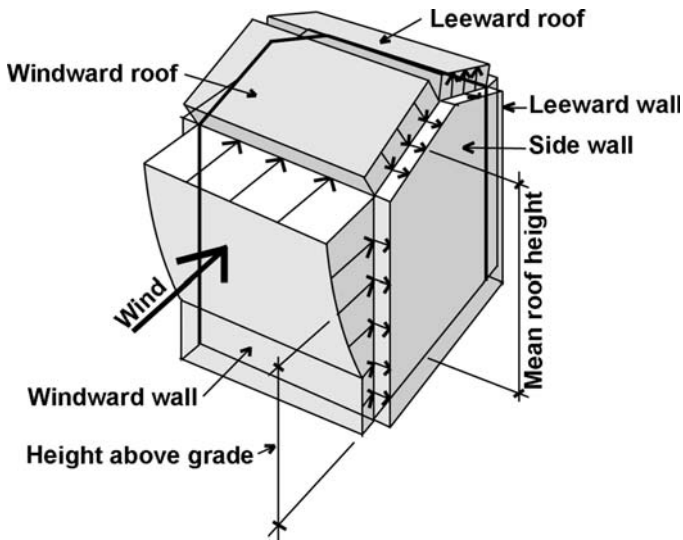**FIGURE 2.13**

Wind pressure on buildings

K_t = a topography factor (can be taken as 1.0 unless the building is situated on a hill, ridge, escarpment, etc.)

G = a coefficient accounting for height-dependent gustiness

C_p = a pressure coefficient accounting for variations in pressure and suction on vertical, horizontal, and inclined surfaces

I_w = an “importance factor,” taken as 1.0 for normal occupancies

Some values for these coefficients,—for buildings in various terrains (exposure categories)—are given in Table A-2.5 (except that wind velocities, V , for various cities, are found in Table A-2.3). The resulting distribution of wind pressures on all exposed surfaces of a generic rectangular building (with a sloped roof) is shown in Figure 2.13.

Only on the windward wall of the building does the wind pressure vary with height above ground. On all other surfaces, the coefficient K is taken at mean roof height for the entire surface, resulting in a uniform distribution of wind pressure (whereas for the windward wall, the coefficient K is taken at the height at which the pressure is being computed). This is consistent with the results of wind tunnel tests, which show a much greater variability (related to height) on the windward wall than on any other surface.

Changes in the building’s internal pressure as a result of high winds can increase or decrease the total pressure on portions of a structure’s exterior “envelope.” This internal pressure, p_i , is normally taken as 18% of the roof-height velocity pressure

for enclosed buildings, but it can be as high as 55% of the roof-height velocity pressure for partially enclosed buildings. The total design pressure, p , is therefore:

$$p = p_e + p_i \quad (2.10)$$

The actual behavior of wind is influenced not only by the surface (or boundary layer) conditions of the earth, but also by the geometry of the building. All sorts of turbulent effects occur, especially at building corners, edges, roof eaves, cornices, and ridges. Some of these effects are accounted for by the pressure coefficient C_p , which effectively increases the wind pressure at critical regions of the building envelope. Increasing attention is also being given to localized areas of extremely high pressure, which are averaged into the total design pressures used when considering a structure's "main wind-force resisting system" (MWFRS). These high pressures need to be considered explicitly when examining the forces acting on relatively small surface areas, such as mullions and glazing, plywood sheathing panels, or roofing shingles. Building codes either stipulate higher wind pressures for small surface elements like glass and wall panels or provide separate "component and cladding" values for the external pressure coefficients and gust response factors.

Since both external and internal pressures can be either positive (i.e., with the direction of force pushing on the building surface), or negative (i.e., with a suction-type force pulling away from the building surface), the total design pressure on any component or cladding element is always increased by the consideration of both external and internal pressures. For certain MWFRS calculations, however, the internal pressures on opposite walls cancel each other so that only external pressures on these walls need to be considered.

As an alternative to the analytic methods described, two other methods are also permitted: a simplified analytic procedure for enclosed, more-or-less symmetrical low-rise (no more than 60-ft-high) buildings and physical testing of models within wind tunnels to determine the magnitudes and directions of wind-induced pressures.

Example 2.4 Calculate wind loads

Problem definition

Find the distribution of wind load on the windward and leeward surfaces of a five-story office building located in the suburbs of Chicago (assume typical "suburban" terrain, or Exposure Category B). Since $K_d = 0.85$, the results can be combined with other loads; $K_t = 1.0$, since no peculiar topographic features are present, and $I_w = 1.0$, for "normal" occupancy. A typical section is shown in Figure 2.14. Plan dimensions are 100 ft $\times$ 100 ft. Neglect internal pressure.

Solution overview

Find basic wind speed; compute external design wind pressures.

Problem solution

- 1. From Table A-2.3, the basic wind speed, $V = 90$ mph.
- 2. *Windward wall:* From Equation 2.9, the external design wind pressure, $p_e = 0.00256(K K_d K_t G C_p V^2 I_W)$; where values for K , G , and C_p are found in Table A-2.5 (K_d , K_t , and I_W are given in the problem statement). It is convenient to organize the solution in tabular form, as shown in Table 2.1.

The value of K at mean roof height (64 ft) is found by interpolation between the value at 60 ft and the value at 70 ft:

$$\frac{K - 0.85}{0.89 - 0.85} = \frac{64 - 60}{70 - 60}$$

from which $K = 0.87$. Values for K_t and I_W equal 1.0 and are not included in the table.

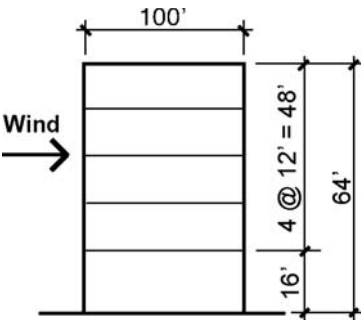


FIGURE 2.14
Schematic section through building for Example 2.4

Table 2.1 for Example 2.4							
Height	0.00256	K	K_d	G	C_p	V^2 (mph)	p_e (psf)
70	0.00256	0.89	0.85	0.85	0.8	90 × 90	10.7
64	0.00256	0.87	0.85	0.85	0.8	90 × 90	10.4
60	0.00256	0.85	0.85	0.85	0.8	90 × 90	10.2
50	0.00256	0.81	0.85	0.85	0.8	90 × 90	9.7
40	0.00256	0.76	0.85	0.85	0.8	90 × 90	9.1
30	0.00256	0.70	0.85	0.85	0.8	90 × 90	8.4
20	0.00256	0.62	0.85	0.85	0.8	90 × 90	7.4
0–15	0.00256	0.57	0.85	0.85	0.8	90 × 90	6.8

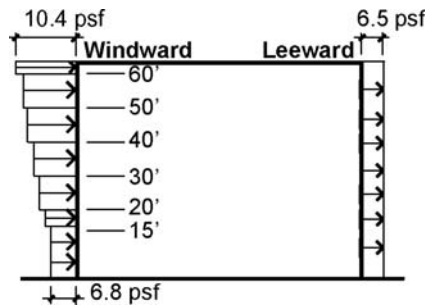


FIGURE 2.15
Distribution of wind pressure on windward and leeward surfaces for Example 2.4

3. *Leeward wall:* From Equation 2.9, the external design wind pressure for the leeward wall can be found (there is only one value for the entire leeward wall, based on K at the mean roof height). From Table A-2.5, $C_p = -0.5$ (since the ratio $L/B = 100/100 = 1.0$); $K = 0.87$ (at mean roof height: see step 2); $G = 0.85$; $K_d = 0.85$; and $K_t = I_w = 1.0$. The external wind pressure on the leeward side of the building is:

$$p_e = (0.00256)(0.87)(0.85)(0.85)(-0.5)(90^2) = -6.5\text{psf}$$

The negative sign indicates that this leeward pressure is acting in “suction,” pulling away from the leeward surface.

4. The distribution of wind pressure on the building section is shown in Figure 2.15. The direction of the arrows indicates positive pressure (pushing) on the windward side and negative pressure (suction) on the leeward side. Rather than connecting the points at which pressures are computed with straight lines (which would result in triangular stress blocks over the surface of the building), it is common to use the more conservative assumption of constant pressure from level to level, which results in a discontinuous, or stepped, pattern of wind pressure, as shown in Figure 2.15.

When computing the magnitude of wind loads that must be resisted by a building’s lateral-force-resisting system, internal pressures can be neglected (as they act in opposite directions on the two interior faces of the building, canceling out), leaving only the windward and leeward pressures to be considered for each orthogonal plan direction.

Seismic loads

A building riding an earthquake is like a cowboy riding a bull in a rodeo: as the ground moves in a complex and dynamic pattern of horizontal and vertical displacements, the building sways back and forth like an inverted pendulum. The horizontal

components of this dynamic ground motion, combined with the inertial tendencies of the building, effectively subject the building structure to lateral forces that are proportional to its weight. In fact, the earliest seismic codes related these seismic forces, F , to building weight, W , with a single coefficient:

$$F = CW \quad (2.11)$$

where C was taken as 0.1.

What this simple equation doesn't consider are the effects of the building's geometry, stiffness, and ductility, as well as the characteristics of the soil, on the magnitude and distribution of these equivalent static forces. In particular, the building's fundamental period of vibration, related to its height and type of construction, is a critical factor. For example, the periods of short, stiff buildings tend to be similar to the periodic variation in ground acceleration characteristic of seismic motion, causing a dynamic amplification of the forces acting on those buildings. This is not the case with tall, slender buildings having periods of vibration substantially longer than those associated with the ground motion. For this reason, tall flexible buildings tend to perform well (structurally) in earthquakes, compared to short, squat, and stiff buildings.

But stiffness can also be beneficial since the large deformations associated with flexible buildings tend to cause substantial nonstructural damage. The "ideal" earthquake-resistant structure must therefore balance the two contradictory imperatives of stiffness and flexibility.

In modern building codes, the force, F , has been replaced with a "design base shear," V , equal to the total lateral seismic force assumed to act on the building. Additionally, the single coefficient relating this shear force to the building's weight ("seismic dead load") has been replaced by a series of coefficients, each corresponding to a particular characteristic of the building or site that affects the building's response to ground motion. Thus, the base shear can be related to the building's weight with the following coefficients, using an "equivalent lateral force procedure" for seismic design:

$$V = C_s W = \left(\frac{S_{DS}}{(R/I_E)} \right) W \quad (2.12)$$

where:

V = the design base shear

C_s = the seismic response coefficient equal to $S_{DS}/(R/I_E)$

W = the effective seismic weight (including dead load, permanent equipment, a percentage of storage and warehouse live loads, partition loads, and certain snow loads);

S_{DS} = the design elastic response acceleration at short periods

R = a response modification factor (relating the building's lateral-force-resisting system to its performance under seismic loads)

I_E = the seismic importance factor (with somewhat different values than the equivalent factors for wind or snow)

The coefficient C_s has upper and lower bounds that are described in Table A-2.6, part H , so it will only correspond to Equation 2.12 when it falls between the two bounding values. The response modification factor, R , is assigned to specific lateral-force-resisting systems—not all of which can be used in every seismic region or for every type of occupancy; Table A-2.6, part D , indicates which structural systems are either not permitted or limited in height, within specific seismic design categories.

To approximate the structural effects that seismic ground motion produces at various story heights, seismic forces, F_x , are assigned to each level of the building structure in proportion to their weight times height (or height raised to a power no greater than 2) above grade:

$$F_x = \frac{V w_x b_x^k}{\sum w_i b_i^k} \quad (2.13)$$

where:

V = the design base shear, as defined above in Equation 2.12

w_i and w_x = the portions of weight W at, or assigned to, a given level, i or x

b_i and b_x = the heights from the building's base to level i or x


k = 1 for periods ≤ 0.5 s and 2 for periods ≥ 2.5 s (with linear interpolation permitted for periods between 0.5 and 2.5 s) and accounts for the more complex effect of longer periods of vibration on the distribution of forces

The Σ symbol in Equation 2.13 indicates the *sum* of the product of $(w_i b_i^k)$ for i ranging from 1 to n , where n is the number of levels at which seismic forces are applied.

A typical distribution of seismic forces resulting from the application of this equation is shown in Figure 2.16. It can be seen that Equation 2.13 for F_x guarantees that these story forces are in equilibrium with the design base shear, V .

For structures that are in the lowest-risk seismic design category A (see Table A-2.6, part G), it is not necessary to find the base shear, V , and the seismic response coefficient, C_s , and to assign story forces as described in Equations 2.12 and 2.13; instead, the story forces can be computed directly, based only on the dead loads for each level: $F_x = 0.01 w_x$, where F_x is the story force at each floor or roof level and w_x is the dead load assigned to that level.

Building codes require that larger seismic forces be used for the design of individual building elements and for the design of floor “diaphragms.” The rationale for the separate calculation of these forces is similar to the logic behind the calculation

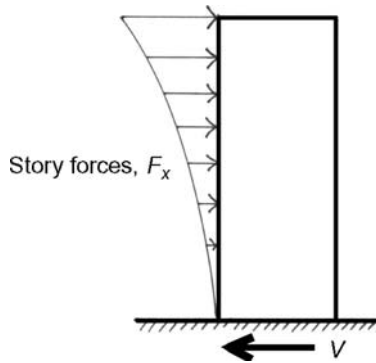**FIGURE 2.16**

Typical distribution of equivalent seismic story forces on a building

of larger “component and cladding” loads in wind design: because the actual distribution of seismic forces is nonuniform, complex, and constantly changing, the average force expected to act upon the entire lateral-force-resisting structural system is less than the maximum force expected to occur at any one level or upon any one building element.

The “equivalent lateral force analysis” method described earlier is but one of several alternate procedures developed for seismic force calculations. In addition to a simple “index force analysis” method permitted only in regions with extremely low seismic risk and a “simplified analysis” method for most nonhazardous and nonessential low-rise structures, more sophisticated alternate methods have been developed that can be used for any structure in any seismic region. These methods include modal response spectrum analysis as well as both linear and nonlinear response history analysis, all beyond the scope of this text.

Whatever the method of analysis, designers in seismically active regions should carefully consider the structural ramifications of their “architectural” design decisions and provide for ductile and continuous “load paths” from roof to foundation. Following are some guidelines:

1. Avoid “irregularities” in plan and section. In section, these irregularities include soft stories and weak stories that are significantly less stiff or less strong than the stories above and geometric irregularities and discontinuities (offsets) within the structure. Plan irregularities include asymmetries, reentrant corners, discontinuities and offsets that can result in twisting of the structure (leading to additional torsional stresses), and other stress amplifications. Buildings articulated as multiple masses can be either literally separated (in which case the distance between building masses must be greater than the maximum anticipated lateral drift, or movement) or structurally integrated (in which case the plan and/or sectional irregularities must be taken into account).

- 2. Provide tie-downs and anchors for all structural elements, even those that seem secured by the force of gravity: the vertical component of seismic ground acceleration can “lift” buildings off their foundations, roofs off of walls, and walls off of framing elements unless they are explicitly and continuously interconnected. Nonstructural items such as suspended ceilings and mechanical and plumbing equipment must also be adequately secured to the structural frame.

The explicit connection of all structural elements is also necessary for buildings subjected to high wind loads, since uplift and overturning moments due to wind loads can pull apart connections designed on the basis of gravity loads only. But unlike seismic forces, which are triggered by the inertial mass of all objects and elements within the building, wind pressures act primarily on the exposed surfaces of buildings so that the stability of interior nonstructural elements is not as much of a concern.

- 3. Avoid unreinforced masonry or other stiff and brittle structural systems. Ductile framing systems can deform inelastically, absorbing large quantities of energy without fracturing.

Example 2.5 Calculate seismic loads

Problem definition

Find the distribution of seismic story loads on a five-story office building located in Los Angeles, away from the ocean. Plan dimensions are 60ft × 80ft; assume that an “effective seismic weight” of 75 psf can be used for all story levels (primarily due to the dead load). The structure is a steel special moment-resisting frame and is built upon dense soil. The typical building section is shown in Figure 2.17.

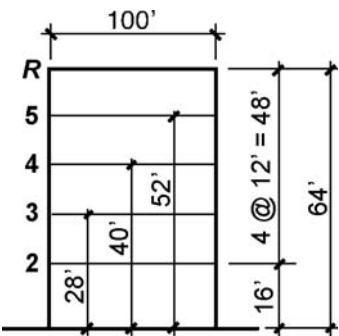


FIGURE 2.17

Schematic section through building, showing story heights, for Example 2.5

Solution overview

Find the effective seismic weight, W , and the seismic response coefficient, C_s ; compute the base shear, V , and the story forces, F_x .

Problem solution

1. *Find W :* The effective seismic weight for each story is the unit weight times the floor area = $75(60 \times 80) = 360,000 \text{ lb} = 360 \text{ kips}$ per floor; the total weight, W , for the entire building is therefore $5 \times 360 = 1800 \text{ kips}$.
2. *Find V :*
 - a. From Table A-2.3, find S_s , S_I (maximum considered earthquake ground motion at short and long periods, respectively), and T_L (long-period transition period) for Los Angeles: $S_s = 2.0$; $S_I = 1.0$; $T_L = 12$.
 - b. From Table A-2.6, parts *A* and *B*, find site coefficients F_a and F_v ; using dense soil (corresponding to Site Class *C*) and the values of S_s and S_I found in part *A*, we find that $F_a = 1.0$ and $F_v = 1.3$.
 - c. From Table A-2.6, part *C*, find the design elastic response accelerations: $S_{DS} = 2/3(F_a S_s) = 2/3(1.0)(2.0) = 1.33$; $S_{DI} = 2/3(F_v S_I) = 2/3(1.3)(1.0) = 0.867$.
 - d. From Table A-2.6, part *D*, find the response modification factor: $R = 8$ (for special steel moment frames). There are no height limits or other restrictions for this structural system category; otherwise, it would be necessary to check which seismic design category the building falls under, from Table A-2.6, part *G*.
 - e. From Table A-2.6, part *E*, the fundamental period of vibration, T , can be taken as $C_T h_n^x = 0.028(64^{0.8}) = 0.78$ second, where $h_n = 64 \text{ ft}$ is the building height; and the values used for C_T and x , taken from Table A-2.6, part *E*, correspond to steel moment-resisting frames.
 - f. From Table A-2.6, part *F*, the importance factor, I_E , equals 1.0 for ordinary buildings.
 - g. It is now possible to find the seismic response factor, C_s . The provisional value for $C_s = S_{DS}/(R/I_E) = 1.33/(8/1.0) = 0.166$. However, this must be checked against the upper and lower limits shown in Table A-2.6, part *H*: since $S_I = 1.0 \geq 0.6$ and $T = 0.78 < T_L = 12$, the lower limit for $C_s = 0.5S_I/(R/I_E) = 0.5(1.0)/(8/1.0) = 0.0625$, and the upper limit for $C_s = S_{DI}/(T R/I_E) = 0.867/(0.78 \times 8/1.0) = 0.139$. The upper limit governs in this case, so we use $C_s = 0.139$.
 - h. From Equation 2.12, the base shear, $V = C_s W = 0.139(1800) = 250.2 \text{ kips}$.
3. From Equation 2.13, the story forces can be determined as follows:

$$F_x = \frac{V w_x h_x^k}{\sum w_i h_i^k}$$

In this equation, since the period, $T = 0.78 \text{ s}$, is between 0.5 and 2.5, and the limiting values of the exponent, k , are set at 1.0 for $T \leq 0.5$ and 2.0 for $T \geq 2.5$, our value of k is found by linear interpolation:

$$\frac{k - 1.0}{2.0 - 1.0} = \frac{0.78 - 0.5}{2.5 - 0.5}$$

Table 2.2 for Example 2.5			
Story level	Story height, h_x (ft)	$h_x^{1.14}$	$F_x = 0.735h_x^{1.14}$ (kips)
Roof	64	114.56	84.24
5	52	90.42	66.49
4	40	67.04	49.30
3	28	44.64	32.83
2	16	23.59	17.35
Sum of story forces, $F_x =$ base shear $V = 250.2$			

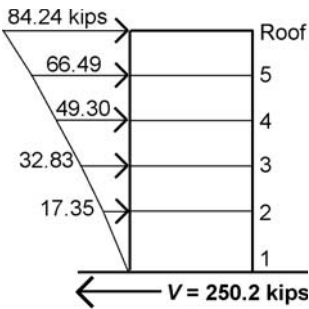


FIGURE 2.18
Distribution of story forces, F_x , for Example 2.5

from which $k = 1.14$. The seismic weight at each story, $w_i = 360$ kips (see step 1), and the various story heights can be most easily computed in tabular form (see Table 2.2). Once the values for $h_x^{1.14}$ have been determined for each story level, Equation 2.13 can be rewritten as:

$$F_x = \frac{(250.2)(360)h_x^{1.14}}{(360)(23.59 + 44.64 + 67.04 + 90.42 + 114.56)} = 0.735h_x^{1.14}$$

and values for $F_x = 0.735h_x^{1.14}$ can then be added to the table. Finally, their distribution on the building can be sketched, as shown in Figure 2.18. The sum of all the story forces, F_x , equals the design base shear, V , as it must to maintain horizontal equilibrium.

Material properties

3

Wood, steel, and concrete are actually extraordinarily complex materials. Of the three, wood was used first as a structural material, and some of the otherwise inscrutable vocabulary of structural analysis derives from this fact: the notion of an “outer fiber” of a cross section; or even the concept of “horizontal shear” are rooted in the particular material structure of wood.

Only certain material properties are of interest to us here—specifically, those that have some bearing on the structural behavior of the elements under consideration. The most obvious, and important, structural properties are those relating force to deformation or stress to strain. Knowing how a material sample contracts or elongates as it is stressed up to failure provides a crucial model for its performance in an actual structure. Not only is its ultimate stress (or strength) indicated, but also a measure of its resistance to strain (modulus of elasticity), its linear (and presumably elastic) and/or nonlinear (plastic) behavior, and its ability to absorb energy without fracturing (ductility).

Ductility is important in a structural member because it allows concentrations of high stress to be absorbed and redistributed without causing sudden, catastrophic failure. Ductile failures are preferred to brittle failures, since the large strains possible with ductile materials give warning of collapse in advance of the actual failure. Glass, a nonductile (i.e., brittle) material, is generally unsuitable for use as a structural element, in spite of its high strength, because it is unable to absorb large amounts of energy and could fail catastrophically as a result of local stress concentrations.

A linear relationship between stress and strain is an indicator of elastic behavior—the return of a material to its original shape after being stressed and then unstressed. Structures are expected to behave elastically under normal “service” loads; but plastic behavior, characterized by permanent deformations, needs to be considered when ultimate, or failure, loads are being computed. Typical stress-strain curves for wood, steel, and concrete are shown in Figure 3.1. The modulus of

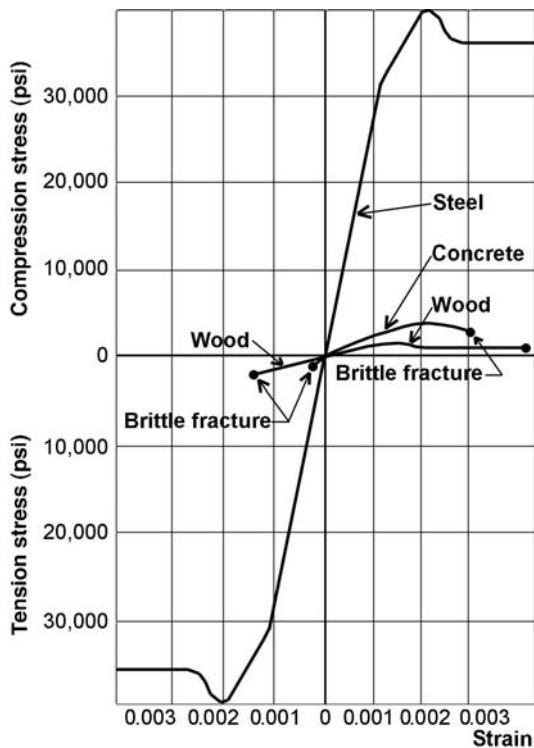


FIGURE 3.1
Stress–strain curves for structural materials

elasticity, E , is the slope of the curve—that is, the change in stress, σ , divided by the change in strain, ϵ . For linear materials:

$$E = \frac{\sigma}{\epsilon} \tag{3.1}$$

The most striking aspect of these stress–strain curves shown in Figure 3.1 is the incredibly high strength and modulus of elasticity (indicated by the slope of the curve) of steel relative to concrete and wood. Of equal importance is the information about the strength and ductility of the three materials in tension versus compression. For example, structural carbon steel, along with its high strength and modulus of elasticity, can be strained to a value 60 times greater than shown in Figure 3.1 in both tension and compression, indicating a high degree of ductility. Concrete, on the other hand, has very little strength in tension and fails in a brittle (nonductile) manner in both tension and compression. Wood has high tensile strength compared to concrete, but it also fails in a brittle manner when stressed in tension; in compression, however, wood shows ductile behavior.

Aside from such stress-strain data, material properties can also be affected by environmental conditions, manufacturing processes, or the way in which loads are applied. These material-dependent responses are discussed in the following sections.

WOOD

Wood is the stuff inside trees; *timber* is wood suitable for (or prepared for) use in structures; *lumber* is timber cut into standard-sized planks. Since we build with lumber (which is also timber, which is also wood), all three of these terms are used, depending on the context.

The basic structure of wood can be understood by examining its situation within the tree: the trunk consists of a bundle of cellulose tubes, or fibers, that serve the dual purpose of carrying water and nutrients from the ground to the leaves while providing a cellular geometry (“structure”) capable of supporting those leaves and the necessary infrastructure of branches. Various loads stress the tree trunk in axial compression (dead load and snow load) and in bending (wind load, eccentric dead load, and snow load). When we cut lumber from the tree, we do so in a way that allows it to be stressed within building structures in the same manner that it was stressed while in the tree. Thus, saw cuts are made parallel to the longitudinal fibers of the wood, since it is the continuity of these fibers that give the wood strength.

Cutting

Lumber cut from a tree immediately has three structural defects, compared to wood in the tree itself. First, it is virtually impossible to cut every piece of lumber so that the orientation of the fibers, or grain, is exactly parallel to the edges of the wood planks. This means that the full potential of the wood’s strength is rarely achieved.

Second, the continuous path of those fibers leading from trunk to branch—a functional and structural necessity within the tree—becomes a liability when the tree is cut, as it results in knots and other imperfections that weaken the boards. Wood is graded to account for these and other imperfections.

Third, the shear strength of the wood—that is, its ability to resist sliding of the cellular fibers relative to each other—is much lower than its strength in tension or compression parallel to those fibers. While a low shear strength is perfectly adapted to a tree’s circular cross section, it is not necessarily appropriate for the rectangular cross sections characteristic of lumber. Why this is so can be seen by comparing the two cross-sectional shapes: with a circle, a great deal of material is available at the neutral axis (where shear stresses are highest), so the “glue” or lignin holding the fibers together can be relatively weak; but when the tree is cut into rectangular cross sections, relatively less material is present at the neutral axis, and shear stresses are therefore higher. For this reason, the structural efficiency of lumber with a rectangular cross section—that is, all lumber—is compromised by a disproportionate weakness in shear.

Seasoning

A dead tree begins losing its internal water until its moisture content reaches equilibrium with the surrounding air. Two things then happen: the wood shrinks, especially perpendicular to the grain, and the wood gets stronger. As atmospheric humidity changes, the wood responds by gaining or losing moisture, by expanding or shrinking, and by becoming weaker or stronger. For structural design, the issue of strength versus moisture content is handled by assuming one of two conditions: either the wood is indoors, where the humidity is controlled and the moisture content of the wood is expected not to exceed 19% (for glued laminated timber, this condition is met when the moisture content is less than 16%), or outdoors, where the potential exists for the wood to take on added moisture and lose some strength. The wood's moisture content at the time of fabrication also has an impact on its in-service performance, especially for the design of connections among structural elements.

Volume

Lumber contains both hidden and visible pockets of low strength, due to imperfections within or between the cellular fibers of the material and larger cracks or knots often visible on the surface. It is impossible to know where all these defects might be in any particular piece of lumber, but one can safely surmise that there will be more of them as the volume of the piece increases. As the number of defects increases, the probability that larger, or more damaging, defects will exist within critical regions of the structural element also increases. Since these regions of low strength can trigger brittle failure (wood is brittle when stressed in tension), large pieces of lumber will statistically fail at lower levels of stress than small pieces. This does not mean that large beams hold less load than small beams; it simply means that the average stress that causes failure will be lower in larger beams.

Interestingly, the theory is validated by test results for all categories of beams and tension elements, with one exception: increases in cross-sectional width seem to make beams stronger (but not tension members), opposite to what the theory of brittle failure predicts. The reason for this anomaly remains unclear, but it may have to do with the fact that local failures at regions of low strength are more likely to cascade across the entire width of relatively thin cross sections and more likely to be contained as cross-sectional width increases. A horizontal break corresponding to a complete discontinuity between the lower and upper parts of a cross section drastically reduces the cross section's ability to resist bending moments, but it has no effect on the section's ability to resist axial tension. This would explain why beams, but not tension members, seem to get stronger with increased width. On the other hand, increasing the depth of a structural element has no such beneficial effect, since even a complete vertical break within a cross section neither increases nor decreases a member's bending or tensile strength. Because wide beams seem to be relatively stronger than narrow ones, the allowable stress in beams used flat (stressed about their weak axes) is higher than when they are used in their normal orientation, even though their total volume hasn't changed.

Duration of load

Wood fails at a lower stress the longer it is loaded. This phenomenon is similar to the “fatigue” of metals, except that where metal fatigue is brought on by repeated cycling or reversals of stress, loss of strength in wood is purely time-dependent and will occur even under a constant load. Thus, wood can sustain a higher stress caused by a short-duration impact load than by a longer-duration wind, snow, or live load.

Species and grade


Many species of wood can be used as lumber. Within each species, different grades are identified, depending on such things as overall density, knots, checks, and other imperfections. Grading can be done by visual inspection (for “visually graded lumber”) or with the aid of machines (for “machine stress rated lumber”). Since each species of wood is subdivided into numerous grades, the result is a multitude of possible material types, each with different structural properties. Practically speaking, the choices in any given geographical region are limited to what is locally available. For that reason, the material properties assumed when designing in timber are not arbitrarily selected from the lists produced by wood industry organizations but are selected from the much shorter list of regionally available species and grades. Several common species and grades of wood are listed in Tables A-3.1, A-3.3, A-3.5, and A-3.7, along with their “allowable stresses” in tension, compression, bending, and shear. Adjustments to these values, accounting for the effects of such things as moisture, volume, and duration of load are listed in Tables A-3.2, A-3.4, A-3.6, A-3.8, and A-3.10. The modulus of elasticity and specific gravity are listed in Tables A-3.9 and A-3.11, respectively.

Related products


Several wood-based products have been developed with structural applications:

Glued laminated (glulam) lumber is made by gluing together flat boards, typically $1\frac{3}{8}$ or $1\frac{1}{2}$ in. thick (half that for curved members) to create large cross sections of virtually unlimited length. Material properties can be controlled to some extent within the cross section—poorer-quality grades may be placed near the neutral axis, while higher-strength boards are reserved for the extreme fibers. A typical cross section is shown in Figure 3.2.

Laminated veneer lumber (LVL) is similar to glulam except that the laminations are much thinner—being sliced off a log like paper pulled off a roll, rather than being sawn, and the glued joints between laminations are vertical, rather than horizontal. The grain in each lamination is oriented along the longitudinal axis of the member so that, like glulam, it mimics the anisotropic fibrous structure of an ordinary piece of lumber. LVL is used for beams and girders only and is manufactured in standard sizes consistent with the sizes of sawn lumber, while glulam

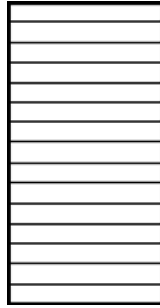**FIGURE 3.2**

Glulam cross section

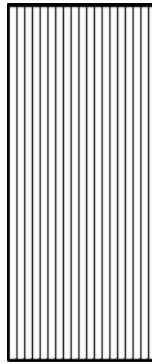
**FIGURE 3.3**

LVL cross section


can be custom fabricated in an unlimited variety of sizes and geometries. A typical LVL cross section is shown in Figure 3.3.

Parallel strand lumber (PSL) is similar to LVL, except that strips of veneer are used instead of whole veneers.

Plywood is similar to LVL except that alternate laminations (plies) are oriented perpendicular to each other, creating a dimensionally stable structural membrane, used typically as a substrate (sheathing) for roofs and exterior walls and as a subfloor over joists in wood-frame construction. Plywood typically contains an odd number of plies, except when the middle two plies are “doubled up” as in 4-ply plywood; in either case, the top and bottom fibers point in the same direction (parallel to the long dimension of the plywood sheet). For this reason, plywood is typically oriented so that it spans in the direction of its long dimension (Figure 3.4). Where this doesn’t occur (e.g., in certain panelized roof systems), the lower bending strength of the plywood spanning in its short direction needs to be considered.

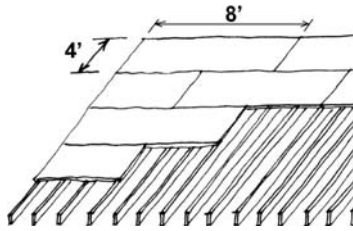**FIGURE 3.4**

Plywood subfloor

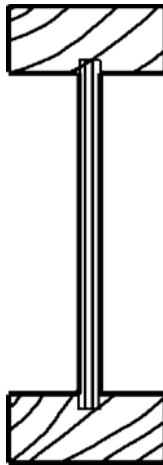**FIGURE 3.5**

I-joist cross section

Oriented strand board (OSB) is similar to plywood, except that the various alternating layers consist of strands of wood glued together.

I-joists are manufactured from various combinations of flange and web materials and can be used in place of sawn lumber beams. Flange material can be ordinary sawn lumber or LVL; web material is typically plywood or particle board. Cold-formed metal can also be used as a “web” material, creating a composite “truss-joist” consisting of wooden chords and metal diagonals. A typical I-joist cross section is shown in Figure 3.5.

Prefabricated trusses consisting typically of sawn 2×4 or 2×6 members joined by metal connector plates can be used for both pitched roofs and flat floors. These products can be custom fabricated and are often structurally designed (engineered) by the manufacturer.

STEEL

Steel is subject to corrosion if not protected and loss of strength and stiffness at high temperatures if not fireproofed. While these are extremely important material properties, the structural design of steel elements presupposes that these issues have been addressed within the architectural design process.

Stress–strain

Steel has a distinct elastic region in which stresses are proportional to strains and a plastic region that begins with the yielding of the material and continues until a so-called strain-hardening region is reached. The yield stress defines the limit of elastic behavior and can be taken as 36ksi for ASTM A36 or 50ksi for what is becoming the de facto standard—at least for wide-flange (W) shapes—ASTM A992; both standards are published by the American Society for Testing and Materials.


Within the plastic range, yielded material strains considerably under constant stress (the yield stress), but it does not rupture. In fact, rupture only occurs at the end of the strain-hardening region, at an ultimate or failure stress (strength) much higher than the yield stress. Bending cold-formed steel to create structural shapes out of flat-sheet steel stretches the material at the outer edges of these bends beyond both the elastic and plastic regions and into the strain-hardening region. This actually increases the strength of these structural elements, even though the direction of stretching is perpendicular to the longitudinal axis of the element.

High-strength steels (with yield stresses up to 100ksi) are available, but their utility is limited in the following two ways. First, the modulus of elasticity of steel does not increase as strength increases but is virtually the same for all steel (29,000ksi). Reducing the size of structural elements because they are stronger makes it more likely that problems with serviceability (i.e., deflections and vibrations) will surface since these effects are related not to strength, but to the modulus of elasticity.

Second, increased strength is correlated with decreased ductility and a greater susceptibility to fatigue failure. Therefore, where dynamic and cyclic loading are expected, high-strength steel is not recommended; where dead load dominates, and the load history of the structural element is expected to be relatively stable, high-strength steel may be appropriate, as long as the first criterion relating to stiffness (modulus of elasticity) is met. The most commonly used steels, along with their yield and ultimate stresses, are listed in Table A-3.12.

Residual stress

Hot-rolled steel shapes contain residual stresses even before they are loaded. These are caused by the uneven cooling of the shapes after they are rolled at temperatures of about 2000°F. The exposed flanges and webs cool and contract sooner than the web-flange intersections; the contraction of these junction points is then inhibited by the adjacent areas which have already cooled, so they are forced into tension

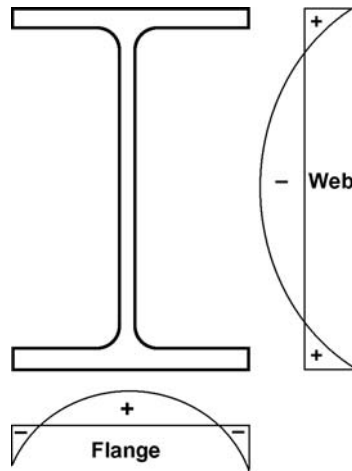**FIGURE 3.6**

Residual stresses in steel rolled section, with “+” indicating tension and “-” indicating compression

as they simultaneously compress the areas that cooled first. The typical pattern of residual stresses within a wide-flange cross section is shown in Figure 3.6. Residual stresses have an impact on the inelastic buckling of steel columns, since partial yielding of the cross section occurs at a lower compressive stress than would be the case if the residual compressive stresses “locked” into the column were not present.

Related products

Aside from standard rolled structural shapes, several other structural applications of steel should be noted:

Cold-formed steel is made by bending steel sheet (typically with 90° bends) into various cross-sectional shapes, used primarily as studs (closely spaced vertical compression elements), joists (closely spaced beams), or elements comprising lightweight trusses. Manufacturers provide tables for these products containing section properties and allowable loads, or stresses.

Hollow structural sections (HSS) are closed tubular steel shapes that can be formed and welded in various ways from flat sheets or plates; these shapes can be circular, square, or rectangular. Circular *pipes* are similar to round HSS, except that they are fabricated with a different grade of steel.

Open-web steel joists (OWSJ) are lightweight prefabricated trusses made from steel angles and rods. Spans of up to 144 ft are possible with “deep longspan” or DLH-series joists; regular “longspan” (LH-series) joists span up to 96 ft, while ordinary H-series joists span up to 60 ft. These products are relatively flexible, subject to

vibration, and are most often used to support roof structures in large one-story commercial or industrial buildings.

Space-frame (actually “space-truss”) systems consist of linear elements and connecting nodes based on various geometries, most commonly tetrahedral or pyramid shaped.

Corrugated steel decks constitute the floor and roof system for almost all steel-framed buildings. For floor systems, they are often designed compositely with concrete fill, effectively creating a reinforced concrete floor system in which the reinforcement (and formwork) consists of the steel deck itself.

Cables and rods can be used as structural elements where the only expected stresses are tension, or where the element is prestressed into tension: the flexibility of these elements prevents them from sustaining any compressive or bending stresses. Applications include elements within trusses, bridges, and membrane structures.

REINFORCED CONCRETE

The cylinder strength of concrete, f'_c , is the ultimate (highest) compressive stress reached by a 6 in. $\times$ 12 in. test cylinder of concrete after 28 days of curing under prescribed conditions. Desired values for f'_c are specified by designers and created in batching plants by mixing together predetermined proportions of water, cement, aggregate, and admixtures. Typical compressive strengths range from 3000 to 5000 psi, but can be specified higher for prestressed concrete or for columns subjected to unusually high compressive stresses.

Aside from concrete’s relatively high compressive strength, the material properties that are most significant in terms of its structural behavior are (1) low tensile strength, (2) brittleness, and (3) shrinkage.

Low tensile strength

The first property makes *plain* concrete unsuitable for most structural applications, since even elements subjected to compressive stresses generally need sufficient tensile strength to inhibit buckling. For this reason, and to extend the range of its applications to beams and slabs as well as columns, concrete is reinforced with steel reinforcing bars, or “rebars,” in regions of the cross section where tension is expected to occur.

Brittleness

Lack of ductility is also an undesirable property for a structural material. To prevent sudden, catastrophic failure of reinforced concrete beams, for example, the amount of reinforcement must be kept small enough so that the steel will yield (in a ductile

manner) before the concrete crushes (in a sudden, catastrophic, brittle manner). Where this is not possible—in structural elements controlled by compression—safety factors are adjusted accordingly (see Chapter 5).

Shrinkage

Concrete shrinks as the water not needed in the curing process, but required for workability, evaporates. Expansion and contraction due to temperature changes can also cause differential movement. To reduce and control cracking in slabs where this movement is restrained—for example, by perimeter beams containing steel reinforcement—additional temperature and shrinkage reinforcement is added to the slab. In one-way slabs, where the concrete spans and is structurally reinforced in one direction, temperature and shrinkage reinforcement is only needed perpendicular to this spanning direction.

Related products

Precast concrete is reinforced concrete that is cast away from the building site, and assembled on site. Some (but not all) precast concrete is available in standard shapes and dimensions: floor and roof planks, tees and double-tees are examples. Otherwise, precast concrete may be fabricated in any shape and size consistent with the laws of statics; the strength and stiffness of the materials; and the constraints imposed by formwork, transportation, handling, and erection.

Precasting may imply a loss of structural continuity if connections are made with steel inserts bolted or welded together to create simple supports. On the other hand, it is possible to design precast systems whose behavior is identical to that of site-cast systems by maintaining the continuity of steel reinforcement from element to element. Special products are available to connect rebars that have been left exposed at the ends of the concrete pieces; nonshrinking grouts are then used to fill in the voids and complete the structural connection.

Precast concrete is more widely used as “nonstructural” cladding than as primary structure, at least in the United States. The quotation marks around nonstructural hint at the inadequacy of the term: in fact, all cladding is structural since it must resist wind, seismic, and impact loads and transfer these loads to the primary lateral-force resisting structural system of the building.

This page intentionally left blank

Sectional properties

4

The behavior of structural elements is conditioned by the particular shapes into which these materials are formed and the particular material qualities selected. Wood, steel, and reinforced concrete structures can be fabricated from elements having an enormous range of strength, stiffness, size, and geometric configurations—subject only to the constraints imposed by manufacturing technologies, transportation and handling, and safety and serviceability requirements. In practice, though, the usual range is smaller, limited to standard shapes and sizes endorsed by industry associations. These standards are described in this chapter.

WOOD

Within each species, lumber is further classified by its size. Various grades of lumber are then identified for each size classification. The actual (“dressed”) sizes of lumber, which are currently $\frac{1}{2}$ in. to $\frac{3}{4}$ in. smaller than their nominal dimensions, are shown in Table A-4.1, together with some important cross-sectional properties. For our purposes, we shall consider only the following size classifications of lumber: *dimension lumber*, consisting of light framing elements, studs, and joists with nominal cross-sectional dimensions ranging from 2×2 to 4×16 , and *timbers*, consisting of all larger cross sections. There are two subcategories within timbers, identified by the most common uses for which they are typically selected: (1) *beams and stringers*, which are more than 2 in. wider than they are thick (and they are at least 5 in. thick, nominally), and (2) *posts and timbers*, which are no greater than 2 in. wider than they are thick. Of course, nothing prevents a designer from using a “beam and stringer” as a post; a “post and timber” as a beam; or any piece of lumber, classified by its most common use, for any other structural purpose.

When describing beams, the standard nomenclature used in timber design can be quite confusing: the smaller dimension, or *thickness*, is what we ordinarily call

“width”; the longer dimension, or *width*, is what we usually call “depth.” Thus, the section modulus of a timber beam, described in Chapter 8, is not “width” times “depth” squared, divided by 6 (as it would be in a strength of materials text); but is thickness times width squared, divided by 6. Got that?

Standard glulam posts and beams come in depths that are multiples of the lamination size and in an assortment of widths whose finished dimensions are different from those of dimension lumber. Some typical cross-sectional dimensions are shown in Table A-4.2.

STEEL

Wide-flange shapes are commonly used for both beams and columns within steel-framed structures. They are designated by a capital W, followed by the cross section’s nominal depth and weight (lb) per linear foot. For example, a W14 × 38 has a nominal depth of 14 in. and weighs 38 lb per linear foot (see Figure 4.1). Unlike standard (S) “I-beam” sections, whose flange surfaces are not parallel—the inner surface slopes about 16% relative to the outer surface—wide-flange (W) sections have parallel flange surfaces, making it somewhat easier to make connections to other structural elements. Wide-flange sections are manufactured in groups with a common set of inner rollers. Within each of these groups, the dimensions and properties are varied

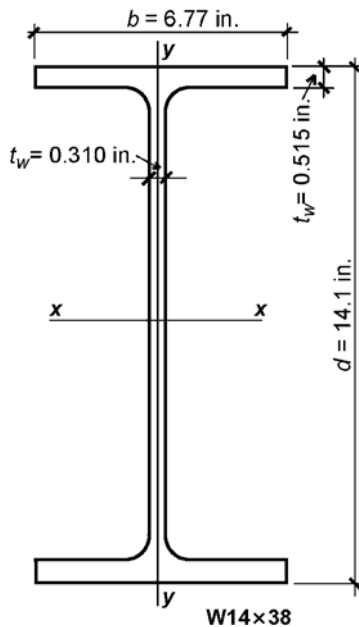


FIGURE 4.1

Cross section of a typical steel wide-flange (W) section

by increasing the overall depth of the section (thereby increasing the flange thickness) and then letting the web thickness increase as well. For this reason, actual depths may differ considerably from the nominal depths given to each group of shapes.

Dimensions of commonly available W shapes are listed in Table A-4.3. Other shapes, such as channels (C or MC), angles (L), pipes, and hollow structural sections (HSS), also have many structural applications; standard dimensions for some of these shapes are listed in Tables A-4.4 through A-4.8. The designation for channels (C and MC) follows that for wide-flange sections, with the nominal depth in inches followed by the weight in pounds per linear foot. For angles, three numbers are given after the symbol, L: the first two are the overall lengths of the two legs; the third is the leg thickness (always the same for both legs). Hollow structural sections (HSS) are designated with either two or three numbers corresponding to the diameter and nominal thickness (for round sections) or the two outside dimensions and nominal thickness (for rectangular sections). Steel pipe, similar in shape to round HSS, is designated by nominal outside diameter in three “weights”: standard, extra strong, and double-extra strong.

REINFORCED CONCRETE

Because cast-in-place, or site-cast, concrete is literally made at the building site, the only real constraint on the sizes and shapes of concrete structural elements is the willingness of architects, engineers, owners, and contractors to design the structure and assemble the formwork into which the concrete and reinforcement is placed. The history of reinforced concrete structures is thus filled with elaborate, structurally expressive, one-of-a-kind projects in which the “plasticity” of the material is exploited. The costs of formwork can be significant, though, and many reinforced concrete structures are designed to minimize these costs by rationalizing the dimensions of the various concrete elements, in part by reusing standardized forms where possible. For these structures, the outside dimensions of beams, slabs, and columns are often rounded up to the nearest $\frac{1}{2}$ in., 1 in., or even inch, depending on how big the element is. Slabs 6 in. thick or less are rounded up to the nearest $\frac{1}{2}$ in.; thicker slabs are rounded up to the nearest inch. The cross-sectional dimensions of beams and columns are rounded up to the nearest 1 in. or even inch (see Table A-4.9).

Reinforcing bar (rebar) spacing in reinforced concrete beams and columns is constrained by several factors. First, bars must be far enough apart so that aggregate in the concrete mix can pass freely between them—in general, the largest aggregate size must be no more than three-fourths of the minimum distance between bars. Looked at from the opposite point of view (i.e., with the maximum aggregate size set), the minimum space between bars must be $1\frac{1}{3}$ times greater than the largest aggregate. For 1-in. aggregate, the minimum clear bar spacing would be $1\frac{1}{3}$ in., or approximately $1\frac{1}{2}$ in. Additional requirements relate bar spacing to bar size: for beams, the

spacing must be not less than the nominal bar diameter, or 1 in.; for columns, the spacing must be not less than $1\frac{1}{2}$ times the nominal bar diameter, or $1\frac{1}{2}$ in.

In the United States, rebars were designated and marked by a number corresponding to the bar's nominal diameter multiplied by 8: for example, a bar with a nominal diameter of $\frac{1}{2}$ in. would be designated as a No. 4 bar (since $\frac{1}{2} \times 8 = 4$). In an increasingly international marketplace, these designations have been replaced with SI (international system) units, so the old No. 4 bar is now designated with the number 13 (since $\frac{1}{2}$ in. = 12.7 mm, or approximately 13 mm). Even so, the old U.S. system of bar numbering is still used by the American Concrete Institute (ACI) in its structural concrete codes and commentaries and will be used in this text. Side-by-side listings of new and old designations can be found in Tables A-4.10 and A-4.11.

For all commonly used beam reinforcing (No. 11 bars or smaller) and with aggregate no larger than 1 in., the minimum bar spacing requirement can be set at $1\frac{1}{2}$ in. for beams. For column reinforcing of No. 8 bars or smaller (i.e., 1 in. diameter or smaller) and with aggregate no larger than 1 in., the minimum spacing requirement can also be set at $1\frac{1}{2}$ in. for columns. However, for bar sizes larger than No. 8, the spacing requirement increases to $1\frac{1}{2}$ times the nominal bar diameter.

The implications for minimum width or diameter of reinforced concrete columns and beams are shown in Figure 4.2 and summarized next, assuming $1\frac{1}{2}$ -in. cover and $\frac{1}{2}$ -in.-diameter ties, stirrups, or spiral reinforcement. The specific function of these reinforcement types is explained in Chapter 7 (*ties* and *spirals* for columns) and Chapter 8 (*stirrups* for beams).

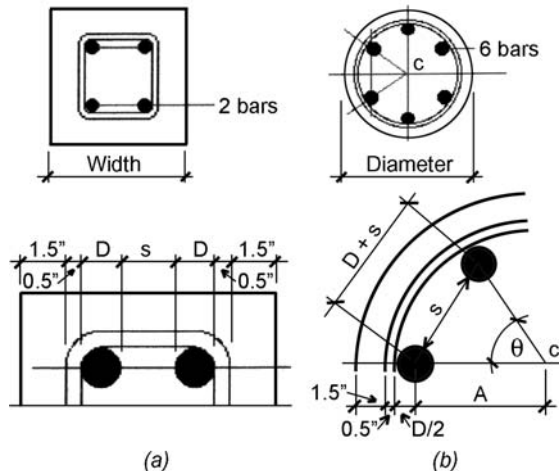


FIGURE 4.2

Minimum beam and column width (or diameter) based on bar spacing: (a) for tied column or beam and (b) for spiral column. The nominal bar diameter is D ; the required clear distance between bars is s ; and, for an angle, θ , between longitudinal bars in a spiral column, the distance, A , is $2(\sin \theta/2)/(D + s)$

Rectangular columns or beams

1. For beams (with bar size of No. 11 or smaller) and for columns with bar size of No. 8 or smaller, with two bars along the beam or column face: the minimum width (in.) is $5.5 + 2D$, where D is the bar diameter (in.). For beams or columns with more than two bars in a line, add $1.5 \text{ in.} + D$ for each additional bar.
2. For columns with bar size larger than No. 8, with two bars along the column face, the minimum width (in.) is $4 + 3.5D$, where D is the bar diameter (in.). For columns with more than two bars in a line, add $2.5D$ for each additional bar.

Spiral columns

For spiral columns with six bars, No. 8 or smaller: the minimum diameter (in.) is $7 + 3D$, where D is the bar diameter (in.). For columns with bar sizes larger than No. 8: the minimum diameter is $4 + 6D$.

Minimum widths for rectangular beams and columns, and minimum diameters for spiral columns, are given in Table A-4.11.

This page intentionally left blank

Design approaches

5

Structural engineering prescriptions tend to be written in the form of unambiguous mathematical relationships. In fact, the seeming authority of these formulations masks a rather different reality: the entire subject area of structures is littered with fundamental uncertainties. These uncertainties include not only the nature of loads and the strength and stiffness of structural materials in resisting these loads, but also the appropriateness of mathematical models used in design and analysis and the degree to which actual built structures conform to the plans and specifications produced by their designers. The basic requirements of safety, serviceability, and economy depend on how well designers maneuver within this probabilistic environment.

ALLOWABLE STRESS DESIGN

Structural design approaches can be characterized by the extent to which these uncertainties are made explicit. The simplest approach to designing structures uses a single factor of safety to define allowable stresses for a particular material. If actual (i.e., calculated) stresses do not exceed these allowable stresses, the structure is considered to be safe. Rather than using allowable stress, it is also possible to use allowable strength, measured in moment or force units. The allowable, or “available,” strength is defined by applying a safety factor to the structural element’s so-called limit state, that is, to the maximum moment or force it can sustain. Then, the element is designed such that its available strength (the limit state divided by a safety factor) is greater or equal to its required strength (the computed force or moment resulting from the application of loads).

In some cases, the factor of safety is actually given. In steel design, for example, the available strength is determined by dividing the limit-state moment or force by a safety factor (see Table A-3.13). In other cases—for example, timber design—the allowable

stress is simply presented as a property of the material, and the degree of safety is hidden from the designer. In all cases, however, it is not possible to “fine tune” the structure’s design by considering the relative uncertainty of various load types.

In allowable stress (or allowable strength) design, dead and live loads are simply added together, in spite of the fact that dead loads can be predicted with a higher degree of certainty than live loads. Thus, if two structures carry the same total load, but one structure has a higher percentage of dead load, the structures will have different degrees of safety if designed using the allowable stress method. In fact, the structure with more dead load will be statistically safer, since the actual dead load acting on the structure is more likely to correspond to the calculated dead load than is the case with live load. Allowable stress design is sometimes called working stress design, since the loads used in the method (“service loads”) represent what we expect to actually “work” with during the life of the structure.

To account for the improbability of multiple loads simultaneously acting on a structure at their maximum intensity, most codes provide load reduction factors for various combinations of load types. For example, where several loads are being considered, the “nondead” loads may be multiplied by 0.75, as long as the total thus calculated does not exceed the dead load together with the largest single additional load considered in the calculations (earthquake loads are sometimes excluded from this provision). The reduction of live loads on relatively large influence areas was discussed in Chapter 2.

STRENGTH DESIGN

A more recent approach to the design of structures explicitly considers the probabilistic nature of loads and the resistance of structural materials to those loads. Instead of regulating the design of structural elements by defining an upper limit to their “working stresses,” strength design considers both the limit state of the structural element—typically the strength at which the element fails or otherwise becomes structurally useless—as well as the relative uncertainty of the various loads acting on that element.

Using this method, the required strength of a structural element, calculated using loads multiplied by load factors (that correspond to their respective uncertainties), must not exceed the design strength of that element, calculated by multiplying the strength of the structural element by resistance factors (that account for the variability of stresses, and the consequences of failure). If Q represents the loads and their effects on a structural element and R represents the resistance, or strength, of that element, then strength design can be schematically represented as follows:

$$\lambda \Sigma(\gamma_i Q_i) \leq \phi R_n \quad (5.1)$$

where γ_i are the load factors (mostly greater than 1.0); ϕ is the strength reduction factor (smaller than 1.0); and λ is an additional factor (smaller than 1.0) that can be

used when multiple load types are assumed to act simultaneously, in which case the likelihood of all loads being present at their maximum intensities is reduced.

For reinforced concrete designed with the strength method, some commonly used factored load combinations are listed in Table A-5.1. Strength reduction factors are listed in Table A-5.2. Multiple combinations of loads are less likely to occur simultaneously at full magnitude; the load factors listed in Table A-5.1 account for these variable probabilities. The load factor for dead loads is sometimes less than zero, since this can represent the more dangerous condition (i.e., the more conservative assumption) where wind or earthquake forces cause overturning or uplift.

Strength design is similar to load and resistance factor design (LRFD in wood or steel), or “limit state design.” In the United States, strength design is now used almost exclusively in reinforced concrete design, is beginning to be widely used in steel design, and is not yet commonly used in timber design. In this text, we will use strength design for reinforced concrete and allowable stress (strength) design for timber and steel.

Example 5.1 Load combinations (Part I)

Problem definition

For the “light manufacturing” structure shown in Figure 5.1, assume that the dead load consists of the reinforced concrete floor structure. The weight of the reinforced concrete can be

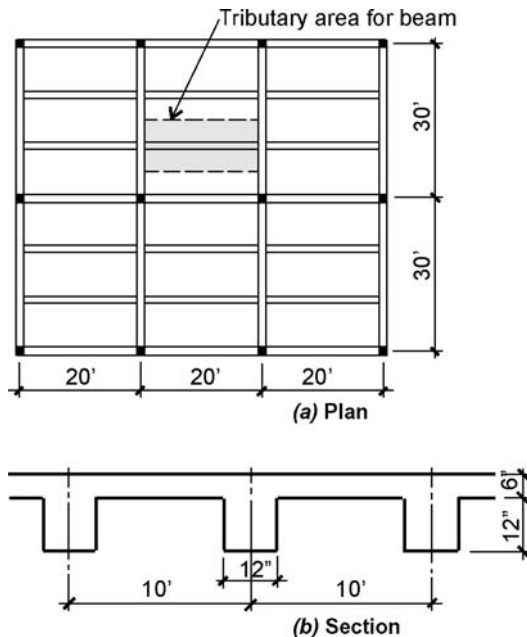
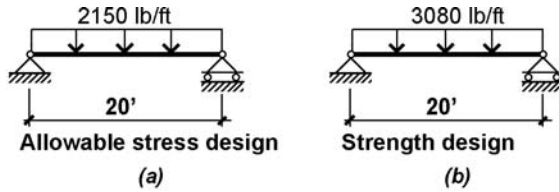


FIGURE 5.1

(a) Framing plan and (b) section for Example 5.1

**FIGURE 5.2**

Load diagrams for Example 5.1 using (a) allowable stress design and (b) strength design

taken as 150pcf. Find the distributed “design” load on a typical beam for both strength design and allowable stress design.

Solution overview

Find dead and live loads; add loads together for allowable stress design; apply load factors for strength design (strength design is used almost exclusively for the design of reinforced concrete structures).

Problem solution

1. From Table A-2.2, find live load: $L = 125$ psf; or, considering the distributed load on a typical beam, $L = 125 \times 10 = 1250$ lb/ft.
2. Find dead load.
 - a. Slab: $(150)(6/12)(10) = 750$ lb/ft.
 - b. Beam: $(150)(12/12)(12/12) = 150$ lb/ft.
 - c. Total dead load = $750 + 150 = 900$ lb/ft.
3. Allowable stress design: Total load = $D + L = 900 + 1250 = 2150$ lb/ft (Figure 5.2a).
4. Strength design: From Table A-5.1, the total load = $1.2D + 1.6L = 1.2(900) + 1.6(1250) = 3080$ lb/ft (Figure 5.2b).

Example 5.2 Load combinations (Part II)

Problem definition


Now, repeat Example 5.1, except change the occupancy to that of a restaurant, and add ceramic tile (weighing 25 psf) to the surface of the slab.

Solution overview

Find dead and live loads; add loads together for allowable stress design; apply load factors for strength design.

Problem solution

1. From Table A-2.2, find live load: $L = 100$ psf; or, considering the distributed load on a typical beam, $L = 100 \times 10 = 1000$ lb/ft.
2. Find dead load.
 - a. Slab: Concrete + Tile = $(150)(6/12)(10) + 25(10) = 1000$ lb/ft.

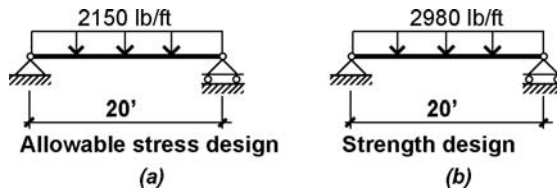**FIGURE 5.3**

Load diagrams for Example 5.2 using (a) allowable stress design and (b) strength design

- b. Beam: $(150)(12/12)(12/12) = 150 \text{ lb/ft}$.
- c. Total dead load $= 1000 + 150 = 1150 \text{ lb/ft}$.
3. Allowable stress design: Total load $= D + L = 1150 + 1000 = 2150 \text{ lb/ft}$ (Figure 5.3a).
4. Strength design: From Table A-5.1, the total load $= 1.2D + 1.6L = 1.2(1150) + 1.6(1000) = 2980 \text{ lb/ft}$ (Figure 5.3b).

Examples 5.1 and 5.2 were admittedly rigged to make a point: even though the total unfactored loads are the same in both cases, the factored loads used in strength design are different, since the proportion of live to dead loads has changed. The allowable stress procedure would result in exactly the same beam design in both cases, whereas the strength method would permit a smaller beam for the restaurant in Example 5.2 (since the total design loads are smaller). However, according to the probabilistic logic of strength design, even though the restaurant beams are smaller, the degree of safety would be the same for both beams.

Example 5.3 Load combinations (Part III)

Problem definition

Assuming strength design, find the various combinations of load acting on the 9th- and 10th-floor columns shown in Figure 5.4. Assume that the dead load for each floor level is 40 psf; the live load for the 10th floor is 60 psf; the roof live load, L_r (maintenance, etc.), is 20 psf; and the wind load acting on the roof is 30 psf (acting upward). The tributary area shown is $25 \times 10 = 250 \text{ ft}^2$ per floor.


Solution overview

Find loads (including live load reduction coefficient); compute load combinations; identify critical (governing) combinations.

Problem solution

10th-floor column:

1. Find loads:
 - a. $D = 250(40) = 10,000 \text{ lb} = 10 \text{ kips}$.
 - b. $L_r = 250(20) = 5000 \text{ lb} = 5 \text{ kips}$.
 - c. $W = 250(-30) = -7500 \text{ lb} = -7.5 \text{ kips}$.

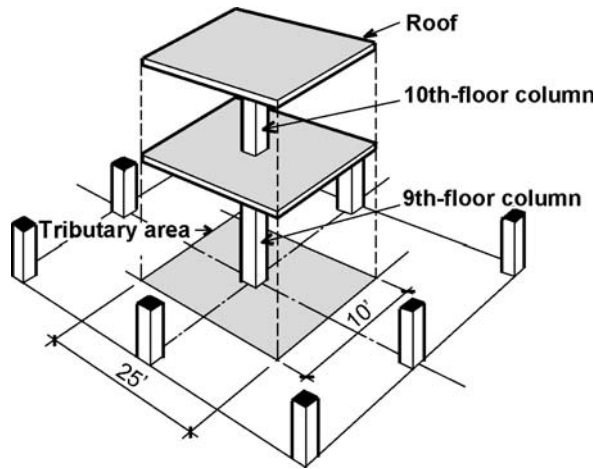**FIGURE 5.4**

Tributary floor areas for Example 5.3

2. From Table A-5.1 (strength design), compute load combinations:
 - a. $1.4D = 1.4(10) = 14$ kips.
 - b. $1.2D + 1.6L + 0.5(L_r \text{ or } S) = 1.2(10) + 0 + 0.5(5) = 14.5$ kips.
 - c. $1.2D + 1.6(L_r \text{ or } S) + (0.5L \text{ or } 0.8W) = 1.2(10) + 1.6(5) + 0.5(0) = 20$ kips.
 - d. $1.2D + 1.6W + 0.5L + 0.5(L_r \text{ or } S) = 1.2(10) + 1.6(-7.5) + 0 + 0.5(5) = 2.5$ kips.
 - e. $1.2D + 1.0E + 0.5L + 0.2S = 1.2(10) + 0 + 0 + 0 = 12$ kips.
 - f. $0.9D + 1.6W = 0.9(10) + 1.6(-7.5) = -3$ kips.
 - g. $0.9D + 1.0E = 0.9(10) + 0 = 9$ kips.
3. Conclusions: For the 10th-floor column, the critical load combinations are 20 kips from live and dead load plus roof live load (combination c) and -3 kips from dead and wind load (combination f). The negative force due to wind uplift must be considered since it places the upper level column in tension. In equations c, d, and e, the live load factor is taken as 0.5 (see Note 2 in Table A-5.1).

9th-floor column:

1. Find loads:
 - a. $D = 500(40) = 20,000 \text{ lb} = 20$ kips.
 - b. $L_r = 250(20) = 250(20) = 5000 \text{ lb} = 5$ kips.
 - c. The live load reduction coefficient can be found from Table A-2.2 and is equal to $0.25 + 15/(4 \times 250)^{0.5} = 0.72$.
 - d. $L = (250 \times 60)(\text{reduction coefficient}) = (250 \times 60)(0.72) = 10,800 \text{ lb} = 10.8$ kips.
 - e. $W = 250(-30) = -7500 \text{ lb} = -7.5$ kips.
2. From Table A-5.1 (strength design), compute load combinations:
 - a. $1.4D = 1.4(20) = 28$ kips.
 - b. $1.2D + 1.6L + 0.5(L_r \text{ or } S) = 1.2(20) + 1.6(10.8) + 0.5(5) = 43.78$ kips

- c. There are two choices here: (1) using W : $1.2D + 1.6(L_r \text{ or } S) + (0.5L \text{ or } 0.8W) = 1.2(20) + 1.6(5) + 0.8(-7.5) = 26.0 \text{ kips}$; or (2) using L : $1.2D + 1.6(L_r \text{ or } S) + (0.5L \text{ or } 0.8W) = 1.2(20) + 1.6(5) + 0.5(10.8) = 37.4 \text{ kips}$.
 - d. $1.2D + 1.6W + 0.5L + 0.5(L_r \text{ or } S) = 1.2(20) + 1.6(-7.5) + 0.5(10.8) + 0.5(5) = 19.9 \text{ kips}$.
 - e. $1.2D + 1.0E + 0.5L + 0.2S = 1.2(20) + 0 + 0.5(10.8) + 0 = 29.4 \text{ kips}$.
 - f. $0.9D + 1.6W = 0.9(20) + 1.6(-7.5) = 6 \text{ kips}$.
 - g. $0.9D + 1.0E = 0.9(20) + 0 = 18 \text{ kips}$.
3. Conclusions: For the 9th-floor column, the critical load combination is 43.78 kips from live and dead load plus roof live load (combination b). No combination of loads places the column in tension. In equations c , d , and e , the live load factor is taken as 0.5 (see Note 2 in Table A-5.1).

In a reinforced concrete structure, columns typically are also subjected to bending moments due to their continuity with beams, girders, or slabs. Where the *combined* effects of axial loads and bending moments are accounted for—something that is beyond the scope of this text—the axial loads computed from other load combinations (together with the bending moments associated with them) might turn out to be critical.

This page intentionally left blank

Tension elements

6

Elements subjected to tension provide us with the simplest mathematical model relating internal force and stress:

$$\text{axial stress} = \frac{\text{force}}{\text{area}} \quad (6.1)$$

This equation is simple and straightforward because it corresponds to the simplest pattern of strain that can develop within the cross section of a structural element. As shown in Figure 6.1, this strain is assumed to be uniformly distributed across the entire cross section; for this reason, the stress can be defined as force per unit area. Classical “strength of materials” texts use the symbol, σ , for axial stress, so that we get:

$$\sigma = \frac{P}{A} \quad (6.2)$$

where P is the internal force at a cross section with area, A . By axial stress, we mean stress “acting” parallel to the longitudinal axis of the structural element, or stress causing the element to strain in the direction of its longitudinal axis. Tension is an axial stress causing elongation; compression is an axial stress causing shortening or contraction.

Where bolt holes reduce the cross-sectional area of a tension element, the remaining area at the cross section, A_n , is called the net area. Failure or “rupture” of an element stressed in tension occurs at a failure surface defined by the location and quantity of such bolt holes. Where the holes are arrayed in an orthogonal grid, as shown in Figure 6.2*a*, the failure surface is easily determined. For staggered rows of bolts, as shown in Figure 6.2*b*, more than one possible failure surface may exist: the net area in each case can be determined by multiplying the net width of the section

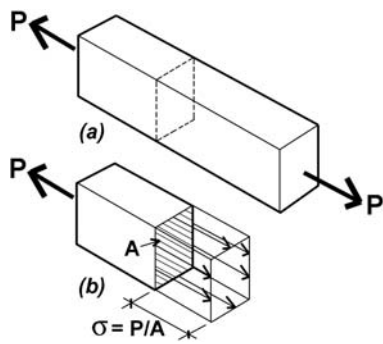


FIGURE 6.1
Illustrations of (a) tension element and (b) free-body diagram cut at any cross section with area, A

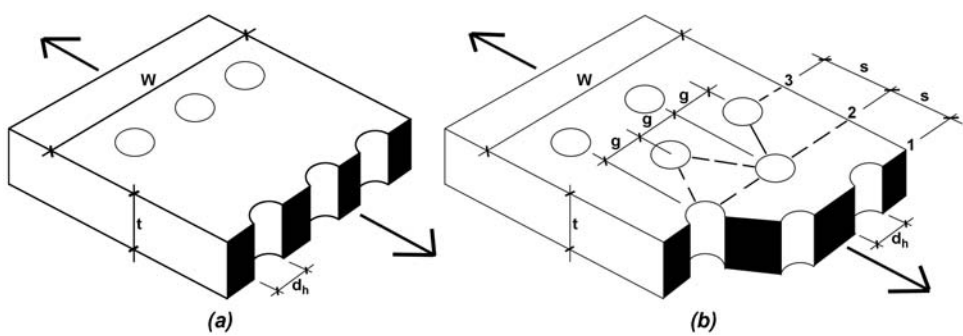


FIGURE 6.2
Net area of a cross section, shown in darker tone, with (a) one possible failure surface when bolt holes are arrayed in orthogonal grid and (b) multiple possible failure surfaces when bolt holes are staggered

by its thickness, t . This net width is found by subtracting from the gross width, W , the sum of hole diameters, d_h , and then adding spacing-gage terms, $s^2/(4g)$, for each diagonal line in the failure surface. In these calculations, s is the spacing between bolt centerlines parallel to the direction of load, and g is the “gage,” or spacing between bolt centerlines perpendicular to the direction of load.

When we discuss particular structural materials, stresses are often represented by the letter F rather than σ , and capitalized when referring to allowable, yield, or ultimate stresses in timber and steel. For example, F_y refers to the yield stress of steel; F_u refers to the ultimate stress of steel (the highest stress, or “strength,” of steel reached within the strain-hardening region); while F_t symbolizes allowable tensile stress in both timber and steel. Lowercase f , with appropriate subscripts, is often used to refer to the actual stress being computed. An exception to this convention

occurs in reinforced concrete strength design, where the yield stress of reinforcing steel (F_y in steel design) is given a lowercase designation, f_y (as is the cylinder strength of concrete, f'_c). In any case, for axial tension in steel and wood, allowable stress design requires that:

$$f_t \leq F_t \quad (6.3)$$

The elongation of an element in tension can be computed based on the definition of modulus of elasticity given in Equation 3.1; since $E = \sigma/\epsilon$, and substituting P/A for σ and (elongation)/(original length) for ϵ , we get:

$$E = \frac{(P)(\text{original length})}{(A)(\text{elongation})} \quad (6.4)$$

Solving for elongation, and letting L = original length, the equation becomes:

$$\text{elongation} = \frac{PL}{AE} \quad (6.5)$$

Example 6.1 Find elongation in tension element

Problem definition

Compute the elongation, or change in length, for a steel bar with a cross-sectional area of 4 in², 3 ft in length, with $E = 29,000,000$ psi, subjected to a tensile load of 10 kips.

Solution overview

Find elongation = $(PL)/(AE)$. Units must be consistent.

Problem solution

From Equation 6.5, elongation = $(PL)/(AE) = (10 \text{ kips} \times 36 \text{ in.})/(4 \text{ in}^2 \times 29,000 \text{ ksi}) = 0.0031 \text{ in.}$

WOOD

Basic tabular values of allowable stresses in tension are shown in Table A-3.1 for some common species and grades of visually graded lumber. The allowable stress in tension (parallel to the grain) for timber elements needs to be modified, or adjusted, to account for the variations in material properties discussed in Chapter 3. The three most important adjustment factors, corresponding to these material properties, are as follows: C_M for wood structural elements exposed to wet service conditions,

C_F for certain cross sections larger or smaller than 2×12 , and C_D for timber elements exposed to a total cumulative “duration of load” different from the time period associated with normal “occupancy” live loads. This adjusted stress, F'_t , is computed by multiplying the basic tabular value, F_t , by the appropriate adjustment factors, C_D , C_M , and C_F (see Table A-3.2). For an explanation of how the duration of load factor, C_D , is used, see Table A-3.10.

The actual tension stress within the structural element is computed by dividing the internal tension force by the cross-sectional area available to resist that force. Where bolt holes are present, the gross area, A_g , of the cross section is reduced by the nominal hole area, as shown in Figure 6.2a. The resulting net area, A_n , is, therefore:

$$A_n = A_g - (\text{number of holes})(d_b \times t) \quad (6.6)$$

where d_b is the bolt hole diameter, taken somewhat larger than the bolt diameter, and t is the thickness of the cross section. Timber industry specifications recommend that the bolt hole diameter be $\frac{1}{32}$ in. to $\frac{1}{16}$ in. larger than the bolt diameter; in the examples that follow, a $\frac{1}{16}$ in. increase will be assumed. The actual stress, f_t , is, therefore:

$$f_t = P/A_g \quad (6.7)$$

where no bolt holes are used; and

$$f_t = P/A_n \quad (6.8)$$

where bolt holes are present. These equations can be rewritten to solve for the capacity (allowable load), using the adjusted allowable stress, F'_t , instead of the actual stress. Where tension elements are nailed rather than bolted, no reduction for nail holes is made; the full gross area is assumed to be available to resist the internal forces:

$$P_{allow} = F'_t \times A_g \quad (6.9)$$

Where bolt holes are used:

$$P_{allow} = F'_t \times A_n \quad (6.10)$$

Where wood element are loaded in tension parallel to grain, another potential mode of failure must be checked where closely spaced groups of bolts (or lag screws that fully penetrate the main member) are used as fasteners—this phenomenon does not apply to small-diameter nailed connections. As shown in Figure 6.3,

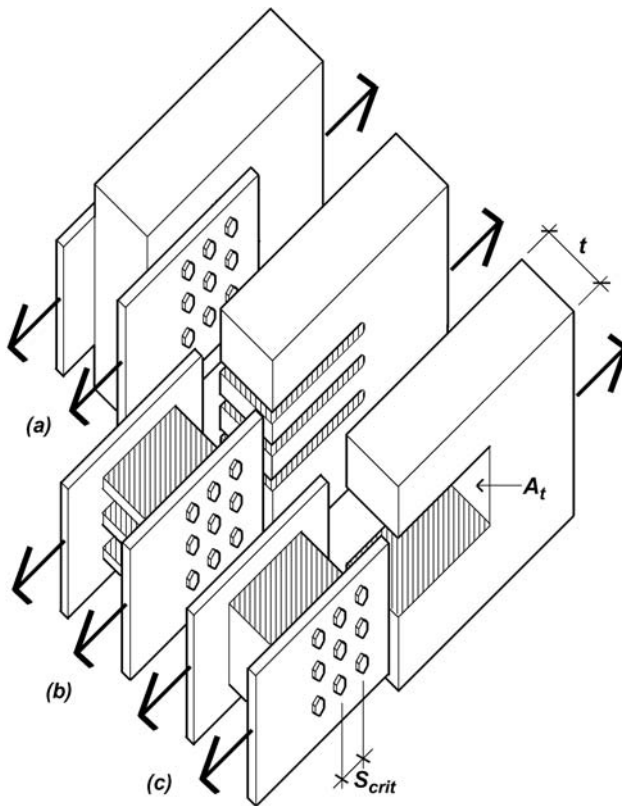


FIGURE 6.3

Forces on a wood member (a) loaded parallel to grain can cause (b) row tear-out or (c) group tear-out

the forces transmitted through a fastener group could cause entire “slots” of wood—either within each row of fasteners or for the entire fastener group taken as a whole—to tear out under the load. To prevent failure in the first case (“row tear-out,” Figure 6.3b), and in spite of the fact that the forces acting on the element itself are *tensile*, the external force acting on the connection must be no greater than the total allowable *shear* force that can be developed on all the potential failure planes along the rows of fasteners. In the second case (“group tear-out,” Figure 6.3c), the external force must be no greater than the allowable shear *and* tension forces that can be safely resisted by the three surfaces forming the boundary failure planes for the group of fasteners as a whole. Of these three surfaces, the resistance of the top and bottom parallel planes, stressed in shear, is equivalent to a single row subjected to row tear-out; the third surface, labeled A_t in Figure 6.3c, is stressed in tension.

In calculating row and group tear-out, adjusted allowable stresses for shear and tension are used that correspond to the species and grade of the wood elements

being checked. The total length of the surface assumed to be resisting shear stress along a given row of fasteners is taken as the smallest distance between fasteners (or between the end of the wood member and the first fastener) multiplied by the number of fasteners in that row. This accounts for the fact that shear stress along the potential failure planes defined by fastener rows is not uniform, but is higher where the area between fasteners along the shear plane is smallest. Additionally, this shear stress is not uniformly distributed between fasteners, but is assumed to step up and down in a triangular pattern, from maximum to zero, so that the *average* value of shear stress is actually half of its maximum value (corresponding to the average height of such a triangle).

Taking all these caveats into consideration, the allowable maximum force at a connection using bolts or lag screws—where the load is parallel to grain—is limited by the smaller of the following values for row and group tear-out:

- a. *For row tear-out:* Multiply the force safely resisted by the two shear planes at each row of fasteners by the number of rows (or, if not all rows of fasteners are the same, add the values for each row computed separately). The force resisted by a single row (arbitrarily called *row 1*) is equal to:

$$Z'_{RT-1} = 2n_1(F'_v/2)s_{crit}(t) = n_1(F'_v)s_{crit}(t) \quad (6.11)$$

where n_1 = the number of fasteners in *row 1*, F'_v = the adjusted allowable shear stress for the wood element, s_{crit} = the minimum spacing between fasteners in *row 1* (or the distance of the first fastener to the end of the member, if smaller), and t = the member thickness.

The force resisted by all fasteners, assuming that all rows are identical, is, therefore, the force resisted by a single row multiplied by the number of rows, r_n , or:

$$Z'_{RT} = r_n Z'_{RT-1} = r_n n_1 (F'_v) s_{crit}(t) \quad (6.12)$$

- b. *For group tear-out:* Add the shear force resisted at the parallel planes defined by the top and bottom fastener rows (in typical cases where the top and bottom fastener rows have the same geometry, this is equal to the value of Z'_{RT-1} computed earlier for single row tear-out; otherwise, add $Z'_{RT-1}/2$ for the top and bottom rows) plus the tension force resisted by the plane surface joining, and perpendicular to, these shear planes. For A_t representing the area subjected to tension stress between the top and bottom rows of fasteners (see Figure 6.3c), and F'_t being the adjusted allowable tensile stress for the wood, the force resisted, in terms of group tear-out, is:

$$Z'_{GT} = Z'_{RT-1} + F'_t A_t \quad (6.13)$$

These limitations based on row and group tear-out are summarized in Table A-6.2.

Example 6.2 Analyze wood tension element

Problem definition

Find the maximum load that can be applied to a 2×8 tension element connected with six $\frac{1}{2}$ -in.-diameter bolts. The wood used is Hem-Fir No. 1. Assume live, dead, and wind loads only, dry conditions, and spacing as shown in Figure 6.4.

Problem overview

Find gross area and net area; compute adjusted allowable stress; find capacity, $P = F'_t A_n$, with the net area as shown in Figure 6.5a. Check row tear-out, based on the shear failure planes shown in Figure 6.5b, and group tear-out, based on the shear and tension failure planes shown in Figure 6.5c. Adjust capacity based on tear-out calculations if necessary.

Problem solution

1. From Table A-4.1 the cross-sectional area, $A_g = 10.875 \text{ in}^2$.
2. Use Equation 6.6 to find the net area, A_n ; notice that even though there are six bolt holes, only two of them are subtracted from the gross area in calculating the net area, since the “failure plane” passes through only two holes. The hole diameter is taken as $\frac{1}{16}$ in. larger than the bolt diameter, so $d_h = \frac{9}{16} = 0.5625 \text{ in}$. Therefore, $A_n = A_g - (\text{number of holes})(d_h \times t) = 10.875 - 2(0.5625 \times 1.5) = 9.19 \text{ in}^2$.
3. From Table A-3.1 find the tabular value of allowable tension stress, $F_t = 625 \text{ psi}$.
4. Compute adjusted allowable tension stress:
 - a. From Table A-3.2, find adjustments to tabular value: $C_D = 1.6$; $C_M = 1.0$; $C_F = 1.2$.
 - b. $F'_t = F_t C_D C_M C_F = 625(1.6)(1.0)(1.2) = 1200 \text{ psi}$.
5. Using Equation 6.1, find capacity (allowable load) based on failure through the net area: $P = F'_t A_n = 1200 \times 9.19 = 11,028 \text{ lb}$.
6. From Table A-6.2, check capacity based on row and group tear-out, since the orientation of the load is parallel to grain and the member is in tension. The adjusted allowable stress in shear is found from Tables A-3.7 and A-3.8: $F_v = 150 \text{ psi}$ and the relevant adjustments are for wet service ($C_M = 1.0$) and duration of load ($C_D = 1.6$), so $F'_v = 150(1.0)(1.6) = 240 \text{ psi}$. The adjusted allowable tension stress is as found

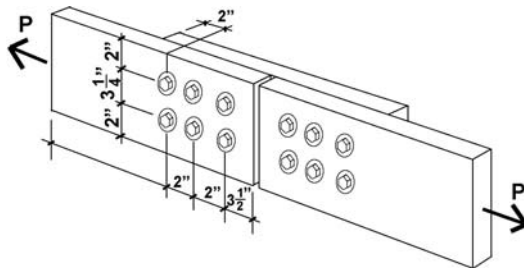


FIGURE 6.4

Bolted 2×8 cross sections for Example 6.2

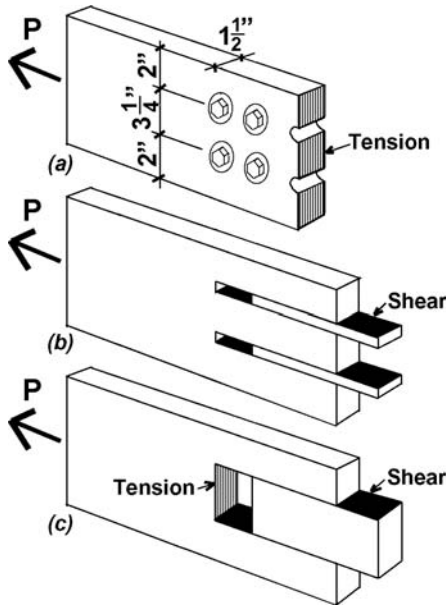


FIGURE 6.5

Possible failure modes for Example 6.3 include (a) tension failure on net area, (b) row tear-out, and (c) group tear-out.

earlier: $F'_t = 1200$ psi. Other parameters needed for this step are as follows: the number of rows, $r_n = 2$; the number of fasteners in a typical row, $n_1 = 3$; the area subjected to tension stress (measured between the top and bottom rows of fasteners), $A_t = (3.25)(1.5) = 4.875$ in²; the minimum spacing between fasteners (or the end distance, if smaller), $s_{crit} = 2$ in.; and the member thickness, $t = 1.5$ in.

The capacities based on row and group tear-out can now be determined:

- a. $Z'_{RT} = r_n n_1 (F'_v) s_{crit} (t) = (2)(3)(240)(2)(1.5) = 4320$ lb.
- b. $Z'_{GT} = n_1 (F'_v) s_{crit} (t) + F'_t A_t = (3)(240)(2)(1.5) + (1200)(4.875) = 8010$ lb.


Because the smaller of these two values (4320 lb) is *smaller* than the capacity found in step 4, row tear-out governs the connection design, and the total adjusted connection capacity, $P = 4320$ lb.

- 7. **Conclusion:** the capacity of the 2 × 8 tension element, $P = 4320$ lb. The capacity of the bolts themselves has not been checked: the design and analysis of such fasteners is discussed in Chapter 9, Example 9.2.

Example 6.3 Design wood tension element

Problem definition

Find an appropriate 2× cross section (Hem-Fir No. 2) to support a tensile load of 5 kips. Use two lines of three 3/8-in.-diameter bolts, as shown in Figure 6.6, to connect

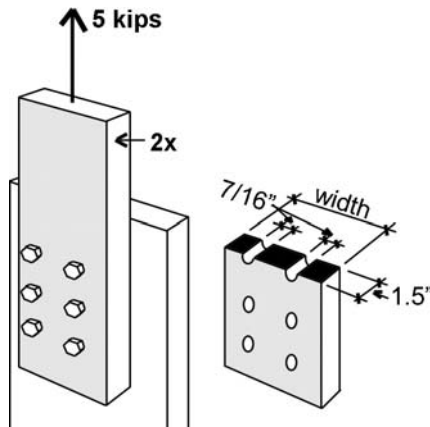**FIGURE 6.6**

Bolted 2× cross section for Example 6.3

the wood element to another part of the structure. The bolt hole diameter = bolt diameter + $\frac{1}{16}$ in. = $\frac{7}{16}$ in. = 0.4375 in.

Solution overview

Compute provisional adjusted allowable stress; find required net area; find required gross area; select provisional cross section; check cross section by finding adjusted allowable stress, required net area, and required gross area. Check row and group tear-out.

Problem solution

1. From Table 3.1, find the tabular value of the allowable tension stress, $F_t = 525$ psi (use “dimension lumber” for 2× element).
2. Compute provisional adjusted allowable tension stress:
 - a. From Table A-3.2, find adjustments to tabular value: $C_D = 1.0$; $C_M = 1.0$; assume $C_F = 1.0$ (the actual value is unknown at this time).
 - b. $F_t' = F_t C_D C_M C_F = 525(1.0)(1.0)(1.0) = 525$ psi.
3. Find required net area, $A_n = \text{load/stress} = 5000/525 = 9.52 \text{ in}^2$.
4. Using Equation 6.6, and referring to Figure 6.6, find the required gross area, $A_n = A_g - (\text{number of holes})(d_h \times t) = 9.52 + 2(0.4375 \times 1.5) = 10.83 \text{ in}^2$.
5. We need a provisional 2× cross section with $A_g \geq 10.83 \text{ in}^2$: from Table A-4.1, select a 2 × 8 with $A_g = 10.88 \text{ in}^2$. Not only must this cross section be analyzed (using the actual value of C_F), but also the next smaller section (since it has a larger value of C_F).

Trial 1: 2 × 8

Because the actual value of the size factor for a 2 × 8, $C_F = 1.2$, is larger than the value initially assumed, the adjusted allowable stress will be higher than assumed, and therefore a 2 × 8 cross section will certainly work. However, it is necessary to analyze (check) the next

smaller cross section, since this cross section has an even larger size factor than does the 2×8 , and so has an even higher adjusted allowable stress.

Trial 2: 2×6

1. From Table A-4.1, the cross-sectional area of a 2×6 , $A_g = 8.25 \text{ in}^2$.
2. Use Equation 6.6 to find the net area, $A_n = A_g - (\text{number of holes})(d_h \times t) = 8.25 - 2(0.4375 \times 1.5) = 6.94 \text{ in}^2$.
3. As before, find the tabular value of allowable tension stress, $F_t = 525 \text{ psi}$.
4. Compute adjusted allowable tension stress:
 - a. From Table A-3.2, find adjustments to tabular value: $C_D = 1.0$; $C_M = 1.0$; $C_F = 1.3$.
 - b. $F'_t = F_t C_D C_M C_F = 525(1.0)(1.0)(1.3) = 682.5 \text{ psi}$.
5. Using Equation 6.1, find capacity (allowable load), $P = F'_t A_n = 682.5 \times 6.94 = 4737 \text{ lb}$. This is insufficient capacity to support a load of 5000 lb: the 2×6 is too small. Therefore, the 2×8 must be provisionally selected, pending a check of row and group tear-out.

Check row and group tear-out

1. From Table A-6.2, check capacity based on row and group tear-out, since the orientation of the load is parallel to grain and the member is in tension. The adjusted allowable stress in shear is found from Tables A-3.7 and A-3.8: $F_v = 150 \text{ psi}$ and the relevant adjustments are for wet service ($C_M = 1.0$) and duration of load ($C_D = 1.0$), so $F'_v = 150(1.0)(1.0) = 150 \text{ psi}$. The adjusted allowable tension stress for the 2×8 was never actually determined earlier; with a size factor, $C_F = 1.2$, it is $F'_t = 525(1.2) = 630 \text{ psi}$. Other parameters needed for this step are as follows: the number of rows, $r_n = 2$; the number of fasteners in a typical row, $n_t = 3$. Based on the provisional selection of a 2×8 , let the spacing between bolts in a row, and the distance from the last bolt to the end of the wood element, equal 4 in., and the distance between rows of bolts equal $3\frac{1}{2}$ in. Then, the area subjected to tension stress (measured between the left and right rows of fasteners), $A_t = (3.5)(1.5) = 5.25 \text{ in}^2$; the minimum spacing between fasteners (or the end distance, if smaller), $s_{crit} = 4 \text{ in.}$; and the member thickness, $t = 1.5 \text{ in.}$

The capacities based on row and group tear-out can now be determined:

- a. $Z'_{RT} = r_n n_t (F'_v) s_{crit} (t) = (2)(3)(150)(4)(1.5) = 5400 \text{ lb}$.
- b. $Z'_{GT} = n_t (F'_v) s_{crit} (t) + F'_t A_t = (3)(150)(4)(1.5) + (630)(5.25) = 6007 \text{ lb}$.
2. **Conclusion:** Because the smaller of the capacities for row and group tear-out (5400 lb) is larger than the actual load of 5000 lb, neither row nor group tear-out governs the connection design, and the 2×8 provisionally selected earlier may be used.

STEEL

Unlike tension elements designed in timber, two modes of “failure” are considered when designing tension members in steel. First, the element might become functionally useless if yielding occurs across its gross area, at the yield stress, F_y .

Since internal tensile forces are generally uniform throughout the entire length of the element, yielding would result in extremely large deformations. On the other hand, if yielding commenced on the net area (where bolt holes reduce the gross area), the part of the element subjected to yield strains would be limited to the local area around the bolts, and excessive deformations would not occur. However, a second mode of failure might occur at these bolt holes: rupture of the element could occur if, after yielding, the stresses across the net area reached the ultimate stress, F_u . As in wood design, typical bolt hole diameters are $\frac{1}{16}$ in. larger than the actual bolt diameter. However, because a small amount of material surrounding the bolt hole is damaged as the hole is punched, an additional $\frac{1}{16}$ in. is added to the hole diameter for the purpose of calculating net area, resulting in a bolt hole diameter taken as $\frac{1}{8}$ in. larger than the nominal bolt diameter for steel elements.

Another difference in the design of wood and steel tension elements occurs because nonrectangular cross sections are often used in steel. If connections are made through only certain parts of the cross section, as illustrated in Figure 6.7, the net area in the vicinity of the connection will be effectively reduced, depending on the geometry of the elements being joined and the number of bolts being used. This effective net area, A_e , is obtained by multiplying the net area, A_n , by a coefficient, U , defined in Table A-6.1.

Where all parts (i.e., flanges, webs, etc.) of a cross section are connected, and the so-called *shear lag* effect described earlier cannot occur, the coefficient U is taken as 1.0, and the effective net area equals the net area, just as in timber design. For short connection fittings like splice plates and gusset plates, U is also taken as 1.0, but $A_e = A_n$ cannot exceed 0.85 times the gross area. These short connecting elements may have an effective width less than their actual width to account for the shear lag effect, based on what is known as the “Whitmore section,” shown in Figure 6.8. For a length, L , of the fastener group measured in the direction of load, and a distance, W , between the outer rows of bolts or welds, the effective width is

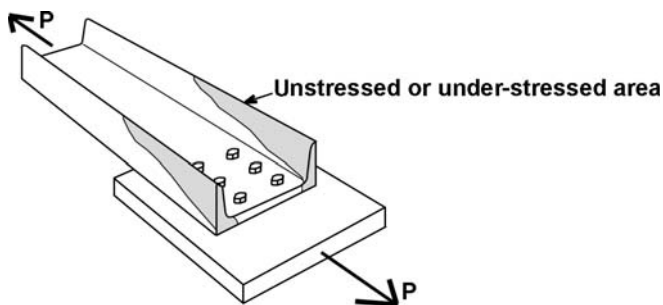


FIGURE 6.7

Shear lag in steel tension element showing unstressed or understressed areas

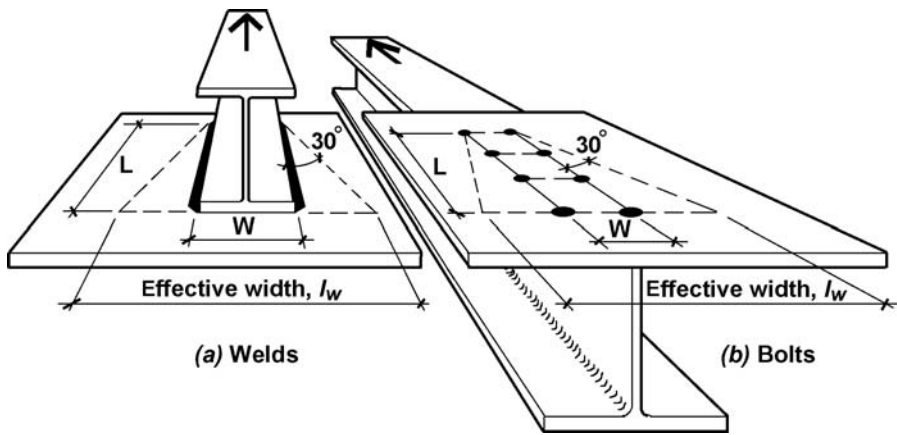


FIGURE 6.8

The Whitmore section for connecting plates limits the effective width of the plate to $2L \tan 30^\circ + W$ for both (a) welded connections and (b) bolted connections

computed by extending a 30° line out from both sides of the fastener group; it can be seen that the effective width, l_w , is equal to $2L \tan 30^\circ + W$.

Finally, the lengths of tension members, other than rods and cables, are limited to a slenderness ratio—defined as the ratio of effective length to least radius of gyration—of 300, to prevent excessive vibrations and protect against damage during transportation and erection. The radius of gyration, a property of the cross section, is equal to $(I/A)^{0.5}$, where I is the moment of inertia and A is the cross-sectional area of the element.

From the preceding discussion, it can be seen that two values for available strength, or allowable stress, in tension need to be determined: one for yielding of the gross area and one for failure (rupture) of the effective net area. These two values are:

$$F_t^{gross} = 0.6F_y \tag{6.14}$$

and

$$F_t^{net} = 0.5F_u \tag{6.15}$$

where F_t^{gross} and F_t^{net} are the allowable tensile stresses for steel corresponding to the two modes of failure, or limit states; F_y is the yield stress; and F_u is the ultimate stress for steel (Table A-3.12). The tensile stress is computed on the gross area in the same manner as for wood (see Equation 6.7). Rupture on a failure surface through bolted

or welded connections, however, is determined using the effective net area rather than the net area, so Equation 6.8 must be modified for steel connections as follows:

$$f_t = P/A_e \quad (6.16)$$

When computing the capacity based on yielding, the full gross area is available to resist the internal forces:

$$P_{allow} = F_t^{gross} \times A_g \quad (6.17)$$

When computing the capacity on the effective net area:

$$P_{allow} = F_t^{net} \times A_e \quad (6.18)$$

The “available strength” limit states listed in Table A-3.13 are equivalent to these formulations based on allowable stress.

The following example illustrates the application of these principles to a steel tension problem. Different procedures are used for cables, eyebars, threaded rods, and pin-connected plates.

Example 6.4 Analyze steel tension element

Problem definition

Find the maximum tension load, P , that can be applied to a $W8 \times 24$ element connected to gusset plates within a truss with $\frac{3}{4}$ -in.-diameter bolts, as shown in Figure 6.9. Use A36 steel. Find the required thickness of the gusset plates so that their capacity is no smaller than that of the $W8 \times 24$ tension element. The bolt hole diameter = bolt diameter + $\frac{1}{8}$ in. = $\frac{7}{8}$ in. = 0.875 in.

Solution overview

Find cross-sectional dimensions and material properties; find gross area capacity; find effective net area capacity; the governing capacity is the lower of these two values. For gusset plate thickness, find effective width based on Whitmore section; apply equations for gross and net area capacity to determine required plate thickness.

Problem solution

1. From Table A-4.3, find cross-sectional dimensions (Figure 6.10):

$$\begin{aligned} A_g &= 7.08 \text{ in}^2 \\ d &= 7.93 \text{ in.} \\ b_f &= 6.50 \text{ in.} \\ t_f &= 0.400 \text{ in.} \end{aligned}$$

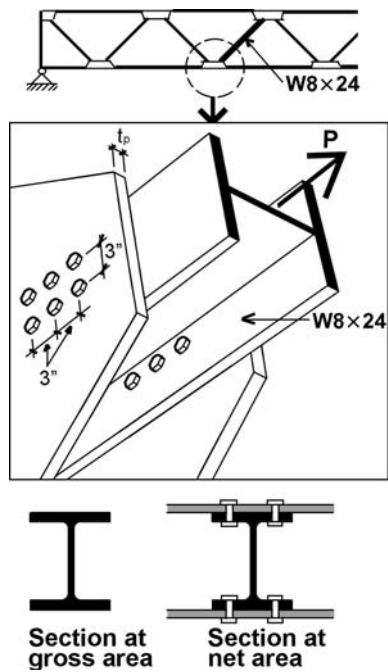


FIGURE 6.9

Truss elevation, connection detail at gusset plate, and sections through gross and net area for Example 6.4

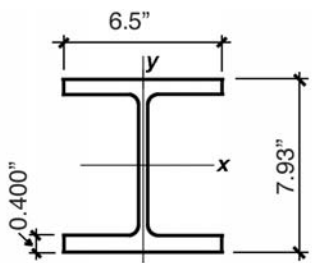
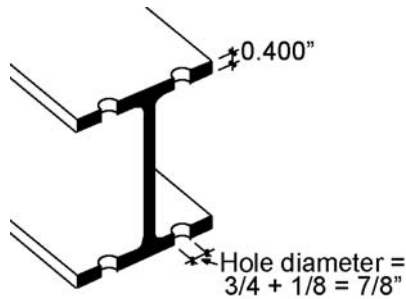


FIGURE 6.10

Cross-sectional dimensions of W8 x 24 for Example 6.4

2. From Table A-3.12, find $F_y = 36$ ksi and $F_u = 58$ ksi.
3. Gross area: Find capacity, P :
 - a. Using Equation 6.14 (or Table A-3.13), find $F_t^{gross} = 0.6F_y = 0.6(36) = 21.6$ ksi.
 - b. Using Equation 6.17, $P = F_t^{gross} \times A_g = 21.6(7.08) = 153$ kips.

**FIGURE 6.11**

Net area diagram for Example 6.4

4. *Effective net area:* Find capacity, P :

- a. From Table A-6.1, find the shear lag coefficient, U :

$U = 0.90$ since the following criteria are met:

- Bolts connect wide-flange (W) shape? Yes.
- Flange width, b_f , no less than $0.67d$? In other words, $6.5 \geq 0.67(7.93) = 5.3$? Yes.
- Flange is connected with at least three bolts per line? Yes.

- b. Using Equation 6.6, find the net area, A_n . As shown in Figure 6.11:

$$A_n = A_g - (\text{number of holes})(d_h \times t) = 7.08 - 4(0.875 \times 0.400) = 5.68 \text{ in}^2.$$

c. $A_e = U(A_n) = 0.9(5.68) = 5.11 \text{ in}^2$.

d. Using Equation 6.15, find $F_t^{net} = 0.5F_u = 0.5(58) = 29 \text{ ksi}$.

e. Using Equation 6.18, find $P = F_t^{net} \times A_e = 29(5.11) = 148 \text{ kips}$.

5. *Conclusion:* Failure on the effective net area governs since 148 kips < 153 kips. The capacity (allowable load) is 148 kips.

6. We now can determine the thickness of the gusset plate, stressed in tension, with two lines of bolt holes per plate, using the Whitmore section to determine the effective width of the plate. As can be seen in Figure 6.8, the effective width, $l_w = 2(6)(\tan 30^\circ) + 3 = 9.9 \text{ in}$. The tensile capacity of the gusset plates may be based on either yielding of the gross area or rupture of the net area. First, the capacity based on yielding of the gross area of both plates is $F_t A_g = 0.6(36)(2)(9.9t_p) = 428t_p \text{ kips}$. Next, the effective net area $A_e = (2)(9.9 - 2 \times \frac{7}{8})t_p = 16.3t_p \text{ in}^2$, which cannot exceed 85% of the gross area for small gusset plates; that is, it must be no larger than $0.85(2)(9.9t_p) = 16.8t_p \text{ in}^2$. Therefore, the capacity based on rupture is $0.5(58)(16.3t_p) = 473t_p$. Yielding governs, so the required thickness of the plate can be found by setting the required tensile capacity, $428t_p$ equal to the governing load of 148 kips, from which $t_p = 0.35 \text{ in}$. Rounding up, we select a $\frac{3}{8}$ -in.-thick gusset plate with $t_p = 0.375 \text{ in}$.

Example 6.5 Design steel tension element**Problem definition**


Select a W section bolted as shown in Figure 6.12 with $\frac{5}{8}$ -in.-diameter bolts, and three bolts per line, to resist a tension force of 100 kips. Assume A36 steel. The effective bolt hole diameter = bolt diameter + $\frac{1}{8}$ in. = $\frac{5}{8}$ + $\frac{1}{8}$ = $\frac{3}{4}$ in. = 0.75 in.

Solution overview

Find the required area based on net area capacity, assuming values for shear lag coefficient, U , and flange thickness, t_f ; find required area based on gross area capacity; use the larger of the two area values to provisionally select a W section; check using “analysis” method if either U is smaller or t_f is larger than assumed values. The area of the selected W section can be somewhat smaller than the “required” area if either U is larger or t_f is smaller than assumed values—check using analysis method.

Problem solution

1. *Gross area:* Find required gross area based on yielding. From Equation 6.17, the required gross area, $A_g = P/F_t^{\text{gross}} = 100/(0.6 \times 36) = 4.63 \text{ in}^2$.
2. *Effective net area:* Find required gross area after determining effective net area based on rupture through failure surface (assume $U = 0.9$ and $t_f = 0.4 \text{ in.}$):
 - a. From Equation 6.18, the required effective net area, $A_e = P/F_t^{\text{net}} = 100/(0.5 \times 36) = 3.44 \text{ in}^2$
 - b. Working backward, the required net area, $A_n = A_e/U = 3.45/0.9 = 3.83 \text{ in}^2$.
 - c. Finally, the required gross area can be computed: $A_g = A_n + (\text{bolt hole area}) = 3.83 + 4(0.75 \times 0.4) = 5.03 \text{ in}^2$.
3. Since $5.03 \text{ in}^2 > 4.63 \text{ in}^2$, the calculation based on effective net area governs, and a W section must be selected with $A_g > 5.03 \text{ in}^2$. Many wide-flange shapes could be

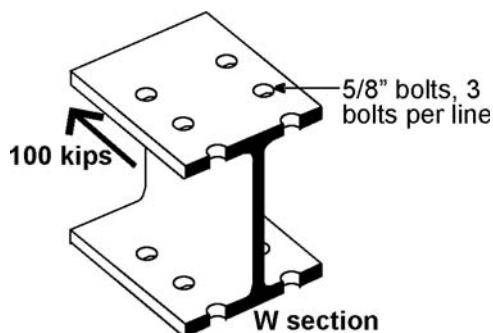**FIGURE 6.12**

Net area diagram for Example 6.5

selected. From Table A-4.3, the following candidates are among those that could be considered:

- a. Check a W8 × 18 with $A_g = 5.26 \text{ in}^2$. Two assumptions need to be tested: that $U = 0.9$ and that $t_f = 0.4$. From Table A-4.3, $b_f = 5.25 \text{ in.}$, $d = 8.14 \text{ in.}$, and $t_f = 0.330 \text{ in.}$ From Table A-6.1, the criteria for $U = 0.9$ requires that $b_f = 5.25 \geq 0.67d = 0.67(8.14) = 5.45 \text{ in.}$ Since this condition is not met, we must use $U = 0.85$. Additionally, the flange thickness is different from our assumed value of 0.40 in. , so that the calculation of net and effective area will change: $A_n = A_g - (\text{bolt hole area}) = 5.26 - 4(0.75 \times 0.330) = 4.27 \text{ in.}$ and $A_e = U \times A_n = 0.85(4.27) = 3.63 \text{ in}^2$. The capacity based on rupture through the effective net area is $P = F_t^{\text{net}} \times A_e = (0.5 \times 58)(3.63) = 105 \text{ kips}$. The capacity based on yielding on the gross area has already been found satisfactory (since the gross area of the W8 × 18 is greater or equal to the required gross area computed earlier). Therefore, the W8 × 18 is acceptable.
- b. Check a W6 × 20 with $A_g = 5.87 \text{ in}^2$. The same two assumptions need to be tested: that $U = 0.9$ and that $t_f = 0.4$. From Table A-4.3, $b_f = 6.02 \text{ in.}$, $d = 6.20 \text{ in.}$, and $t_f = 0.365 \text{ in.}$ From Table A-6.1, the criteria for $U = 0.9$ requires that $b_f = 6.02 \geq 0.67d = 0.67(6.20) = 4.15 \text{ in.}$ Since this condition is met, and since its net area is greater than assumed (this is so because its flange thickness, t_f , is less than the value assumed, so that the bolt hole area is less than assumed, and therefore the net area is *greater* than assumed), the W6 × 20 is acceptable.

Both the W8 × 18 and the W6 × 20 would work, as would many other wide-flange shapes. Of the two sections considered, the W8 × 18 is lighter (based on the second number in the W-designation that refers to beam weight in pounds per linear foot), and therefore would be less expensive.


Steel threaded rods

Threaded rods are designed using an allowable tensile stress, $F_t = 0.375F_u$, which is assumed to be resisted by the gross area of the unthreaded part of the rod. This value for the allowable stress is found by dividing the nominal rod tensile strength of $0.75F_u$ by a safety factor, $\Omega = 2.00$. While there are no limits on slenderness, diameters are normally at least $\frac{1}{500}$ of the length, and the minimum diameter rod for structural applications is usually set at $\frac{5}{8} \text{ in.}$ Assuming A36 steel, with $F_u = 58 \text{ ksi}$ (Table A-3.12), the smallest acceptable rod with area, $A = \pi(\frac{5}{16})^2$, can support a tensile load, $P = F_t \times A = 0.375F_u \times \pi(\frac{5}{16})^2 = 21.75 \times 0.3068 = 6.67 \text{ kips}$.

Pin-connected plates

Where plates are connected with a single pin, as shown in Figure 6.13, the net area, A_n , is defined, not by the length, b , on either side of the pin hole, but rather by an effective length, $b_{\text{eff}} = 2t + 0.63 \leq b$, where t is the thickness of the plate:

$$A_n = 2tb_{\text{eff}} \quad (6.19)$$

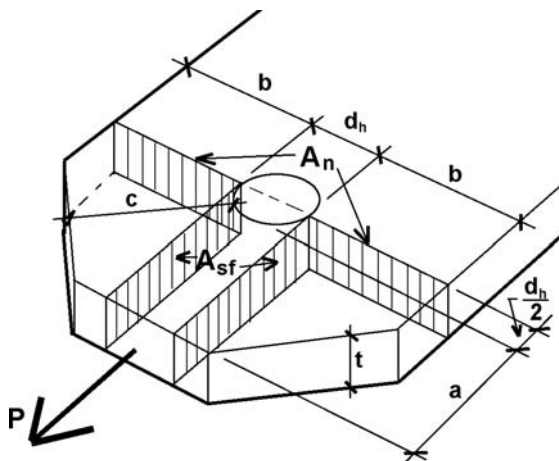**FIGURE 6.13**

Definition of net area for pin-connected plates

The plate capacity is then governed by either yielding on the gross area or rupture on the net area, whichever is smaller (there is no *effective* net area in this case), with $P_{gross.} = 0.6F_y \times A_g$ and $P_{net.} = 0.5F_u \times A_n$ as before. It is possible to cut the plate at a 45° angle as shown in Figure 6.13, as long as length c is greater or equal to length a , which in turn must be greater or equal to $1.33b_{eff}$.

For pin-connected plates, as well as for all other bolted connections, the fasteners themselves, as well as the stresses they produce on the elements being joined, must also be checked. This aspect of connection design is discussed more thoroughly in Chapter 9.

REINFORCED CONCRETE

Concrete, having very little tensile stress, is ordinarily not used for tension elements. Where it is used, its strength in tension can be taken as approximately 10% of its compressive strength, or $0.1f'_c$. The cylinder strength of concrete, f'_c , is the ultimate (highest) compressive stress reached by a 6 in. $\times$ 12 in. cylinder of concrete after 28 days of curing. Reinforced concrete, consisting of steel bars embedded within a concrete element, would not normally be a good choice for a pure tension element, since the steel reinforcement would be doing all the work. In this case, one might wonder what would justify the added expense of casting concrete around the steel. In fact, two justifications are possible: first, in a reinforced concrete

building consisting largely of compressive and bending elements, the use of reinforced concrete for occasional tension elements would allow a similar mode of expression and of detailing throughout the building; second, where the steel in tension requires fireproofing, the use of reinforced concrete in tension (where the concrete cover provides the fireproofing) might prove advantageous, compared to other solutions.

This page intentionally left blank

Columns

7

Columns are vertical elements subjected to compressive stress; nothing, however, prevents us from applying the same design and analysis methods to any compressive element, whether vertical, horizontal, or inclined. Only axially loaded compression elements (with no bending moments present) will be considered here.

Compression is similar to tension, since both types of structural action result in a uniform distribution of axial stress over a cross section taken through the element. But allowable stress in compression is often limited by the phenomenon of buckling, in which the element deforms out of its axial alignment at a stress that may be significantly lower than the stress causing compressive crushing.

To understand why an axially loaded column will buckle rather than simply compress, consider the case of an eccentrically loaded column, as shown in Figure 7.1. Unlike a beam whose internal bending moments are not influenced by load-induced deflections (Figure 7.2), the eccentrically loaded column will deflect more than might be expected if only the initial moment, M_1 , is considered, since the “initial deflections” increase bending moments throughout the column, in turn causing further deflection, as shown in Figure 7.1b. What the mathematician Leonard Euler

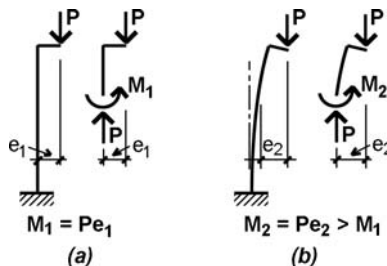


FIGURE 7.1

Increase of bending moment in a column due to load-induced deflection

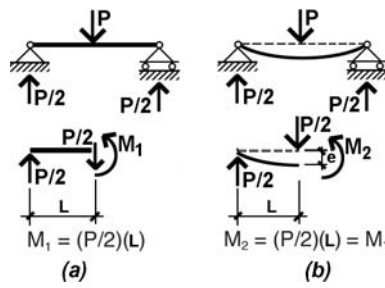


FIGURE 7.2

No increase of bending moment in a beam due to load-induced deflection

(1707–1783) figured out was that these deflections increase rapidly in the vicinity of a particular (“critical”) load, at which point the column is assumed to fail, and that the value of this load is independent of the initial eccentricity. In other words, even with the smallest imaginable deviation from axiality, a column is assumed to buckle at some critical load. Since no perfectly axial columns (or loads) can exist, all columns behaving elastically are assumed to buckle at the critical buckling stress derived by Euler:

$$\sigma_{cr} = \frac{\pi^2 E}{(KL/r)^2} \quad (7.1)$$

where

- E = the modulus of elasticity
- K = a coefficient that depends on the column’s end constraints (see Table A-7.1)
- L = the unbraced length of the column
- r = the radius of gyration with respect to the unbraced length (sometimes given the symbol, ρ), equal to $(I/A)^{0.5}$, where I is the moment of inertia and A is area of the cross section

For the typical case in which the unbraced length is the same for both axes of the column, r (or I) is taken as the smaller of the two possible values, that is, r_{min} (or I_{min}). The term L/r , or KL/r , is called the column’s *slenderness ratio*. Although this formulation for buckling is widely used, it is actually an approximation of a more accurate equation derived by Euler that does not indicate any catastrophic buckling point at all. Instead, as may be confirmed by physically buckling a slender piece of wood or other material, the initiation of buckling (at a stress approximated by Equation 7.1) leads to a gradually increasing lateral deflection up until the point of failure, which is initiated when the stresses in the material exceed the material’s strength. Certainly, the capacity of such a column is thereby reduced (compared with a hypothetical case in which the column remains perfectly straight), and

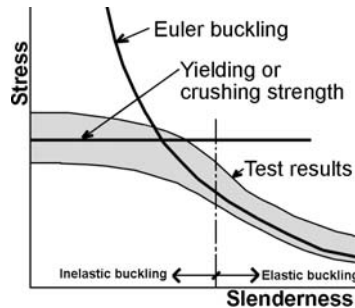


FIGURE 7.3

Schematic relationship between critical stress and column slenderness

Euler's approximate formula does give a conservative value for the point at which such failure occurs; however, it is incorrect to imagine the actual behavior of a compression element as failing catastrophically and suddenly at a precise "critical buckling" point.

The strength of wood and steel columns is limited in two ways: either they will crush at their maximum compressive stress, or they will buckle at some critical stress that is different from, and independent of, their strength in compression. Euler's equation for critical buckling stress works well for slender columns but gives increasingly inaccurate results as the slenderness of columns decreases and the effects of crushing begin to interact with the idealized conditions from which Euler's equation was derived. Figure 7.3 shows schematically the relationship among Euler critical buckling stress, crushing strength, and test results for columns with different slenderness ratios. It can be seen that only for slender columns can the Euler curve be used as a basis for design.

WOOD

The reduction in allowable compressive stress, F_c , to account for buckling is accomplished by multiplying F_c^* by the column stability factor, C_p . The value, F_c^* , is the tabular value of compressive stress found in Table A-3.3, F_c , modified by all of the adjustment factors found in Table A-3.4 except C_p . If all columns behaved according to the idealized model analyzed by Euler, the stability factor would be unnecessary, and σ_{cr} modified by some factor of safety would simply replace F_c as the allowable stress. That is, we would have:

$$\text{idealized } C_p = \sigma_{cr}(\text{safety factor})/F_c \quad (7.2)$$

In practice, given the pattern of column failure represented in Figure 7.3, the Euler equation must be modified to account for crushing and nonelastic behavior,

especially at low slenderness ratios. The column stability factor, C_p , does just that and more, replacing σ_{cr} with F_{CE} (basically Euler's formula with a safety factor); adding a coefficient, c , to account for the nonideal condition of various wood materials; and using statistical curve-fitting methods to match the empirical data. The slenderness ratio is simplified for a rectangular section, as only one cross-sectional dimension remains when values of $I = db^3/12$ and $A = db$ are inserted into the equation for radius of gyration: $r = (I/A)^{0.5} = (db^3/12db)^{0.5} = 0.289d$. One can still see the Euler buckling equation struggling to assert itself within $F_{CE} = 0.822E'_{min}/(l_e/d)^2$, which appears in both of the terms A and B within this opaque formulation for the column stability factor:

$$C_p = A - \sqrt{A^2 - B} \quad (7.3)$$

In Equation 7.3, $A = [1 + (F_{CE}/F_c^*)]/(2c)$ and $B = (F_{CE}/F_c^*)/c$.

A full description of C_p can be found in Table A-3.4, along with other adjustments to the allowable compressive stress.

For non-pin-ended columns, the unbraced length, l_e , is multiplied by an effective length coefficient (Table A-7.1) to account for the change in critical buckling stress resulting from more or less restraint at the column ends.

Example 7.1 Analyze wood column

Problem definition

Check the capacity (allowable load) of a 10×10 Douglas Fir-Larch Select Structural column 8.5 ft. high, used indoors, supporting live load (L), roof live load (i.e., construction live load) L_R , dead load (D), and snow load (S) as follows:

$$L = 40 \text{ kips}; L_R = 20 \text{ kips}; D = 50 \text{ kips}; S = 20 \text{ kips}$$

Solution overview

Find relevant material properties and adjustment factors; compute adjusted allowable stress; find capacity by multiplying cross-sectional area by adjusted allowable stress; compare capacity to governing load combination.

Problem solution

1. From Tables A-3.3 and A-3.9, find material properties F_c and E_{min} ; the tabular (unadjusted) values are $F_c = 1150 \text{ psi}$ and $E_{min} = 580,000 \text{ psi}$. These values are taken from "posts and timbers" since the cross section being analyzed is larger than 5×5 and the larger of the two cross-sectional dimensions is less than 4 in. greater than the smaller dimension.

2. Find adjustment factors for F_c :
 - a. From Table A-3.4, $C_M = 1.0$.
 - b. From Table A-3.4, $C_F = 1.0$.
 - c. Find load duration factor, C_D , and the governing load combination. Two load combinations from Table A-5.1 (for allowable stress design) should be considered: $D + L$; and also $D + 0.75L + 0.75(L_R \text{ or } S)$. Wind and earthquake forces are not included, as they do not appear in the problem definition. The other listed load combinations in Table A-5.1 need not be considered, since it is evident that their effect will not be as severe. For the two selections, we divide each possible load combination by the load duration factor corresponding to the shortest load duration within that combination, as explained in Table A-3.10. The roof construction live load and snow load are not considered to act simultaneously. Starting with $D + L$, we get:

$$(D + L)/C_D = (50 + 40)/1.0 = 90.0 \text{ kips}$$

Then, looking at $D + 0.75L + 0.75(L_R \text{ or } S)$, we get either:

$$(D + 0.75L + .75S)/C_D = (50 + 30 + 15)/1.15 = 82.61 \text{ kips}$$

or

$$(D + 0.75L + 0.75L_R)/C_D = (50 + 30 + 15)/1.25 = 76.0 \text{ kips}$$

Dead plus live load ($D + L$) governs, so $C_D = 1.00$, and the load used to design (or analyze) the column is $(L + D) = (40 + 50) = 90 \text{ kips}$. The duration of load factor, used to determine the governing condition, does *not* appear in the governing load itself. Rather, it will be applied to the allowable stress.

- d. From Table A-3.4, find the column stability factor, C_P (to account for buckling):

From Table A-3.9, find $E'_{min} = E_{min} \times C_M$. Since $C_M = 1.0$ for timbers (do not confuse this adjustment with the value for C_M applied to the allowable compressive stress, F_c), we get:

$$E'_{min} = 580,000 \text{ psi}; E'_{min} = 580,000 \times 1.0 = 580,000 \text{ psi.}$$

$$l_e = 8.5 \text{ ft} = 102 \text{ in.}$$

$$d = 9.5 \text{ in.}$$

$$F_{cE} = 0.822E'_{min}/(l_e/d)^2 = 0.822(580,000)/(102/9.5)^2 = 4135.7 \text{ psi.}$$

$$F_c^* = F_c C_D C_M C_F = 1150(1.00)(1.0)(1.0) = 1150 \text{ psi.}$$

$$c = 0.8 \text{ for sawn lumber.}$$

$$A = [1 + (F_{cE}/F_c^*)]/(2c) = [1 + (4135.7/1150)]/1.6 = 2.87.$$

$$wB = (F_{cE}/F_c^*)/c = (4135.7/1150)/0.8 = 4.50.$$

$$C_P = A - (A^2 - B)^{0.5} = 2.87 - (2.87^2 - 4.50)^{0.5} = 0.934.$$

3. Compute adjusted allowable stress in compression: from step 2, $F_c^* = 1150 \text{ psi}$ and $C_P = 0.934$; so $F'_c = F_c^*(C_P) = 1150(0.934) = 1074.6 \text{ psi}$.

4. Find capacity, $P = F'_c \times A$. From Table A-4.1 the cross-sectional area for 10×10 , $A = 90.25 \text{ in}^2$; therefore, $P = 1074.6(90.25) = 96,979 \text{ lb} = 97.0 \text{ kips}$.
5. *Check capacity*: Since the capacity of $97.0 \text{ kips} \geq$ governing load combination of 90 kips , the column is OK.

The value of $C_P = 0.934$ indicates that buckling has reduced the column's allowable compressive stress to 93.4% of its "crushing" strength.

Example 7.2 Design wood column

Problem definition

Find the lightest cross section for a wood column (Douglas Fir-Larch Select Structural) that is 8.5 ft high, used indoors, on the second floor of the three-story building shown in Figure 7.4, supporting live load (L), roof live load (i.e., construction live load) L_R , dead load (D), and snow load (S) as follows:

$$L = 40 \text{ psf}; L_R = 20 \text{ psf}; D = 25 \text{ psf}; S = 30 \text{ psf}$$

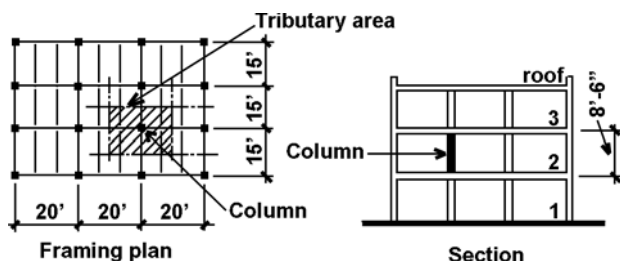


FIGURE 7.4

Framing plan and building section for Example 7.2

Solution overview

Find relevant material properties and adjustment factors (assuming a provisional value for C_P); compute adjusted allowable stress; find cross-sectional area by dividing load by adjusted allowable stress; select provisional cross section and analyze; repeat this step by selecting new cross section until capacity is just larger than load.

Problem solution

1. Using Tables A-3.3 and A-3.9, find material properties F_c and E_{min} ; as in Example 7.1, the tabular (unadjusted) value of F_c is 1150 psi , and the minimum modulus of elasticity is $E_{min} = 580,000 \text{ psi}$. The value of F_c assumes a "post and timber" size.
2. Find adjustment factors for F_c , except for C_P :
 - a. From Table A-3.4, $C_M = 1.0$.
 - b. From Table A-3.4, $C_F = 1.0$ (assuming that "dimension lumber" will not be used).

- c. From Tables A-3.10 and A-5.1, C_D depends on which load combination proves to be critical. To find C_D , divide each possible load combination by the load duration factor corresponding to the shortest load duration within each combination. The tributary area for the typical column is $15 \times 20 = 300\text{ft}^2$ per floor for both the third floor live and dead load, and for the roof construction live load (or snow load) and dead load. Referring to Table A-2.2, live load reduction for the third floor live load is appropriate since K_{LL} times its tributary area of 300ft^2 , or 1200ft^2 , is greater than 400ft^2 . For such an “influence area,” the live load reduction coefficient is $0.25 + 15/(4 \times 300)^{0.5} = 0.68$, so the reduced live load is $0.68(40) = 27.2\text{psf}$. Roof construction/maintenance live loads are not reduced. The duration of load factor, C_D , is found by dividing the various load combinations by the appropriate load duration factors (where loads are computed by multiplying each square foot value by the corresponding tributary area). Only two load combinations from Table A-5.1 need be considered, since the others evidently will not produce effects as severe. These combinations are $D + L$ and $D + 0.75L + 0.75(L_R \text{ or } S)$. In the latter combination, wind and earthquake forces are not included, as they do not appear in the problem definition. We divide each possible load combination by the load duration factor corresponding to the shortest load duration within that combination, as explained in Table A-3.10. The roof construction live load and snow load are not considered to act simultaneously. Starting with $D + L$, we get:

$$(D + L)/C_D = [25(600) + 27.2(300)]/1.0 = 23,160 \text{ lb}$$

Then, looking at $D + 0.75L + 0.75(L_R \text{ or } S)$, we get:

$$(D + 0.75L + .75S)/C_D = [25(600) + 0.75(27.2)(300) + 0.75(30)(300)]/1.15 = 24,235 \text{ lb}$$

or

$$(D + 0.75L + 0.75L_R)/1.25 = [25(600) + 0.75(27.2)(300) + 0.75(20)(300)]/1.25 = 20,496 \text{ lb}$$

The first case of the second load combination governs (using dead, live, and snow load), so $C_D = 1.15$, and the load used to design the column is $(D + 0.75L + 0.75S)$, or:

$$25(600) + 0.75(27.2)(300) + 0.75(30)(300) = 27,870 \text{ lb}$$

3. Select cross section by trial. The stability factor, C_P , cannot be determined directly, since it depends on the cross-sectional dimensions of the column, which have not yet been found. Design, therefore, turns into an iterative process, repeatedly making and testing assumptions about the column's stability until the tests (i.e., column analyses) confirm the assumptions. To begin the iterative process:
- Assume a value for C_P , for example, $C_P = 0.8$.
 - Compute $F_c^* = F_c C_D C_M C_F = 1150(1.15)(1.0)(1.0) = 1322.5 \text{ psi}$.

- c. Compute $F'_c = F_c^* (C_P) = 1322.5(0.80) = 1058$ psi.
- d. Compute the provisional required cross-sectional area:

$$A_{\text{required}} = \text{axial load/stress} = 27,870/1058 = 26.3 \text{ in}^2$$

Trial 1:

1. From Table A-4.1, select trial cross section based on provisional required area of 26.3 in^2 : a 6×6 has an area of 30.25 in^2 , but since the provisional required area of 26.3 in^2 was based on an assumption about the column's stability ($C_P = 0.8$), it is not immediately clear whether the choice is correct; what we must enter into at this point is the first step of an iterative process. We start by checking the 6×6 for its actual capacity and comparing this capacity to the applied load. This process is identical to the timber column analysis method illustrated in the Example 7.1.
2. From Table A-3.4, find the actual column stability factor, C_P , for the 6×6 column:

From Table A-3.9, find $E'_{\min}$ = the adjusted minimum modulus of elasticity = $E_{\min} \times C_M$; since $C_M = 1.0$ for timbers, $E'_{\min} = 580,000$ psi.

$$l_e = 8.5 \text{ ft} = 102 \text{ in.}$$

$$d = 5.5 \text{ in.}$$

$$F_{cE} = 0.822 E'_{\min} / (l_e/d)^2 = 0.822(580,000) / (102/5.5)^2 = 1386.2 \text{ psi.}$$

$$F_c^* = F_c C_D C_M C_F = 1150(1.15)(1.0)(1.0) = 1322.5 \text{ psi (unchanged from earlier).}$$

$$c = 0.8 \text{ for sawn lumber.}$$

$$A = [1 + (F_{cE}/F_c^*)] / (2c) = [1 + (1386.2/1322.5)] / 1.6 = 1.28.$$

$$B = (F_{cE}/F_c^*) / c = (1386.2/1322.5) / 0.8 = 1.31.$$

$$C_P = A - (A^2 - B)^{0.5} = 1.28 - (1.28^2 - 1.31)^{0.5} = 0.71.$$

3. Compute the adjusted allowable stress in compression:

$$F'_c = F_c^* (C_P) = 1322.5(0.71) = 935.0 \text{ psi}$$

4. Find capacity, $P = F'_c \times A$. From Table A-4.1, find cross-sectional area for 6×6 : $A = 30.25 \text{ in}^2$; then, $P = 935.0(30.25) = 28,284 \text{ lb}$.
5. **Check capacity:** The capacity of $28,284 \text{ lb}$ is greater than the actual load of $27,870 \text{ lb}$. In other words, analysis shows that the 6×6 column is acceptable. If the capacity of a 6×6 column were insufficient, we would try the next largest size, that is, a 6×8 ; and then an 8×8 , etc., until a cross section was found with adequate capacity. In this case, however, even though the 6×6 is acceptable, it is possible that a *smaller* column size will also work, for two reasons: first, the next smaller size (4×6) falls under the dimension lumber size classification, which has a higher allowable compressive stress than what was assumed for posts and timbers; second, allowable stresses for dimension lumber generally increase as the cross-sectional area gets smaller, due to the size factor adjustment. For these reasons, we now check a 4×6 column.

Trial 2:

1. From Table A-4.1, a 4×6 has an area of 19.25 in^2 .
2. From Table A-3.4, find the actual column stability factor, C_P , for the 4×6 column:

From Table A-3.9, find E'_{min} = the adjusted minimum modulus of elasticity = $E_{min} \times C_M$; since $C_M = 1.0$ for any dry service condition, $E'_{min} = 690,000 \text{ psi}$.

$$l_e = 8.5 \text{ ft} = 102 \text{ in.}$$

$$d = 3.5 \text{ in.}$$

$$F_{cE} = 0.822 E'_{min} / (l_e/d)^2 = 0.822(690,000) / (102/3.5)^2 = 667.8 \text{ psi.}$$

$$F_c^* = F_c C_D C_M C_F = 1700(1.15)(1.0)(1.10) = 2150.5 \text{ psi (with the allowable stress, } F_c, \text{ taken for dimension lumber).}$$

$$c = 0.8 \text{ for sawn lumber.}$$

$$A = [1 + (F_{cE}/F_c^*)] / (2c) = [1 + (667.8/2150.5)] / 1.6 = 0.82.$$

$$B = (F_{cE}/F_c^*) / c = (667.8/2150.5) / 0.8 = 0.39.$$

$$C_P = A - (A^2 - B)^{0.5} = 0.82 - (0.82^2 - 0.39)^{0.5} = 0.287.$$

3. Compute the adjusted allowable stress in compression:

$$F'_c = F_c^* (C_P) = 2150.5(0.287) = 618.0 \text{ psi}$$

4. Find capacity, $P = F'_c \times A$. From Table A-4.1, find cross-sectional area for 4×6 : $A = 19.25 \text{ in}^2$; then, $P = 618.0(19.25) = 11,896 \text{ lb}$.
5. *Check capacity*: The capacity of $11,896 \text{ lb}$ is less than the actual load of $27,870 \text{ lb}$. Therefore, the 4×6 column is not OK: select the 6×6 column from Trial 1.

STEEL

Steel columns with high slenderness ratios are designed using the Euler buckling equation, while “fatter” columns, which buckle inelastically or crush without buckling, are designed according to formulas corresponding to test results. Residual compressive stresses within hot-rolled steel sections precipitate this inelastic buckling, as they cause local yielding to occur sooner than might otherwise be expected. Unlike timber column design, the two design equations corresponding to elastic and inelastic buckling have not been integrated into a single unified formula, so the underlying rationale remains more apparent. The slenderness ratio dividing elastic from inelastic buckling is set, somewhat arbitrarily, at the point where the Euler critical buckling stress equals 0.44 times the yield stress; that is, at the stress:

$$\sigma_{cr} = \pi^2 E / (KL/r)^2 = 0.44 F_y \quad (7.4)$$

This particular slenderness ratio separating elastic from inelastic buckling is found by solving for (KL/r) in Equation 7.4:

$$KL/r = \sqrt{\frac{\pi^2 E}{0.44 F_y}} \quad (7.5)$$

For $F_y = 50$ ksi, the value of KL/r is 114; for $F_y = 36$ ksi, the value is 134. For a column with a slenderness ratio greater than this separating value, elastic buckling is assumed, and the allowable (“available”) axial compressive stress, based on Euler’s equation (multiplied by a factor of 0.877, and divided by a safety factor, $\Omega = 1.67$), is:

$$F_c = \frac{0.877}{1.67} \frac{\pi^2 E}{(KL/r)^2} = 0.525 \frac{\pi^2 E}{(KL/r)^2} \quad (7.6)$$

The coefficient, 0.525, in Equation 7.6 corresponds to the safety factor of 12/23 previously used for elastic buckling of steel columns.

Where KL/r is less than the value separating elastic from inelastic buckling, inelastic buckling governs, and the allowable (“available”) axial compressive stress is found by dividing the critical stress for inelastic buckling by the same factor of safety, $\Omega = 1.67$:


$$F_c = \frac{0.658^{(F_y/F_e)} F_y}{1.67} \quad (7.7)$$

In this equation, F_e is the elastic buckling stress shown in Equation 7.1; that is:


$$F_e = \frac{\pi^2 E}{(KL/r)^2} \quad (7.8)$$

The slenderness ratio, KL/r , should not exceed 200 for steel axial compression elements. Values for K are shown in Table A-7.1.

The two curves representing allowable stresses for elastic and inelastic buckling make a smooth transition at the slenderness ratio separating them, as shown in Figure 7.5. Rather than apply these equations to the solution of axial compression problems in steel, allowable stress tables (for analysis, Tables A-7.3 through A-7.6) or allowable load tables (for design, Table A-7.2) are more often used. If values for allowable load are plotted instead of tabulated, the curves have the same pattern schematically represented in Figure 7.5. Examples of these axial column load curves are shown in Figure 7.6.

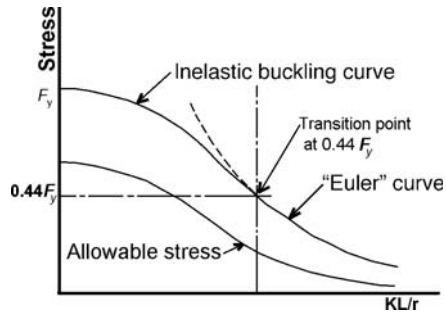**FIGURE 7.5**

Inelastic and elastic critical stress curves for column buckling

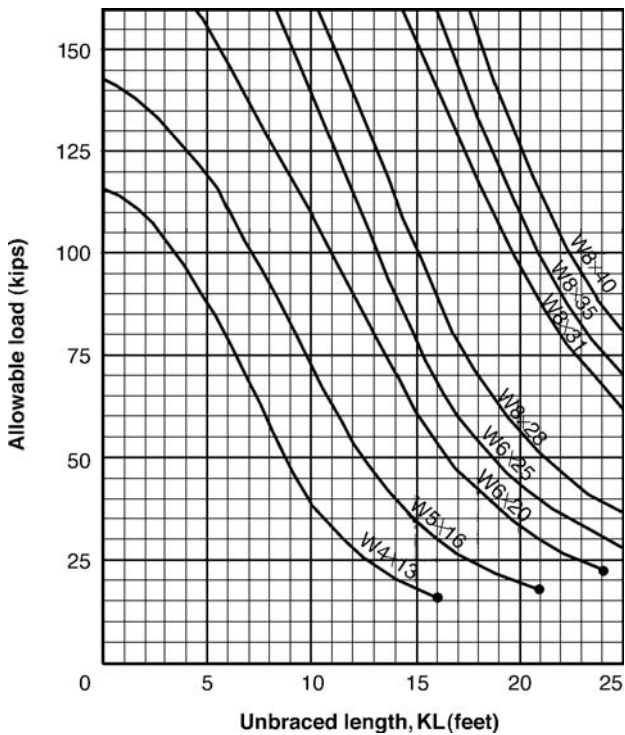**FIGURE 7.6**

Allowable axial column load plotted against unbraced length

Example 7.3 Analyze steel column**Problem definition**

Find the capacity (allowable load) of a W14 × 61 pin-ended column with an unbraced length of 10ft. Assume A36 steel.

Solution overview

Find relevant section properties; compute slenderness ratio; find allowable stress and capacity.

Problem solution

1. From Table A-4.3, $r_{min} = 2.45$ in.
2. Compute slenderness ratio:
 - a. From Table A-7.1, the effective length coefficient, $K = 1.0$.
 - b. The unbraced length, $L = 10.0 \times 12 = 120$ in.
 - c. $KL/r_{min} = (1.0)(120)/2.45 = 48.98$. Round up to 49.
3. From Table A-7.6, the allowable stress is $F_c = 19.0$ ksi.
4. *Find capacity:* From Table A-4.3, the area of the steel column is $A = 17.9$ in². The capacity is $P = F_c \times A = 19.0(17.9) = 340$ kips.

From Equation 7.5, the slenderness ratio separating elastic and inelastic column behavior is 134 for A36 steel. The column analyzed in Example 7.3 has a slenderness ratio of 48.98, which is less than this separating value; therefore, it fails inelastically. Using Equation 7.7 to determine the “inelastic” allowable stress, we get the same result as was obtained in the example. The calculations are as follows, using $F_y = 36$ ksi:

From Equation 7.8, $F_e = \pi^2(29,000)/(48.98^2) = 119.3$. Then, from Equation 7.7:

$$F_c = \frac{0.658 \left(\frac{F_y}{F_e} \right) F_y}{1.67} = \frac{0.658 \left(\frac{36}{119.3} \right) 36}{1.67} = 19.0 \text{ ksi}$$


It can be seen that this is the same allowable stress as was obtained in Example 7.3.

Example 7.4 Design steel column**Problem definition**

Select the lightest (most economical) wide-flange section for the first-floor column shown in Figure 7.7. Assume office occupancy, a roof (construction) live load of 20 psf, a typical steel floor system, and an allowance for steel stud partitions. Assume pin-ended (simple) connections. Use A992 steel.

Solution overview

Find total load on column; find effective length; select lightest section.

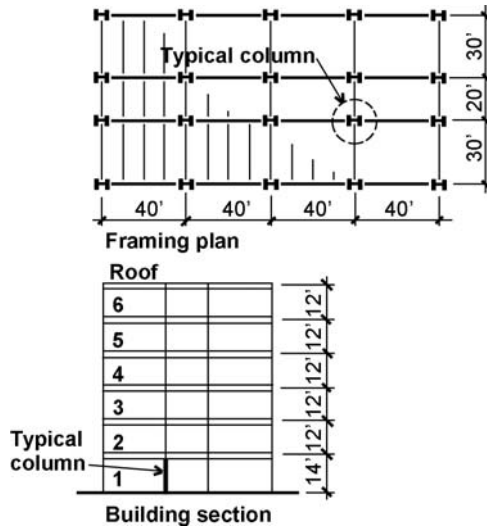**FIGURE 7.7**

Framing plan and building section for Example 7.4

Problem solution

1. Find total column load:
 - a. From Table 2.2, the live load (L) for office occupancy = 50 psf.
 - b. From Table 2.1, the typical dead load (D) = 47 psf (steel floor system, etc.) + 8 psf (steel stud partition allowance) = 55 psf.
 - c. The roof live load (L_R) = 20 psf, according to the Problem Definition.
 - d. Find tributary area (see Figure 1.5): The column's tributary area is $25\text{ ft} \times 40\text{ ft} = 1000\text{ ft}^2$ per floor, or 5000 ft^2 for the five levels on which occupancy live loads are computed (excluding the roof).
 - e. Using Table A-2.2, compute the reduced live load; the live load reduction factor is $0.25 + 15/(4 \times 5000)^{0.5} = 0.36$, but no reduction less than 0.40 is permitted. Therefore, the live load can be reduced to $0.40(50) = 20\text{ psf}$ for the first-floor column under consideration.
 - f. Using Table A-5.1 for allowable stress design, find the total column load, accounting for reductions due to load combinations:

$$L = (25\text{ ft} \times 40\text{ ft}) \times (20\text{ psf}) \times 5\text{ floors} = 100,000\text{ lb}$$

$$D = (25\text{ ft} \times 40\text{ ft}) \times (55\text{ psf}) \times 6\text{ floors} = 330,000\text{ lb}$$

$$L_R = (25\text{ ft} \times 40\text{ ft}) \times (20\text{ psf}) \times 1\text{ floor} = 20,000\text{ lb}$$

For the three loads potentially present, only two load combinations need be considered (the others listed will produce less severe effects). For the second load combination, wind or seismic effects on the column may also be considered. However, in this example, we assume that the column is not part of the lateral force-resisting system for wind or seismic

and that any negative (uplift) wind load on the roof can be conservatively ignored. The two relevant load combinations to consider are as follows:

$$D + L = 330,000 + 100,000 = 430,000 \text{ lb}$$

$$\begin{aligned} D + 0.75L + 0.75L_R &= 330,000 + 0.75(100,000) + 0.75(20,000) \\ &= 330,000 + 75,000 + 15,000 = 420,000 \text{ lb} \end{aligned}$$

The first case governs; therefore the total column load = 430,000 lb = 430 kips.

2. Using Table A-7.1, find the unbraced effective length: $KL = (1.0)(14) = 14 \text{ ft}$.
3. Select the most economical section:
 - a. Using Table A-7.2, pick the lightest acceptable section from each “nominal depth” group (i.e., one W8, one W10, one W12, and so on), to assemble a group of “likely candidates.” Some columns are clearly either too small or too large; the three possible candidates for a load of 430 kips and an effective length of 14 ft. are:
 - W10 $\times$ 68 can support 440 kips,
 - W12 $\times$ 65 can support 456 kips,
 - W14 $\times$ 74 can support 466 kips.
 - b. *Choose lightest section:* The W12 $\times$ 65 is the most economical since its weight per linear foot (65 pounds) is smallest.

To check the result in Example 7.4, first determine the slenderness ratio of the W12 $\times$ 65, finding $r = 3.02 \text{ in.}$ from Table A-4.3. Then, $KL/r = (1.0)(14 \times 12)/3.02 = 55.63$. From Equation 7.5, the slenderness ratio separating elastic from inelastic behavior for A992 steel is 114, so the column fails inelastically. Using Equation 7.7 to determine the “inelastic” allowable stress, we get the same result as was obtained in the example. The calculations are as follows, using $F_y = 50 \text{ ksi}$:


From Equation 7.8, $F_e = \pi^2(29,000)/(55.63^2) = 92.5$. Then, from Equation 7.7:

$$F_c = \frac{0.658^{(F_y/F_e)} F_y}{1.67} = \frac{0.658^{(50/92.5)} 50}{1.67} = 23.9 \text{ ksi}$$

From Table A-4.3, the area of the W12 $\times$ 65, $A = 19.1 \text{ in}^2$. Therefore, the capacity, $P = F_c \times A = 23.9 \times 19.1 = 456 \text{ kips}$, the same value found in Example 7.4.

REINFORCED CONCRETE

Concrete columns are cast into forms containing a matrix of steel reinforcement. This reinforcement is distributed just inside the perimeter of the forms in a pattern designed to confine the concrete, much like sand would be confined when placed into a steel drum. In both cases (sand in a steel drum; concrete in a steel “cage”), the ability of the material to sustain an axial compressive stress is enormously increased

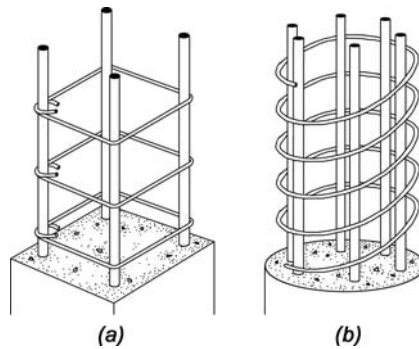**FIGURE 7.8**

Containment of longitudinal bars using (a) ties and (b) spiral reinforcement

by the presence of the confining steel, whether or not the steel contributes directly to the support of the external load.

Ties and spirals

Two patterns of steel reinforcement are commonly used for columns: a series of square or rectangular *ties* (Figure 7.8a) placed horizontally around a minimum of four longitudinal steel bars or a continuous circular *spiral* wire (Figure 7.8b) wrapped around a minimum of six longitudinal bars. Tied columns are usually rectangular and spiral columns are usually circular, but either pattern of reinforcement can be used for any column cross section. In general, spiral reinforcement provides more reliable confinement of the concrete and a more ductile type of failure than tied columns; strength reduction factors for spiral versus tied columns take this relative safety into account. The actual design of ties and spirals is based on fairly straightforward guidelines, summarized in Table A-7.7. The design and analysis examples that follow do not include the calculation of tie or spiral spacing and size.

Design of concrete and longitudinal steel

The amount of longitudinal steel in reinforced concrete columns, measured according to the ratio of steel area to gross column area (*reinforcement ratio*), must fall between two limiting values. The lower limit of 1% provides a minimum amount of steel to protect against tension failures due to unanticipated bending moments; the upper limit of 8% prevents overcrowding of steel bars within the concrete formwork. The reinforcement ratio is defined as:

$$\rho_g = \frac{A_{st}}{A_g} \quad (7.9)$$

where ρ_g = the reinforcement ratio of longitudinal steel area to gross area; A_{st} = the cross-sectional area of longitudinal reinforcement; and A_g = the gross

cross-sectional area of the concrete column, whether the column is rectangular or circular in section.

It is assumed in this chapter that reinforced concrete column stability is not a factor in the column's strength; that is, the column is not slender enough for buckling to be a problem. As a general rule of thumb, concrete columns braced against lateral misalignment ("sidesway"), with a slenderness ratio, KL/r , no greater than 40, are rarely influenced by stability considerations. Taking the radius of gyration of a rectangular column as approximately equal to 0.3 times the smaller cross-sectional column dimension, b (i.e., assuming $r = 0.3b$), and taking the effective length coefficient, $K = 1.0$, we get $KL/r = 1.0L/(0.3b) \leq 40$. Solving for the ratio of unbraced length, L , to minimum cross-sectional dimension, b , we find that slenderness effects may typically be neglected in axially loaded reinforced concrete columns when $L/b \leq 12$. For slender concrete columns, other techniques must be used to account for the possibility of buckling.

For columns, at least 1½ in. of concrete is left outside the matrix of reinforcement to protect it from corrosion (2 in. for No.6 or larger bars if the concrete is exposed to the weather, or the earth; 3 in. for all bars if the concrete is cast directly against the earth—see Table A-4.9). For typical reinforcement sizes, the distance from the outside of the concrete column to the centerline of the longitudinal reinforcement can be taken as about 2½ in. or 3 in. (Figure 7.9).

For a reinforced concrete column subjected to pure axial compression, the ultimate load at failure is simply the concrete strength (failure stress) times its area, plus the yield stress of the longitudinal steel rebars times their area (Figure 7.10). The failure strength of concrete is taken as 85% of its cylinder strength, f'_c , since the more rapid rate of loading of the test cylinders (Figure 7.11, curve *a*), compared to loading of actual structural columns (Figure 7.11, curve *b*), results in a higher measured strength than can be expected for real structures. The strain at which steel longitudinal reinforcement bars yield depends on their yield stress. For grade 60 rebars ($f_y = 60$ ksi), the yield strain (stress divided by modulus of elasticity) is $60/29,000 = 0.002$. For grade 40 ($f_y = 40$ ksi), the yield strain is $40/29,000 = 0.001$. In either case, the failure stress of the steel can be taken as its yield stress, f_y , since yielding would have already occurred when the concrete reaches its crushing strain

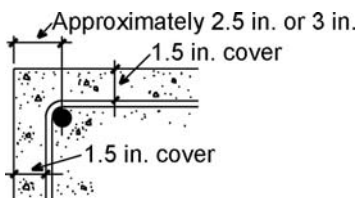
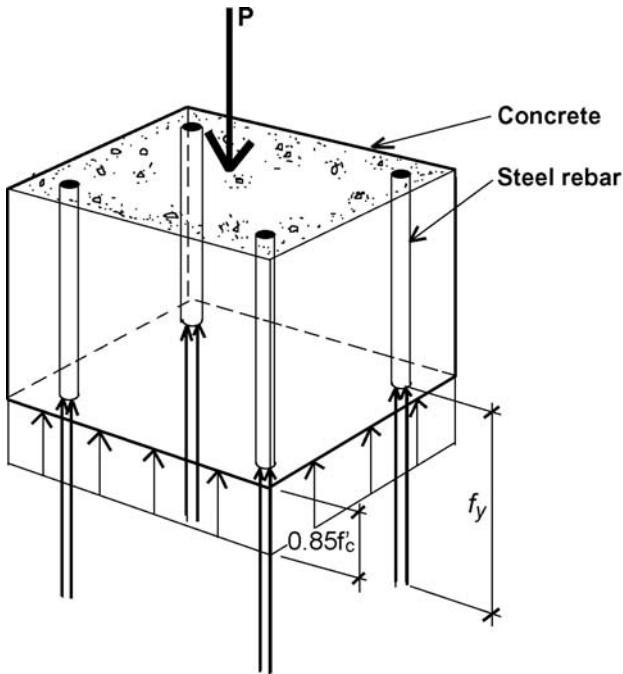
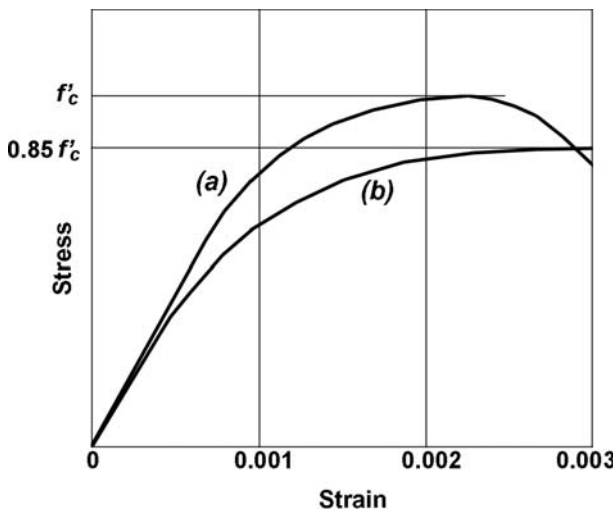


FIGURE 7.9

Detail of reinforced concrete element showing approximate distance from centerline of rebar to outside face of concrete

**FIGURE 7.10**

Nominal stresses at failure of axially loaded reinforced concrete column

**FIGURE 7.11**

Stress-strain diagrams for plain concrete showing (a) fast-loading characteristic of test cylinders and (b) slow-loading characteristic of actual structures

(precipitating column failure) of about 0.003. Combining the failure stresses for concrete and steel, we get an ultimate failure load for an axially loaded column of:

$$P_n = 0.85f'_c(A_{conc}) + f_y A_{st} \quad (7.10)$$

where A_{st} is the longitudinal steel area, and A_{conc} is the net area of concrete, that is, the gross cross-sectional area minus the steel area. The parameters f_y and f'_c correspond to the yield stress of steel and the cylinder strength of concrete, respectively.

There are two strength reduction safety factors for axially loaded reinforced concrete columns: ϕ is the ordinary factor, while α accounts for the possibility of nonaxial loading. Both factors depend on whether the column is tied or spiral (see Table A-5.2). Combining these strength reduction factors with factored loads (see Table A-5.1), we get equations for the design and analysis of axially loaded reinforced concrete columns. An example of such an equation for dead load (D) and live load (L) only, where P_u is the factored or “design” load, is:

$$P_u = 1.2D + 1.6L \leq \phi\alpha(0.85f'_c A_{conc} + f_y A_{st}) \quad (7.11)$$

Example 7.5 Analyze axially loaded reinforced concrete column

Problem definition

Assuming $f'_c = 4$ ksi and $f_y = 60$ ksi, find the nominal failure capacity of a 10 in. $\times$ 10 in. axially loaded tied rectangular column with four No. 9 bars, as shown in Figure 7.12. Can this column support a live load of 100 kips and a dead load of 100 kips?

Solution overview

Find concrete and steel areas; multiply by failure stresses for concrete and steel and add together for ultimate capacity. Multiply ultimate capacity by strength reduction factors and compare with factored loads to determine whether capacity is adequate for given loads.

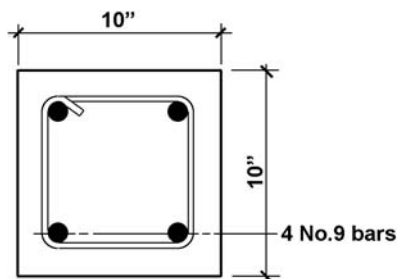


FIGURE 7.12

Column cross section for Example 7.5

Problem solution

1. From Table A-4.10, the steel area for four No. 9 bars is $A_{st} = 4.00 \text{ in}^2$.
2. The concrete area, $A_{conc} = A_g - A_{st} = 10 \times 10 - 4.00 = 96 \text{ in}^2$.
3. From Equation 7.10, the nominal capacity or failure load is $P_n = 0.85 f'_c (A_{conc}) + f_y A_{st} = 0.85(4)(96) + 60(4.00) = 566.4 \text{ kips}$.
4. From Table A-5.2, strength reduction factors for a tied column are $\phi = 0.65$ and $\alpha = 0.80$.
5. Based on Equation 7.11, check whether $P_u = 1.2D + 1.6L \leq \phi\alpha(P_n)$. We get $P_u = 1.2D + 1.6L = 1.2(100) + 1.6(100) = 280 \text{ kips}$ and $\phi\alpha(P_n) = (0.65)(0.80)(566.4) = 294.5 \text{ kips}$. Therefore, since $P_u \leq \phi\alpha(P_n)$, the capacity is adequate and the column is OK.
6. In this example, all column parameters were given. However, we can still check that the column has an acceptable reinforcement ratio and that the bars fit within the cross section. Using Equation 7.9, we check that reinforcement ratio is between 1 and 8% (i.e., between 0.01 and 0.08): $\rho_g = A_{st}/A_g = 4.00/100 = 0.040$, so the reinforcement ratio is OK. Using Table A-4.11, we find that for two No.9 bars in one line, we need 7.94 in. Since we actually have 10 in., the bars fit.

Example 7.6 Design axially loaded reinforced concrete column with cross-sectional dimensions assumed

Problem definition

Assuming $f'_c = 3 \text{ ksi}$ and $f_y = 60 \text{ ksi}$, find the required steel area for an axially loaded 12-in.-square tied reinforced concrete column supporting a dead load (D) of 150 kips and a live load (L) of 100 kips. Select bar size.

Solution overview

Use Equation 7.11, relating reduced strength to factored loads, and solve for steel area. The area of concrete within the column cross section is found by subtracting the steel area from the gross cross-sectional dimensions; that is, $A_{conc} = A_g - A_{st}$. Check reinforcement ratio limits and bar fit.

Problem solution

1. From Equation 7.11, $P_u = 1.2D + 1.6L \leq \phi\alpha(0.85 f'_c A_{conc} + f_y A_{st})$. Finding strength reduction factors, ϕ and α , from Table A-5.2, we get:

$$1.2(150) + 1.6(100) \leq (0.65)(0.80)[0.85(3)(144 - A_{st}) + 60A_{st}]$$

$$340 \leq (0.52)[367.2 - 2.55A_{st} + 60A_{st}]$$

$$653.85 \leq 367.2 + 57.45A_{st}$$

$$57.45A_{st} \geq 286.65$$

$$A_{st} \geq 4.99 \text{ in}^2. \text{ This is the required steel area for longitudinal bars.}$$

2. From Table A-4.10, choose four No. 10 bars with actual $A_{st} = 5.08 \text{ in}^2$. For symmetry, the choice of bars is limited to four, six, eight, and so on.
3. Using Equation 7.9, check that the reinforcement ratio is between 1 and 8% (i.e., between 0.01 and 0.08): $\rho_g = A_{st}/A_g = 5.08/144 = 0.035$, so the reinforcement ratio is OK. Using Table A-4.11, we find that for two No. 10 bars in one line, we need 8.38 in. Since we actually have 12 in., the bars fit.

Example 7.7 Design axially loaded reinforced concrete column with reinforcement ratio assumed

Problem definition

Assuming $f'_c = 5 \text{ ksi}$ and $f_y = 60 \text{ ksi}$, select a diameter and find the required steel area for an axially loaded, spirally reinforced circular reinforced concrete column supporting a dead load (D) of 150 kips and a live load (L) of 125 kips. Select bar size. Check reinforcement ratio and bar fit.

Solution overview

Use Equation 7.11, relating reduced strength to factored loads, and solve for gross area. With the reinforcement ratio, ρ_g , assumed, the area of concrete within the column cross section, $A_{conc} = (1.00 - \rho_g)A_g$ and the steel area, $A_{st} = \rho_g A_g$. Find the required gross area, select column dimensions (in this case, the column diameter), and proceed as in Example 7.6 with gross area known. Check reinforcement ratio limits and bar fit.

Problem solution

1. From Equation 7.11: $P_u = 1.2D + 1.6L \leq \phi\alpha(0.85f'_c A_{conc} + f_y A_{st})$. Since $A_{conc} = (1.00 - \rho_g)A_g$ and the steel area is $A_{st} = \rho_g A_g$, we get:

$$P_u = 1.2D + 1.6L \leq \phi\alpha[0.85f'_c(100 - \rho_g)A_g + f_y\rho_g A_g]$$

The choice of a reinforcement ratio is somewhat arbitrary; we select $\rho_g = 0.04$; then, with strength reduction factors, ϕ and α , found from Table A-5.2, we get:

$$1.2(150) + 1.6(125) \leq (0.75)(0.85)[0.85(5)(1.00 - 0.04)A_g + 60(0.04)A_g].$$

$$380 \leq (0.6375)[4.08A_g + 2.40A_g].$$

$$596.1 \leq 6.48A_g.$$

$$A_g \geq 91.99 \text{ in}^2; \text{ since } A_g = \pi r^2, \text{ the required radius for the concrete column, } r = (91.99/\pi)^{0.5} = 5.41 \text{ in. Therefore, the required diameter, } d = 2r = 2(5.41) = 10.8 \text{ in.}$$

The actual diameter that we select may be either bigger or smaller than this “required” diameter, since it was computed on the basis of a desired reinforcement ratio, which need not be—and *cannot* be—matched precisely in practice (since the actual bar area selected typically exceeds the required area and since the actual diameter of the column is rounded

to the nearest or “even” inch). We therefore select a column diameter close to the required value, say, 10 in., and proceed as in Example 7.6, with the gross column area given.

2. From Equation 7.11: $P_u = 1.2D + 1.6L \leq \phi\alpha(0.85f'_c A_{conc} + f_y A_{st})$. The strength reduction factors, ϕ and α , from Table A-5.2, have already been found, the gross area of a circular column with a 10 in. diameter is $\pi r^2 = \pi 5^2 = 78.54 \text{ in}^2$, and we get:

$$1.2(150) + 1.6(125) \leq (0.75)(0.85)[0.85(5)(78.54 - A_{st}) + 60A_{st}].$$

$$380 \leq (0.6375)[333.8 - 4.25A_{st} + 60A_{st}].$$

$$596.1 \leq 333.8 + 55.75A_{st}.$$

$$55.75A_{st} \geq 262.3.$$

$$A_{st} \geq 4.71 \text{ in}^2. \text{ This is the required steel area for longitudinal bars.}$$

3. From Table A-4.10, choose six No. 8 bars with actual $A_{st} = 4.74 \text{ in}^2$. For spiral columns, the number of bars must be at least six.
4. Using Equation 7.9, check that the reinforcement ratio is between 1 and 8% (i.e., between 0.01 and 0.08): $\rho_g = A_{st}/A_g = 4.74/78.54 = 0.060$, so the reinforcement ratio is OK. Using Table A-4.11, we find that for six No. 8 bars in the column, we need a 10-in. diameter. Since we actually have a 10-in. diameter, the bars fit.

The actual reinforcement ratio, $\rho_g = 0.060$, is much *higher* than our initial assumed value of $\rho_g = 0.04$. Had we selected a 12-in.-diameter column instead of a 10-in.-diameter column at the end of step 1, the actual steel ratio would have been much *lower* than 0.04. In other words, the practical requirement to use whole even numbers for column diameter, together with the need to select bar areas corresponding to actual rebar sizes, often makes it difficult to precisely define the reinforcement ratio in advance. This method does, however, lead to a reasonable size for the column in cases where a range of reasonable sizes is not initially known.

This page intentionally left blank

Beams

8

Like all structural elements, beams are both stressed and subject to deformations when loaded. Both of these considerations must be accounted for in the design of beams.

DEFLECTION

While the elongation or contraction of axially loaded members along their longitudinal axes is usually of little consequence, beams may experience excessive deflection perpendicular to their longitudinal axes, making them unserviceable. Limits on deflection are based on several considerations, including minimizing vibrations, thereby improving occupant comfort; preventing cracking of ceiling materials, partitions, or cladding supported by the beams; and promoting positive drainage (for roof beams) in order to avoid ponding of water at midspan. These limits are generally expressed as a fraction of the span, L (Table A-8.1). Formulas for the calculation of maximum deflection are shown in Table A-8.2, along with additional values for the recommended minimum depth of reinforced concrete spanning elements. The maximum (midspan) deflection, Δ , of a uniformly loaded simple span can also be found from the equation:

$$\Delta = \frac{5wL^4}{384EI} \quad (8.1)$$

where w = distributed load (lb/in. or kips/in.), L = span (in.), E = modulus of elasticity (psi or ksi), and I = moment of inertia (in⁴). When using Equation 8.1 with L in feet, w in lb/ft or kips/ft, E in psi or ksi (compatible with load, w), and I in in⁴, as is most commonly done, multiply the expression by 12³ to make the units consistent.

BENDING STRESS

Beams are stressed when they bend because the action of bending causes an elongation on one side, resulting in tension, and a shortening on the other side, resulting in compression. By exaggerating the curvature of the beam as it bends, this elongation and shortening can be visualized. Exactly where the tension and compression are depends on how the beam is loaded and how it is supported.

For *simply supported beams* with downward-acting loads (i.e., with gravity loads), the beam is stretched on the bottom (tension) and shortened on the top (compression) as shown in Figure 8.1.

For *cantilevered beams* fixed at one end, with downward-acting loads, the beam is stretched on the top and shortened on the bottom (Figure 8.2).

For *continuous beams* spanning over several supports, the changing curvature causes the position of tension and compression zones to reverse a number of times over the length of the beam, as illustrated in Figure 8.3.

The relative position of tension and compression within the beam’s cross section is directly related to the sign of the bending moment at that cross section. As can

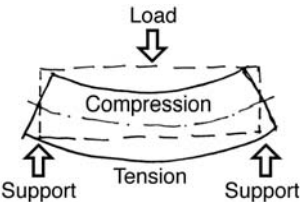


FIGURE 8.1 Behavior of a simply supported beam

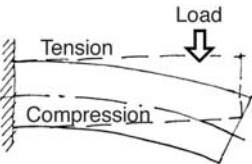


FIGURE 8.2 Behavior of a cantilevered beam

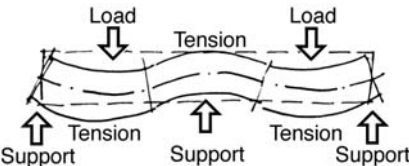


FIGURE 8.3 Behavior of a continuous beam

be seen from Figure 8.4*a*, a counterclockwise moment on the right side of a free-body diagram is equivalent to a distribution of bending stress with compression on the top and tension on the bottom of the beam: “positive” bending (and “positive” bending moment). Figure 8.4*b* shows a free-body diagram cut through a cantilever beam with “negative” bending—that is, tension on the top and compression on the bottom corresponding to a clockwise moment as shown. The reversing curvature of a continuous beam, such as that shown in Figure 8.3, corresponds precisely to a reversal in the sign of the bending moment. As shown in Figure 8.5, points of inflection (points where the curvature changes) always occur at points of zero moment.

Bending stresses within these beams can be computed if we assume that the stretching and shortening that take place at any cross section are linear; that is,

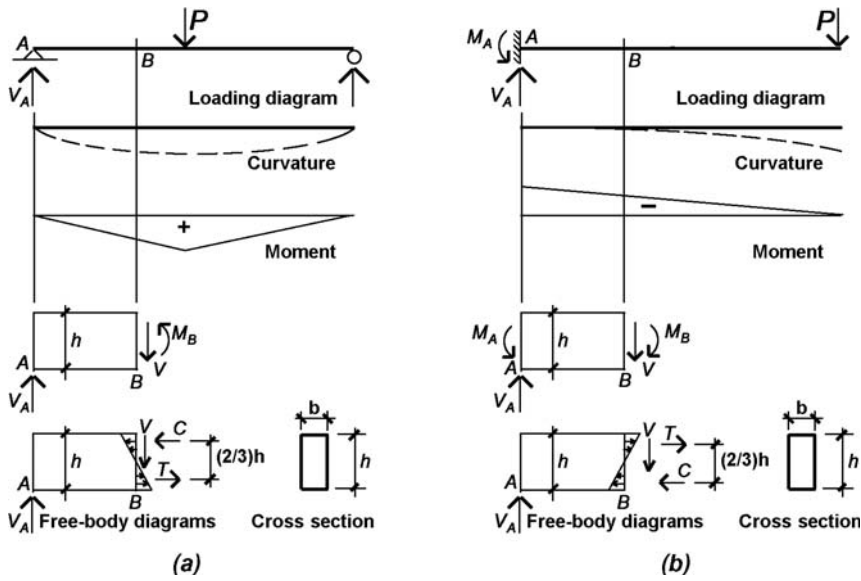


FIGURE 8.4
Comparison of “positive” and “negative” bending in (a) a simply supported beam and (b) a cantilevered beam

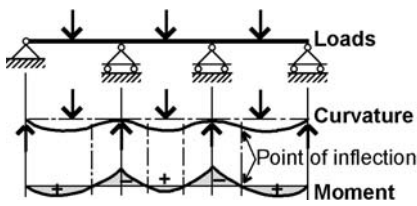


FIGURE 8.5
Continuous beam showing correspondence of points of inflection (change from positive to negative curvature) and points of zero moment

a straight line connecting a stretched point with a shortened point on any cross-sectional cut will accurately describe the shape of the beam throughout the entire cross section (Figure 8.6).

Three observations can be made once this assumption is accepted: (1) maximum elongation and shortening occur at the top and bottom of the beam (the “extreme fibers”); (2) a surface exists somewhere between the extreme fibers that is neither elongated nor shortened—this “plane” is called the “neutral axis” or “neutral surface”; and 3) strain can be defined as the elongation or shortening of any portion of the beam, divided by its original (unloaded) length. Since the original length is a constant, a strain diagram has the same shape as an “elongation-shortening diagram.” For materials with linear stress-strain relationships (where stress equals strain times a constant *modulus of elasticity*), a stress diagram will also have the same shape as the strain or “elongation-shortening diagram.” Figure 8.7 compares these diagram shapes for materials with linear stress-strain relationships.

For materials with nonlinear stress-strain relationships, a stress diagram can be pieced together by plotting points from a stress-strain curve for the material. Thus, a steel beam stressed beyond its elastic region would have stress and strain distributions as shown in Figure 8.8. The elongation and shortening, shown in Figure 8.8*a*, and therefore the strain, shown in Figure 8.8*b*, are assumed to remain linear even when the stress, shown in Figure 8.8*d* through Figure 8.8*f*, becomes nonlinear. In Figure 8.8*c*, the stresses at the extreme fibers of the cross section just reach the limit of elastic behavior (with stress, σ_y), which corresponds to the so-called *elastic moment*, M_e . In Figure 8.8*f*, the strain at the outer fiber is extremely large

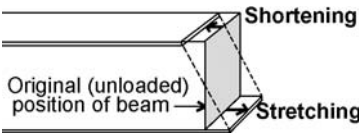


FIGURE 8.6

Shortening and stretching (compression and tension) at a typical beam cross section

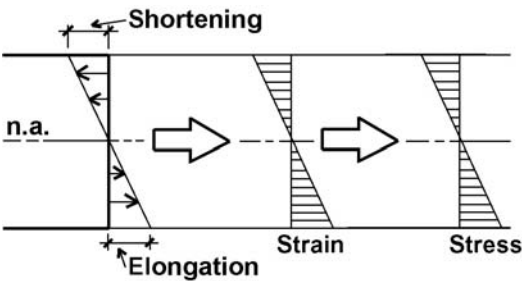


FIGURE 8.7

Elongation, strain, and stress diagrams for a linear, elastic material

(theoretically infinite), and the entire cross section is assumed to have yielded at the stress, σ_y , that is, moved past the linear-elastic yield strain labeled “1” in Figure 8.8g. This condition represents the limit state for a steel beam, and corresponds to the so-called *plastic moment*, M_p . For reinforced concrete, a nonlinear stress-strain relationship is most often assumed for design; special procedures have been developed to simplify the construction of these stress diagrams.

The shape of the stress diagram is a key element in determining the magnitudes of stresses within the beam: when combined with the cross-sectional shape, the requirements of equilibrium can be used to find the magnitudes of the stresses. Typical stress diagrams are shown in Figure 8.9 corresponding to the allowable moment for wood and the limit states for steel and reinforced concrete.

Allowable stress design

As an example of how the stress-moment relationship is computed using the allowable stress design method, consider a free-body diagram cut from a rectangular cross section of width, b , and height, h (assuming a linear stress-strain relationship resulting in a linear stress diagram), as shown in Figure 8.9a. From the requirements of horizontal equilibrium, the total compressive force, C , must equal the total tension force, T . For this to occur, the neutral axis must be at the center of the beam, and the maximum compressive stress must equal the maximum tension stress. Any other linear distribution of stresses would be inconsistent with these requirements

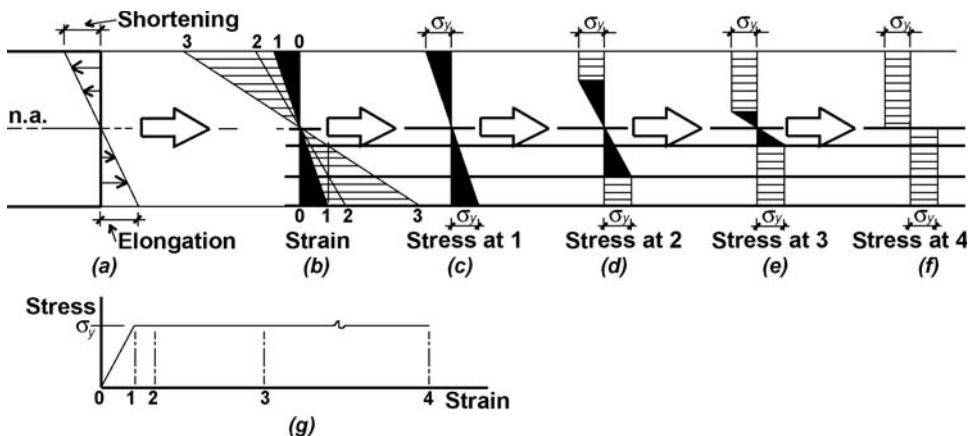


FIGURE 8.8

Elongation, strain, and stress diagrams for an elastic-plastic material such as steel showing (a) elongation and shortening of the actual material, (b) strain diagrams, (c) stress diagram at the point where the outer fiber has just yielded, (d) stress diagram corresponding to strain just beyond the elastic limit, (e) stress diagram corresponding to continued strain beyond the elastic limit, (f) stress diagram corresponding to the plastic moment (where the entire cross section has yielded), and (g) stress-strain diagram

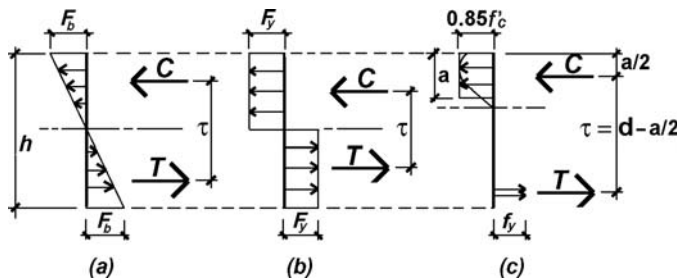


FIGURE 8.9

Bending stresses acting on rectangular cross sections corresponding to the (a) allowable moment for wood and the limit states (maximum moment at failure) for (b) steel and (c) reinforced concrete

of equilibrium. The couple of equal and opposite forces represented by C and T , multiplied by the moment arm between them, must equal the bending moment, M , caused by the loads acting on the beam. The basic bending stress equation derives from this simple fact: M equals C (or T) times the moment arm, τ ; that is:

$$M = C\tau \quad (8.2)$$

Accounting for beam width, b , $C = 1/2(F_b)(b/2)(b)$ and $\tau = 2/3(b)$; substituting these values into Equation 8.2, we get:

$$M = F_b \frac{bb^2}{6} = F_b \frac{bb^3/12}{b/2} \quad (8.3)$$

Defining " $bb^2/6$ " as the section modulus, S , and " $bb^3/12$ " as the moment of inertia, I , for a rectangular cross section, and solving for the maximum allowable stress, F_b , we get the basic bending stress equations for allowable stress design:

$$F_b = \frac{M}{S} = \frac{Mc}{I} \quad (8.4)$$

where F_b is the allowable bending stress for the material (psi or ksi), M is the bending moment (in-lb or in-kips), S is the required section modulus (in^3), I is the required moment of inertia (in^4), and $c = b/2$ is the distance from the neutral axis to the extreme fiber (in.).

Stress-moment relationships

Equation 8.4 shows the relationship between bending stress, bending moment, and section modulus for a material stressed within its linear-elastic range. It is the basis for wood beam design. Steel and reinforced concrete, however, are no longer designed

on the basis of assumed linear-elastic behavior. Even so, the basic relationship among moment, stress, and some sort of section modulus property remains essentially the same for all three materials, as can be seen by comparing the stress and resultant force diagrams shown in Figure 8.9. While specific derivations will be covered in the sections that follow, the requirements of horizontal equilibrium ($C = T$) and rotational equilibrium ($M = C\tau = T\tau$) lead to design equations with essentially the same form for all three materials: Equation 8.5 (solving for the required section modulus, S , in Equation 8.4) applies to allowable stress design in wood, Equation 8.6 to available strength design in steel, and Equation 8.7 to strength design in reinforced concrete.

$$S_{req} = M/F'_b \quad (8.5)$$

$$Z_{req} = M_a\Omega/F_y \quad (8.6)$$

$$bd^2 \geq M_u/(\phi R) \quad (8.7)$$

In each case, the section modulus term (S , Z , or bd^2) must be greater or equal to the bending moment divided by a bending stress term. The stress terms in Equations 8.5, 8.6, and 8.7 vary: for wood, an adjusted allowable stress, F'_b , is used directly; for steel, the yield stress, F_y , is used; for reinforced concrete, the stress term, R , is more complex as it must account for the limit state of both concrete (in compression) and steel (in tension), as well as the ratio of steel to gross area within the beam cross section. Factors of safety are also handled differently for the three materials: in wood “allowable stress” design, the factor of safety is hidden within the stress term, F'_b ; in steel “available strength” design, the factor of safety, Ω (normally 1.67 for bending), is applied, not to the stress, but to the plastic moment capacity of the cross section in order to determine its “available strength”; in reinforced concrete “strength” design, the factor of safety, ϕ (normally 0.9 for bending), is a strength reduction factor applied to the moment capacity of the section. Load safety factors are also included within the reinforced concrete design moment, M_u .

The triangular stress distribution in allowable stress design for wood corresponds to the elastic section modulus, $S = bd^2/6$, derived in Equation 8.3 for rectangular cross sections. For steel, the plastic section modulus, Z , is used, and is equal to $bd^2/4$ for a rectangular section—this is easily derived from the equilibrium of stresses shown in Figure 8.9b, although it should be noted that rectangular solid shapes are virtually nonexistent in steel beams. The term bd^2 , used in reinforced concrete Equation 8.7, has no official status as a “section modulus,” yet it consists of the same basic variables and has the same units as wood’s S and steel’s Z .

Bending design methods

Equations 8.5, 8.6, and 8.7 are “design” equations, since they provide guidance for the size and shape of bending elements that are capable of resisting a given bending

moment. In practice, after bending moments are determined (e.g., by the construction of load, shear, and moment diagrams; from moment value tables; or with the use of structural analysis software), the required section modulus term is calculated, and a cross section is then selected. In the case of wood and steel, tables of standard cross sections and their corresponding section moduli facilitate the direct selection of appropriate shapes. The design of a reinforced concrete beam is less direct, since the ratio of steel to concrete may vary, producing a range of acceptable bd^2 terms, each of which may sponsor a range of choices for cross-sectional dimensions b and d .

SHEAR STRESS

Internal forces perpendicular to the longitudinal axis of beams may also exist along with bending moments at any cross section, consistent with the requirements of equilibrium (see, e.g., the force V shown in the free-body diagrams within Figure 8.4). These *shear forces* are distributed over the cross-sectional surface according to the equation:

$$\tau = \frac{VQ}{Ib} \quad (8.8)$$

where τ = shear stress at a distance, y , from the extreme fiber (psi or ksi); V is the total shear force at the cross section (lb or kips); Q is the “static moment” of the partial cross-sectional area (from the extreme fiber to the distance, y) about the neutral axis of the cross section (in^3); I is the moment of inertia of the cross section (in^4); and b is the width of the cross section at a distance, y , from the extreme fiber (in.).


Rectangular sections

For rectangular cross sections, the maximum shear stress, which occurs at the neutral axis, becomes:


$$\tau_{max} = \frac{1.5V}{bh} \quad (8.9)$$

where h is the height of the rectangular cross section; all other variables are as defined for Equation 8.8. Alternatively, one can solve for the required cross-sectional area, $A_{req} = bh$ (in^2) as the basis for designing or analyzing a rectangular beam for shear, corresponding to an allowable shear stress, τ_{allow} (psi or ksi) for maximum shear force, V (lb or kips). In this case, one gets:

$$A_{req} = \frac{1.5V}{\tau_{allow}} \quad (8.10)$$

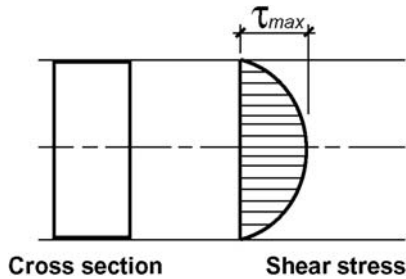**FIGURE 8.10**

Distribution of shear stress on a rectangular cross section

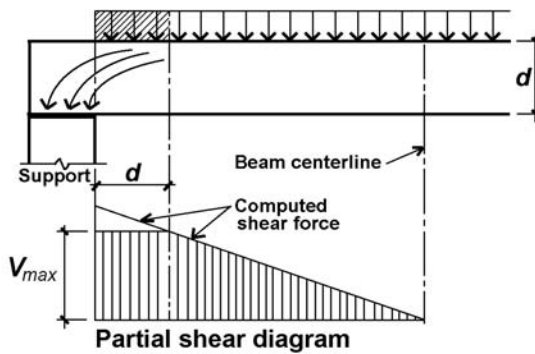**FIGURE 8.11**

Reduction of shear force, V_{max} , in the vicinity of the beam's reaction (support)

This is the basis for checking shear in timber beams, which are almost always rectangular (Figure 8.10). Reinforced concrete beams behave in a more complex manner, and special procedures for dealing with shear, or diagonal tension, have been developed.

In the vicinity of supports, loads are transferred by compression directly to those supports (Figure 8.11), and the maximum shear force is therefore somewhat less than the computed maximum value. In the design of wood and reinforced concrete beams, the shear force within a distance, d , of the face of the supports can be considered equal to the value of the shear force at that distance, d . For wood beams, d is the total beam height; for reinforced concrete, it represents the effective depth, measured to the centerline of the tension reinforcement.

Wide-flange sections

For steel wide-flange sections, the maximum shear stress, also at the neutral axis, can be found by computing the static moment, Q , of the partial area (above the neutral

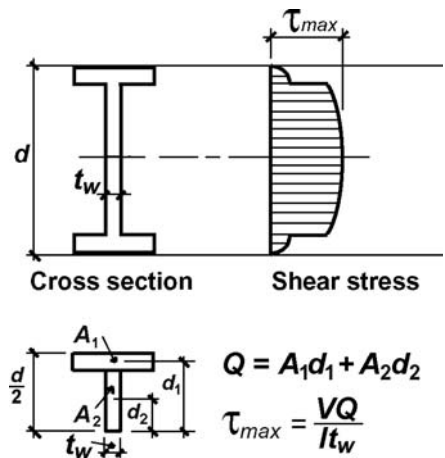


FIGURE 8.12 Distribution of shear stress on a flanged cross section, and calculation of maximum shear stress, τ_{max}

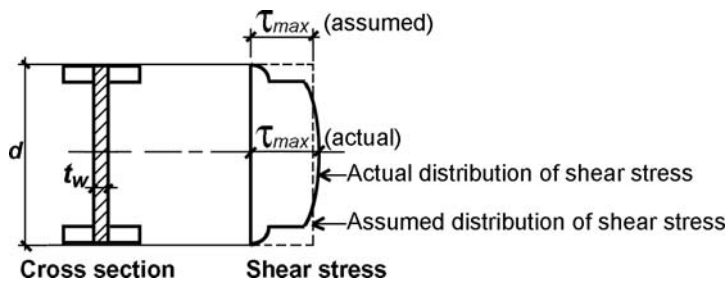


FIGURE 8.13 Comparison of actual and assumed maximum shear stress, τ_{max} , for a steel wide-flange beam

axis) about the neutral axis and solving Equation 8.8, as shown in Figure 8.12. For steel wide-flange shapes, simplified procedures have been developed, based on the average stress on the cross section, neglecting the overhanging flange areas; that is:

$$\tau_{max} = \frac{V}{dt_w} \tag{8.11}$$

where τ_{max} = the maximum shear stress within the cross section, V = the total shear force at the cross section, d = the cross-sectional depth, and t_w = the web thickness (see Figure 8.13).

WOOD

Wood beams are generally designed for bending stress and then checked for shear and deflection. Using allowable stress design, the required section modulus is found by dividing the maximum bending moment by the adjusted allowable bending stress, F'_b , as shown in Equation 8.5. This adjusted value is found by multiplying the tabular value, F_b (Table A-3.5), by various adjustment factors. In addition to factors for load duration, wet service conditions, and size, three new adjustment factors are introduced for bending: a flat use factor, a repetitive member factor, and a beam stability factor (Table A-3.6).

The flat use factor, C_{fu} , accounts for the apparent increase in bending strength when beams are stressed about their weak axes. The repetitive member factor, C_r , accounts for the increased safety of joists and rafters made from dimension lumber when they are joined by floor or roof decks and spaced not more than 24 in. on center. Wood beams acting individually must be designed according to the most conservative assumptions regarding their actual strength, whereas closely spaced joists or rafters enjoy an additional margin of safety—particularly heavy concentrated loads (or unusually weak joists or rafters) are “helped out” by the adjacent members. The beam stability factor, C_L , accounts for the possibility of lateral-torsional buckling when the compression edge of a beam is not adequately braced. For beams continuously braced by roof or floor decks, as is often the case with dimension lumber, $C_L = 1.0$. Otherwise, an effective length is found by multiplying the distance between lateral braces (often determined by the location of concentrated loads) by a coefficient and applying the formulas found in Table A-3.6.

For glued laminated (glulam) beams only, the size factor is replaced by a “volume” factor, C_V . Like the size factor, the volume factor is designed to account for the increased probability of brittle tensile failure in larger structural elements. Because the beam stability factor, C_L , accounts for compressive buckling, while the volume factor accounts for tensile failure, it is not necessary to combine both of these factors when adjusting the allowable bending stress. Instead, only the smaller value of C_V or C_L is used for glulam beams.

Because some adjustment factors cannot be determined until the cross-sectional dimensions of the beam are known, the design process may become an iterative one, based on the analysis of trial sections. In this process, tabular values of allowable bending stress and modulus of elasticity are found in Tables A-3.5 and A-3.9; values for allowable shear stress, F_v , are found in Table A-3.7. Shear stress is only adjusted for duration of load and wet service conditions (Table A-3.8). When computing deflections, the only adjustment to modulus of elasticity, E , is for wet service conditions (Table A-3.9). The average modulus of elasticity (E), and not the minimum modulus of elasticity (E_{min}), is used in deflection calculations.

In the examples that follow, the maximum shear force, V , could have been reduced by considering the value at a distance, d , from the face of the supports, as illustrated in Figure 8.11. Where shear does not appear to be a critical factor in the

design of the beam, this reduction is usually unnecessary; however, if shear appears to govern the beam design, it may be beneficial to use the reduced value of V in the calculation of actual shear stress.

Example 8.1 Analyze wood beam, dimension lumber

Problem definition

Can a 2×8 Hem-Fir No. 2 joist, spaced 16 in. on center, be used in a residential application, spanning 12 ft? Assume a dead load corresponding to that listed in Table A-2.1 for wood floor systems with 2×10 joists.

Solution overview

Find loads; check bending stress (or required section modulus); check shear stress (or required cross-sectional area); check deflection.

Problem solution

1. Find loads:
 - a. From Table A-2.2, the live load, $L = 40$ psf; the live load distributed on 1 linear foot of the joist is $L = 40(16/12) = 53.33$ lb/ft. Live load reduction does not apply since $K_{LL}A_t$ (the tributary area multiplied by the live load element factor—see Table A-2.2) is less than 400 ft^2 .
 - b. From Table A-2.1, the dead load, $D = 10.5$ psf; the dead load distributed on 1 linear foot of the joist is $D = 10.5 (16/12) = 14$ lb/ft.
 - c. The total distributed load, $w = 53.33 + 14.0 = 67.33$ lb/ft.
2. Create load, shear, and moment diagrams as shown in Figure 8.14 to determine critical (i.e., maximum) shear force and bending moment.
3. Find adjusted allowable bending stress:
 - a. From Table A-3.5, find the tabular allowable bending stress: $F_b = 850$ psi.
 - b. From Table A-3.6, find all relevant adjustments: $C_F = 1.2$; $C_r = 1.15$; $C_M = C_D = 1.0$.
 - c. Multiply the tabular stress value by the adjustments to get the adjusted allowable stress: $F'_b = 850(1.2)(1.15) = 1173$ psi.

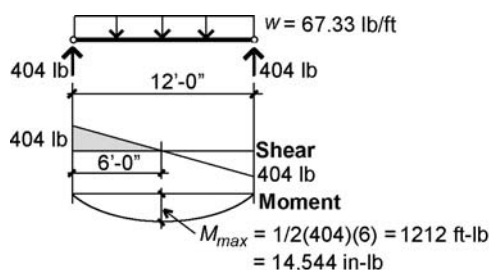


FIGURE 8.14

Load, shear, and moment diagrams for Example 8.1

4. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 14,544/1173 = 12.4 \text{ in}^3$.
5. From Table A-4.1, check the actual section modulus for a 2×8 , bent about its strong (x) axis: $S_x = 13.14 \text{ in}^3$; since the actual $S_x = 13.14 \text{ in}^3 \geq$ required $S_x = 12.4 \text{ in}^3$, the 2×8 section is OK for bending.
6. Find adjusted allowable shear stress:
 - a. From Table A-3.7, the tabular allowable shear stress, $F_v = 150 \text{ psi}$.
 - b. From Table A-3.8, find all relevant adjustments: $C_M = 1.0$; $C_D = 1.0$.
 - c. Multiply the tabular stress value by the adjustments to get the adjusted allowable stress: $F'_v = 150(1.0)(1.0) = 150 \text{ psi}$.
7. From Equation 8.10, compute the required area, $A_{req} = 1.5V/F'_v = 1.5(404)/150 = 4.04 \text{ in}^2$.
8. From Table A-4.1, check the actual area of the cross section: $A_{actual} = 10.88 \text{ in}^2$; since $A_{actual} = 10.88 \text{ in}^2 \geq A_{req} = 4.04 \text{ in}^2$, the 2×8 section is OK for shear.
9. From Table A-8.1, find the allowable total-load deflection for a floor joist: $\Delta_{allow} = \text{span}/240 = 12(12)/240 = 0.6 \text{ in.}$; and the allowable live-load deflection for a floor joist: $\Delta_{allow} = \text{span}/360 = 12(12)/360 = 0.4 \text{ in.}$
10. Using Table A-8.2, check the actual *total-load* deflection. $\Delta_{actual} = CPL^3/(EI)$, where:

$C = 22.46$.

$P = wL = 67.33(12) = 808 \text{ lb.}$

$L = 12 \text{ ft.}$ (We are using the same symbol, L , for span and “live load”; the meaning should be clear from context.)

From Table A-3.9, the modulus of elasticity, $E = 1,300,000 \text{ psi}$.

From Table A-4.1, the moment of inertia about the strong (x) axis, $I_x = 47.63 \text{ in}^4$.
11. $\Delta = 22.46(808)(12^3)/(1,300,000 \times 47.63) = 0.5 \text{ in.}$ Since $\Delta_{actual} = 0.5 \text{ in.} \leq \Delta_{allow} = 0.6 \text{ in.}$, the beam is OK for total-load deflection.
12. Using Table A-8.2, check the actual *live-load* deflection. $\Delta_{actual} = CPL^3/(EI)$, where:

$C = 22.46$.

$P = wL = 53.33(12) = 640 \text{ lb.}$ (Use live load only!)

$L = 12 \text{ ft.}$ (We are using the same symbol, L , for span and “live load”; the meaning should be clear from context.)


From Table A-3.9, the modulus of elasticity, $E = 1,300,000 \text{ psi}$.

From Table A-4.1, the moment of inertia about the strong (x) axis, $I_x = 47.63 \text{ in}^4$.
13. $\Delta = 22.46(640)(12^3)/(1,300,000 \times 47.63) = 0.4 \text{ in.}$ Since $\Delta_{actual} = 0.4 \text{ in.} \leq \Delta_{allow} = 0.4 \text{ in.}$, the beam is OK for live-load deflection.
14. **Conclusion:** The 2×8 is OK for bending, shear and deflection. Therefore, it is acceptable.


Example 8.2 Analyze wood beam, timbers

Problem definition

Can a 14×20 Hem-Fir No. 2 girder be used in a “heavy timber” office building application, as shown in Figure 8.15? Assume that beams framing into the girder provide lateral bracing

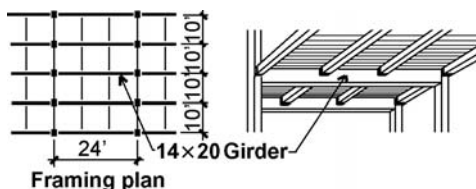**FIGURE 8.15**

Framing plan and view of girder for Example 8.2

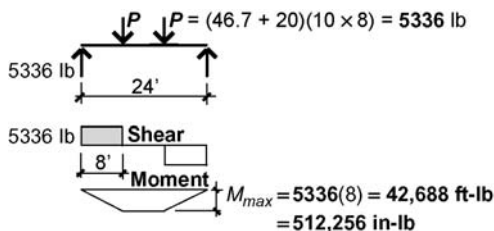**FIGURE 8.16**

Load, shear, and moment diagrams for Example 8.2

at the third points. Assume a total dead load of 20 psf and a live load corresponding to office occupancy.

Solution overview

Find loads; check bending stress (or required section modulus); check shear stress (or required cross-sectional area); check deflection.

Problem solution

1. Find loads:

From Table A-2.2, the live load for office occupancy, $L = 50$ psf; with live load reduction, we get $L = 50[0.25 + 15/(2 \times 24 \times 10)^{0.5}] = 50(0.935) = 46.7$ psf.

The dead load, $D = 20$ psf (given).

A total concentrated load, P , acts on tributary area of $10 \times 8 = 80 \text{ ft}^2$, so $P = (D + L)(80) = (20 + 46.7)(80) = 5336 \text{ lb}$.

2. Create load, shear, and moment diagrams as shown in Figure 8.16 to determine critical (i.e., maximum) shear force and bending moment.

3. From Table A-3.5, the tabular value is $F_b = 675$ psi.

4. Find the adjustments to the allowable bending stress:

From Table A-3.6: $C_F = (12/19.5)^{1/9} = 0.95$.

From Table A-3.6: $C_r = 1.0$.

From Table A-3.6: $C_M = 1.0$.

From Table A-3.6: $C_D = 1.0$.

In addition, the beam stability factor must be computed: $C_L = A - (A^2 - B)^{0.5}$ where:

$l_e = 1.68l_u = (1.68)(8 \times 12) = 161$ in. (for point loads providing lateral support at the third points).

$E'_{min} = 400,000$ psi (from Table A-3.9).

$b = 13.5$ in.; $d = 19.5$ in. (actual dimensions of a 14×20 from Table A-4.1).

$F_b^* = F_b C_M C_D C_F = 675(1.0)(1.0)(0.95) = 640$ psi.

$F_{bE} = 1.20(13.5)^2(400,000)/(161 \times 19.5) = 27,864$.

$A = (1 + 27,864/640)/1.9 = 23.44$.

$B = (27,864/640)/0.95 = 45.83$.

$C_L = A - (A^2 - B)^{0.5} = 23.44 - (23.44^2 - 45.83)^{0.5} = 0.999$.

5. The adjusted allowable stress, $F'_b = F_b^* C_L = 640(0.999) = 639$ psi.

6. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 512,256/639 = 802$ in³.

7. From Table A-4.1, check the actual section modulus about the strong (x) axis: $S_x = 855.6$ in³; since the actual $S_x = 855.6$ in³ $\geq$ the required $S_x = 802$ in³, the section is OK for bending.

8. Find the adjusted allowable shear stress:

From Table A-3.7, the tabular allowable shear stress, $F_v = 140$ psi.

From Table A-3.8, find all relevant adjustments: $C_M = 1.0$; $C_D = 1.0$.

The adjusted allowable shear stress, $F'_v = 140(1.0)(1.0) = 140$ psi.

9. From Equation 8.10, compute the required area, $A_{req} = 1.5V/F'_v = 1.5(5336)/140 = 57.2$ in².

10. From Table A-4.1, check the actual area of a 14×20 cross section: $A_{actual} = 263.3$ in². Since $A_{actual} = 263.3$ in² $\geq A_{req} = 57.2$ in², the section is OK for shear.

11. From Table A-8.1, find the allowable total-load deflection for a floor beam: $\Delta_{allow} = \text{span}/240 = 24(12)/240 = 1.2$ in.; and the allowable live-load deflection for a floor joist: $\Delta_{allow} = \text{span}/360 = 24(12)/360 = 0.8$ in.

12. From Table A-8.2, check the actual *total-load* deflection: $\Delta = CPL^3/(EI)$, where:

$C = 61.34$.

$P = (46.7 + 20)(10 \times 8) = 5336$ lb.

$L = 24$ ft.

$E = 1,100,000$ psi (from Table A-3.9).

$I = 8342$ in⁴ (from Table A-4.1).

$\Delta = 61.34(5336)(24^3)/(1,100,000 \times 8342) = 0.49$ in.

Since $\Delta_{actual} = 0.49$ in. $\leq \Delta_{allow} = 1.2$ in., the girder is OK for total-load deflection.

13. From Table A-8.2, check the actual *live-load* deflection: $\Delta = CPL^3/(EI)$, where:

$C = 61.34$.

$P = 46.7(10 \times 8) = 3736$ lb. (Use live load only!)

$L = 24$ ft.

$E = 1,100,000$ psi (from Table A-3.9).

$I = 8342$ in⁴ (from Table A-4.1).

$\Delta = 61.34(3736)(24^3)/(1,100,000 \times 8342) = 0.35$ in.

Since $\Delta_{actual} = 0.35$ in. $\leq \Delta_{allow} = 0.8$ in., the girder is OK for live-load deflection.

14. **Conclusion:** The 14×20 is OK for bending, shear, and deflection. Therefore, it is acceptable.

Example 8.3 Design wood beam, glulam**Problem definition**

Design a 32ft-long glulam roof girder of stress class 20F-1.5E for the one-story industrial building shown in the framing plan (Figure 8.17). Assume a snow load, $S = 30$ psf, and a dead load, $D = 20$ psf. Use a beam width of $8\frac{3}{4}$ in., with $1\frac{1}{2}$ -in. laminations (i.e., assume that “Western Species” will be used). Beams framing into the girder provide lateral bracing at the quarter points. Use snow load only in computing “live-load” deflection, and assume that the deflection criteria will be based on a roof structure with no ceiling.

Solution overview

Find loads; begin iterative design process by assuming unknown adjustments to allowable stresses; then check bending stress (required section modulus), shear stress (required cross-sectional area) and deflection, as in analysis examples. Recompute if necessary with bigger (or smaller) cross section until bending, shear, and deflection are OK.

Problem solution

1. Find loads:

$S = 30$ psf (given).

$D = 20$ psf (given).

From Table A-5.1, it can be seen by examining the various load combinations that the most severe effects occur with the combination: dead load plus snow load, or $D + S$.


Using $D + S$, the total concentrated load, P , acts on a tributary area of $28 \times 8 = 224$ ft², so $P = (D + S)(\text{tributary area}) = (30 + 20)(224) = 11,200$ lb.

2. Create load, shear, and moment diagrams as shown in Figure 8.18 to determine critical (i.e., maximum) shear force and bending moment.
3. Find provisional adjusted allowable bending stress:

From Table A-3.5, part D , the design (tabular) value for bending is $F_b = 2000$ psi.

From Table A-3.6, the relevant adjustments are as follows: $C_r = 1.0$; $C_M = 1.0$; $C_D = 1.15$. C_L and C_V cannot yet be determined, since they depend on the actual cross-section size; for now, choose any reasonable value for the smaller of C_L or C_V ; for example, assume that the smaller of C_L or $C_V = 0.9$.

The adjusted value for allowable bending stress, $F'_b = 2000(1.15)(0.9) = 2070$ psi.

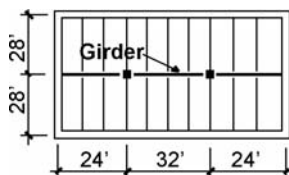**FIGURE 8.17**

Framing plan for Example 8.3

4. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 2,150,400/2070 = 1039 \text{ in}^3$.
5. Compute the required depth, d , based on the section modulus for a rectangular cross section, $S = bd^2/6 = 1039$ and $b = 8.75 \text{ in.}$ (given). In this case, $8.75d^2/6 = 1039$, from which $d = 26.7 \text{ in.}$ Rounding up to the first multiple of 1.5 in. (the depth of an individual lamination), we get: $d = 27 \text{ in.}$

Trial 1: 8¾-in. × 27-in. cross section

1. Find allowable bending stress: as before, $F_b = 2000 \text{ psi.}$
2. Find adjustments to allowable bending stress (Table A-3.6):

$$C_r = 1.0.$$

$$C_M = 1.0.$$

$$C_D = 1.15.$$

We still need to determine the smaller of C_L or C_V :

$$C_V = (21/32)^{1/10}(12/27)^{1/10}(5.125/8.75)^{1/10} = 0.84.$$

$$C_L = A - (A^2 - B)^{0.5} \text{ where:}$$

$$I_e = 1.54I_u = (1.54)(8 \times 12) = 148 \text{ in.}$$

$$E'_{min} = 780,000 \text{ psi, from Table A-3.9, parts B and C.}$$

$$b = 8.75 \text{ in.; } d = 27 \text{ in.}$$

$$F'_b = F_b C_D = 2000(1.15) = 2300 \text{ psi.}$$

$$F_{bE} = 1.20(8.75^2)(780,000)/(148 \times 27) = 17,934.$$

$$A = (1 + 17,934/2300)/1.9 = 4.63.$$

$$B = (17,934/2300)/0.95 = 8.21.$$

$$C_L = A - (A^2 - B)^{0.5} = 4.63 - (4.63^2 - 8.21)^{0.5} = 0.99.$$

Since $C_V = 0.84 < C_L = 0.99$, use C_V only.

3. The adjusted design value for bending is $F'_b = F_b C_V = 2300(0.84) = 1932 \text{ psi.}$
4. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 2,150,400/1932 = 1113 \text{ in}^3$.
5. Check that actual section modulus is greater or equal to the required section modulus: actual $S_x = bd^2/6 = 8.75(27)^2/6 = 1063 \text{ in}^3$; since actual $S_x = 1063 \text{ in}^3 < \text{required } S_x = 1113 \text{ in}^3$, the section is not OK for bending. Try next larger section (increase depth, not width!).

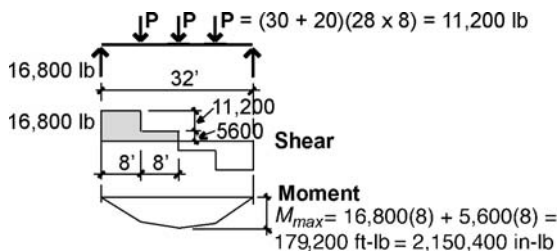


FIGURE 8.18

Load, shear, and moment diagrams for Example 8.3




FIGURE 8.19

Glued laminated cross section corresponding to trial 2 for Example 8.3

Trial 2: 8¾-in. × 28½-in. cross section (Figure 8.19)

1. Find allowable bending stress: as before, $F_b = 2000$ psi.

2. Find adjustments to allowable bending stress (Table A-3.6):

$$C_r = 1.0.$$

$$C_M = 1.0.$$

$$C_D = 1.15.$$

We still need to determine the smaller of C_L or C_V :

$$C_V = (21/32)^{1/10}(12/28.5)^{1/10}(5.125/8.75)^{1/10} = 0.83.$$

$$C_L = A - (A^2 - B)^{0.5} \text{ where:}$$

$$I_e = 1.54I_u = (1.54)(8 \times 12) = 148 \text{ in.}$$

$$E'_{min} = 780,000 \text{ psi, from Table A-3.9, parts B and C.}$$

$$b = 8.75 \text{ in.; } d = 28.5 \text{ in.}$$

$$F_b^* = F_b C_D = 2000(1.15) = 2300 \text{ psi.}$$

$$F_{bE} = 1.20(8.75^2)(780,000)/(148 \times 28.5) = 16,990.$$

$$A = (1 + 16,990/2300)/1.9 = 4.41.$$

$$B = (16,990/2300)/0.95 = 7.78.$$

$$C_L = A - (A^2 - B)^{0.5} = 4.41 - (4.41^2 - 7.78)^{0.5} = 0.99.$$

Since $C_V = 0.83 < C_L = 0.99$, use C_V only.

3. The adjusted design value for bending is $F'_b = (F_b^*)(C_V) = 2300(0.83) = 1909$ psi.
4. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 2,150,400/1909 = 1126 \text{ in}^3$.
5. Check that actual section modulus is greater or equal to required section modulus: actual $S_x = bd^2/6 = 8.75(28.5)^2/6 = 1185 \text{ in}^3$; since actual $S_x = 1185 \text{ in}^3 < \text{required } S_x = 1126 \text{ in}^3$, the section is OK for bending.
6. Find adjusted allowable shear stress:

From Table A-3.7, part C, the design value for shear, $F_v = 210$ psi.

From Table A-3.8, the relevant adjustments are as follows: $C_M = 1.0$; $C_D = 1.15$.

The adjusted allowable stress for shear, $F'_v = 210(1.15) = 241.5$ psi.
7. Based on Equation 8.10, the required cross-sectional area to resist shear, $A_{req} = 1.5V/F'_v = 1.5(16,800)/241.5 = 104.3 \text{ in}^2$.
8. Check actual cross-sectional area $= 8.75 \times 28.5 = 249.4 \text{ in}^2$; since $A_{actual} = 249.4 \text{ in}^2 \geq A_{req} = 104.3 \text{ in}^2$, section is OK for shear.

9. From Table A-8.1, the allowable total load deflection for a roof with no ceiling, $\Delta_{allow} = \text{span}/120 = 32(12)/120 = 3.20\text{ in.}$; and the allowable (snow load) deflection for a roof with no ceiling, $\Delta_{allow} = \text{span}/180 = 32(12)/180 = 2.13\text{ in.}$
10. From Table A-8.2, the actual *total-load* deflection is $\Delta = CPL^3/(EI)$, where:
 $C = 85.54$.
 $P = (S + D)(\text{tributary area}) = (30 + 20)(28 \times 8) = 11,200\text{ lb.}$
 $L = 32\text{ ft.}$
 $E' = 1,500,000\text{ psi}$, from Table A-3.9, parts A and C. The “average” adjusted modulus of elasticity, E' , is used for deflection calculations, whereas the adjusted minimum modulus of elasticity, E'_{min} , is used in buckling or stability calculations.
 $I = bd^3/12 = (8.75)(28.5^3)/12 = 16,879.6\text{ in}^4$.
11. $\Delta_{actual} = 85.54(11,200)(32^3)/(1,500,000 \times 16,880) = 1.24\text{ in.}$ Since $\Delta_{actual} = 1.24\text{ in.} \leq \Delta_{allow} = 3.20\text{ in.}$, the beam is OK for total-load deflection.
12. From Table A-8.2, the actual *snow-load* deflection is $\Delta = CPL^3/(EI)$, where:
 $C = 85.54$.
 $P = (S)(\text{tributary area}) = (30)(28 \times 8) = 6720\text{ lb.}$ (Use snow load only!)
 $L = 32\text{ ft.}$
 $E' = 1,500,000\text{ psi}$, from Table A-3.9 (parts A and C). The “average” adjusted modulus of elasticity, E' , is used for deflection calculations, whereas the adjusted minimum modulus of elasticity, E'_{min} , is used in buckling or stability calculations.
 $I = bd^3/12 = (8.75)(28.5^3)/12 = 16,880\text{ in}^4$.
13. $\Delta_{actual} = 85.54(6720)(32^3)/(1,500,000 \times 16,880) = 0.74\text{ in.}$ Since $\Delta_{actual} = 0.74\text{ in.} \leq \Delta_{allow} = 2.13\text{ in.}$, the beam is OK for snow-load deflection.
14. **Conclusion:** The $8\frac{3}{4}$ -in. $\times$ $28\frac{1}{2}$ -in. section is OK for bending, shear, and deflection. Therefore, it is acceptable.

Example 8.4 Design wood beam, dimension lumber

Problem definition

Design a Douglas Fir-Larch (North) No.1/No.2 girder using $4\times$ lumber to support a residential live load as shown in Figure 8.20. Assume 10.5 psf for dead load. Loads on the girder can be modeled as being uniformly distributed since joists are spaced closely together.

Solution overview

Find loads; find known adjustments to allowable bending stress; use Table A-8.3 to directly compute lightest cross section for bending; check for shear and deflection. Alternatively, begin iterative design process by assuming unknown adjustments to allowable stresses; then check bending stress (required section modulus), shear stress (required cross-sectional area), and deflection, as in analysis examples. Recompute if necessary with bigger (or smaller) cross section until bending, shear, and deflection are OK.

Problem solution**1. Find loads:**

From Table A-2.2, the live load for a residential occupancy, $L = 40$ psf.

The dead load, $D = 10.5$ psf (given).


The total distributed load, $w = (D + L)(\text{tributary area}) = (10.5 + 40)(6) = 303$ lb/ft. Live load reduction does not apply since K_{LL} times the tributary area is less than 400 ft^2 . The tributary area for w is measured along one linear foot of the girder, in the direction of its span, as shown in the framing plan (Figure 8.20).

2. Create load, shear, and moment diagrams as shown in Figure 8.21 to determine critical (i.e., maximum) shear force and bending moment.**3. Find partially adjusted allowable bending stress:**

From Table A-3.5, the design (tabular) value for bending stress, $F_b = 850$ psi.

From Table A-3.6, the following adjustments can be determined: $C_r = 1.0$; $C_M = 1.0$; $C_D = 1.0$; $C_L = 1.0$ (assume continuous bracing by floor deck). The size factor, C_F , cannot be determined at this point.

The adjusted value for bending stress, with all adjustments known except for C_F , is $F'_b = 850C_F$ psi.

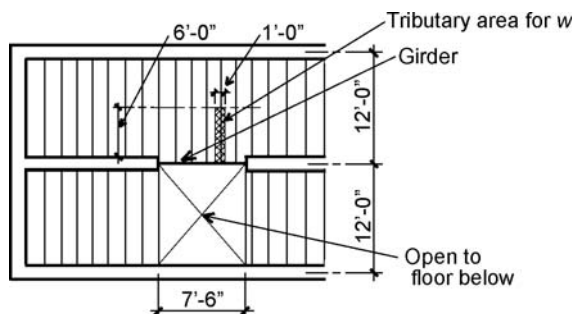4. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = M/(850C_F) = 25,566/(850C_F)$. This can be rewritten as $C_F S_{req} = M/F'_b = M/(850) = 25,566/(850) = 30.08 \text{ in}^3$.**5. Rather than doing several "trial" designs, it is possible to find the correct cross section for bending directly, by using a table of combined size factors (C_F) and section moduli (S_x) with the lightest values highlighted. In this method, the adjusted allowable stress is computed *without* the size factor, since C_F is combined with the section modulus in the table. Table A-8.3 indicates directly that the lightest 4×8 section for bending is a 4×8 , based on a combined $C_F S_x$ value of 32.19 in^3 , which is larger than the required value of $C_F S_{req} = 30.08 \text{ in}^3$ found in Step 4. Table A-8.3 also shows that a 2×12 is actually the lightest acceptable section for bending, since it is the first bold-faced entry with a value of $C_F S_x$ greater than or equal to 30.08 in^3 . However, in this problem, a 4×8 section was called for, so we provisionally select the 4×8 section.****FIGURE 8.20**

Framing plan for Example 8.4

6. Find adjusted allowable shear stress:
 From Table A-3.7, the design (tabular) allowable shear stress $F_v = 180$ psi.
 From Table A-3.8, there are no adjustments for shear stress; that is: $C_M = 1.0$; $C_D = 1.0$.
 The adjusted value for allowable shear stress, $F'_v = 180$ psi.
7. Based on Equation 8.10, the required cross-sectional area to resist shear, $A_{req} = 1.5V/F'_v = 1.5(1136)/180 = 9.47 \text{ in}^2$.
8. From Table A-4.1, we can check the actual area of the cross section, $A_{actual} = 25.38 \text{ in}^2$; since $A_{actual} = 25.38 \text{ in}^2 \geq A_{req} = 9.47 \text{ in}^2$, the section is OK for shear.
9. From Table A-8.1, find the allowable total-load deflection for a floor beam: $\Delta_{allow} = \text{span}/240 = 12(7.5)/240 = 0.375 \text{ in.}$; and the allowable live-load deflection for a floor beam: $\Delta_{allow} = \text{span}/360 = 12(7.5)/360 = 0.25 \text{ in.}$
10. From Table A-8.2, we can check the actual *total-load* deflection: $\Delta_{actual} = CPL^3/(EI)$, where:
 $C = 22.46$.
 $P = wL = (40 + 10.5)(6)(7.5) = 2272.5 \text{ lb.}$
 $L = 7.5 \text{ ft.}$
 $E = E' = 1,600,000 \text{ psi}$ (from Table A-3.9).
 $I = 111.1 \text{ in}^4$ (directly from Table A-4.1, or from the equation, $I = bd^3/12$).
11. $\Delta_{actual} = 22.46(2272.5)(7.5^3)/(1,600,000 \times 111.1) = 0.12 \text{ in.}$ Since $\Delta_{actual} = 0.12 \text{ in.} \leq \Delta_{allow} = 0.375 \text{ in.}$, the beam is OK for total-load deflection.
12. From Table A-8.2, we can check the actual *live-load* deflection: $\Delta_{actual} = CPL^3/(EI)$, where:
 $C = 22.46$.
 $P = wL = (40 \times 6)(7.5) = 1800 \text{ lb.}$ (Use live load only!)
 $L = 7.5 \text{ ft.}$
 $E = E' = 1,600,000 \text{ psi}$ (from Table A-3.9).
 $I = 111.1 \text{ in}^4$ (directly from Table A-4.1, or from the equation, $I = bd^3/12$).
13. $\Delta_{actual} = 22.46(1800)(7.5^3)/(1,600,000 \times 111.1) = 0.096 \text{ in.}$ Since $\Delta_{actual} = 0.096 \text{ in.} \leq \Delta_{allow} = 0.25 \text{ in.}$, the beam is OK for deflection.
14. **Conclusion:** The 4×8 section is OK for bending, shear, and deflection. Therefore, it is acceptable.

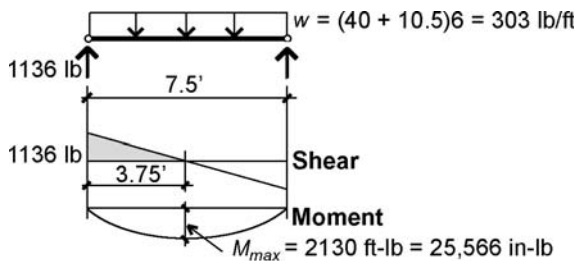


FIGURE 8.21

Load, shear, and moment diagrams for Example 8.4

Alternate method

It is also possible to find the lightest 4× section using an iterative design process without Table A-8.3. Using this method, the size factor, C_F , would need to be assumed and then checked after a provisional cross section is found, as follows:

1. Assuming a size factor, $C_F = 1.0$, the adjusted allowable bending stress becomes $F'_b = 850(1.0) = 850$ psi. Then, from Equation 8.5, we compute the required section modulus: $S_{req} = M/F'_b = M/850 = 25,566/850 = 30.08 \text{ in}^3$.
2. From Table A-4.1, we provisionally select a 4×10 with actual $S_x = 32.38 \text{ in}^3$.

Trial 1: 4 × 10 cross section

1. Find actual adjusted allowable bending stress: the design (tabular) value remains $F_b = 850$ psi; the actual size factor for a 4×10 is $C_F = 1.20$, so the adjusted allowable bending stress, $F'_b = 850(1.20) = 1020$ psi. Since this value for a 4×10 is greater than the allowable stress initially assumed, the 4×10 must be OK for bending. But is it the *lightest* acceptable choice? Because the size factor actually increases for smaller sections, we must try the next smaller size.

Trial 2: 4 × 8 cross section

1. Find actual adjusted allowable bending stress for the 4×8 : the size factor, $C_F = 1.3$, so the adjusted allowable bending stress, $F'_b = 850(1.3) = 1105$ psi.
2. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 25,566/1105 = 23.14 \text{ in}^3$.
3. From Table A-4.1, the actual section modulus for a 4×8 , $S_x = 30.66 \text{ in}^3$; since actual $S_x = 30.66 \text{ in}^3 \geq S_{req} = 23.14 \text{ in}^3$, the 4×8 section is OK for bending.
4. Shear and deflection for the 4×8 are checked as shown earlier, using the first method, and are both OK.
5. *Conclusion:* The 4×8 section is OK for bending, shear, and deflection. Therefore, it is acceptable. But what about a 4×6 , with a size factor just as large?

Trial 3: 4 × 6 cross section

1. Find actual adjusted allowable bending stress for the 4×6 : the size factor, $C_F = 1.3$, so the adjusted allowable bending stress, $F'_b = 850(1.3) = 1105$ psi.
2. From Equation 8.5, compute the required section modulus: $S_{req} = M/F'_b = 25,566/1105 = 23.14 \text{ in}^3$.
3. From Table A-4.1, the actual section modulus for a 4×6 , $S_x = 17.65 \text{ in}^3$; since actual $S_x = 17.65 \text{ in}^3 < S_{req} = 23.14 \text{ in}^3$, the 4×6 section is not OK for bending.
4. *Conclusion:* Since the 4×6 is not OK, select the 4×8 section. ■

STEEL

The design of steel wide-flange beams using the “allowable strength design” method is quite similar to the procedures used to design timber beams. Cross sections are selected based on their strength in bending, and then checked for shear and deflection.

Bending of laterally braced and compact beams

Unlike wood beams, however, steel beams are designed based on their “available” strength, rather than on the more conventional notion of an “allowable” stress. Whereas the strength of a wood beam corresponds to its outer fibers reaching a failure stress, steel beams do not fail when their outer fibers first begin to yield at the stress, F_y . A steel cross section is able to carry increased loads beyond the so-called *elastic* moment, shown in Figure 8.22a, up until the entire cross section has yielded, as shown in Figure 8.22b. The plastic section modulus corresponds to this so-called *plastic* moment, reached when the strain at a cross section is of sufficient magnitude so that virtually the entire section has yielded.

Previously, steel used an “allowable stress” method based on a limit state corresponding to the elastic moment; if the plastic moment was always stronger than the elastic moment to the same extent for all cross sections, one could simply adjust the factor of safety for allowable *strength* (plastic moment) design so that the method corresponded precisely to allowable *stress* (elastic moment) design. However, it can be shown that the extra margin of safety gained by moving beyond the elastic, to the plastic moment (i.e., from the condition of Figure 8.22a to Figure 8.22b), is not the same for all cross sections, so that allowable stress design for steel does not provide a consistent margin of safety against the limit state of complete yielding.

For wide-flange (I-shaped) sections, the extremes can be represented by a hypothetical section with no web (i.e., consisting entirely of flanges of infinite density, or no thickness, as shown in Figures 8.22c and 8.22d), and, at the other extreme, a section whose flanges merge together at the neutral axis (i.e., a rectangular section, as shown in Figures 8.22g and 8.22h). In the first case, it is clear that the elastic moment and plastic moment coincide, and the so-called shape factor, defining the ratio of plastic to elastic section modulus, Z_x/S_x , equals 1.0. In the second case, the elastic section modulus can be computed by examining the rotational equilibrium of the force resultants shown in Figure 8.22g. Since the moment arm between them equals $2/3b$, and the resultant force, C , equals $(1/2)(b/2)(b)(F_y)$, the moment, M , equals $2/3b(1/2)(b/2)(b)(F_y)$ and, solving for the section modulus, $S_x = M/F_y$, we get $S_x = bb^2/6$. Performing the same equilibrium calculation on Figure 8.22h (with a moment arm equal to $b/2$), and solving for the plastic section modulus, $Z_x = M/F_y$, we get $Z_x = bb^2/4$. The shape factor in this case is $Z_x/S_x = 1.5$.

Clearly, all I-shaped sections must have a shape factor between these two extremes, that is, between 1.0 and 1.5. The shape factor for a typical W-shape (W30 × 90), shown in Figures 8.22e and 8.22f, can be determined in the same manner, abstracting from the complexities of the actual shape by considering only perfectly rectangular flange and web areas. Using the dimensions shown, and performing the same equilibrium calculations as in the previous cases, we get $S_x = 240\text{ in}^3$ and $Z_x = 277\text{ in}^3$, so the shape factor, $Z_x/S_x = 277/240 = 1.15$. The actual values for elastic and plastic section modulus are found in Table A-4.3, and it can be seen that the approximate calculations are both conservative and reasonably accurate: the correct values are actually $S_x = 245\text{ in}^3$ and $Z_x = 283\text{ in}^3$, so the real shape factor, $Z_x/S_x = 283/245 = 1.16$.

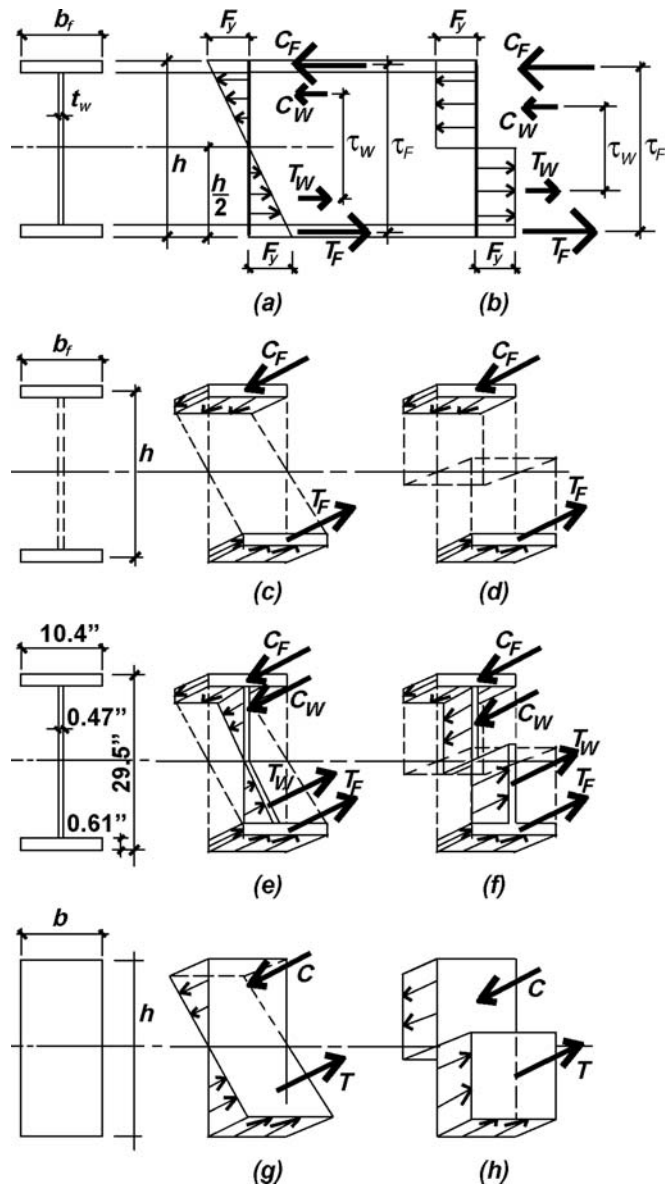


FIGURE 8.22

Bending stresses acting on steel wide-flange (I-shaped) cross section corresponding to the (a) elastic moment and (b) plastic moment, with three examples: (c) and (d) illustrate elastic and plastic moments for a hypothetical section with all its area at the extreme fibers, (e) and (f) illustrate elastic and plastic moments for a typical W30 × 90 section, while (g) and (h) illustrate elastic and plastic moments for a rectangular section

The equation for plastic section modulus, $Z_x = M/F_y$, presumes that the cross section is able to reach a state of complete yielding before one of two types of buckling occurs: either lateral-torsional buckling within any unbraced segment along the length of the span or local flange or web buckling. Therefore, to use this equation in design, based on the maximum moment encountered, the beam must be protected from both of these buckling modes—in the first case by limiting the unbraced length and, in the second case, by regulating the proportions of the beam flange and web (i.e., using a so-called compact section). Then, rewriting this equation in the form most useful for steel design, we get:

$$Z_{req} = \Omega M_{max}/F_y \quad (8.12)$$

where M_{max} = the maximum bending moment (in-kips), F_y is the yield stress of the steel, and Ω is a safety factor equal to 1.67 for bending.

We found earlier that the shape factor for a W30 × 90 section equals 1.16. By looking at the ratio of plastic to elastic section modulus for all wide-flange shapes, it can be seen that these shape factors fall between 1.098 (for a W14 × 90), and 1.297 (for a W14 × 730). One could therefore conservatively create a safety factor for elastic allowable *stress* design by assuming a shape factor of 1.10 and by multiplying this value by the safety factor for allowable *strength* design, $1/\Omega = 1/1.67 = 0.60$ (inverted to be consistent with the conventions for allowable stress safety factors). Equation 8.12 would then become $S_{req} = 1.1(0.60)M_{max}/F_y = 0.66M_{max}/F_y$. This, in fact, is the design equation for what used to be called “allowable stress design” in steel. It may still be used, but it will give slightly conservative values compared with the available stress method using the plastic section modulus, Z_x .

Choosing the lightest (i.e., most economical) laterally braced, compact section is facilitated by the use of tables in which steel cross sections are ranked, first in terms of plastic section modulus and then by least weight. Table A-8.4 is an example of such a list, in which only the lightest sections appear. Thus, a W30 × 191 (with a plastic section modulus of 675 in³) is not listed, since a lighter section, W40 × 167, has a higher plastic section modulus (693 in³).

Bending of laterally unsupported or noncompact beams

When the compression flange of a beam is not continuously braced, lateral-torsional buckling can reduce the available bending moment below the value of M_p/Ω assumed earlier for laterally braced beams. How much this stress is reduced depends on whether the beam buckles before or after the cross section begins to yield and how bending stresses vary over the beam's unbraced length. Figure 8.8 shows several possible stress stages for a cross-sectional shape as the bending moment increases. At Figure 8.8c, the outer fibers begin to yield, and the *elastic moment*, M_y , is reached. At Figure 8.8d and Figure 8.8e, yielding progresses further into the cross section, as the moment increases. Finally, at Figure 8.8f, the entire cross section has yielded at the maximum *plastic moment* that the section can sustain.

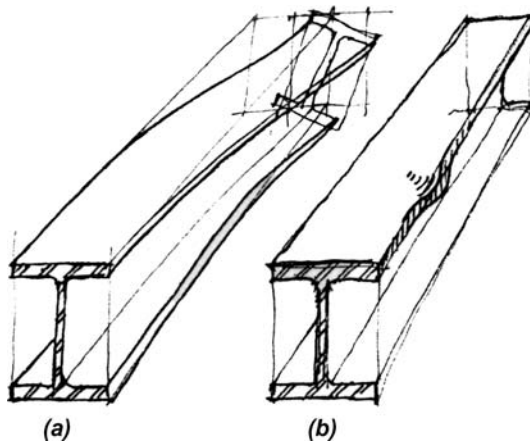


FIGURE 8.23

Two modes of buckling limiting the strength of a wide-flange (I-shaped) beam: (a) lateral-torsional buckling and (b) local flange buckling

Being able to resist the full plastic moment represents an extra margin of safety: if a beam can develop this plastic moment without buckling, the maximum available bending moment of M_p/Ω is used, as shown in Equation 8.12. In addition to lateral-torsional buckling (Figure 8.23a), various types of local flange and web buckling must also be prevented from occurring before the plastic moment is reached (Figure 8.23b). Local buckling is prevented by limiting the ratio of flange width to flange thickness, as well as web width to web thickness. Sections proportioned so that local buckling will not occur are called *compact sections*; these sections must be used to qualify for the full available moment of M_p/Ω . As it turns out, all but one of the wide-flange shapes listed in Table A-4.3 is a compact section when made from A36 steel (the exception being $W6 \times 15$). For 50-ksi steel, all but 10 ($W6 \times 8.5$, $W6 \times 9$, $W6 \times 15$, $W8 \times 10$, $W8 \times 31$, $W10 \times 12$, $W12 \times 65$, $W14 \times 90$, $W14 \times 99$, and $W21 \times 48$) are compact.

For sections that are compact and laterally braced, Equation 8.12 applies, and the full strength of the beam is utilized. However, as shown in Figure 8.24, this available strength must be reduced if either local flange buckling (where the section is not compact) or lateral-torsional buckling (where the section is not adequately braced) occurs before the plastic moment is reached.

Lateral-torsional buckling

For beams with an unbraced length, L_b , that falls within the “middle zone” illustrated in Figure 8.24a (i.e., where the onset of buckling occurs before a full plastic moment, but after the elastic moment, is reached), the nominal bending strength is linearly reduced from the full plastic moment, $M_p = F_y Z_x$, to 70% of the elastic moment, or $0.7F_y S_x$. The two boundaries (unbraced lengths) that bracket this

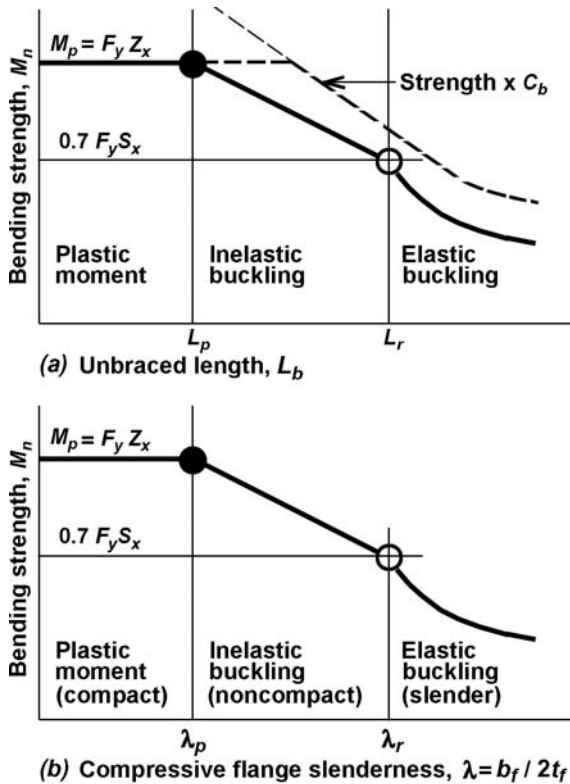


FIGURE 8.24

Influence of lateral-torsional buckling and flange slenderness on available moment: three zones are defined for (a) lateral torsional buckling, with the boundaries established by the unbraced length, L_p (the greatest unbraced length where the section can reach a plastic moment without lateral torsional buckling) and L_r (the greatest unbraced length where the section will buckle inelastically before reaching the plastic moment); and for (b) flange slenderness, with the boundaries established by the ratio of half the flange width to flange thickness, $\lambda = b_f / (2t_f)$, set equal to λ_p (the greatest flange slenderness where the section can reach a plastic moment without local flange buckling) and λ_r (the greatest flange slenderness where the flange will buckle locally in an inelastic manner before reaching the plastic moment)

condition of *inelastic* lateral-torsional buckling are called L_p and L_r . For an unbraced length, L_b , less than L_p , lateral-torsional buckling is not an issue, as the full plastic moment can be reached. For an unbraced length greater than L_r , the onset of lateral-torsional buckling is characterized entirely by *elastic* behavior, and the nominal bending strength must be reduced even further. These boundaries are defined as follows: L_p is set at $1.76r_y(E/F_y)^{0.5}$, where E is the modulus of elasticity (29,000 ksi for all steel), F_y is the yield stress (50 ksi for A992 steel and 36 ksi for A36 steel), and r_y is the minimum radius of gyration about the y -axis (see Table A-4.3 for

wide-flange shapes). The other boundary, L_r , can be conservatively approximated as $\pi r_{ts}[E/(0.7F_y)]^{0.5}$, where r_{ts} may itself be approximated as the radius of gyration for the compression flange and part of the web; that is, $r_{ts} = b_f/[12 + 2bt_w/(b_f t_f)]^{0.5}$. In this equation, b_f and t_f are the flange width and thickness, respectively, and b is the length of the “straight” part of the web (i.e., the clear distance between flanges, minus the radius at the web-flange intersection).

However, all these equations are based on the assumption that the beam is subject to a uniform bending moment along its entire length; where the moment varies, as is almost always the case, this assumption is overly conservative, since lateral-torsional buckling is less likely to be triggered where bending stresses are not entirely at their maximum value along the whole length of an unbraced segment. For this reason, a coefficient, C_b , should be applied to the available strength of *each* unbraced segment of the beam, based on the distribution and magnitude of bending moments along that segment’s length. This “lateral-torsional buckling modifier” is defined as follows for doubly symmetric bending elements such as wide-flange beams:

$$C_b = \frac{12.5M_{max}}{2.5M_{max} + 3M_A + 4M_B + 3M_C} \leq 3.0 \quad (8.13)$$

where M_{max} is the greatest moment within the unbraced segment; and M_A , M_B , and M_C are the bending moments at the quarter point, midpoint, and three-quarters point, respectively, along the segment. Where a segment is not braced at its endpoint (e.g., where the end of a cantilevered beam is not braced), C_b should be taken as 1.0. Of course, C_b is not used where a beam is laterally braced and, in any case, can never increase the nominal bending strength beyond the plastic moment, M_p , as shown in Figure 8.24a.

Local flange buckling

Compact sections are proportioned so that neither the flange nor the web will buckle locally before the onset of a plastic moment. Since all wide-flange *webs* meet the standards for compact sections, only the *flange* slenderness, defined as $\lambda = b_f/(2t_f)$, is at issue (where b_f and t_f are the flange width and thickness, respectively). In much the same way that boundaries are established for unbraced length that define the reduction in the bending strength due to lateral-torsional buckling (Figure 8.24a), similar boundaries are established for flange slenderness, with similar consequences for beam strength (Figure 8.24b). The limit for compact behavior—that is, the maximum flange slenderness for which beams are still able to reach the plastic moment without local flange buckling—is defined by $\lambda_p = 0.38(E/F_y)^{0.5}$. The other boundary (i.e., the maximum flange slenderness for which inelastic behavior characterizes the onset of local flange buckling) is defined by $\lambda_r = 1.0(E/F_y)^{0.5}$. In these equations, E is the modulus of elasticity of steel (29,000 ksi) and F_y is the material’s yield stress (50 ksi for A992 steel and 36 ksi for A36 steel).

As with reductions for lateral-torsional buckling, the nominal bending strength begins with the plastic moment, $M_p = F_y Z_x$, for compact sections and is linearly

reduced to 70% of the elastic moment, or $0.7F_y S_x$, between λ_p and λ_r , with further reductions beyond λ_r .

Where a beam is both noncompact and laterally unbraced, both criteria illustrated in Figure 8.24 are tested, and the smaller capacity governs. For beams that are both compact and laterally braced, Table A-8.4 can be used to select the lightest W-shape for bending. For A992 wide-flange beams that are not adequately braced laterally (i.e., where $L_b > L_p$), Table A-8.5 can be used to select the lightest beam. Of course, by setting the unbraced length to zero, Table A-8.5 can be used for laterally braced beams as well.

Shear

Once a selection is made based on bending stress, the section is then checked for shear and deflection. The nominal shear strength, V_n , equals $0.6F_y A_w$, where F_y is the yield stress of the steel and A_w is the web area (equal, for a W-shape, to the beam depth times the web thickness, $d \times t_w$). For most cross sections, the safety factor can be taken as $\Omega = 1.5$, so that the available strength is $V_n/\Omega = 0.6/\Omega(F_y A_w) = 0.4F_y A_w$. This can be converted into an “allowable stress” equation by defining the allowable shear stress, $F_v = 0.4F_y$, and solving for the required web area for a given shear force, V :


$$\text{required } A_w = V/F_v \quad (8.14)$$

For a small group of wide-flange beams with slender webs, the safety factor for shear is increased from 1.5 to 1.67, and so the allowable shear stress becomes $F_v = (0.6/1.67)F_y = 0.36F_y$. These sections are listed in Table A-4.3 (see Note 3).

Block shear

Where the top flange of a steel beam is coped (so that it may be fastened to the web of a girder while keeping the top surfaces of girder and beam flanges aligned), a mode of failure combining both shear and tension stresses in the beam web must be checked, with the shear and tension failure planes assumed to occur at the surface defined by the bolt centerline, as shown in Figure 8.25.

The nominal capacity of such a connection is found by adding the capacity of the net shear area subject to rupture (or the gross shear area subject to yielding) to the capacity of the net tension area subject to rupture. Where both net areas are subject to rupture, the capacity is defined as $R_n = 0.6F_u A_{nv} + U_{bs}F_u A_{nt}$. Where yielding governs the failure of the shear area, the capacity is defined as $R_n = 0.6F_y A_{gv} + U_{bs}F_u A_{nt}$. The smaller of these two values determines the capacity of the connection for resisting block shear. In these equations, F_u is the minimum tension strength of the material (equal to 58 ksi for A36 steel and 65 ksi for A992 steel); A_{nv} and A_{nt} are the net areas for shear and tension, respectively; A_{gv} is the gross shear area; and U_{bs} equals 1.0 for conditions that correspond to uniform tension stress, as in the coped beam with a single line of bolts shown in Figure 8.25a, while U_{bs} equals 0.5 for conditions that lead to a triangular (nonuniform) tension stress, as in the coped beam

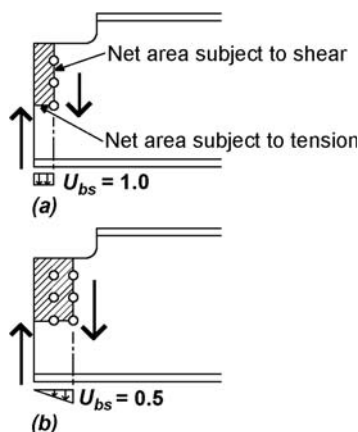**FIGURE 8.25**

Block shear at coped beam with (a) coefficient $U_{bs} = 1.0$ where tension stress is uniform (single line of bolts) and (b) $U_{bs} = 0.5$ where tension stress has a triangular distribution (double line of bolts)

with two lines of bolts shown in Figure 8.25b. The available strength is then found by dividing the nominal capacity by the safety factor, $\Omega = 2.00$.

It is also possible that a mode of shear failure alone, with no tension component, could govern the connection design. In such a case, both yielding on the gross area of the cross section and rupture on the net area need to be checked. For yielding, the nominal capacity, $R_n = 0.60F_yA_{gv}$, and the available strength, ΩR_n , is determined using a safety factor, $\Omega = 1.50$ (*not* $\Omega = 2.00$). For rupture on the net area, $R_n = 0.60F_uA_{nv}$, and the available strength, ΩR_n , is determined using a safety factor, $\Omega = 2.00$. All the parameters are as defined earlier for block shear. The lower safety factor for yielding reflects the relative safety of a yielding mode of failure compared with the more sudden and catastrophic type of failure associated with rupture.


Example 8.5 Find capacity of beam web based on block shear

Problem definition

Find the capacity of a bolted double-angle connection to the web of a coped W18 $\times$ 86 wide-flange beam, considering only block shear in the web. Assume A992 ($F_y = 50$ ksi and $F_u = 65$ ksi) steel for the beam, and 3/4-in.-diameter bolts. The bolt spacing, $s = 3$ in., the vertical edge distance, $L_{ev} = 1.5$ in., and the horizontal edge distance, $L_{eh} = 1.5$ in. are defined in Figure 8.26.

Problem overview

Find the smaller of the capacities based on rupture and yielding of shear area, rupture of tension area, and bolt bearing on the web.

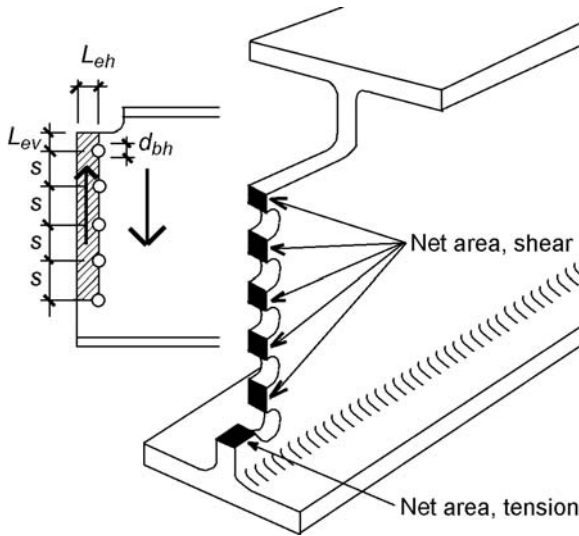**FIGURE 8.26**

Block shear in a coped beam for Example 8.5

Problem solution

1. Find capacity based on net areas subject to rupture. Lengths along net areas are found by subtracting the lengths of bolt hole diameters from the total (gross) dimension. The net area for shear, $A_{nv} = t_w(4s + L_{ev} - 4.5d_{bh}) = 0.480(4 \times 3 + 1.5 - 4.5 \times 0.875) = 4.59 \text{ in}^2$, where t_w is the web thickness (from Table A-4.3), s is the bolt spacing of 3 in., L_{ev} is the vertical edge distance of 1.5 in., and d_{bh} is the bolt hole diameter (found by adding 1/8 in. to the bolt diameter of 3/4 in.). The net area for tension, $A_{nt} = t_w(L_{eh} - 0.5d_{bh}) = 0.480(1.5 - 0.5 \times 0.875) = 0.51 \text{ in}^2$, where L_{eh} is the horizontal edge spacing and d_{bh} is the bolt hole diameter.

The capacity based on rupture of these net areas is defined as $R_n = 0.6F_uA_{nv} + U_{bs}F_uA_{nt}$, where $U_{bs} = 1.0$ for a single line of bolt holes. Using the material properties defined earlier, we get: $R_n = 0.6(65)(4.59) + (1.0)(65)(0.51) = 212.2 \text{ kips}$.

2. Find capacity based on gross area (yielding) for shear and net area (rupture) for tension. The gross area for shear, $A_{gv} = t_w(4s + L_{ev}) = 0.480(4 \times 3 + 1.5) = 6.48 \text{ in}^2$, where t_w is the web thickness (from Table A-4.3), s is the bolt spacing of 3 in., L_{ev} is the vertical edge distance of 1.5 in., and d_{bh} is the bolt hole diameter. The net area for tension, as in step 1, is 0.51 in^2 .

The capacity based on yielding of the shear area and rupture of the tension area is defined as $R_n = 0.6F_yA_{gv} + U_{bs}F_uA_{nt}$, where $U_{bs} = 1.0$ as before. Using the material properties defined above, we get $R_n = 0.6(50)(6.48) + (1.0)(65)(0.51) = 227.6 \text{ kips}$.

3. The governing capacity is the smaller value from steps 1 and 2: $R_n = 212.2 \text{ kips}$ based on rupture of the net areas.

Deflection

Deflection is based on the same criteria discussed earlier for wood beams and involves a comparison of an allowable deflection, typically set at $\text{span}/240$ for total loads and $\text{span}/360$ for live loads on floor beams, to the actual computed deflection. Allowable deflection guidelines can be found in Table A-8.1; actual deflections can be computed based on the coefficients in Table A-8.2.

Example 8.6 Design steel beam

Problem definition

Using A992 steel, design the typical beam and girder for the library stack area shown in Figure 8.27. Use the generic dead load for steel floor systems. Assume that the beams are continuously braced by the floor deck and that the girders are braced only by the beams framing into them.

Solution overview

Find loads; compute maximum bending moment and shear force; use appropriate tables to select beams for bending; then check for shear and deflection.

Problem solution

- Find loads:
From Table A-2.1, the dead load, $D = 47 \text{ psf}$.
From Table A-2.2, the live load, $L = 150 \text{ psf}$

Beam design

- Create load, shear, and moment diagrams as shown in Figure 8.28 to determine critical (i.e., maximum) shear force and bending moment. The total distributed load, $w = (\text{dead} + \text{live})(\text{tributary area for 1 linear foot}) = (47 + 150)(6) = 1182 \text{ lb/ft} = 1.18 \text{ kips/ft}$. Live load reduction would not apply even if the “influence” area was not less than 400 ft^2 , because

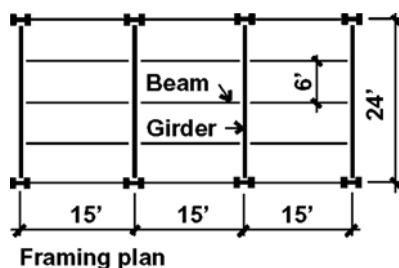


FIGURE 8.27

Framing plan for Example 8.6

of the library stack occupancy (i.e., the probability of full loading makes live load reduction a dangerous assumption).

2. Find allowable bending stress: since the beam is laterally braced by the floor deck and the cross section is assumed to be compact, use Equation 8.12 to find $Z_{req} = \Omega M_{max}/F_y = 1.67 M_{max}/F_y$. From Table A-3.12, $F_y = 50$ ksi for A992 steel, so $Z_{req} = 1.67(399)/50 = 13.33 \text{ in}^3$.
3. From Table A-8.4, select a $W12 \times 14$ with *actual* $Z_x = 17.4 \text{ in}^3 \geq Z_{req}$; this section is, by definition, OK for bending.
4. Check section for shear: from Table A-4.3, the actual web area, $A_w = d \times t_w = 11.9 \times 0.20 = 2.38 \text{ in}^2$.
5. From Equation 8.14, the required $A_w = V/F_v = 8.86/(0.36 \times 50) = 0.49 \text{ in}^2$ where, from Table A-3.13, the allowable shear stress, $F_v = 0.36 F_y$ (and not the usual value of $F_v = 0.40 F_y$) because the beam web is unusually slender. Beams requiring such reduced allowable shear stresses are noted in Table A-4.3. Since the actual web area is greater than the required web area, the beam is OK for shear.
6. From Table A-8.1, find the allowable total-load deflection for a floor beam: $\Delta_{allow} = \text{span}/240 = 12(15)/240 = 0.75 \text{ in.}$; and the allowable live-load deflection for a floor joist: $\Delta_{allow} = \text{span}/360 = 12(15)/360 = 0.5 \text{ in.}$
7. From Table A-8.2, the actual *total-load* deflection, $\Delta_{actual} = CPL^3/(EI)$, where:
 - $C = 22.46$.
 - $L = 15 \text{ ft}$.
 - $P = wL = (150 + 47)(6)(15) = 17,730 \text{ lb} = 17.73 \text{ kips}$.
 - $E = 29,000 \text{ ksi}$ (Table A-3.12, Note 1).
 - $I = 88.6 \text{ in}^4$ (Table A-4.3).
$$\Delta_{actual} = 22.46(17.73)(15^3)/(29,000 \times 88.6) = 0.523 \text{ in.}$$
 Since $\Delta_{actual} = 0.523 \text{ in.} \leq \Delta_{allow} = 0.75 \text{ in.}$, beam is OK for total-load deflection.
8. From Table A-8.2, the actual *live-load* deflection, $\Delta_{actual} = CPL^3/(EI)$, where:
 - $C = 22.46$.
 - $L = 15 \text{ ft}$.
 - $P = wL = (150 \times 6)15 = 13,500 \text{ lb} = 13.5 \text{ kips}$. (Use live load only!)
 - $E = 29,000 \text{ ksi}$ (Table A-3.12, Note 1).

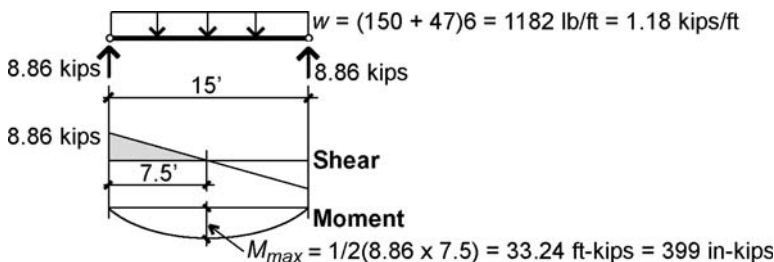


FIGURE 8.28

Load, shear, and moment diagrams for beam in Example 8.6

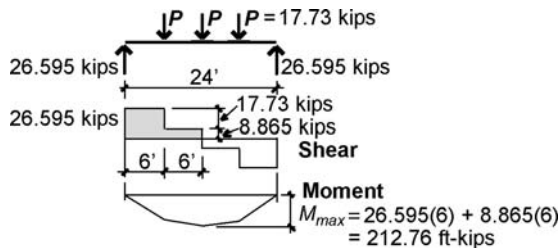


FIGURE 8.29

Load, shear, and moment diagrams for girder in Example 8.6

$$I = 88.6 \text{ in}^4 \text{ (Table A-4.3).}$$


$$\Delta_{\text{actual}} = 22.46(13.5)(15^3)/(29,000 \times 88.6) = 0.398 \text{ in.}$$

Since $\Delta_{\text{actual}} = 0.398 \text{ in.} \leq \Delta_{\text{allow}} = 0.5 \text{ in.}$, beam is OK for live-load deflection.

9. **Conclusion:** The W12 $\times$ 14 section is OK for bending, shear, and deflection. Therefore, it is acceptable.

Girder design

1. Create load, shear, and moment diagrams as shown in Figure 8.29 to determine the critical (i.e., maximum) shear force and bending moment. Each concentrated load is twice the typical beam reaction, or 17.73 kips. Alternatively, compute using tributary areas; that is, $P = (47 + 150)(15 \times 6) = 17,730 \text{ lb} = 17.73 \text{ kips}$. Live load reduction does not apply even though the “influence” area is greater than 400 ft^2 , because of the library stack occupancy (i.e., the probability of full loading makes live load reduction a dangerous assumption).
2. Find allowable bending stress: the girder is not continuously braced by the floor deck; rather, it is braced every 6 ft by the beams framing into it, so the unbraced length, $L_b = 6 \text{ ft}$. Use Table A-8.5 to directly find the lightest cross section for bending, based on $M_{\text{max}} = 212.76 \text{ ft-kips}$, $L_b = 6 \text{ ft}$, and assuming (conservatively) that the “lateral-torsional buckling modifier,” $C_b = 1.0$. Find the intersection of moment and unbraced length (follow the dotted lines shown in Figure 8.30) and then move up or to the right to the first solid line representing the available moment capacity of wide-flange beams. Select a W21 $\times$ 44.
3. Check section for shear: from Table A-4.3, the *actual* web area, $A_w = d \times t_w = 20.7 \times 0.35 = 7.25 \text{ in}^2$.
4. From Equation 8.14, the required $A_w = V/F_v = 26.595/(0.40 \times 50) = 1.33 \text{ in}^2$, where, from Table A-3.13, the allowable shear stress, $F_v = 0.40F_y$ (the usual value of $F_v = 0.40F_y$ can be used in this case). Since the actual web area is greater than the required web area, the beam is OK for shear.
5. From Table A-8.1, find the allowable total-load deflection for a floor beam: $\Delta_{\text{allow}} = \text{span}/240 = 12(24)/240 = 1.2 \text{ in.}$; and the allowable live-load deflection for a floor joist: $\Delta_{\text{allow}} = \text{span}/360 = 12(24)/360 = 0.8 \text{ in.}$
6. From Table A-8.2, the actual *total-load* deflection, $\Delta_{\text{actual}} = CPL^3/(EI)$, where:
 $C = 85.54$.
 span, $L = 24 \text{ ft}$.

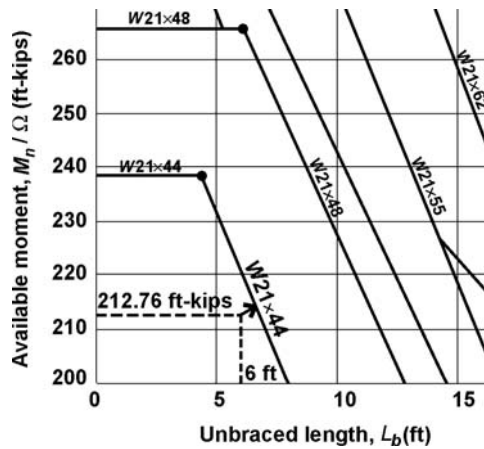**FIGURE 8.30**

Selection of W21 × 44 beam based on available moment graphs (Table A-8.5) for Example 8.6

$$P = (47 + 150)(15 \times 6) = 17,730 \text{ lb} = 17.73 \text{ kips.}$$

$$E = 29,000 \text{ ksi (Table A-3.12, Note 1).}$$

$$I = 843 \text{ in}^4 \text{ (Table A-4.3).}$$

$$\Delta_{\text{actual}} = 85.54(17.73)(24^3)/(29,000 \times 843) = 0.86 \text{ in.}$$

Since $\Delta_{\text{actual}} = 0.86 \text{ in.} \leq \Delta_{\text{allow}} = 1.2 \text{ in.}$, beam is OK for total-load deflection.

7. From Table A-8.2, the actual *live-load* deflection, $\Delta_{\text{actual}} = CPL^3/(EI)$, where:

$$C = 85.54.$$

span, $L = 24 \text{ ft.}$

$$P = 150(15 \times 6) = 13,500 \text{ lb} = 13.5 \text{ kips. (Use live load only!)}$$

$$E = 29,000 \text{ ksi (Table A-3.12, Note 1).}$$

$$I = 843 \text{ in}^4 \text{ (Table A-4.3).}$$

$$\Delta_{\text{actual}} = 85.54(13.5)(24^3)/(29,000 \times 843) = 0.65 \text{ in.}$$

Since $\Delta_{\text{actual}} = 0.65 \text{ in.} \leq \Delta_{\text{allow}} = 0.80 \text{ in.}$, beam is OK for live-load deflection.

8. **Conclusion:** The W21 × 44 section is OK for bending, shear, and deflection. Therefore, it is acceptable.

Example 8.7 Analyze rectangular HSS (hollow structural section)

Problem definition

Determine whether a HSS12 × 4×1/4 can be used as a typical beam for the library stack area shown in Example 8.6.

Solution overview

Find loads; compute maximum bending moment and shear force; check beam for bending, shear, and deflection.

Problem solution

- Find loads and moment (same as Example 8.6):
The dead load, $D = 47$ psf.
The live load, $L = 150$ psf
Maximum moment, $M_{max} = 399$ in-kips
- Find allowable bending stress: since the beam is laterally braced by the floor deck and the cross section is assumed to be compact, use Equation 8.12 to find $Z_{req} = \Omega M_{max} / F_y = 1.67 M_{max} / F_y$. From Table A-3.12, $F_y = 46$ ksi for HSS rectangular shapes (A500 grade B), so $Z_{req} = 1.67(399)/46 = 14.49 \text{ in}^3$.
- From Table A-4.6, the actual plastic section modulus for a HSS12 $\times$ 4 $\times$ 1/4, $Z_x = 25.6 \text{ in}^3$. Since the *actual* Z_x is greater than Z_{req} , this HSS section is OK for bending.
- Check section for shear: from Table A-3.13 (Note 3), the web area, A_w , is taken as $2ht$ (where t is the wall thickness of the web and h can be assumed to equal the nominal depth minus $3t$). From A-4.4, this web area, $A_w = 2ht = 2(12 - 3 \times 0.233)(0.233) = 5.27 \text{ in}^2$.
- From Equation 8.14, the required $A_w = V/F_v = 8.86/(0.36 \times 50) = 0.49 \text{ in}^2$, where, from Table A-3.13, the allowable shear stress, $F_v = 0.36F_y$ (and not the value of $F_v = 0.40F_y$ used for most wide-flange beams). Since the actual web area is greater than the required web area, the HSS beam is OK for shear.
- From Table A-8.1, find the allowable total-load deflection for a floor beam: $\Delta_{allow} = \text{span}/240 = 12(15)/240 = 0.75 \text{ in.}$; and the allowable live-load deflection for a floor joist: $\Delta_{allow} = \text{span}/360 = 12(15)/360 = 0.5 \text{ in.}$
- From Table A-8.2, the actual *total-load* deflection, $\Delta_{actual} = CPL^3/(EI)$, where:
 $C = 22.46$.
span, $L = 15 \text{ ft.}$
 $P = wL = (47 + 150)(6)(15) = 17,730 \text{ lb} = 17.73 \text{ kips.}$
 $E = 29,000 \text{ ksi}$ (Table A-3.12, Note 1).
 $I = 88.6 \text{ in}^4$ (Table A-4.6).
 $\Delta_{actual} = 22.46(17.73)(15^3)/(29,000 \times 119) = 0.389 \text{ in.}$
Since $\Delta_{actual} = 0.389 \text{ in.} \leq \Delta_{allow} = 0.75 \text{ in.}$, the HSS beam is OK for total-load deflection.
- From Table A-8.2, the actual *live-load* deflection, $\Delta_{actual} = CPL^3/(EI)$, where:
 $C = 22.46$.
 $L = 15 \text{ ft.}$
 $P = wL = (150 \times 6)15 = 13,500 \text{ lb} = 13.5 \text{ kips.}$ (Use live load only!)
 $E = 29,000 \text{ ksi}$ (Table A-3.12, Note 1).
 $I = 88.6 \text{ in}^4$ (Table A-4.6).
 $\Delta_{actual} = 22.46(13.5)(15^3)/(29,000 \times 119) = 0.300 \text{ in.}$
Since $\Delta_{actual} = 0.300 \text{ in.} \leq \Delta_{allow} = 0.5 \text{ in.}$, the HSS beam is OK for live-load deflection.
- Conclusion:** The HSS12 $\times$ 4 $\times$ 1/4 section is OK for bending, shear, and deflection. Therefore, it is acceptable.

REINFORCED CONCRETE

Concrete beams are reinforced with steel rods (reinforcing bars) in order to resist internal tension forces within the cross section. Unlike wood and steel, which can

withstand substantial tension stress, concrete may be safely stressed only in compression. The pattern of steel reinforcement thus corresponds to the pattern of positive and negative bending moments within the beam: in regions of positive bending, steel is placed at the bottom of the cross section; in regions of negative bending, steel is placed at the top (Figure 8.31). Like concrete columns, $2\frac{1}{2}$ in. to 3 in. of cover, measured from the outside face of the beam to the centerline of the reinforcing steel, is used to protect the steel from corrosion and provide adequate bond between the steel and concrete (see Figure 7.9).

The strength, or capacity, of a reinforced concrete beam can be determined by considering the equilibrium of tensile and compressive forces at any cross section. Failure of the beam occurs either with crushing of the concrete within the compression region; or yielding of the tension steel, followed by compressive crushing of the concrete. Since tension yielding is the preferred mode of failure—compressive crushing of the concrete would be sudden and catastrophic, whereas yielding of the steel provides warning signs of collapse—concrete beams are often deliberately *under-reinforced* to guarantee that, in the case of failure, the steel reinforcing bars begin to yield before the concrete in the compressive zone crushes.

At the point of failure, the stresses in a reinforced concrete cross section are as shown in Figure 8.32. The curved distribution of stresses within the compressive

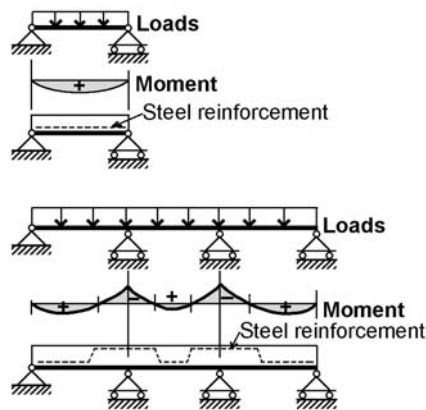


FIGURE 8.31

Relationship of bending moment and position of tension steel reinforcement

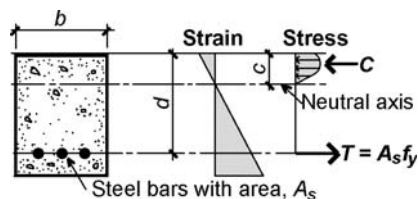


FIGURE 8.32

Strain and stress diagrams for tension-reinforced concrete beam at point of failure

zone (above the neutral axis for “positive” bending) corresponds to the nonlinear stress-strain curves characteristic of plain concrete, with a value of $0.85 f'_c$ taken for the strength of concrete corresponding to its behavior in an actual structure (Figure 8.33, curve *b*). Testing of many reinforced concrete beams has shown that the average stress within the compressive zone is $0.85\beta_1 f'_c$, and the resultant location is $\beta_1 c/2$ from the face of the concrete beam, as shown in Figure 8.34*a*. The coefficient β_1 ranges from 0.85 for $f'_c \leq 4000$ psi, to 0.65 for $f'_c \geq 8000$ psi (Figure 8.35). Thus, for a cross section of width, b , the total compressive force, C , is

$$C = 0.85\beta_1 f'_c bc \tag{8.15}$$

Since the steel yields before the concrete crushes (assuming that the beam has been designed to be *under-reinforced*), the steel stress is f_y and the total tensile force, T , is:

$$T = A_s f_y \tag{8.16}$$

where A_s is the steel area. (As the steel is now used in the context of concrete design, the designation for its yield stress changes from F_y to f_y .)

Alternatively, a different, but equivalent, rectangular stress distribution can be used in place of the actual nonlinear distribution, as shown in Figure 8.34*b*. In this

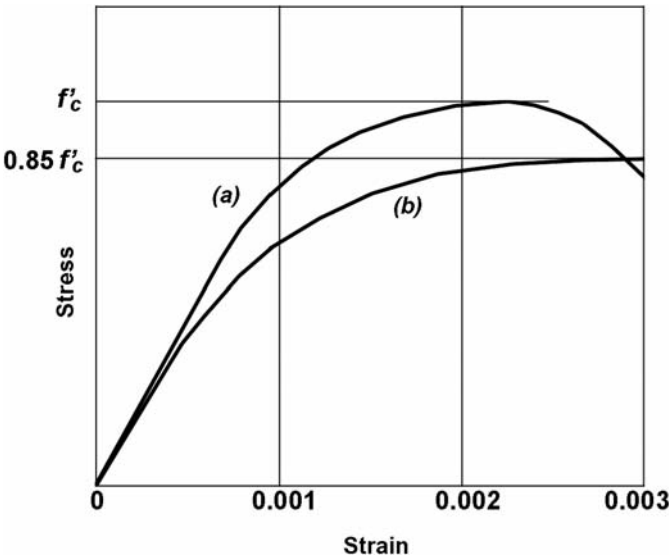


FIGURE 8.33

Stress-strain diagrams for plain concrete showing (a) fast loading characteristic of test cylinders and (b) slow loading characteristic of actual structures (same as Figure 7.11)

version, first formulated by C. S. Whitney and known as the “Whitney stress block,” the dimensions of the rectangle are adjusted so as to be consistent with the empirically determined resultant location. The definition of β_1 remains the same, as does the total compressive force, C .

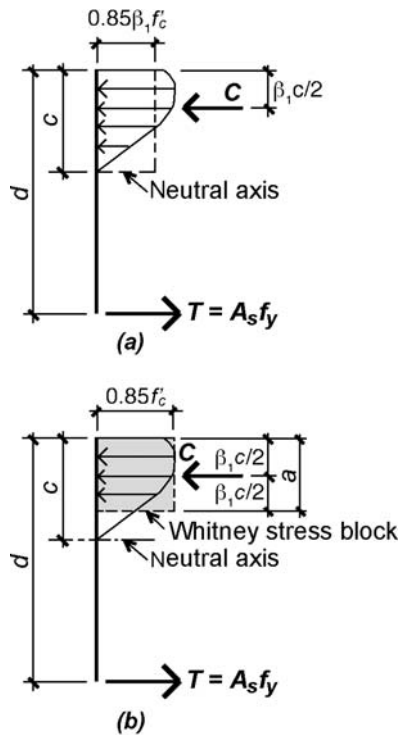


FIGURE 8.34

Comparison of (a) actual stresses in reinforced concrete beam with (b) equivalent rectangular (“Whitney”) stress block

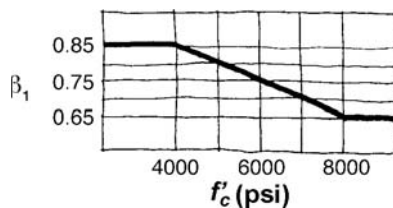


FIGURE 8.35

Relationship of coefficient β_1 to concrete cylinder strength, f'_c

Referring to the Whitney stress block diagram in Figure 8.34*b*, we can write equations of horizontal and moment equilibrium to determine the section's capacity. From horizontal equilibrium, the resultants of the compressive and tensile stresses must be equal in magnitude; that is, $T = C$, or:

$$A_s f_y = 0.85 f'_c a b \quad (8.17)$$

Solving for the stress block depth, a , we get:

$$a = A_s f_y / (0.85 f'_c b) \quad (8.18)$$

From moment equilibrium, the resisting moment within the cross section must equal the force T (or C) times the moment arm between T and C . This moment arm equals $d - a/2$, so we can write the moment at failure, $M_n = T(\text{moment arm})$; or:

$$M_n = A_s f_y (d - a/2) \quad (8.19)$$

Substituting the expression for a from Equation 8.18, we get:

$$M_n = A_s f_y \left(\frac{d - A_s f_y}{(2)(0.85) f'_c b} \right) \quad (8.20)$$

We define a steel ratio, $\rho = A_s / (bd)$, so that

$$A_s = \rho b d \quad (8.21)$$

Then, substituting this expression for A_s into Equation (8.20), we get:

$$M_n = \rho f_y b d^2 [1 - 0.59 \rho f_y / f'_c] \quad (8.22)$$

This moment represents the nominal strength of the cross section when it fails. In the strength design method used for the design of reinforced concrete elements, we reduce this moment by a strength reduction factor, ϕ , so that the useful capacity of the section becomes:

$$\phi M_n = \phi b d^2 R \text{ or } M_u \leq \phi b d^2 R \quad (8.23)$$

where

ϕ = capacity reduction factor, 0.9 for bending

M_n = the nominal strength of the cross section (in-kips)

M_u = the “design moment” based on factored loads (in-kips)

b = the width of the cross section (in.)

d = the effective depth of the cross section measured to the centerline of the steel reinforcement (in.)

R is defined in Equation 8.24, as follows:

$$R = \rho f_y (1 - 0.59 \rho f_y / f'_c) \quad (8.24)$$

where

f_y = the yield stress of the steel reinforcement (we will use 60ksi in all examples)

f'_c = the compressive cylinder strength of the concrete (ksi)

ρ = the steel ratio, $A_s/(bd)$

For given values of f_y and f'_c , the relationship between R and ρ can be computed from Equation 8.24. Table A-8.9 gives typical values of R and ρ for $f_y = 60$ ksi, and f'_c ranging from 3000 psi to 5000 psi. Requirements for reinforcing bar cover and typical overall dimensions are the same as for reinforced concrete columns (see Table A-4.9).

Example 8.8 Analyze reinforced concrete beam

Problem definition

Check the capacity of the reinforced concrete cross section shown in Figure 8.36. Can it be safely used for the “service” (i.e., unfactored) loads shown in Figure 8.36? Assume that the dead load, D , equals the weight of the beam (assume 150pcf for *reinforced* concrete), $f_y = 60$ ksi, and $f'_c = 3000$ psi. Reinforcing steel areas are listed in Table A-4.10; for minimum beam widths consistent with the number of bars selected, see Table A-4.11.

Solution overview

Find factored loads and maximum moment; compute bending capacity.

Problem solution

1. From Table 5.1, the typical factored load combination for a floor beam is $1.2D + 1.6L$. The factored dead load consists of 1.2 times the beam weight and is expressed in weight per linear foot of beam: $D = 1.2(150)(12/12)(28/12) = 420$ lb/ft = 0.42 kips/ft. The factored live load, $L = 1.6(20) = 32$ kips.
2. Create load and moment diagrams as shown in Figure 8.37 to determine critical (i.e., maximum) bending moment. One can find the maximum moment for the concentrated and distributed loads separately and then add them together (since they both occur at the

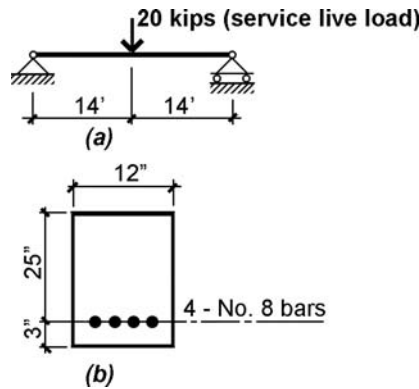


FIGURE 8.36
Reinforced concrete beam showing (a) loading diagram and (b) cross section through beam for Example 8.8

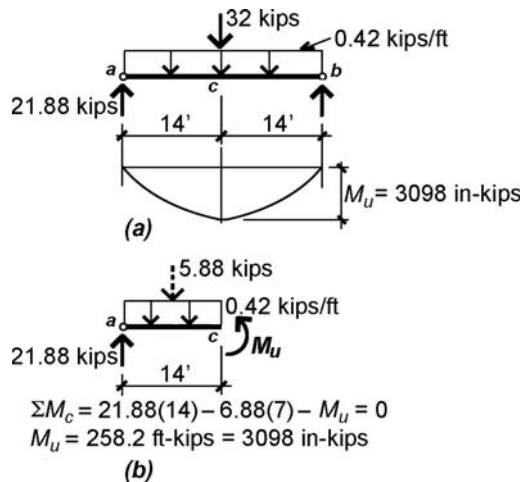


FIGURE 8.37
To find maximum moment for Example 8.8, draw (a) loading and moment diagram and (b) free-body diagram cut at midpoint with equation of moment equilibrium

- beam's midpoint), or, as is shown in Figure 8.37b, the maximum moment may be computed directly by applying the equation of moment equilibrium to a free-body diagram cut at midspan.
3. Compute (bending) capacity of beam:
From Table A-5.2, $\phi = 0.9$ for bending.
From Table A-4.10, the area of four No. 8 bars is $A_s = 3.16 \text{ in}^2$.
The steel ratio, $\rho = A_s/(bd) = 3.16/(12 \times 25) = 0.0105$.

From Table A-8.9 or from Equation 8.24, $R = 0.552$ ksi (this is obtained directly from Equation 8.24; when using Table A-8.9, interpolate between values for ρ , or, conservatively, use the closest but smaller value of ρ to find R).

From Equation 8.23, $\phi M_n = \phi b d^2 R = 0.9(12)(25^2)(0.552) = 3726$ in-kips

4. Check actual design moment: since the actual design moment = 3098 in-kips $\leq \phi M_n = 3726$ in-kips (the available moment capacity of the beam), the section is OK for bending. ■

Continuous beams and T-beams

For simply supported, determinate beams, no special guidelines are required for the calculation of shear and moment. In reality, though, reinforced concrete beams are rarely simply supported. Instead, concrete floor and roof structures are most often cast monolithically and designed as indeterminate, continuous structures. As an aid in computing the maximum negative and positive bending moments characteristic of such structures (e.g., see Figure 8.5), “moment values” have been tabulated for various support conditions. These can be used for uniformly loaded floor structures with at least two more-or-less equal spans (differing in length by no more than 20%), as long as the dead load is greater or equal to one third of the live load (Table A-8.7).

Where slabs are cast monolithically with beams, as is most often the case (the use of precast elements being the most common exception), the beam thickness is measured to the top of the slab, as shown in Figure 8.38a. Where negative moments are being computed, corresponding to tension at the top, the beam width is not influenced by the presence of the slab (which is entirely in tension), and the capacity of the cross section is equivalent to that of a “pure” rectangular shape, as shown in Figure 8.38b. With positive bending, however, the compression zone is not limited by the web or stem of the beam, but extends out into the slab, as shown in Figure 8.38c. The effective width, b , of such a T-beam is considered to be the smaller of the following:

$$\begin{aligned} b &= 1/4 \text{ beam span; or} \\ b &= \text{centerline distance between beams; or} \\ b &= \text{web width} + 16 \text{ times slab thickness.} \end{aligned} \quad (8.25)$$

Positive moments can thus be resisted with a much greater effective cross-sectional width than can negative moments, by taking advantage of the concrete already present within the slab. As long as the entire compression zone (or the equivalent stress block depth, a) is within the slab, the design of such a T-beam is quite similar to the design of a rectangular beam of width, b . Whether the compressive stress block is, in fact, within the slab can be checked by computing the stress block depth, a (from Equation 8.18), substituting $\rho = A_s/(bd)$, and comparing a to the slab thickness, as follows:

$$a = A_s f_y / (0.85 f'_c b) = \rho f_y d / (0.85 f'_c) \quad (8.26)$$

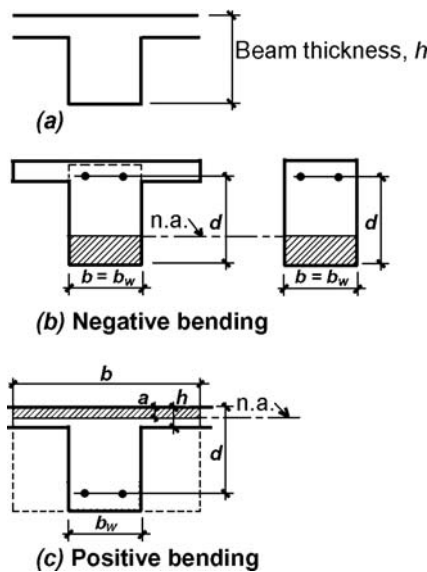


FIGURE 8.38

The total thickness of a T-beam (a) extends into the slab; such beams subjected to negative bending (b) can be designed as an ordinary rectangular beam, while positive-moment T-beams (c) have a greater compressive “flange” width

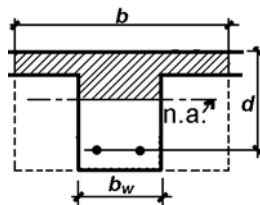


FIGURE 8.39

The compressive zone in a positive-moment T-beam rarely extends into the “web” of the beam

For $a \leq$ slab thickness, the effective beam width, b , can be used. Otherwise, the design of T-beams is somewhat more complex, since the compression zone extends into the web (Figure 8.39). The design of such beams is not considered in this text.

Where both positive and negative moments occur over the span of a beam, it is most common to first design the beam for negative moment (where only the beam web width is available to resist compression stresses), thereby establishing the cross-sectional dimensions for the entire span. The beam is then designed for positive moment as a T-beam with all cross-sectional dimensions given. Proceeding from the opposite direction, that is, positive moment first, would lead to a much smaller effective depth (since the T-beam is designed with a much larger effective width, b), which in turn could result in an inordinately high steel ratio within the regions of negative moment.

The question of whether a T-beam can be designed as a simple rectangular beam with effective width, b , is influenced to a considerable extent by the reinforcement ratio, ρ . Equation 8.26 for stress block depth shows that, for given values of f_y and f'_c , the ratio of effective beam depth to stress block depth is inversely proportional to the steel ratio, ρ . That is, dividing both sides of Equation 8.26 by d , we get:

$$a/d = \rho f_y / (0.85 f'_c); \text{ or } d/a = 0.85 f'_c / (\rho f_y) \quad (8.27)$$

As an extreme example, for ρ taken as ρ_{max} (assume $f_y = 60$ ksi, $f'_c = 4000$ psi, and ρ_{max} taken with steel strain at 0.005), $d/a = 3.13$. This means that only beams and slabs proportioned so that the effective depth is no more than 3.13 times the slab thickness would be able to be designed as simple rectangular beams with effective width, b . For ρ taken as $0.5\rho_{max}$, d/a is 6.26; and the range of beam-slab proportions for which the compressive stress block remains within the slab thickness would be somewhat greater. For the very low steel ratios characteristic of real-world positive moment T-beam design, the stress block remains within the slab thickness for all but the most extreme proportions.

Design for bending (flexure)

To create under-reinforced beams, where yielding of the tension steel precedes crushing of the concrete in the event of failure, we first determine the amount of steel corresponding to the so-called balanced failure condition (where yielding and crushing occur simultaneously) and then provide an added margin of safety against brittle (concrete crushing) failure. Current code guidelines stipulate that the strain in the reinforcing steel be no less than 0.004 (or 0.005 for so-called *tension-controlled members*, allowing a simple and uniform strength reduction factor, $\phi = 0.9$). As shown later, this strain is greater than the yield strain of steel, guaranteeing that the steel has *already* yielded when the concrete begins to crush. To determine the balanced steel area, or balanced steel ratio, $\rho_b = A_s/(bd)$, we assume that the concrete strain at failure is 0.003 as shown in Figure 8.33 and that the yield strain in the steel equals $f_y/E = 60/29,000 = 0.00207$ for 60-ksi reinforcing steel (Figure 8.40). From the linear strain diagram, we can express the ratio of c to d as $c/d = 0.003/0.00507$; from which we get $c = 0.5917d$. Since $a = \beta_1 c$; and $c = a/\beta_1$; we get:

$$a/\beta_1 = 0.5917d; \text{ or } a = 0.5917\beta_1 d \quad (8.28)$$

From horizontal equilibrium, $T = C$; or $A_s f_y = 0.85 f'_c a b$. Substituting $A_s = \rho_b b d$; $a = 0.5917\beta_1 d$; and solving for ρ_b , we get:

$$\rho_b = 0.503\beta_1 (f'_c / f_y) \quad (8.29)$$

where ρ_b = the balanced steel ratio, $A_s/(bd)$; and $\beta_1 = 0.85$ for $f'_c \leq 4000$ psi (see Figure 8.35).

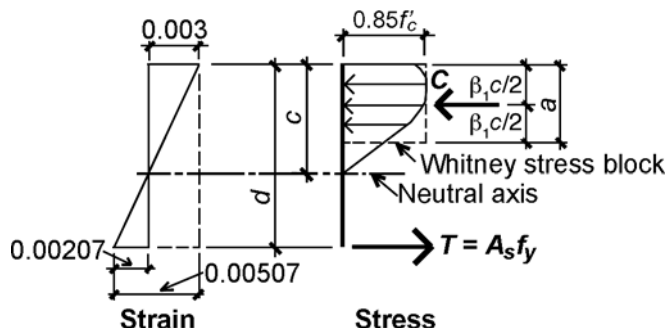


FIGURE 8.40

Balanced failure in a reinforced concrete beam

The maximum steel ratio (ρ_{max}), whether derived from the lowest permissible steel strain of 0.004 or the simpler value of 0.005, sets an upper limit to the amount of steel in a reinforced concrete beam where failure, should it occur, is initiated by yielding of the tensile reinforcement. By comparing the stress and strain diagrams of the balanced condition (Figure 8.40) with the condition where the steel strain at failure is 0.005, it can be shown that the steel ratio corresponding to a steel strain of 0.005 is $\rho_{max} = 0.63375\rho_b$. For beams, a lower limit for the steel ratio (ρ_{min}) is also prudent and is set at $200/f_y$ for concrete strengths in the 3000- to 4000-psi range and $3(f'_c)^{0.5}/f_y$ for 5000-psi or higher concrete (where f'_c and f_y are in psi units). A minimum *slab* steel ratio is set at 0.0018, consistent with slab requirements for minimum temperature and shrinkage reinforcement perpendicular to the direction of span. These lower bounds protect against a type of sudden failure that might otherwise occur in very lightly reinforced beams if the redistribution of stresses brought about by the initial cracking of concrete in the tension zone exceeds the capacity of the “cracked” cross section assumed in the calculation of steel area. Typical minimum and maximum values for the steel ratio, ρ , are shown in Table A-8.8.

There is a subtle, but important, important difference between positive-moment T-beam design (with effective “flange” width, b , and web or stem width, b_w) and rectangular beam design (with constant width, b): the minimum steel ratio, ρ_{min} , is much lower for the T-beam when expressed in terms of width, b . This is because ρ_{min} , derived from a consideration of the beam’s moment capacity before tensile cracking of the concrete, is defined in terms of the beam “web” width in the tension zone, b_w , and not the effective “flange” width, b . When using steel ratios expressed in terms of the effective width, b , the minimum steel ratio values computed with b_w must be divided by the ratio b/b_w . To account for these lower minimum steel ratios in T-beam design, the R - ρ table provided (Table A-8.9) includes additional steel ratio values below those that would ordinarily be listed for rectangular beam design. Depending on the ratio of the effective width, b , to the web width, b_w , the minimum steel ratio, written in terms of b , can easily be determined, and the design can proceed as it would for a rectangular cross section.

It is permissible to design minimum steel areas for T-beams subjected to negative bending as if they were rectangular beams with $b = b_w$, in spite of the large area of concrete in the tension flange that could, in fact, sustain a much larger “uncracked” moment. The reason for this appears to have something to do with the redundancy of continuous (indeterminate) T-beam floor systems: redistribution of moments from supports to midspan is possible if failure at the negative-moment supports renders them incapable of sustaining bending stress, essentially turning the system into a series of simply supported spans with positive moment only. This logic does not apply in the following two situations. First, for statically *determinate* T-beams (such as precast cantilevered tees) where redistribution of moments is not possible, the minimum negative steel is calculated based on the flange width or twice the web (stem) width, whichever is smaller (see Note 3 in Table A-8.9). Second, for any other negative moment where a T-beam cantilever occurs (i.e., where moment redistribution cannot occur), the minimum steel should be increased as it is for determinate T-beams.

Reinforced concrete beams can be safely designed within a range of sizes bracketed by these minimum and maximum steel ratios. Using ρ_{max} results in the smallest under-reinforced cross section, while ρ_{min} corresponds to the largest. Unlike wood and steel design, where the smallest, or lightest, cross section can usually be taken as the most economical, the best choice for a reinforced concrete beam is not necessarily the smallest cross section: the higher cost of steel relative to concrete, the potential difficulty of placing many steel reinforcing bars within a small cross-sectional area, and the reduced stiffness of a smaller cross section often suggest some intermediate steel ratio as the best choice. For example, steel ratios in the range of $0.5\rho_{max}$ seem to produce reasonably proportioned beams.

Steel ratio given

If the design of a reinforced concrete beam starts with the selection of a steel ratio, such as $0.5\rho_{max}$, we can solve for bd^2 in Equation 8.23 to get:

$$bd^2 \geq M_u / (\phi R) \quad (8.30)$$

where

b = the width (in.) of the cross section

d = the effective depth (in.) of the cross section

M_u = the design moment found using factored loads (in-kips)

ϕ = 0.9 for bending

$R = \rho f_y (1 - 0.59 \rho f_y / f'_c)$, as defined in Equation 8.24 (ksi units; values can also be found in Table A-8.9)

While any values of width, b , and effective depth, d , consistent with the preceding equation are acceptable in principle, these cross-sectional dimensions are often

constrained by three practical considerations. First, beam widths must be consistent with requirements for clear space between reinforcing bars and for concrete cover, as shown in Table A-4.11. Second, beam widths and depths are often made to align with other structural elements, such as column cross sections, other beams, or different sections of the same beam. Third, the actual depth of the cross section may be chosen to prevent excessive deflection, as indicated in Table A-8.2. It can be seen that one, but not both, of the cross-sectional dimensions must be assumed before the other dimension can be found. If the effective depth, d , is assumed as given, then:

$$b \geq \frac{M_u}{\phi R d^2} \quad (8.31)$$

If the width, b , is assumed as given, then:

$$d \geq \sqrt{\frac{M_u}{\phi R b}} \quad (8.32)$$

Given a steel ratio, and knowing both cross-sectional beam dimensions, the required steel area can then be found from Equation 8.21—that is, $A_s = \rho b d$.

Cross-sectional dimensions given

Where both cross-sectional dimensions b and d are assumed as given, the steel ratio cannot also be selected, but must be calculated. From Equation 8.30, we found that: $b d^2 \geq M_u / (\phi R)$. We can find the steel ratio, ρ , by first solving for R as follows:

$$R \geq \frac{M_u}{\phi b d^2} \quad (8.33)$$

Then, the corresponding steel ratio can be determined from Table A-8.9. If the value of R does not appear in the table, two things are possible. Either the value is too low, corresponding to a required steel ratio, $\rho < \rho_{min}$, or the value is too high, corresponding to a required steel ratio, $\rho > \rho_{max}$. In the latter case, the cross-sectional dimensions must be changed and R recomputed. Where $\rho < \rho_{min}$, one can either adjust the cross-sectional dimensions or simply use the larger quantity of steel corresponding to ρ_{min} . Alternatively, an acceptable steel ratio can be assumed, along with one cross-sectional dimension, and the procedures outlined earlier for “steel ratio given” can be followed.

Slabs

Reinforced concrete slabs, at least those designed to span in one direction, are no different conceptually from any other beams, with the following three caveats. First, only 3/4-in. concrete cover is required (see Table A-4.9) so that the effective depth,

d , measured to the centerline of the reinforcing steel, can generally be taken as the slab thickness minus one inch. Second, special shear reinforcement is rarely needed. Finally, rather than computing the steel area for a slab, the required spacing of reinforcing bars is computed based on an assumed steel bar area. This reinforcement spacing is determined by computing the required steel area, A_s^* , for any slab width, b , as shown in Figure 8.41a. The equivalent spacing, s , using bars with actual area, A_s , is shown in Figure 8.41b; s can be found by equating the ratios $A_s^*/b = A_s/s$. Solving for the bar spacing, s , we get:

$$s = b(A_s/A_s^*) \quad (8.34)$$

where

b = the slab width used in the calculation (e.g., 1 ft)

A_s = the area of one reinforcing bar, typically No. 3 to 5

A_s^* = the required area of steel for the slab width, b

Given a steel ratio, $\rho = A_s^*/(bd)$, we can substitute $A_s^* = \rho bd$ into the equation for s and obtain the following alternative expression for the required bar spacing:

$$s = A_s/(\rho d) \quad (8.35)$$

where

A_s = the area of one reinforcing bar, typically No. 3 to 5

ρ = the computed steel reinforcing ratio

d = the effective slab depth

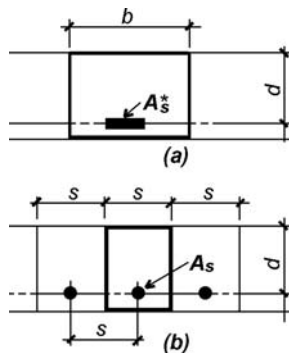


FIGURE 8.41

Steel in one-way slabs showing (a) equivalent steel area, A_s^* , for a given width, b , and (b) spacing, s , for a slab with bar area, A_s

The spacing must not exceed 18 in., nor three times the slab thickness, in any case. Reinforcement may be required perpendicular to the main longitudinal slab reinforcement (i.e., perpendicular to the reinforcement placed parallel to the span) for two reasons. First, a minimum amount of perpendicular steel—with a minimum steel ratio, $\rho_{min} = 0.01810$ —is required to protect against cracking due to shrinkage of the concrete or thermal (temperature) expansion. The spacing of such shrinkage-temperature steel cannot exceed 18 in., or $5b$, where b is the slab thickness. Second, in cases where a T-beam is oriented so that it is parallel to the main slab reinforcement (e.g., where a T-beam girder is supporting T-beams that in turn are supporting slabs, as shown in Figure 8.42), the overhanging flanges of the T-beam girder must be reinforced as if they were negative-moment cantilevers, with a design moment, $M_u = w_u(b - b_w)^2/8$. This reinforcement is not designed to improve the spanning capability of the slab itself, but rather to ensure that the effective width of the T-beam can function as assumed.

Deflection

The rigorous calculation of reinforced concrete beam or slab deflection is complicated by the difficulty of determining the stiffness, EI , of such bending elements that would be required in any deflection equation: in particular, the moment of inertia of a cracked section (cracked in the tension zone) containing two very different types of materials (steel and concrete) is complex and uncertain. While such procedures exist, we can control deflection—for preliminary design—by establishing minimum thicknesses for beam and slab elements based on their clear span, as shown in Table A-8.2. For example, the minimum thickness for a continuous reinforced concrete

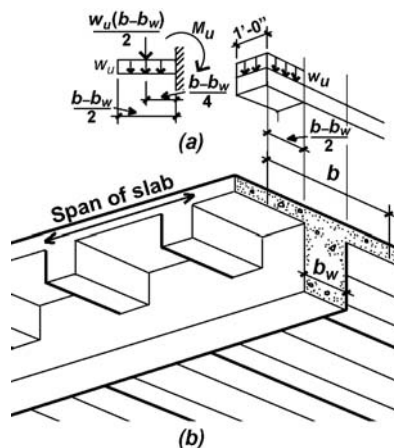


FIGURE 8.42

Slab steel for T-beams parallel to main slab reinforcement: (a) calculation of design moment, $M_u = \text{resultant force} \times \text{distance} = w_u(b - b_w)/2 \times (b - b_w)/4 = w_u(b - b_w)^2/8$, and (b) view of T-beam with effective width, b , and web width, b_w

beam is set equal to its clear span divided by 21, while the minimum thickness for a continuous slab is set equal to its clear span divided by 28.

Example 8.9 Design reinforced concrete beam, with steel ratio assumed

Problem definition

Assuming a steel ratio, $\rho = 0.5\rho_{max}$, design a continuous rectangular concrete beam with a clear span of 36 ft to resist a positive design moment, $M_u = 350$ ft-kips. Assume $f_y = 60$ ksi and $f'_c = 3000$ psi. The beam width is set at 16 in. to align with rectangular columns. Assume 3-in. cover, measured to the centerline of reinforcement, and use even numbers for both cross-sectional dimensions. Check thickness for deflection control.

Solution overview

Find R ; compute unknown cross-sectional dimension; recompute steel ratio; compute steel area; select reinforcement.

Problem solution

1. From Table A-8.8, find steel ratio:

$$\rho_{max} = 0.0135.$$

$$\rho = 0.5\rho_{max} = 0.00675.$$

2. From Table A-8.9, find R based on $\rho = 0.00675$. Since this value of ρ falls between the tabular values of 0.00667 and 0.00700, we can interpolate by comparing ratios of the differences between ρ and R values as follows:

$$\frac{R - 0.369}{0.385 - 0.369} = \frac{0.00675 - 0.00667}{0.00700 - 0.00667}$$

from which $R = 0.373$. Alternatively, we can use Equation 8.24 directly to obtain $R = \rho f_y (1 - 0.59 \rho f_y / f'_c) = 0.00675(60)[1 - 0.59(0.00675)(60)/3] = 0.373$.

3. From Equation 8.32, compute cross-sectional dimensions: since $b = 16$ in., we get:

$$d \geq \sqrt{\frac{M_u}{\phi R b}} = \sqrt{\frac{350 \times 12}{0.9(0.373)(16)}} = 28 \text{ in.}$$

4. Adjust the effective depth, d , so that the total thickness of the cross section is an even number. Since the assumed cover is 3 in., we can select an effective depth of either 27 in. (for a total thickness of 30 in.) or an effective depth of 29 in. (for a total thickness of 32 in.). Either choice is potentially correct, since even if the depth is less than what is required based on Equation 8.32, a revised steel ratio will be computed in the next step: a smaller depth will result in a larger steel ratio (more steel and less concrete), while a larger depth will result in a smaller steel ratio (less steel and more concrete). We will choose an effective depth, $d = 29$ in.

5. Find R using the actual cross-sectional dimensions, $b = 16$ in. and $d = 29$ in. From Equation 8.33, we get:

$$R \geq \frac{M_u}{\phi b d^2} = \frac{350 \times 12}{0.9(16)(29^2)} = 0.347$$

6. From Table A-8.9, we can either use $R = 0.369$ and a corresponding value of $\rho = 0.00667$, or we can interpolate between $R = 0.335$ and $R = 0.369$ to get:

$$\frac{0.347 - 0.335}{0.369 - 0.335} = \frac{\rho - 0.00600}{0.00667 - 0.00600}$$

from which $\rho = 0.00624$. We will use the more accurate value of $\rho = 0.00624$.

7. From Equation 8.21, compute steel area: $A_s = \rho b d = 0.00624(16)(29) = 2.90 \text{ in}^2$.
8. From Table A-4.10 and Table A-4.11, select reinforcement that will fit in the beam, as shown in Figure 8.43:
Two No. 11 bars (with actual $A_s = 3.12 \text{ in}^2$).
Three No. 9 bars (with actual $A_s = 3.00 \text{ in}^2$)
9. From Table A-4.11, check whether either choice fits within the beam width of 16 in. Two No. 11 bars require 8.13 in. and three No. 9 bars require 10.04 in., so either choice works in a 16-in.-wide beam.
10. It is unlikely that our steel ratio will fall outside the limits for ρ_{min} and ρ_{max} , since our starting point was the selection of a steel ratio positioned between these two extremes. However, since the actual steel ratio being used is somewhat different than what we started with, a quick check is prudent. From Table A-8.8 (or A-8.9), the range of acceptable steel ratios is 0.0033 to 0.0135. For two No. 11 bars, the steel ratio, $\rho = 3.12/(16 \times 29) = 0.0067$, which falls between the two limiting values (the steel ratio for three No. 9 bars is also acceptable).

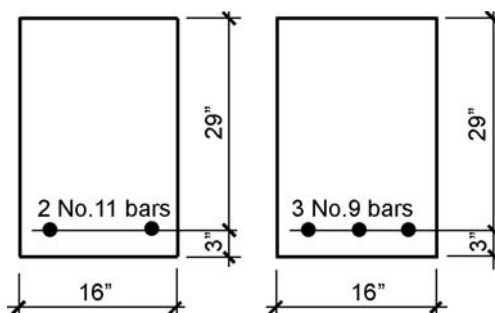


FIGURE 8.43

Alternate bar selection for Example 8.9

11. Check beam thickness for deflection control: from Table A-8.2, the minimum thickness for a continuous beam with clear span, L (ft), is $12L/21 = 12(36)/21 = 20.6$ in. This is no greater than the actual thickness of the beam, $h = d + 3 = 29 + 3 = 32$ in., so the beam is acceptable for deflection control.

Example 8.10 Design reinforced concrete slab and T-beam, with cross-sectional dimensions assumed

Problem definition

Design a continuous reinforced concrete slab and typical beam to accommodate heavy manufacturing, as shown in Figure 8.44. Assume $f_y = 60$ ksi and $f'_c = 5000$ psi. Consider both negative and positive moment values on typical interior spans (Table A-8.7). Assume a beam width of 12 in., and a slab thickness of 3 in. as shown. The beams have a clear span of 30 ft. Assume that the dead load consists of the reinforced concrete weight (150 pcf). Span dimensions are measured from the inside face of supporting elements, rather than from their centerlines, when computing shear and moment. Design beam and slab for typical interior spans. Assume 3-in. cover for beams, and 1 in. for slabs (measured to centerline of reinforcement).

Solution overview

For slab: find factored loads; compute design moment; compute R ; find ρ ; compute rebar spacing. *For beam:* find factored loads; compute design moment; compute R ; find ρ ; compute steel area, A_s ; select reinforcement. Check bar fit for beam and deflection control for both beam and slab.

Problem solution

Slab design, negative moment

1. Find loads:

From Table A-2.2, the live load, $L = 250$ psf = 250 lb/ft (for 1-ft. strip of slab). Live load reduction does not apply to one-way slabs.

The dead load, D (for 1-ft. strip of slab) = $150(3/12) = 37.5$ lb/ft (see Figure 8.45).

From Table A-5.1, the factored (design) load, $w_u = 1.2D + 1.6L = 1.2(37.5) + 1.6(250) = 445$ lb/ft = 0.455 kips/ft.

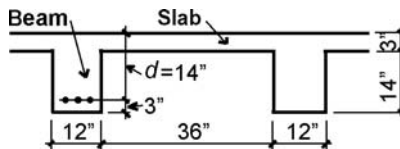


FIGURE 8.44

Cross section through slab and T-beam for Example 8.10

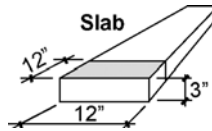


FIGURE 8.45

Tributary area for calculation of slab weight for Example 8.10

- Using moment values from Table A-8.7, compute the negative design moment for a typical interior span. Because the clear span of the slab is no greater than 10 ft (see Note 2, Table A-8.7), the moment value is $M_u = w_u l_n^2 / 12 = 0.455(3^2) / 12 = 0.34$ ft-kips = 4.095 in-kips. The initial calculation used kips/ft units for w_u and feet units for l_n , with the resulting moment value in ft-kips units. This value was then multiplied by 12 to convert the moment value to in-kips units.
- From Equation 8.33, $R \geq M_u / (\phi b d^2) = 4.095 / (0.9 \times 12 \times 2^2) = 0.0948$. In this equation, the effective slab depth, d , is taken as 1 in. less than the given slab thickness, $h = 3$ in., consistent with typical requirements for slab cover.
- From Table A-8.9, we can either use $R = 0.099$ and a corresponding value of $\rho = 0.00167$, or we can interpolate between $R = 0.0661$ and $R = 0.099$. In this case, the minimum steel ratio for a slab, $\rho_{min} = 0.00180$, so there is no point interpolating: the result will be less than ρ_{min} . Therefore, we use the minimum value, $\rho = 0.00180$.
- From Table A-4.10, we select a value for A_s : assuming No. 3 reinforcing bars for the slab, $A_s = 0.11$ in².
- From Equation 8.36, find rebar spacing: $s = A_s / (\rho d) = 0.11 / (0.0018 \times 2) = 30.6$ in. However, the maximum permitted bar spacing for a slab is the smaller of 18 in. or three times the slab thickness, $3h = 9$ in. We must use 9-in. spacing, so the negative slab moments are resisted by No. 3 bars at 9 in. on center.
- Checking the steel ratio, we find the limits from Table A-8.9 to be $\rho_{min} = 0.00180$ (see Note 4 for slabs) and $\rho_{max} = 0.02130$. The actual steel ratio can be found by dividing a single bar area by the gross concrete area determined by its spacing and effective depth: $\rho = 0.11 / (9 \times 2) = 0.00611$, which falls between these limiting values.
- Deflection control can be checked using Table A-8.2: for a continuous slab, the minimum thickness equals the clear span divided by 28, or $(3 \times 12) / 28 = 1.29$ in. The actual slab thickness, $h = 3$ in., exceeds this minimum, so the slab is thick enough for deflection control.

Slab design, positive moment

- Find loads: same as for negative moment: $w_u = 0.455$ kips/ft.
- From Table A-8.7, compute the positive design moment value, $M_u = w_u l_n^2 / 16$. Rather than going through the computation process, notice that the positive moment is *smaller* than the negative moment already computed; since the negative moment in this case was governed by the maximum spacing criteria, the positive moment (which is even smaller) will have the same result. Therefore, use the same bars and spacing computed for the negative moment: No. 3 bars at 9 in. on center.

Beam design, negative moment**1. Find loads:**

From Table A-2.2, the live load, $L = 250$ psf, so the distributed load per foot of beam = $250(\text{tributary area}) = 250(4) = 1000$ lb/ft; live load reduction does not apply since the "influence" area ≤ 400 ft².

The dead load can be found by adding the slab and beam-stem weight as shown in Figure 8.46: $D = \text{slab weight} + \text{beam-stem weight} = 150(3/12)(4) + 150(14/12)(12/12) = 150 + 175 = 325$ lb/ft.


From Table A-5.1, the factored (design) load = $1.2D + 1.6L = 1.2(325) + 1.6(1000) = 1990$ lb/ft = 1.99 kips/ft.

- 2.** Using moment values from Table A-8.7, compute negative design moment for a typical interior span: $M_u = w_u l_n^2 / 11 = 1.99(30^2) / 11 = 162.8$ ft-kips = 1953.8 in-kips.
- 3.** From Equation 8.34, $R \geq M_u / (\phi b d^2) = 1953.8 / (0.9 \times 12 \times 14^2) = 0.923$. In this equation, the effective beam depth, d , is taken as 3 in. less than the total beam thickness, $h = 17$ in., measured from the bottom of the beam "web" or "stem" to the top of the slab.
- 4.** From Table A-8.9, we can either use $R = 0.943$ and a corresponding value of $\rho = 0.01800$, or we can interpolate between $R = 0.898$ and $R = 0.943$ to get:

$$\frac{0.923 - 0.898}{0.943 - 0.898} = \frac{\rho - 0.01700}{0.01800 - 0.01700}$$

from which $\rho = 0.01756$. We will use the more accurate value of $\rho = 0.01756$.

- 5.** From Equation 8.21, compute steel area: $A_s = \rho b d = 0.01756(12)(14) = 2.95$ in².
- 6.** From Table A-4.10 and Table A-4.11, select reinforcement that will fit in the beam, as shown in Figure 8.47:
Two No. 11 bars (with actual $A_s = 3.12$ in²).
Three No. 9 bars (with actual $A_s = 3.00$ in²).
- 7.** From Table A-4.11, check whether either choice fits within the beam web (or stem) width of 12 in. Two No. 11 bars require 8.13 in. and three No. 9 bars require 10.04 in., so either choice works in a 12-in.-wide beam.
- 8.** Checking the steel ratio, we find the limits from Table A-8.9 to be $\rho_{min} = 0.00333$ (see Note 1 for negative-moment T-beams) and $\rho_{max} = 0.02130$. The actual steel ratio can be found by dividing the bar area by the gross concrete area determined by width and effective depth: for the two No. 11 bars, $\rho = 3.12 / (12 \times 14) = 0.0186$, which falls between these limiting values.

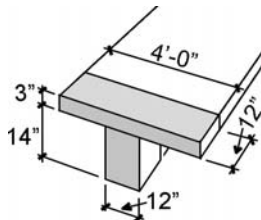**FIGURE 8.46**

Tributary area for calculation of beam weight for Example 8.10

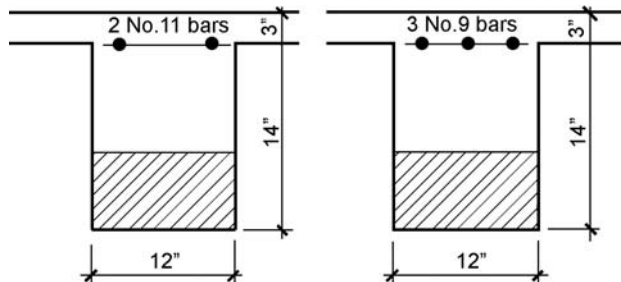


FIGURE 8.47

Bar selection options for negative moment in T-beam for Example 8.10

9. Deflection control can be checked using Table A-8.2: for a continuous beam, the minimum thickness equals the clear span divided by 21, or $(30 \times 12)/21 = 17.14$ in. The actual beam thickness, $h = 17$ in., is approximately equal to this minimum, so the beam is marginally thick enough for deflection control.


Beam design, positive moment (T-beam design)

1. Find loads: same as for negative-moment design.
2. Using moment values from Table A-8.7, compute negative design moment for a typical interior span: $M_u = w_u l_n^2 / 16 = 1.99(30^2)/16 = 111.9$ ft-kips = 1343.3 in-kips.
3. From Equation 8.25, the effective width, b is the smaller of the following:
 $b = 1/4 \text{ span} = 30 \times 12/4 = 90$ in.
 $b = \text{centerline distance between beams} = 48$ in.
 $b = \text{web width} + 16 \times \text{slab thickness} = 12 + 16 \times 3 = 60$ in.
 The effective width, $b = 48$ in.
4. From Equation 8.33, $R \geq M_u / (\phi b d^2) = 1343.3 / (0.9 \times 48 \times 14^2) = 0.159$. In this equation, the effective beam depth, d , is taken as 3 in. less than the total beam thickness, $h = 17$ in., measured from the bottom of the beam web or stem to the top of the slab.
5. From Table A-8.9, we can either use $R = 0.195$ and a corresponding value of $\rho = 0.00333$, or we can interpolate between $R = 0.107$ and $R = 0.195$ to get:

$$\frac{0.159 - 0.107}{0.195 - 0.107} = \frac{\rho - 0.00180}{0.00333 - 0.00180}$$

from which $\rho = 0.00270$. We will use the more accurate value of $\rho = 0.00270$.

For positive moment T-beams, the minimum steel ratio is determined by the ratio $b/b_w = 48/12 = 4$, for which $\rho_{min} = 0.00083$ (see Note 2 in Table A-8-9). Our value of ρ is not smaller than ρ_{min} , so it is acceptable. Assuming that a value for ρ was found, the maximum steel ratio need not be checked when using Table A-8.9, since no values greater than ρ_{max} are listed.

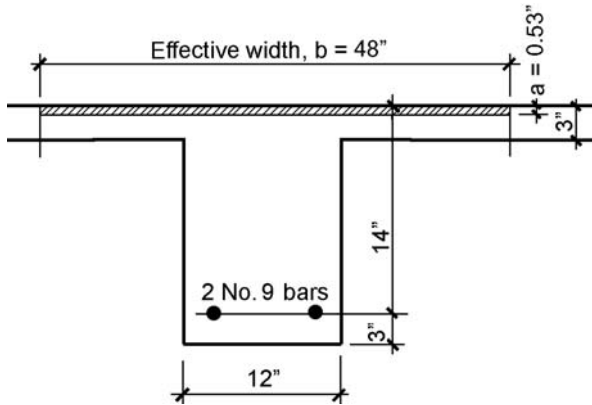**FIGURE 8.48**

Bar selection for positive moment in T-beam for Example 8.10

6. From Equation 8.26, check that the stress block depth, a , falls within slab thickness:
 $a = \rho f_y d / (0.85 f'_c) = 0.00270(60)(14) / (0.85 \times 5) = 0.53 \text{ in.} \leq \text{slab thickness} = 3 \text{ in.}$, so T-beam assumptions are valid.
7. From Equation 8.21, compute steel area: $A_s = \rho b d = 0.00270(48)(14) = 1.81 \text{ in}^2$.
8. From Tables A-4.10 and A-4.11, we select steel reinforcement, as shown in Figure 8.48: two No. 9 bars with $A_s = 2.0 \text{ in}^2$.
9. From Table A-4.11, check whether this choice fits within the beam web (or stem) width of 12 in. Two No. 9 bars require 7.58 in., so the choice works in a 12-in.-wide beam.
10. The steel ratio has already been checked (step 5). The check for deflection control is the same as for negative moment and need not be repeated.

Shear

Wood and steel beams are generally designed for bending and checked for shear. If a beam selected for bending cannot safely resist the shear stresses, a larger section must be used. Reinforced concrete beams are almost never acceptable for shear after they are designed for bending, because shear stresses, combined with bending stresses, produce diagonal tension within the beam. Since concrete is so weak in tension, excessive shear (really diagonal tension) would cause the beam to fail catastrophically. Rather than increase the size of the cross section to the point where the concrete can safely resist all diagonal tension stresses, shear (web) reinforcement is used where the shear stress exceeds the capacity of the concrete.

Web reinforcement, consisting of U- or rectangular-shaped steel stirrups, is generally made from No. 3 or No. 4 bars, bent as shown in Figure 8.49. The force resisted by each stirrup is based on an area twice the size of the bent bar, or $2A_s$, since two prongs of each stirrup are present at any diagonal tension crack (Figure 8.50). Thus, assuming that diagonal tension cracks form at a 45° angle, the number of stirrups

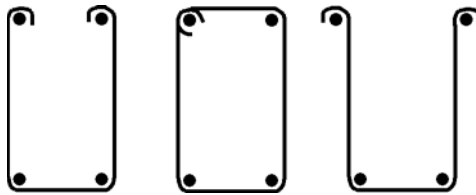


FIGURE 8.49
Typical web steel (stirrups) to resist diagonal tension associated with shear stress in beams

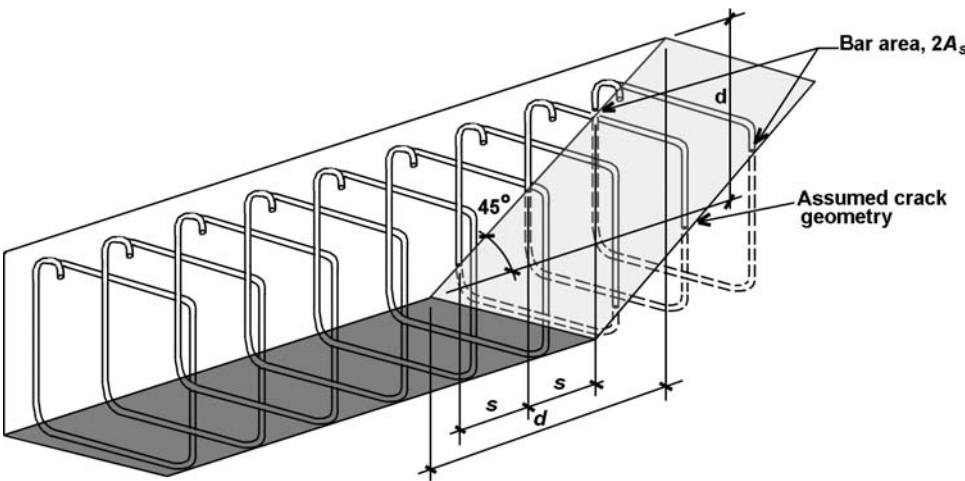


FIGURE 8.50
Assumed crack geometry for calculation of web steel capacity to resist shear forces (at diagonal tension cracks)

resisting tension within each crack is d/s , where d = the effective depth of the beam and s = the stirrup spacing.

At failure, corresponding to yielding of the stirrups, the total force resisted by the steel web reinforcement is, therefore, equal to the number of stirrups times the force resisted by each; that is, $V_s = (d/s)(2A_s f_y)$ or:

$$V_s = 2A_s f_y d/s \tag{8.36}$$

where

- V_s = the total force resisted by web reinforcement
- d = the effective depth of the beam
- s = the stirrup spacing
- A_s = the area of the reinforcing bar from which the stirrup is made
- f_y = the yield stress of the reinforcing bar, 60 ksi in all text examples

Solving for the stirrup spacing, we get:

$$s = 2A_s f_y d / V_s \quad (8.37)$$

The concrete itself also inhibits the formation of diagonal tension cracks; its contribution can be taken as:

$$V_c = 2\sqrt{f'_c} bd \quad (8.38)$$

where

V_c = the total force resisted by the concrete (lb)

f'_c = the cylinder strength of the concrete (psi)

b = the width of the beam (in.)

d = the effective depth of the beam (in.)

The strength design method for shear in concrete beams stipulates that the design shear force, V_u , at any section (produced by factored loads) not exceed the available capacity of the concrete and web steel combined. When the strength reduction factor for shear, ϕ , is included, we get:

$$V_u \leq \phi(V_c + V_s) \quad (8.39)$$

where

V_u = the design shear force

ϕ = capacity reduction factor = 0.75 for shear (Table A-5.2)

V_s and V_c = the values defined in Equations 8.36 and 8.38

There are several practical limitations concerning web steel, as follows:

The closest practical stirrup spacing is 3 to 4 in.

The first stirrup is generally placed at a distance $s/2$ from the face of the support.

The maximum stirrup spacing is the smaller of $d/2$, 24 in., or $2A_s f_y / (50b)$; except when $V_s > 2V_c$, in which case the first two criteria are reduced by half (to the smaller of $d/4$ or 12 in.). Both f_y and f'_c are expressed in psi units; b (in.) is the beam width, and d is the effective depth (in.).

A minimum amount of web steel is required, even if $V_u < \phi V_c$; only when $V_u < 0.5 \phi V_c$ can shear reinforcement be discontinued.

A single stirrup size is used throughout a given beam; the spacing of these stirrups varies to account for changing values of shear along the span of the beam. For uniformly loaded spans, except as noted later, the maximum shear force at the face of the support is:

$$V_u = w_u L_u / 2 \quad (8.40)$$

where w_u is the uniformly distributed factored, design load (lb/ft or kips/ft), and l_u is the clear span (ft). This applies for plan geometries with relatively equal spans and unfactored live loads that are no more than three times the unfactored dead load, just as for the moment values listed in Table A-8.7. The one exception is at the “interior” support of end spans in continuous structures, for which the design shear should be taken as 1.15 times the value in Equation 8.40. Since the point of critical (maximum) shear is actually measured at a distance d from the face of the beam’s support—whether that support consists of wall, column, or girder—it makes no difference if the span used in Equation 8.40 is measured from face of support or support centerline. In either case, the “theoretical” value shown in Equation 8.40 must be reduced to the value computed at the critical section. Figure 8.51*b* shows such a critical section measured from the face of support as well as a typical pattern of shear force and web reinforcement for a uniformly loaded beam (Figure 8.51*c*). The stirrup spacing is symmetrical; only half is shown. Equations for web steel are reproduced in Table A-8.6.

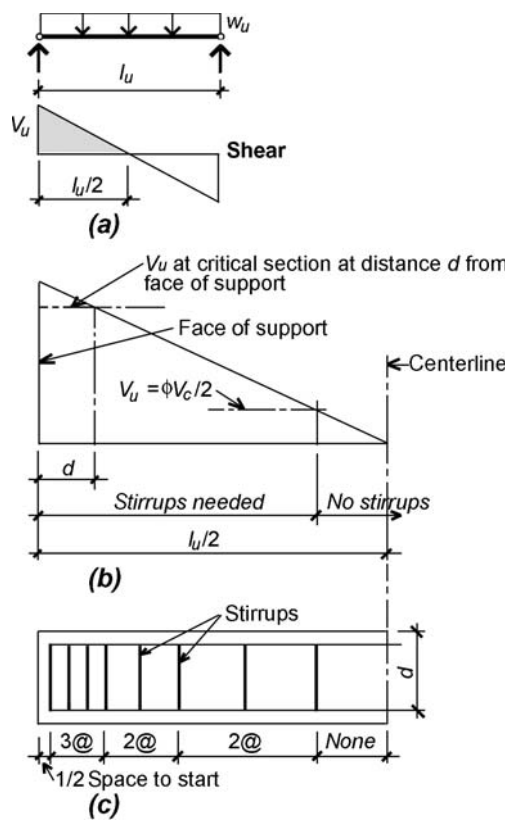


FIGURE 8.51

Shear diagram (a) for a uniformly loaded beam; with (b) half of the shear diagram enlarged and (c) beam elevation showing typical stirrup spacing

Example 8.11 Design shear reinforcement (stirrups) for reinforced concrete beam**Problem definition**

Design the distribution of web steel (use No. 3 bars) for the cross section shown in Figure 8.52, assuming a factored design load, $w_u = 6$ kips/ft on a clear interior span, $l_u = 30$ ft. Use $f'_c = 4000$ psi and $f_y = 60$ ksi.

Solution overview

Compute concrete capacity; find minimum, maximum and intermediate (optional) spacing for stirrups; sketch distribution of stirrups along length of beam.

Problem solution


All equations can be found in Table A-8.6 with lb or psi units; these have been converted to kips or ksi units in what follows, except where lb or psi units are specifically required (Table A-8.6, parts C and F).

1. Compute concrete shear capacity (Table A-8.6, part C):


$$V_c = 2bd\sqrt{f'_c} = 2(12)(24)\sqrt{4000} = 36,429 \text{ lb} = 36.43 \text{ kips}$$

2. Find minimum spacing of No. 3 stirrups at critical V_u (at distance d from support), as shown in Figure 8.53:

The maximum design shear at the face of support, V_u , can be taken as $w_u l_u / 2 = 90$ kips for interior spans. The design shear at the critical distance, d , from the face of support can be found using similar triangles (Figure 8.53): V_u at distance, $d = 78$ kips.

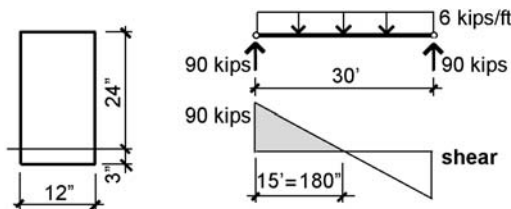**FIGURE 8.52**

Cross section, load, and shear diagrams for Example 8.10

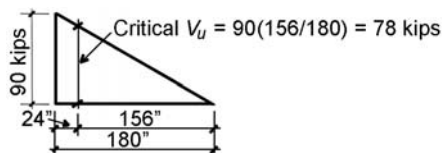**FIGURE 8.53**

Shear diagram for calculation of critical design shear for Example 8.10

From Table 8.6, part *E*: the steel capacity, $V_s \geq V_u/\phi - V_c = 78/0.75 - 36.43 = 67.57$ kips.

From Table A-4.10, the area of a No. 3 bar is $A_s = 0.11 \text{ in}^2$. From Table 8.6, part *B*: the required spacing, $s \leq 2A_s f_y d / V_s = 2(0.11)(60)(24)/67.57 = 4.69 \text{ in}$. Round down the required spacing to the first half-inch increment: $s = 4.5 \text{ in}$.

3. Find maximum spacing of No. 3 stirrups:

From Table A-8.6 part *F*, and since $V_s = 67.57 \text{ kips} \leq 2V_c = 2(36.43) = 72.86 \text{ kips}$, the maximum stirrup spacing is governed by the smaller of $d/2 = 12 \text{ in.}$, 24 in. , or $2A_s f_y / (50b) = 22 \text{ in.}$ (f_y must be in psi units in this equation!). The maximum spacing is, therefore, 12 in.

The location along the beam elevation where this maximum stirrup spacing can begin is found as follows. First, find the steel capacity corresponding to the maximum spacing from Table 8.6, part *A*: $V_s = 2A_s f_y d / s = 2(0.11)(60)(24)/12 = 26.4 \text{ kips}$. Next, find the total design shear corresponding to the steel and concrete capacities at this location from Table 8.6, part *D*: $V_u = \phi(V_c + V_s) = 0.75(36.43 + 26.4) = 47.12 \text{ kips}$. Finally, use similar triangles to determine the distance from the beam centerline corresponding to the location where maximum stirrup spacing can begin, as shown in Figure 8.54. The starting point for maximum spacing is no further than 94.24 in. from the beam centerline.

4. Find location where no stirrups are needed:

From Table 8.6, part *G*, $V_u = 0.5\phi V_c = 0.5(0.75)(36.43) = 13.66 \text{ kips}$.

The location along the beam elevation where no stirrups are required can be found by using similar triangles, as shown in Figure 8.55. The starting point for no stirrups is no further than 27.32 in. from the beam centerline.

5. (Optional) Select intermediate spacing between minimum and maximum values determined earlier:

Choose a spacing between the smallest required at the support (4.5 in.) and the maximum (12 in.), for example, $s = 8 \text{ in.}$

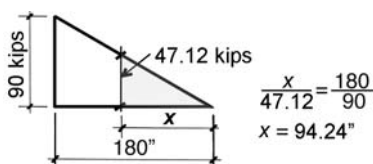


FIGURE 8.54

Shear diagram for calculation of location where maximum stirrup spacing can begin for Example 8.10

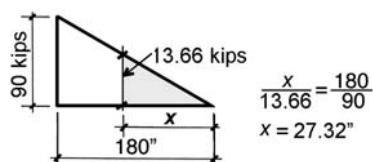
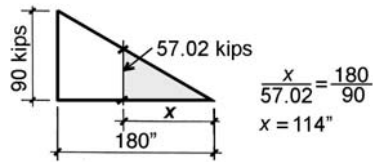
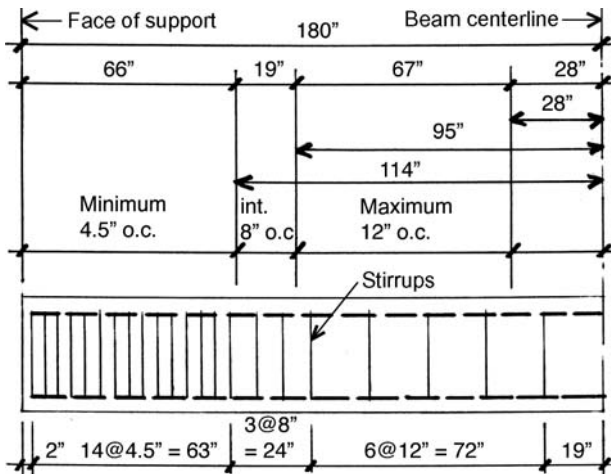


FIGURE 8.55

Shear diagram for calculation of location where no stirrups are required for Example 8.10

**FIGURE 8.56**

Shear diagram for calculation of location where intermediate stirrup spacing may begin for Example 8.10

**FIGURE 8.57**

Elevation of beam showing spacing of stirrups for Example 8.10

Determine starting point for intermediate spacing as follows. First, find the steel capacity corresponding to the chosen spacing: from Table A-8.6, part A, $V_s = 2A_s f_y d/s = 2(0.11)(60)(24)/8 = 39.6$ kips. Next, find the total design shear corresponding to the steel and concrete capacities at this location from Table 8.6, part D: $V_u = \phi(V_c + V_s) = 0.75(36.43 + 39.6) = 57.02$ kips. Finally, use similar triangles to determine the distance from the beam centerline corresponding to the location where this intermediate stirrup spacing can begin, as shown in Figure 8.56. The starting point for intermediate spacing, $s = 8$ in., is no further than 114 in. from the beam centerline.

6. Sketch the distribution of web steel (stirrups) for one-half of the beam. The first stirrup is generally placed at a distance $s/2 = 4.5/2 = 2\frac{1}{4}$ in. from the face of the support (round down to 2 in.). The remaining stirrups are arranged within the zones of minimum, intermediate (optional) and maximum spacing, as shown in Figure 8.57. In this example, the middle 38 in. (i.e., $19 \text{ in.} \times 2$) of the beam is not required to have stirrups.


This page intentionally left blank

Connections

9

Structural elements are connected to form structural systems; the connections thus constitute an intermediate condition between elements and systems and are not, strictly speaking, part of the elements themselves. Such connections, however, do have a direct bearing on the types of assumptions made when the individual elements (or systems) are analyzed. Specifically, when the various elements of structure—columns, beams, and so on—are considered individually, we show them either as constrained by hinges and rollers, free to translate and rotate, or fixed in such a way that all relative movement is prevented.

These abstract constraints are models of the actual conditions encountered by such elements when they are connected within actual structural systems. For example, beams are attached to girders, walls, or columns; columns are attached to foundations, transfer girders, or other columns; and tension elements are hung from beams or inserted within truss systems. It may seem surprising that the conventional means of attaching structural elements to each other with nails, screws, bolts, welds, and reinforcing bars corresponds to the abstract hinges, rollers, or fixed constraints encountered in the discussion of individual elements, or in the introductory chapter on statics: we rarely see connections in typical building structures that look anything like the diagrammatic representation of the constraints shown in Figure 9.1.

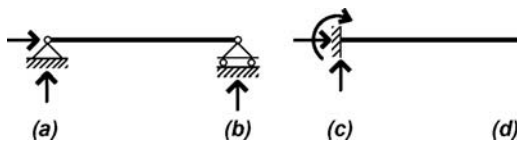**FIGURE 9.1**

Abstract symbols for constraints, including (a) hinge or pin-end, (b) roller, (c) fixed, and (d) free end (same as Figure 1.14)


In fact, the relationship between the reality of a connection and the abstract modeling of it as hinge, roller, etc., is quite interesting. On the one hand, it is possible to design a real connection so that it both appears and behaves just like the abstract model.

More commonly, however, one starts with a convenient means for connecting real materials and then chooses a constraint model that approximates the behavior of this connection. Of course, such typical and “convenient” connections have evolved over time so that their behavior is in line with the assumptions we make about the types of movement, and the magnitude of forces and moments transmitted, between the elements being connected. It is the latter group of typical connection strategies that are discussed in the following sections about wood, steel, and reinforced concrete. These connections must resist the same sort of forces already encountered in the design of the structural elements themselves: direct compression and tension, as well as shear. Bending does not often show up directly in the design of fasteners, as it can usually be resolved into the other forces already mentioned.


WOOD

Were it only the force of gravity—the resistance to live and dead loads—that wood structures encountered, it would be possible to assemble structural elements by literally resting one upon the other—that is, by stacking them so that the ends of beams or the bottom of posts *bear* upon plates, beams, or posts positioned below them, with the surfaces in contact between elements subject only to compressive stress. However, because there are always other loads, including both the horizontal and upward components of wind and earthquake forces, and various impact loads that could dislodge or overturn elements designed exclusively for downward-acting loads, the idealized condition represented by this model must be adjusted by using fasteners that respond to those nongravity forces as well. That being said, the basic idea of stacking one wood element on top of the other remains an important strategy for assembling many wood structures, as can be seen by examining a typical section for light wood framing (Figure 9.2): in such cases, the necessary resistance to lateral and upward loads, from foundation to roof, is often accomplished by superimposing metal straps and other fasteners at key joints.

Aside from the use of metal straps, plates, and other more complex hangers and brackets, wood elements are typically connected using nails, bolts, and screws (we will be considering only lag screws, sometimes referred to as “lag bolts,” here). These fasteners can be used in two distinct ways: primarily as “dowels” inserted perpendicular to the direction of load, but also in “withdrawal,” that is, subject to tension forces parallel to the direction of load. The designation for the capacity of a dowel-type fastener (i.e., a fastener stressed in shear) is Z ; the capacity of a fastener used in withdrawal is designated as W , as shown in Figure 9.3. In both cases, the capacity must be multiplied by adjustment factors; the adjusted capacities are designated Z' and W' respectively.

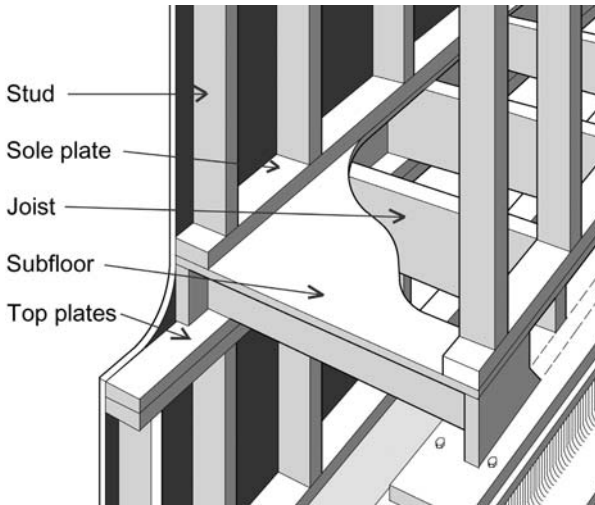**FIGURE 9.2**

Platform framing showing joists bearing on plates, plates bearing on studs, and studs bearing on plates (siding, building paper, insulation, vapor retarder, and interior finishes not shown)

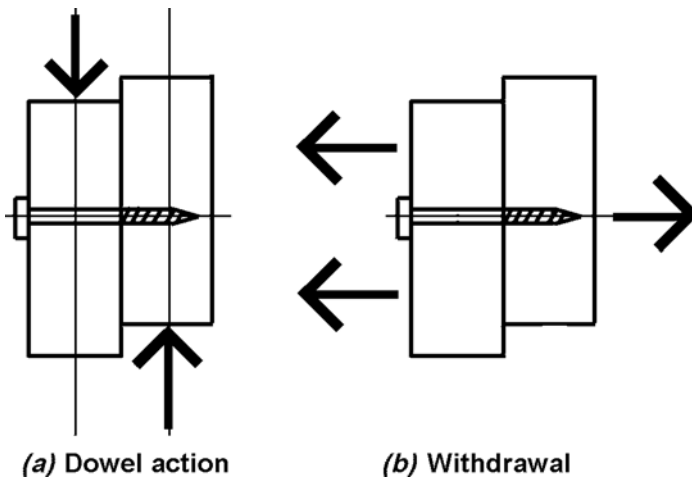**FIGURE 9.3**

Wood fasteners with (a) dowel action; or (b) in withdrawal

Where the head of a lag screw or bolt, or the nut of a bolt, comes in contact with a wood member, a circular or square washer is inserted between the metal and wood surfaces in order to distribute the load imparted by the metal fastener over a greater surface area of wood. This is a requirement for bolts and lag screws subjected to either shear or tension.

Shear

With respect to dowel-type action, nails and screws typically connect only two members (the “side member” being the piece into which the nail is first hammered or the screw is first inserted; the “main member” being the piece connected behind the side member). Such connections are in “single shear,” since there is only a single shear plane between the side and main member (Figure 9.4a). Bolts can connect two members in single shear, but also can connect three members in “double shear.” In the latter case, the main member is in the center, with the two outside members defined as side members, as shown in Figure 9.4b. Where bolts are used in single shear, the main member is defined as the thicker piece (if any), since either side could serve as the point of insertion without altering the behavior of the connection.

Typical idealized diagrams representing the forces on dowel-type fasteners in single shear are often misleading, since neither the structure (Figure 9.5a) nor the fasteners themselves (Figure 9.5b) would be in rotational equilibrium with only a single force couple.

The actual pattern of forces acting on such fasteners is more complex, since these forces must satisfy all three equations of equilibrium. Several possibilities exist for the arrangement of forces on the fasteners that are consistent with the requirements for equilibrium. For example, as shown in Figure 9.6a, the force acting downward on the left-hand member can be “balanced” by two forces in the right-hand member; critical stress patterns applied to the wood by the fasteners are shown schematically in Figure 9.6b, assuming that only stresses in the left-hand member have reached critical values. This pattern of stress is designated Mode I.

Several other patterns of force and stress can develop in the wood connection. Figure 9.7 illustrates Mode II, in which critical stresses develop in both members. The inclination of the fastener (Figure 9.7b) is exaggerated to show how the pattern of critical stresses develops alternately on opposite sides of the fastener.

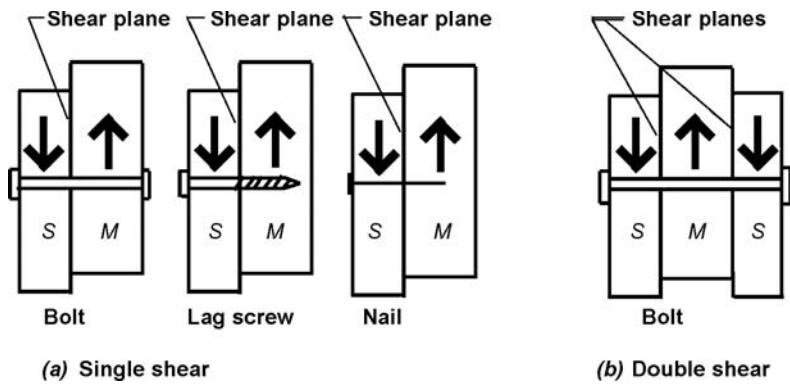
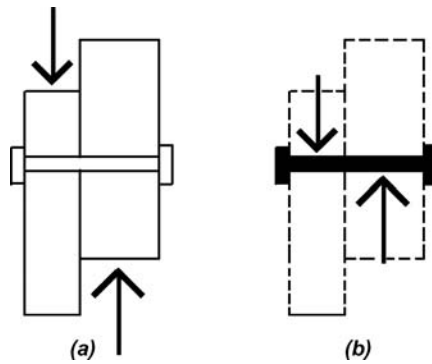
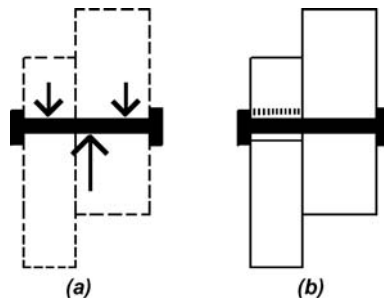


FIGURE 9.4

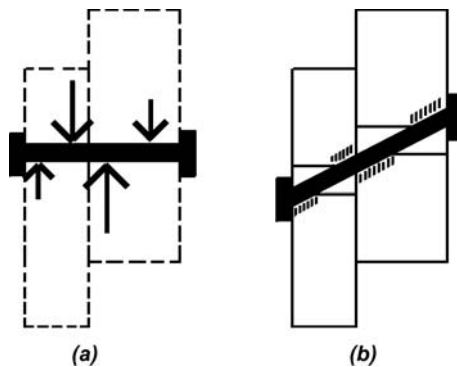
Examples of (a) single shear and (b) double shear. “S” indicates side member; “M” indicates main member

**FIGURE 9.5**

Simple single-shear model with two equal and opposite forces, but rotational equilibrium unaccounted for (a) forces acting on wood members and (b) forces acting on dowel-type fastener

**FIGURE 9.6**

Mode I behavior of fastener in single shear, showing (a) pattern of forces on fastener and (b) corresponding critical stresses on wood member

**FIGURE 9.7**


Mode II behavior of fastener in single shear, showing (a) pattern of forces on fastener and (b) corresponding critical stresses on wood member

All together, researchers have identified four behavioral modes with dowel-type fasteners. For Modes III and IV (not illustrated), yielding of the fastener itself is presumed to have occurred; in these two latter cases, not only is the resistance of the wood to the pressure exerted by the fastener considered, but also the strength of the steel fastener itself. With these four modes, plus two variations each for Modes I and III (where critical stresses might occur either in the main or side member), there are six possible ways in which stress can develop in a single-shear connection, resulting in six possible values for the force that a single fastener can safely develop. Clearly, it is the *smallest* of these six allowable forces that governs the connection design. For members connected in double shear, two of the modes are not considered, as they are incompatible with the geometry of elements in double shear. Thus, only four equations need to be checked for double-shear connections.

Because the equations that have been developed for these six behavioral modes (four for double shear) acknowledge possible yielding of the steel fasteners, they are known as “yield limit” equations. They can be used for bolts, lag screws, or nails—and not only for wood-to-wood connections, but also where steel plates are used for the side member(s). They are really not intended to be solved by hand; instead, three alternative strategies are commonly employed to design wood fasteners: (1) the use of spreadsheets or structural analysis software to solve the equations, (2) the use of tables containing commonly encountered fastener capacities, and (3) the use of “rules of thumb” in the form of tables and figures showing fastener details sanctioned by building codes. In most of the examples that follow, tables are used to find lateral design values. For a more detailed look at the use of yield limit equations, see Example 9.7 and Table A-9.15.

In general, fasteners should be placed in wood connections in such a way that the lines of force in the members being joined are aligned; a misaligned force is just another word for a force couple, which results in bending at the joint. Single-shear connections, as shown in Figure 9.4*a*, are inherently subject to such bending, whereas double-shear connections, as shown in Figure 9.4*b*, are inherently symmetrical and, therefore, less likely to be subject to unanticipated bending stresses. On the other hand, many single-shear connections are embedded within, and attached to, a matrix of structural elements—sheathing, transverse members, and so on—that effectively relieve the fasteners themselves of the burden of resisting stresses arising out of the misalignment. In the single-shear examples that follow, it is assumed that such additional structural elements (not shown in the examples) are actually present.

Aside from material properties for wood and steel, two other relationships between fastener and wood member must be accounted for: the *penetration* of lag screws and nails into the main member of the connection, as described in Appendix A-9.3; and the *grain orientation* of the various members being connected, with respect to the direction of load, as shown in Figure 9.8. To obtain full lateral design values, lag screw penetration must be at least equal to $8D$ and nail penetration must be at least equal to $10D$ (where D is the fastener diameter).

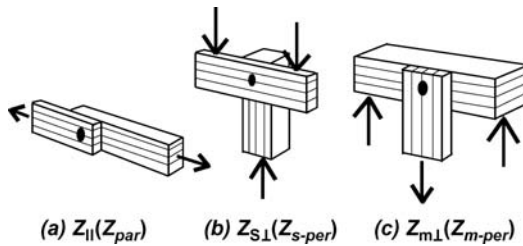**FIGURE 9.8**

For dowel-type fasteners, three orientations of load to wood grain are possible, shown with their commonly used designations and equivalent keyboard-friendly designations, Z_{par} , Z_{s-per} , and Z_{m-per} . The latter designations are used in this text: (a) Z_{par} is the fastener capacity, where both the side and main members are loaded parallel to grain; (b) Z_{s-per} is the fastener capacity where the side member is loaded perpendicular to grain while the main member is loaded parallel to grain; and (c) Z_{m-per} is the fastener capacity, where the main member is loaded perpendicular to grain while the side member is loaded parallel to grain. The case where both members are loaded perpendicular to grain is uncommon and is, therefore, not considered here.

Just as the allowable stresses for wood structural elements in tension, compression, or bending are adjusted to account for the actual behavioral properties of wood, the design values for wood fasteners are also adjusted in several ways. Two of these adjustments have already been discussed in the chapter on material properties, although there are subtle differences in their application to fasteners. The duration of load factor (C_D) accounts for changes in the strength of wood connections based on the length of time (duration) that the load is applied. However, because the yield limit equations used to analyze single- and double-shear connections can also be used where steel side members are combined with wood main members, the allowable stress for such *steel* members has been reduced by a factor of 1.6, corresponding to the maximum duration-of-load adjustment for *wood* members under wind or seismic loading. In this way, C_D may be applied to the entire connection design (so that the steel stress, already reduced, is increased up to its actual value in cases where the load combination includes wind or seismic forces), simplifying the design process, although making the steel side member design conservative for load combinations that do not include wind or seismic forces (since in those cases, the steel stress is still initially reduced, but not increased by the same amount).

The wet service factor (C_M) accounts for the increased strength of wood when used “dry.” For connection design, it is also important to consider the moisture content of the wood when it was first fabricated, since a change from an initial “wet” fabrication condition to a “dry” service condition can weaken the connection in some cases.

Two additional adjustments apply to dowel-type fasteners only, and only when the fastener diameter is greater or equal to $\frac{1}{4}$ in. (i.e., for bolts and lag screws). The group action adjustment (C_g) accounts for reductions in strength that may occur when comparing the behavior of a single fastener to that of a group of fasteners;

the geometry factor (C_{Δ}) includes a series of possible reductions that come into play when fasteners are closely spaced or are placed too close to the edge or end of a wood member, as shown in Figure 9.9. The orientation of the wood grain determines the “edge” and “end” of the members, irrespective of the load direction, whereas “row spacing” parameters are measured with respect to the direction of the load (a “row of fasteners” being parallel to the direction of load).

For nails only, a toe-nail factor adjustment, C_{tn} , is used for lateral or withdrawal design values (see Table A-9.8) when the side and main members are fastened with nails driven at a 30° angle to the face of the side member.

The general strategy for designing wood connections is to first find the capacity of a *single* fastener, using one of the strategies discussed (i.e., using yield limit equations or various tabular design aids), and then to multiply that capacity by the number of fasteners comprising the connection. As already suggested, this total capacity for multiple fasteners is explicitly modified using the group action adjustment factor C_g ; the other adjustments— C_D , C_M , and C_{Δ} —can be applied to either the entire connection or just a single fastener, but should only be applied once each per connection. A temperature factor, C_t , should be applied to wood elements subjected to sustained high temperatures: see Table A-9.9.

The complete dowel-type fastener design process for wood elements is summarized here; this summary constitutes the “Solution overview” within the examples

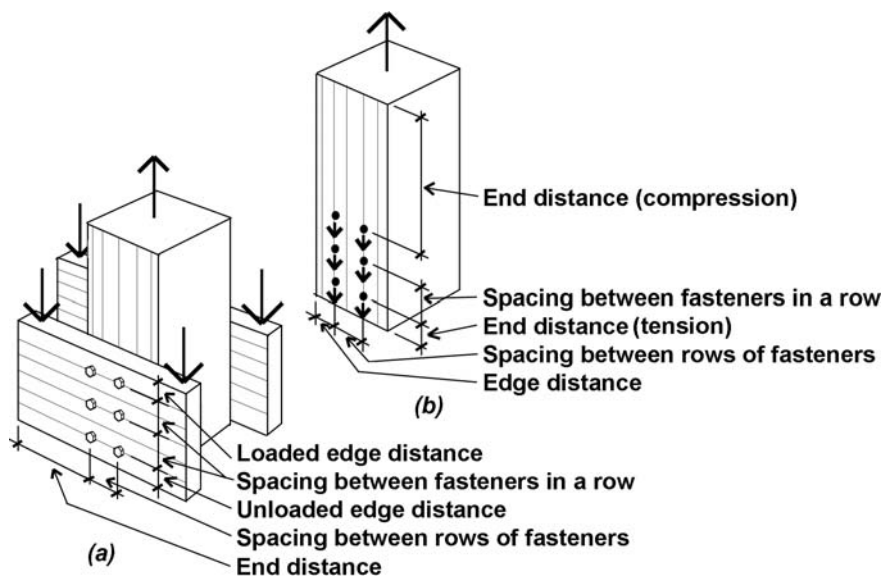


FIGURE 9.9

Geometry factor parameters: (a) a three-member connection is illustrated, with the grain represented by parallel lines on the surface of the members, and (b) a free-body diagram shows how the geometry factor parameters are measured on the middle member

that follow (with steps 4 and 5 eliminated where the connection consists of a single fastener only):

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and adjust capacity, Z , accordingly.
3. Adjust for duration of load, wet service conditions, and geometry.
4. For multiple-fastener connections only, adjust for group action, and then multiply the adjusted single-fastener capacity by the number of fasteners in the connection.
5. Remember that in addition to the fasteners, the *element itself* must be designed in a manner that accounts for the presence of bolt or lag screw holes (nail holes are not considered in structural element design). For multiple-fastener connections only, and only where forces are parallel to grain and in tension, also check the element for row and group tear-out (see Chapter 6).

Tables for computing fastener capacity are included in the appendices; specific guidelines for the use of these tables are provided in the examples that follow.

Example 9.1 Analyze wood single-shear connection using one bolt

Problem definition

Find the capacity of a connection (single shear) consisting of a 2×10 beam connected to a 6×6 post using one $\frac{3}{4}$ -in.-diameter bolt, as shown in Figure 9.10. The wood used is Hem-Fir,

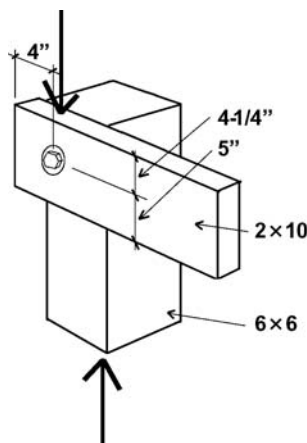


FIGURE 9.10

Single-shear bolted connection with a single fastener for Example 9.1

and the bolts are fabricated from ordinary, low-strength, A307 steel, as is typical for wood connections. Assume live and dead loads only, dry fabrication and service conditions, and spacing as shown.

Solution overview

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.
3. Adjust for duration of load, moisture, and geometry.
4. Adjust for group action (not applicable for single fastener connections).
5. Check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes (not included in this example).

Problem solution

1. From Table A-9.10, the lateral design value, Z_{s-per} , is 460lb. The value of Z chosen corresponds to the following condition: the side member (for bolted connections in single shear, the side member is defined as the *thinner* of the two members) is oriented so that the load is perpendicular to the direction of grain, while the main member is oriented so that the load is parallel to the direction of grain. This corresponds to Z_{s-per} , as defined in Figure 9.8.
2. From Table A-9.3 (Note 4), penetration is only an issue with lag screws and nails, since bolts must always fully penetrate the members being connected. Therefore, no reduction of the tabular lateral design value is necessary, and it remains equal to $Z_{s-per} = 460\text{lb}$.
3. Adjustments are as follows:

C_D for typical values of live and dead load is 1.0 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

C_g does not apply to single-fastener connections.

C_{Δ} is found by testing four separate criteria (Table A-9.7): spacing between fasteners in a row (not applicable where only one fastener is used), spacing between rows of fasteners (not applicable where only one fastener is used), end distance, and edge distance. It is sometimes useful to sketch the members separately, showing dimensions for the relevant geometry factor parameters (Figure 9.11).

In the calculations that follow, the fastener diameter is $D = \frac{3}{4}\text{in.} = 0.75\text{in.}$

Spacing criteria: For a single fastener connection, the spacing criteria (for spacing between rows and spacing of fasteners within a row) do not apply.

End distance: Adjustment criteria for end distance appear in Table A-9.7, part C. For the horizontal member, the loading direction is perpendicular to grain, so the minimum end distance for full value (i.e., for $C_{\Delta} = 1.0$) is $4D = 4(0.75) = 3\text{in.}$ Since the actual end distance of 4in. exceeds this value (and the other, unspecified, end distance is clearly larger), the geometry factor is $C_{\Delta} = 1.0$ for horizontal member end distance. For the vertical member, the loading direction is parallel to grain and the specified wood is a “softwood,” so the minimum end distance for full value for “tension” (i.e., for $C_{\Delta} = 1.0$) is $7D = 7(0.75) = 5.25\text{in.}$ Since the actual end distance, although unspecified,

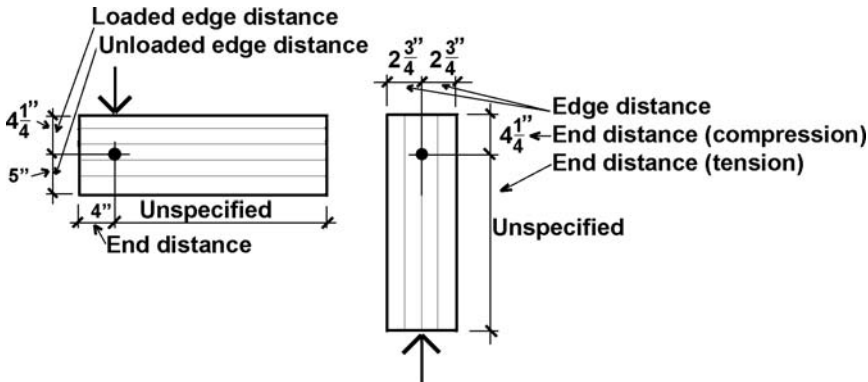


FIGURE 9.11

Geometry factor parameters for Example 9.1

clearly exceeds this, the geometry factor is $C_{\Delta} = 1.0$ for vertical member end distance (tension). For the full value in “compression,” we need a minimum end distance of $4D = 4(0.75) = 3$ in., which the actual end distance of $4\frac{1}{4}$ in. exceeds. The geometry factor, therefore, is also $C_{\Delta} = 1.0$ for vertical member end distance (compression).

Edge distance: Adjustment criteria for edge distance appear in Table A-9.7, part *D*. For the horizontal member, the loading direction is perpendicular to grain, so the loaded and unloaded edges must be determined separately. The minimum distance for the loaded edge (i.e., the edge toward which the fastener itself is bearing) is $4D = 4(0.75) = 3$ in., which the actual loaded edge distance of $4\frac{1}{4}$ in. exceeds. The minimum distance for the unloaded edge (i.e., the opposite edge away from which the fastener itself is bearing) is $1.5D = 1.5(0.75) = 1.125$ in., which the actual unloaded edge distance of 5 in. exceeds. For the vertical member, the loading direction is parallel to grain, so the minimum edge distance is determined from the so-called “slenderness ratio” of the fastener, l/D . The length of the fastener, l , within the main member is $5\frac{1}{2}$ in., so $l/D = 5.5/0.75 = 7.33$. Since this value is greater than 6, the minimum edge distance is $1.5D = 1.5(0.75) = 1.125$ in., which the actual edge distance of 2.75 in. exceeds. Since all the criteria for full value are met, the geometry factor for edge distance is $C_{\Delta} = 1.0$.

The geometry factor for the entire connection is found by using the smallest of the geometry factors found for any of the four conditions just tested (end, edge, and the two spacing conditions where applicable); therefore, we use $C_{\Delta} = 1.0$.

The adjusted lateral design value for the single fastener in the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: $Z' = Z(C_D)(C_M)(C_{\Delta}) = 460(1.0)(1.0)(1.0) = 460$ lb.

4. The group action factor, C_g , is 1.0 for all single-fastener connections (since only multiple-fastener connections can have “group action”). Therefore, the connection capacity is equal to $Z'(C_g) = 460(1.0) = 460$ lb.

5. We are not considering the design of the structural elements themselves in this example.
6. *Conclusion:* The total capacity of the connection (consisting of a single $\frac{3}{4}$ -in.-diameter bolt) is 460 lb.

Example 9.2 Analyze wood single-shear connection using multiple bolts

Problem definition

Find the capacity of a connection (single shear) consisting of two 2×8 tension elements connected by a 2×8 member using six $\frac{1}{2}$ -in.-diameter bolts in each member. The wood used is Hem-Fir No. 1, and the bolts are fabricated from ordinary, low-strength, A307 steel, as is typical for wood connections. Assume live, dead, and wind loads only, dry fabrication and service conditions, and spacing as shown in Figure 9.12.

Solution overview

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.
3. Adjust for duration of load, moisture, and geometry.
4. Adjust for group action, and then multiply the adjusted single-fastener capacity by the number of fasteners in the connection.
5. Check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes (not included in this example).

Problem solution

1. From Table A-9.10, the lateral design value, Z_{par} , is 410 lb. The value of Z chosen corresponds to the following condition: both the side and main member are oriented so that the load is parallel to the direction of grain, as defined in Figure 9.8.

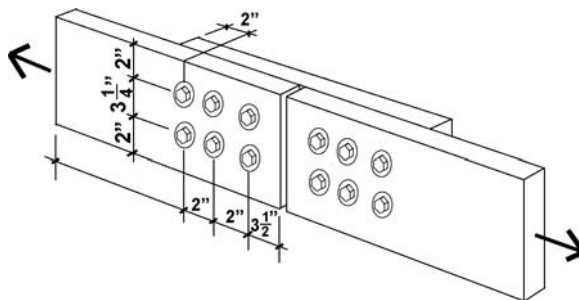


FIGURE 9.12

Single-shear bolted connection with multiple fasteners for Example 9.2

2. From Table A-9.3 (Note 4), penetration is only an issue with lag screws and nails, since bolts must always fully penetrate the members being connected. Therefore, no reduction of the tabular lateral design value is necessary, and it remains equal to $Z_{par} = 410\text{lb}$.

3. Adjustments are as follows:

C_D for live, dead, and wind load is 1.6 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

C_Δ is found by testing four separate criteria (Table A-9.7): spacing between fasteners in a row, spacing between rows of fasteners, end distance, and edge distance. It is sometimes useful to sketch the members separately, showing dimensions for the relevant geometry factor parameters (Figure 9.13).

In the calculations that follow, D is the fastener diameter of 0.5 in.

Spacing criteria: Adjustment criteria for spacing appear in Table A-9.7, parts *A* and *B*. For spacing between fasteners in a row, where the loading direction is parallel to grain, the minimum spacing for full value is $4D = 4(0.5) = 2\text{ in.}$ Since the actual spacing is 2 in., the full value applies, and $C_\Delta = 1.0$ for spacing between fasteners in a row. For spacing between rows of fasteners, again with the loading direction parallel to grain, the minimum required spacing is $1.5D = 1.5(0.5) = 0.75\text{ in.}$ Since the actual spacing (between rows) of 3.25 in. exceeds this value and is no greater than 5 in. (the maximum distance allowed between the outer rows of fasteners), the geometry factor is $C_\Delta = 1.0$ for spacing between rows of fasteners.

End distance: Adjustment criteria for end distance appear in Table A-9.7, part *C*. For all the members, the loading direction is parallel to grain. Where the fasteners are bearing toward the member end (in "tension") and where the wood is softwood, the minimum end distance for full value (i.e., for $C_\Delta = 1.0$) is $7D = 7(0.5) = 3.5\text{ in.}$ For the primary members, the actual end distance of 3.5 in. is no less than this, so the geometry factor is $C_\Delta = 1.0$. However, for the connecting member, shown to the right in Figure 9.13, the actual distance of 2 in. is between the absolute minimum ($3.5D = 1.75\text{ in.}$) and the required distance for full value ($7D = 3.5\text{ in.}$); therefore, the geometry factor is taken as the actual end distance divided by the minimum distance for full value, or $C_\Delta = 2/3.5 = 0.571$.

Edge distance: Adjustment criteria for edge distance appear in Table A-9.7, part *D*. For all the members, the loading direction is parallel to grain, so the minimum edge distance

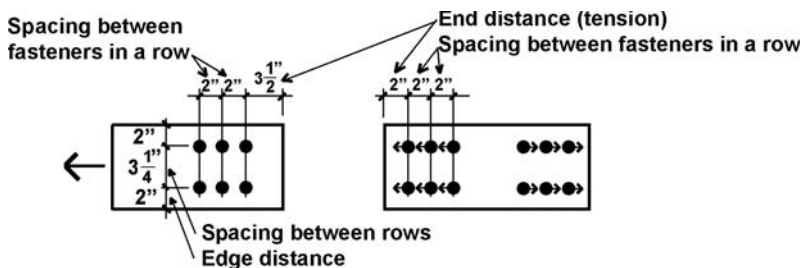


FIGURE 9.13

Geometry factor parameters for Example 9.2

is determined from the so-called slenderness ratio of the fastener, l/D . The length of the fastener, l , within all members is $1\frac{1}{2}$ in., so $l/D = 1.5/0.5 = 3.0$. Since this value is less than or equal to 6, the minimum edge distance is $1.5D = 1.5(0.5) = 0.75$ in., which the actual edge distance of 2.0 in. exceeds. The geometry factor for edge distance is, therefore, $C_\Delta = 1.0$.

The geometry factor for the entire connection is found by using the smallest of the geometry factors found for any of the four conditions just tested (end, edge, and the two spacing conditions where applicable): therefore, we use $C_\Delta = 0.571$, which was computed for the end distance of the connecting member.

The adjusted lateral design value for a single bolt in the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: $Z' = Z(C_D)(C_M)(C_\Delta) = 410(1.6)(1.0)(0.571) = 374.6$ lb.

4. From Table A-9.6, the group action factor, C_g , is 0.993, a conservative value based on 2×8 main and side members ($A_m = A_s =$ approximately 11 in^2), with three fasteners in a single row. The actual modulus of elasticity (Table A-3.9) for Hem-Fir No.1 is $E = 1,500,000$ psi, which is larger than the nominal value of $1,400,000$ psi assumed in Table A-9.6; the actual fastener spacing, $s = 2$ in., is smaller than the value, $s = 3$ in., assumed in the table; and the actual fastener diameter, $D = \frac{1}{2}$ in., is smaller than the value, $D = \frac{3}{4}$ in., assumed in the table. Therefore, the tabular value, $C_g = 0.993$, is conservative and can be used. Alternatively, a more accurate value for C_g can be found, based on the method described in Note 3 of Table A-9.6 and illustrated in Example 9.7.

Adjusting for group action and multiplying the single-fastener value for Z' found in step 3 by the number of fasteners in the connection, we get a total adjusted connection capacity equal to $374.6(0.993)(6) = 2232$ lb.

5. We are not considering the design of the structural elements themselves in this example. Tension, row, and group tear-out are considered in Chapter 6, Example 6.2.
6. *Conclusion:* The total capacity of the connection (consisting of six $\frac{1}{2}$ -in.-diameter bolts) is 2232 lb.


Example 9.3 Analyze wood double-shear connection using multiple bolts

Problem definition

Find the capacity of a connection (double shear) consisting of two 2×8 tension elements connected by two shorter 2×8 members, using six $\frac{1}{2}$ -in.-diameter bolts in each member. The wood used is Hem-Fir No.1, and the bolts are fabricated from ordinary, low-strength, A307 steel, as is typical for wood connections. Assume live, dead, and wind loads only, dry fabrication and service conditions, and spacing as shown in Figure 9.14.

Solution overview

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.

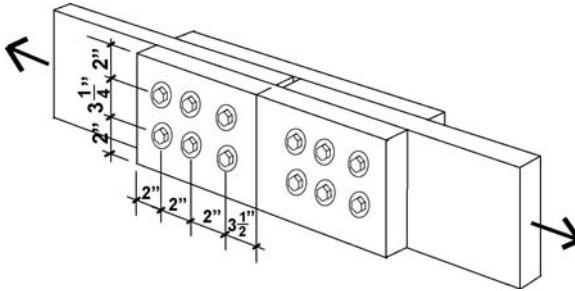**FIGURE 9.14**

Double-shear bolted connection with multiple fasteners for Example 9.3

3. Adjust for duration of load, moisture, and geometry.
4. Adjust for group action, and then multiply the adjusted single-fastener capacity by the number of fasteners in the connection.
5. Not included in this example (check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes).

Problem solution

1. From Table A-9.11, the lateral design value, Z_{par} , is 900lb. The value of Z chosen corresponds to the following condition: both the side and main member are oriented so that the load is parallel to the direction of grain, as defined in Figure 9.8.
2. From Table A-9.3 (Note 4), penetration is only an issue with lag screws and nails, since bolts must always fully penetrate the members being connected. Therefore, no reduction of the tabular lateral design value is necessary, and it remains equal to $Z_{par} = 900\text{lb}$.
3. Adjustments are as follows:


C_D for live, dead, and wind load is 1.6 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

C_Δ is found by testing four separate criteria (Table A-9.7): spacing between fasteners in a row, spacing between rows of fasteners, end distance, and edge distance. It is sometimes useful to sketch the members separately, showing dimensions for the relevant geometry factor parameters (Figure 9.15).

In the calculations that follow, D is the fastener diameter of 0.5 in.

Spacing criteria: Adjustment criteria for spacing appear in Table A-9.7, parts *A* and *B*. For spacing between fasteners in a row, where the loading direction is parallel to grain, the minimum spacing for full value is $4D = 4(0.5) = 2\text{ in.}$ Since the actual spacing is 2 in., the full value applies, and $C_\Delta = 1.0$. For spacing between rows of fasteners, again with the loading direction parallel to grain, the minimum required spacing is $1.5D = 1.5(0.5) = 0.75\text{ in.}$ Since the actual spacing (between rows) of 3.25 in. exceeds this value and is no greater than 5 in. (the maximum distance allowed between the outer rows of fasteners), the geometry factor is $C_\Delta = 1.0$.

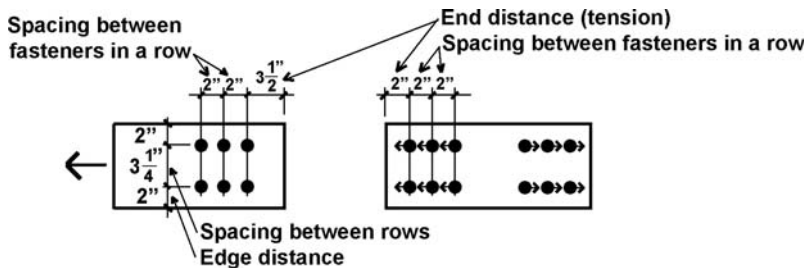**FIGURE 9.15**

Geometry factor parameters for Example 9.3

End distance: Adjustment criteria for end distance appear in Table A-9.7, part C. For all the members, the loading direction is parallel to grain. Where the fasteners are bearing toward the member end (i.e., in “tension” and for softwood) the minimum end distance for full value (i.e., for $C_{\Delta} = 1.0$) is $7D = 7(0.5) = 3.5$ in. For the main members, the actual end distance of 3.5 in. is no less than this, so the geometry factor is $C_{\Delta} = 1.0$. However, for the connecting member, shown to the right in Figure 9.15, the actual distance of 2 in. is between the absolute minimum ($3.5D = 1.75$ in.) and the required distance for full value ($7D = 3.5$ in.); therefore, the geometry factor is taken as the actual end distance divided by the minimum distance for full value, or $C_{\Delta} = 2/3.5 = 0.571$.

Edge distance: Adjustment criteria for edge distance appear in Table A-9.7, part D. For all the members, the loading direction is parallel to grain, so the minimum edge distance is determined from the so-called slenderness ratio of the fastener, l/D . The fastener length, l , within all members is $1\frac{1}{2}$ in., so $l/D = 1.5/0.5 = 3.0$. Since this value is less than or equal to 6, the minimum edge distance is $1.5D = 1.5(0.5) = 0.75$ in., which the actual edge distance of 2.0 in. exceeds. The geometry factor, therefore, is $C_{\Delta} = 1.0$.

The geometry factor for the entire connection is found by using the smallest of the geometry factors found for any of the four conditions just tested (end, edge, and the two spacing conditions where applicable); therefore, we use $C_{\Delta} = 0.571$, which was computed for the end distance of the connecting member.

The adjusted lateral design value for a single bolt in the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: $Z' = Z(C_D)(C_M)(C_{\Delta}) = 900(1.6)(1.0)(0.571) = 822.2$ lb.

4. From Table A-9.6, the group action factor, C_g , is 0.983, a conservative value based on a single 2×8 main member and two 2×8 side members ($A_m =$ approximately 11 in^2 ; $A_s =$ approximately 17 in^2), with three fasteners in a single row. The actual modulus of elasticity (Table A-3.9) for Hem-Fir No.1 is $E = 1,500,000$ psi, which is larger than the nominal value of 1,400,000 psi assumed in the table; the actual fastener spacing, $s = 2$ in., is smaller than the value, $s = 3$ in., assumed in the table; and the actual fastener diameter, $D = \frac{1}{2}$ in., is smaller than the value, $D = \frac{3}{4}$ in., assumed in the table. Therefore, the tabular value, $C_g = 0.983$, is conservative and can be used. Alternatively, a more accurate value for C_g can be found, based on the method described in Note 3 of Table A-9.6 and illustrated in Example 9.7.

Adjusting for group action and multiplying the single-fastener value for Z' found in step 3 by the number of fasteners in the connection, we get a total adjusted connection capacity equal to $822.2(0.983)(6) = 4849\text{ lb}$.

5. We are not considering the design of the structural elements themselves in this example. Tension, row, and group tear-out are considered in Chapter 6, Example 6.2.
6. *Conclusion:* The total capacity of the connection (consisting of six $\frac{1}{2}$ -in.-diameter bolts) is 4849 lb.

Example 9.4 Analyze wood double-shear connection using multiple bolts and steel side plates

Problem definition

Find the capacity of a connection (double shear) consisting of a 6×6 tension member connected by two $\frac{1}{4}$ -in. steel side plates, using four $\frac{5}{8}$ -in.-diameter bolts. The wood used is Douglas Fir-Larch (North) No. 1; the steel plates are ASTM A36 steel; and the bolts are fabricated from ordinary, low-strength, A307 steel, as is typical for wood connections. Assume live and dead loads only, dry fabrication and service conditions, and spacing as shown in Figure 9.16.

Solution overview

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.
3. Adjust for duration of load, moisture, and geometry.

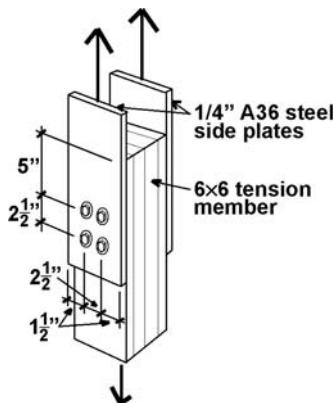


FIGURE 9.16

Double-shear bolted connection with multiple fasteners and steel side plates for Example 9.4

4. Adjust for group action, and then multiply the adjusted single-fastener capacity by the number of fasteners in the connection.
5. Not included in this example (check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes).

Problem solution

1. From Table A-9.12, the lateral design value, Z_{par} , is 2390lb. The value of Z chosen corresponds to the following condition: the main member is oriented so that the load is parallel to the direction of grain, as defined in Figure 9.8. The orientation of the steel side plates to the direction of load is not relevant, since there is no “grain” in the steel plates that influences its strength.
2. From Table A-9.3 (Note 4), penetration is only an issue with lag screws and nails, since bolts must always fully penetrate the members being connected. Therefore, no reduction of the tabular lateral design value is necessary, and it remains equal to $Z_{par} = 2390$ lb.
3. Adjustments are as follows:

C_D for typical values of live and dead load is 1.0 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

C_{Δ} is found by testing four separate criteria (Table A-9.7): spacing between fasteners in a row, spacing between rows of fasteners, end distance, and edge distance. It is sometimes useful to sketch the members separately, showing dimensions for the relevant geometry factor parameters (Figure 9.17). Only the wood main member is considered here; the tension capacity and bolt spacing in the steel plate must be considered separately (see Chapter 6 for discussion of steel subjected to tension and the steel section of this chapter for discussion of bolt spacing).

In the calculations that follow, D is the fastener diameter of $\frac{5}{8}$ in. = 0.625in.

Spacing criteria: Adjustment criteria for spacing appear in Table A-9.7, parts *A* and *B*. For spacing between fasteners in a row, where the loading direction is parallel to grain, the minimum spacing for full value is $4D = 4(0.625) = 2.5$ in. Since the actual spacing

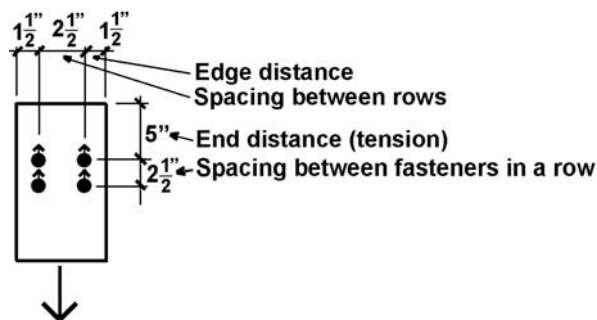


FIGURE 9.17

Geometry factor parameters for Example 9.4

is 2.5 in., the full value applies, and $C_{\Delta} = 1.0$. For spacing between rows of fasteners, again with the loading direction parallel to grain, the minimum required spacing is $1.5D = 1.5(0.625) = 0.9375$ in. Since the actual spacing (between rows) of 2.5 in. exceeds this value and is no greater than 5 in. (the maximum distance allowed between the outer rows of fasteners), the geometry factor is $C_{\Delta} = 1.0$.

End distance: Adjustment criteria for end distance appear in Table A-9.7, part C. For the main member, the loading direction is parallel to grain. Where the fasteners are bearing toward the member end (in tension) and where the wood is softwood, the minimum end distance for full value (i.e., for $C_{\Delta} = 1.0$) is $7D = 7(0.625) = 4.375$ in. The actual end distance of 5 in. is greater than this, so the geometry factor, $C_{\Delta} = 1.0$.

Edge distance: Adjustment criteria for edge distance appear in Table A-9.7, part D. For the main member, the loading direction is parallel to grain, so the minimum edge distance is determined from the so-called slenderness ratio of the fastener, l/D . The fastener length, l , within the main member is $5\frac{1}{2}$ in., so $l/D = 5.5/0.625 = 8.8$. Since this value is greater than 6, the minimum edge distance is either $1.5D = 1.5(0.625) = 0.9375$ in. or one-half of the spacing between rows $= 0.5(2.5) = 1.25$ in., whichever is greater: the minimum edge distance is therefore 1.25 in., which the actual edge distance of 1.5 in. exceeds. The geometry factor, therefore, is $C_{\Delta} = 1.0$.

The geometry factor for the entire connection is found by using the smallest of the geometry factors found for any of the four conditions just tested (end, edge, and the two spacing conditions where applicable); therefore, we use $C_{\Delta} = 1.0$.

The adjusted lateral design value for a single bolt in the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: $Z' = Z(C_D)(C_M)(C_{\Delta}) = 2390(1.0)(1.0)(1.0) = 2390$ lb.

4. From Table A-9.6 (part B for steel side members) the group action factor, C_g , is 0.997, a conservative value based on a 6×6 main member and two $\frac{1}{4}$ -in. steel side plates ($A_m =$ approximately 30 in^2 ; $A_s =$ approximately 3 in^2), with two fasteners in a single row. The actual modulus of elasticity (Table A-3.9) for Douglas Fir-Larch (North) No.1 is $E = 1,600,000$ psi (for posts and timbers), which is larger than the nominal value of 1,400,000 psi assumed in the table; the actual fastener spacing, $s = 2.5$ in., is smaller than the value, $s = 3$ in., assumed in the table; and the actual fastener diameter, $D = \frac{5}{8}$ in., is smaller than the value, $D = \frac{3}{4}$ in., assumed in the table; therefore, the tabular value, $C_g = 0.997$, is conservative and can be used. Alternatively, a more accurate value for C_g can be found, based on the method described in Note 3 of Table A-9.6 and illustrated in Example 9.7.

Adjusting for group action and multiplying the single-fastener value for Z' found in step 3 by the number of fasteners in the connection, we get a total adjusted connection capacity equal to $2390(0.997)(4) = 9531$ lb.

5. We are not considering the design of the structural elements themselves in this example. Tension, row, and group tear-out are considered in Chapter 6, Example 6.2.
6. *Conclusion:* The total capacity of the connection (consisting of six $\frac{1}{2}$ -in.-diameter bolts) is 9531 lb.

Example 9.5 Analyze wood single-shear connection using multiple lag screws**Problem definition**


Find the capacity of a connection (single shear) consisting of a 4×10 beam connected to an 8×8 post using six 6-in.-long, $\frac{1}{2}$ -in.-diameter lag screws. The wood used is Douglas Fir-Larch No.2, and the lag screws are fabricated from ordinary, low-strength, A307 steel. Assume live and dead loads only, dry fabrication and service conditions, and spacing as shown in Figure 9.18.

Solution overview

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.
3. Adjust for duration of load, moisture, and geometry.
4. Adjust for group action, and then multiply the adjusted single-fastener capacity by the number of fasteners in the connection.
5. Not included in this example (check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes).

Problem solution

1. From Table A-9.13, the lateral design value, Z_{s-per} , is 270lb. The value of Z chosen corresponds to the following condition: the side member is oriented so that the load is

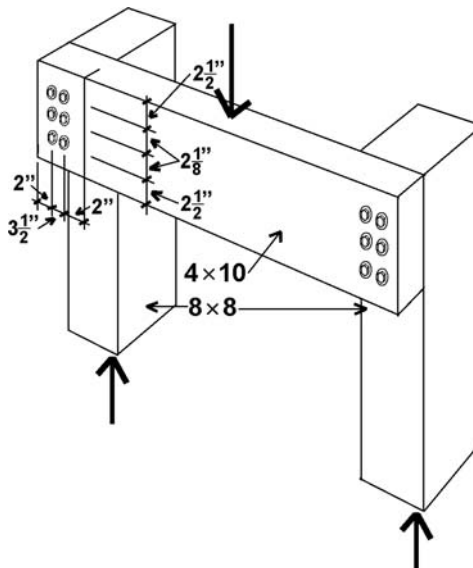**FIGURE 9.18**

Single-shear lag screw connection with multiple fasteners for Example 9.5

perpendicular to the direction of grain, while the main member is oriented so that the load is parallel to its grain, as defined in Figure 9.8.

2. Penetration must be checked for lag screws (see Table A-9.3 for notes on penetration; lag screw dimensions can be found in Table A-9.1). The actual penetration, $p = 2.1875$ in., can be found by first subtracting the side member thickness of 3.5 in. from the lag screw length, $L = 6$ in., to get 2.5 in.; and then subtracting the length of the tapered tip, $E = 0.3125$ in., from the 2.5 in. length within the main member, as illustrated in Figure 9.19.

This actual penetration is then compared to the minimum lengths for lag screw penetration in Table A-9.3: the absolute minimum is $4D = 4(0.5) = 2$ in.; the minimum penetration to obtain the full value of Z is $8D = 8(0.5) = 4$ in. Since the actual penetration is between these two values, the lateral design value, Z , is reduced by multiplying it by $p/(8D) = 2.1875/4 = 0.547$. Therefore, we use a lateral design value of $270 \times 0.547 = 148$ lb.

3. Adjustments are as follows:

C_D for typical values of live and dead load is 1.0 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

C_{Δ} is found by testing four separate criteria (Table A-9.7): spacing between fasteners in a row, spacing between rows of fasteners, end distance, and edge distance. It is sometimes useful to sketch the members separately, showing dimensions for the relevant geometry factor parameters (Figure 9.20).

In the calculations that follow, D is the fastener diameter of 0.5 in. (however, for lag screws, the so-called reduced body diameter, $D_r = 0.371$ in., is used to calculate lateral design values).

Spacing criteria: Adjustment criteria for spacing appear in Table A-9.7, parts *A* and *B*. For spacing between fasteners in a row for the horizontal member, where the loading direction is perpendicular to grain, the minimum spacing for full value is determined by the required values for the attached member (i.e., for the vertical member with loading parallel to grain). For spacing between rows of fasteners, again with the loading direction perpendicular to grain, the minimum required spacing is determined from the so-called slenderness ratio of the fastener, l/D . For lag screws, the dowel bearing length equals the penetration within the main member found in step 2, as noted in Table A.9.3. Therefore, the dowel bearing length, l , equals

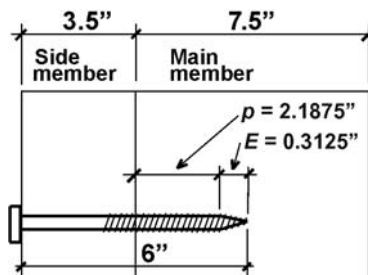


FIGURE 9.19

Penetration of lag screw into main member, for Example 9.5

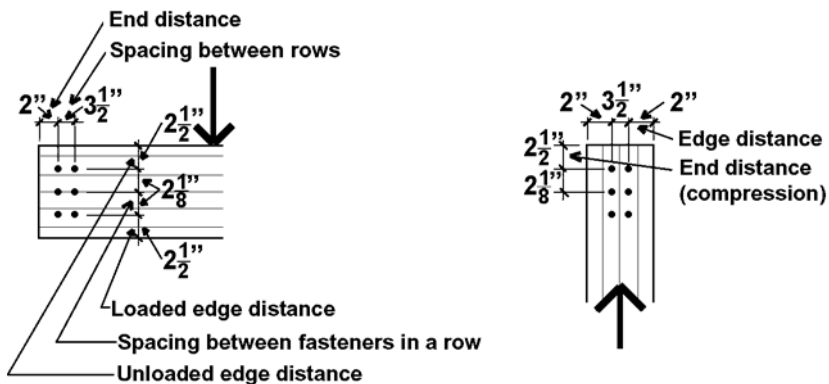


FIGURE 9.20

Geometry factor parameters for Example 9.5

2.1875 in., and $l/D = 2.1875/0.5 = 4.375$. Since this value is between 2 and 6, the minimum spacing between rows of fasteners is $(5l + 10D)/8 = (5 \times 2.1875 + 10 \times 0.5)/8 = 1.992$ in., which the actual spacing between rows of 3.5 in. exceeds. Therefore, the geometry factor is $C_{\Delta} = 1.0$.

For spacing between fasteners in a row, where the loading direction is parallel to grain, the minimum spacing for full value is $4D = 4(0.5) = 2$ in. Since the actual spacing is $2\frac{1}{8}$ in., the full value applies here (and also to the horizontal member), and $C_{\Delta} = 1.0$. For spacing between rows of fasteners, again with the loading direction parallel to grain, the minimum required spacing is $1.5D = 1.5(0.5) = 0.75$ in. Since the actual spacing (between rows) of 3.5 in. exceeds this value and is no greater than 5 in. (the maximum distance allowed between the outer rows of fasteners), the geometry factor is $C_{\Delta} = 1.0$.

End distance: Adjustment criteria for end distance appear in Table A-9.7, part C. For the horizontal member, the loading direction is perpendicular to grain, so the minimum end distance for full value (i.e., for $C_{\Delta} = 1.0$) is $4D = 4(0.5) = 2$ in. Since the actual end distance of 2 in. equals this value (and the other, unspecified, end distance is clearly larger), the geometry factor, $C_{\Delta} = 1.0$. For the vertical member, the loading direction is parallel to grain and the specified wood is a softwood, so the minimum end distance for full value for tension (i.e., for $C_{\Delta} = 1.0$) is $7D = 7(0.5) = 3.5$ in. Since the actual end distance, although unspecified, clearly exceeds this, the geometry factor is $C_{\Delta} = 1.0$. For the full value in "compression," we need a minimum end distance of $4D = 4(0.5) = 2$ in., which the actual end distance of $2\frac{1}{2}$ in. exceeds. The geometry factor therefore is also $C_{\Delta} = 1.0$.

Edge distance: Adjustment criteria for edge distance appear in Table A-9.7, part D. For the horizontal member, the loading direction is perpendicular to grain, so the loaded and unloaded edges must be determined separately. The minimum distance for the loaded edge (i.e., the edge toward which the fastener itself is bearing) is $4D = 4(0.5) = 2$ in., which the

actual loaded edge distance of $2\frac{1}{2}$ in. exceeds. The minimum distance for the unloaded edge (i.e., the opposite edge away from which the fastener itself is bearing) is $1.5D = 1.5(0.5) = 0.75$ in., which the actual unloaded edge distance of $2\frac{1}{2}$ in. exceeds. For the vertical member, the loading direction is parallel to grain, so the minimum edge distance is determined from the so-called slenderness ratio of the fastener, l/D . The dowel bearing length, l , within the main member is 2.1875 in., so $l/D = 2.1875/0.5 = 4.375$. Since this value is less than or equal to 6, the minimum edge distance is $1.5D = 1.5(0.5) = 0.75$ in., which the actual edge distance of 2.0 in. exceeds. The geometry factor therefore is $C_{\Delta} = 1.0$.

The geometry factor for the entire connection is found by using the smallest of the geometry factors found for any of the four conditions just tested (end, edge, and the two spacing conditions where applicable); therefore, we use $C_{\Delta} = 1.0$.

The adjusted lateral design value for a single lag screw in the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: $Z' = Z(C_D)(C_M)(C_{\Delta}) = 148(1.0)(1.0)(1.0) = 148$ lb.

4. From Table A-9.6, the group action factor, C_g , is 0.970 , a value based on an 8×8 main member and a side member with an effective area of 12.25 in^2 (because the side member is loaded perpendicular to grain, its effective area is taken as its thickness of 3.5 in. multiplied by the distance between the outer rows of fasteners, also 3.5 in.). For use in Table A-9.6, these areas are rounded as follows: $A_m = 56 \text{ in}^2$ and $A_s = 11 \text{ in}^2$. The actual fastener spacing, $s = 2$ in., is smaller than the value, $s = 3$ in., assumed in the table; and the actual fastener diameter, $D = \frac{1}{2}$ in., is smaller than the value, $D = \frac{3}{4}$ in., assumed in the table. However, the values for modulus of elasticity for dimension lumber and timbers in Table A-3.9 ($1,600,000$ psi for the side member; $1,300,000$ psi for the main member) are *not* both larger than the nominal value of $1,400,000$ psi assumed in the table. Therefore, the tabular value, $C_g = 0.970$, may not be conservative. Alternatively, a more accurate value for C_g can be found, based on the method described in Note 3 of Table A-9.6 and illustrated in Example 9.7.

Adjusting for group action (using $C_g = 0.970$), and multiplying the single-fastener value for Z' found in step 3 by the number of fasteners in the connection, we get a total adjusted connection capacity equal to $148(0.970)(6) = 861$ lb.

5. We are not considering the design of the structural elements themselves in this example.
6. **Conclusion:** The total capacity of the connection (consisting of six $\frac{1}{2} \times 6$ in. lag screws) is 861 lb.

Example 9.6 Design wood single-shear connection using common nails

Problem definition

Determine the number of 10d common nails needed to connect a typical 2×10 floor joist, spanning 11.5 ft and spaced at 16 in. on center, to a 2×6 stud, as shown in Figure 9.21. The wood used is Spruce-Pine-Fir No.1/No.2, the distributed loads on the floor consist of 40 psf live load and 10.5 psf dead load, and the wood is fabricated and used dry.

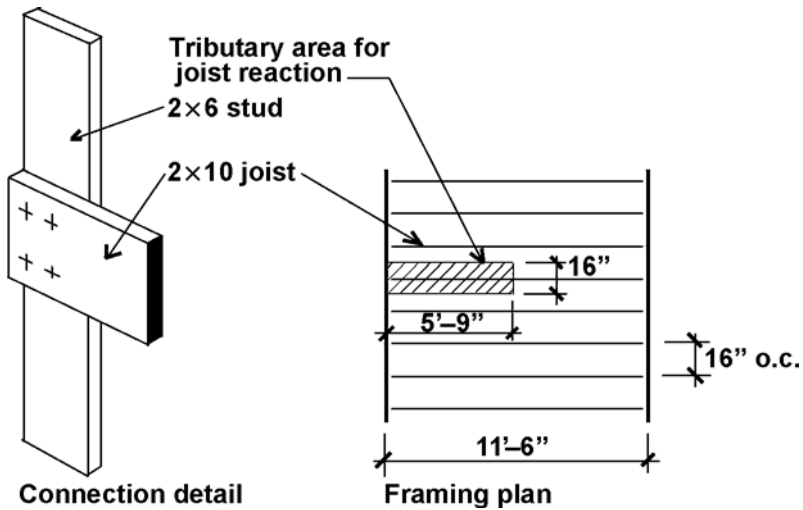


FIGURE 9.21

Single-shear nailed connection for Example 9.6


Solution overview

1. Find the capacity for a single fastener, Z .
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.
3. Adjust for duration of load, moisture, and geometry.
4. Group action does not apply to nailed connections.
5. Check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes (not applicable).
6. Find the total force acting on the connection and divide by the adjusted capacity for a single fastener to find the number of fasteners required.

Problem solution

1. From Table A-9.14, the lateral design value, Z , is 100lb, for a 10d nail and a $1\frac{1}{2}$ -in. side member.
2. In general, penetration must be checked for nails (see Table A-9.3): however, tabular values in Table A-9.14 already include reductions for penetration, so this step is only necessary when lateral design values are computed using other means. We can confirm that a penetration reduction is not necessary by computing the actual penetration, $p = 1.5$ in., as shown in Figure 9.22. First, subtract the side member thickness of 1.5 in. from the nail length of 3 in., to get 1.5 in. (nail dimensions can be found in Table A-9.2).

Next, the actual penetration is compared to the minimum requirements for nail penetration in Table A-9.3. Since $p = 1.5$ in. $\geq 10D = 10(0.148) = 1.48$ in., we can use the full lateral design value. For $p < 10D$, in addition to the necessary reduction in lateral capacity, the

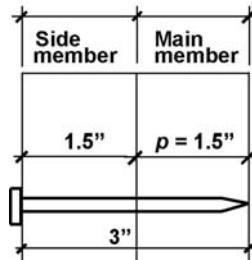**FIGURE 9.22**

Penetration of nail into main member for Example 9.6

dowel bearing length in the main member, l_m , is taken as the penetration minus the length of the tapered tip so that tabular lateral design values, which do not consider this reduced dowel bearing length, may be slightly nonconservative in some cases (specifically, they may differ in cases where the governing yield limit equation includes the dowel bearing length parameter).

The lateral design value, Z , remains 100 lb.

3. Adjustments are as follows:

C_D for live and dead load is 1.0 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

$C_{\Delta} = 1.0$ for dowel-type fasteners with $D < \frac{1}{4}$ in. This applies to virtually all nails, certainly for 10d nails with $D = 0.148$ in. (see Table A-9.2). While no specific numerical requirements are given for nail spacing and edge or end distances, nails should be configured so that splitting of the wood members does not occur.


The adjusted lateral design value for the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: $Z' = Z(C_D)(C_M)(C_{\Delta}) = 100(1.0)(1.0)(1.0) = 100$ lb.

- 4.** The group action factor, $C_g = 1.0$, for fasteners with diameter, $D < \frac{1}{4}$ in., that is, for most nailed connections.
- 5.** We are not considering the design of the structural elements themselves in this example.
- 6.** To determine the number of nails needed, we first find the total force acting at the connection—that is, the reaction of a typical joist—by multiplying the floor loads by the tributary area for half of a single joist: $(40 + 10.5)(5.75 \times 1.33) = 387.2$ lb. Dividing this total force by 100 lb (the capacity of a single fastener), we get the required number of fasteners, $n = 387.2/100 = 3.87$; that is, we need four 10d nails.

Example 9.7 Analyze wood double-shear bolted connection using yield limit and group action equations

Problem definition

Find the capacity of a connection (double shear) consisting of a 6×6 tension member connected by two $\frac{1}{4}$ -in. steel side plates, using four $\frac{5}{8}$ -in.-diameter bolts. The wood used is

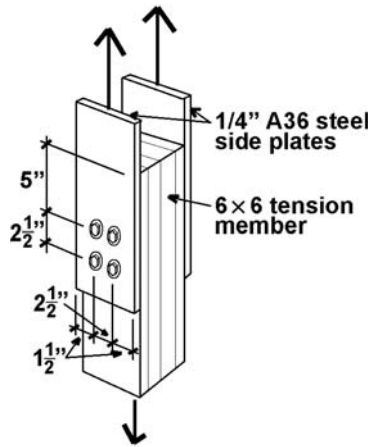**FIGURE 9.23**

Double-shear bolted connection with multiple fasteners and steel side plates for Example 9.7 (same as Figure 9.16 for Example 9.4)

Douglas Fir-Larch (North) No. 1; the side plates are ASTM A36 steel; and the bolts are fabricated from ordinary, low-strength, A307 steel, as is typical for wood connections. Assume live and dead loads only, dry fabrication and service conditions, and spacing as shown in Figure 9.23. Use yield limit and group action equations, rather than tabular values (see Example 9.4 for solution using tabular values).

Solution overview

1. Find the capacity for a single fastener, Z , using yield limit equations.
2. For lag screws and nails, check that penetration into the main member is at least $4D$ (for lag screws) or $6D$ (for nails), and reduce capacity, Z , if necessary.
3. Adjust for duration of load, moisture, and geometry.
4. Adjust for group action using group action factor equations, and then multiply the adjusted single-fastener capacity by the number of fasteners in the connection.
5. Check that the element itself is designed in a manner that accounts for the presence of bolt or lag screw holes (not included in this example).

Problem solution

1. To find the lateral design value, Z , for a single fastener using yield limit equations, follow the step-by-step method outlined in Table A-9.15. The main member is oriented so that the load is parallel to the direction of grain, as defined in Figure 9.8. The orientation of the steel side plates to the direction of load is not relevant, since there is no “grain” in the steel plates that influences its strength.

From Table A-3.11 (specific gravity), $G = 0.49$ for Douglas Fir-Larch (North).

$$D = \frac{5}{8}\text{in.} = 0.625\text{in.}$$

Main member ($D > 0.25$ in., wood, loaded parallel to grain): $F_{em} = 11,200G = 11,200(0.49) = 5488$ psi. Side member (A36 steel): $F_{es} = 87,000$ psi. It is common to round these values to the nearest 50 psi, so we will use $F_{em} = 5500$ psi.

$F_{yb} = 45,000$ psi for bolts.

Dowel bearing lengths are $l_m = 5.5$ in. and $l_s = 0.25$ in.

Compute the terms $R_e = F_{em}/F_{es} = 5500/87,000 = 0.06322$; and $R_t = l_m/l_s = 5.5/0.25 = 22.0$.

$R_d = 4K_\theta = 4(1.0) = 4$ (for Yield Modes I_m and I_s); $R_d = 3.6K_\theta = 3.6(1.0) = 3.6$ (for Yield Mode II); and $R_d = 3.2K_\theta = 3.2(1.0) = 3.2$ (for Yield Modes III_m, III_s, IV). In these equations, $K_\theta = 1 + 0.25(\theta/90) = 1.0$, since $\theta = 0^\circ$.

Compute the following coefficients:

$$\begin{aligned} k_1 &= \frac{\sqrt{R_e + 2R_e^2(1 + R_t + R_t^2) + R_t^2R_e^3} - R_e(1 + R_t)}{(1 + R_e)} \\ &= \frac{\sqrt{0.06322 + 2(0.06322)^2(1 + 22 + 22^2) + 22^2(0.06322)^3} - 0.06322(1 + 22)}{(1 + 0.06322)} \\ &= 0.5687 \end{aligned}$$

$$\begin{aligned} k_2 &= -1 + \sqrt{2(1 + R_e) + \frac{2F_{yb}(1 + 2R_e)D^2}{3F_{em}l_m^2}} \\ &= -1 + \sqrt{2(1 + 0.06322) + \frac{2(45,000)(1 + 2 \times 0.06322)(0.625)^2}{3(5500)(5.5)^2}} \\ &= 0.4852 \end{aligned}$$

$$\begin{aligned} k_3 &= -1 + \sqrt{\frac{2(1 + R_e)}{R_e} + \frac{2F_{yb}(2 + R_e)D^2}{3F_{em}l_s^2}} \\ &= -1 + \sqrt{\frac{2(1 + 0.06322)}{0.06322} + \frac{2(45,000)(2 + 0.06322)(0.625)^2}{3(5500)(0.25)^2}} \\ &= 9.1967 \end{aligned}$$

Compute Z for all applicable yield modes (four applicable modes for double shear):

For Yield Mode I_m, $Z = D l_m F_{em} / R_d = 0.625(5.5)(5500)/4 = 4726.6$ lb.

For Yield Mode I_s, $Z = 2 D l_s F_{es} / R_d = 2(0.625)(0.25)(87,000)/4 = 6796.9$ lb for double shear.

Yield Mode II does not apply to double-shear connections.

Yield Mode III_m does not apply to double-shear connections.

For Yield Mode III_s, $Z = \frac{2k_3 D l_s F_{em}}{(2 + R_e)R_d} = \frac{2(9.1967)(0.625)(0.25)(5500)}{(2 + 0.06322)(3.2)} = 2394.1$ lb.

For Yield Mode IV, $Z = \frac{2D^2}{R_d} \sqrt{\frac{2F_{em}F_{yb}}{3(1 + R_e)}} = \frac{(2)(0.625)^2}{3.2} \sqrt{\frac{2(5500)(45,000)}{3(1 + 0.06322)}} = 3041.4$ lb.

The smallest of the various yield mode values is then selected: $Z = 2394.1 \text{ lb}$ based on Yield Mode III_s.

2. Penetration is only an issue with lag screws and nails, since bolts must always fully penetrate the members being connected. Therefore, no reduction of the lateral design value is necessary, and it remains equal to $Z = 2394.1 \text{ lb}$.
3. Adjustments are as follows (same as for Example 9.4):

C_D for typical values of live and dead load is 1.0 (Table A-9.4).

C_M for members fabricated and used dry is 1.0 (Table A-9.5).

C_{Δ} is found by testing four separate criteria (Table A-9.7): spacing between fasteners in a row, spacing between rows of fasteners, end distance, and edge distance. It is sometimes useful to sketch the members separately, showing dimensions for the relevant geometry factor parameters (Figure 9.24). Only the wood main member is considered here; the tension capacity and bolt spacing in the steel plate must be considered separately (see Chapter 6 for discussion of tension and the steel section of this chapter for discussion of bolt spacing).

In the calculations that follow, D is the fastener diameter of $\frac{5}{8} \text{ in.} = 0.625 \text{ in.}$

Spacing criteria: Adjustment criteria for spacing appear in Table A-9.7, parts *A* and *B*. For spacing between fasteners in a row, where the loading direction is parallel to grain, the minimum spacing for full value is $4D = 4(0.625) = 2.5 \text{ in.}$ Since the actual spacing is 2.5 in., the full value applies, and $C_{\Delta} = 1.0$. For spacing between rows of fasteners, again with the loading direction parallel to grain, the minimum required spacing is $1.5D = 1.5(0.625) = 0.9375 \text{ in.}$ Since the actual spacing (between rows) of 2.5 in. exceeds this value and is no greater than 5 in. (the maximum distance allowed between the outer rows of fasteners), the geometry factor is $C_{\Delta} = 1.0$.

End distance: Adjustment criteria for end distance appear in Table A-9.7, part *C*. For the main member, the loading direction is parallel to grain. Where the fasteners are bearing toward the member end (in tension) and for softwood, the minimum end distance for full value (i.e., for $C_{\Delta} = 1.0$) is $7D = 7(0.625) = 4.375 \text{ in.}$ The actual end distance of 5 in. is greater than this, so the geometry factor is $C_{\Delta} = 1.0$.

Edge distance: Adjustment criteria for edge distance appear in Table A-9.7, part *D*. For the main member, the loading direction is parallel to grain, so the minimum edge distance

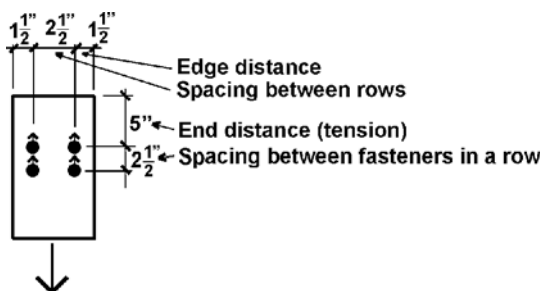


FIGURE 9.24

Geometry factor parameters for Example 9.7 (same as Figure 9.17 for Example 9.4)

is determined from the so-called slenderness ratio of the fastener, l/D . The fastener length, l , within the main member is $5\frac{1}{2}$ in., so $l/D = 5.5/0.625 = 8.8$. Since this value is greater than 6, the minimum edge distance is either $1.5D = 1.5(0.625) = 0.9375$ in., or one-half of the spacing between rows $= 0.5(2.5) = 1.25$ in., whichever is greater: the minimum edge distance is therefore 1.25 in., which the actual edge distance of 1.5 in. exceeds. The geometry factor, therefore, is $C_{\Delta} = 1.0$.

The geometry factor for the entire connection is found by using the smallest of the geometry factors found for any of the four conditions just tested (end, edge, and the two spacing conditions where applicable); therefore, we use $C_{\Delta} = 1.0$.

The adjusted lateral design value for a single bolt in the connection is found by multiplying the lateral design value from step 2 by the various adjustment factors determined in step 3: C_D , C_M , and C_{Δ} : $Z' = Z(C_D)(C_M)(C_{\Delta}) = 2394.1(1.0)(1.0)(1.0) = 2394.1$ lb.

4. The group action factor, C_g , can be found based on the method described in Note 3 of Table A-9.6:

$$D = 0.625 \text{ in.}$$

$$\gamma = 270,000(D^{1.5}) = 270,000(0.625^{1.5}) = 133,409.$$

$$s = 2.5 \text{ in.}$$

$$E_m = 1,600,000 \text{ psi (Table A-3.9); } E_s = 29,000,000 \text{ psi (Table A-3.12, Note 1).}$$

$$A_m = 30.25 \text{ in}^2; A_s = 2(0.25 \times 5.5) = 2.75 \text{ in}^2 \text{ (Table A-4.1).}$$

$$u = 1 + (133,409) \frac{2.5}{2} \left[\frac{1}{(1,600,000)(30.25)} + \frac{1}{(29,000,000)(2.75)} \right] = 1.0055; \text{ and}$$

$$m = 1.0055 - \sqrt{1.0055^2 - 1} = 0.900.$$

$$R_{EA} = [(1,600,000)(30.25)] / [(29,000,000)(2.75)] = 0.607.$$

$$n = 2.$$

$$C_g = \left[\frac{0.900(1 - 0.900^{2(2)})}{2[(1 + 0.607 \times 0.900^2)(1 + 0.900) - 1 + 0.900^{2(2)}]} \right] \left[\frac{1 + 0.607}{1 - 0.900} \right] = 0.999.$$

Adjusting for group action and multiplying the single-fastener value for Z' found in step 3 by the number of fasteners in the connection, we get a total adjusted connection capacity equal to $2394.1(0.999)(4) = 9567$ lb.

5. We are not considering the design of the structural elements themselves in this example. Tension, row, and group tear-out are considered in Chapter 6, Example 6.2.
6. **Conclusion:** The total capacity of the connection (consisting of six $\frac{1}{2}$ -in.-diameter bolts) is 9567 lb.

Withdrawal

Where a fastener is itself stressed in tension, it is considered to be loaded in “withdrawal,” as a failure of the connection would cause it to “withdraw”—pull out—from the member into which it was inserted. For lag screws and nails, selected withdrawal design values, designated W to distinguish them from lateral design

values, Z , are tabulated in Tables A-9.16 and A-9.17. These tabular values increase with higher wood specific gravity, G , and larger shaft diameter, D , and are based on the following empirical equations: for lag screws, $W = 1800G^{3/2}D^{3/4}$; for nails, $W = 1380G^{5/2}D$. In these equations, W is the withdrawal design value per inch of penetration (lb), G is the specific gravity of the wood, and D is the fastener diameter (in.). While it is permitted to use nails in withdrawal, it is advisable to alter the connection geometry, if possible, so that such unthreaded fasteners are stressed in shear, rather than in tension. Unlike the penetration length of lag screws stressed in shear (laterally), the penetration of lag screws in withdrawal only includes that portion of the shank length that is both embedded in the main member *and* threaded (excluding the tapered tip).

Lag screw withdrawal values must be reduced by 75% when the lag screws are inserted into the end grain of a wood member; nails are *not permitted* to be loaded in withdrawal from the end grain of wood members. Aside from computing the capacity of a connection based on computed withdrawal values, W , the tensile strength of lag screws loaded in withdrawal must also be checked, and, where the head (or washer) of the lag screw is in contact with a wood member, the bearing stress of the washer on this member must also be checked. Finally, the adjusted withdrawal capacity per inch of penetration, W' , is computed by multiplying W by the appropriate adjustment factors: where in-service temperatures are no more than 100°F, only duration of load and wet service factors apply to fasteners in withdrawal (see Tables A-9.4 and A-9.5).

For bolted connections, “withdrawal” is not possible; instead, where bolts are placed in tension, the tensile strength of the bolt itself, as well as the bearing of the bolt (or washer) on the surface of the wood member, must be checked.

Example 9.8 Design wood connection in withdrawal, using lag screws

Problem definition


Determine the number of 3-in.-long, ½-in.-diameter, lag screws needed to connect a ¼-in. steel plate holding a 2800-lb load to a 4 × 10 wood beam, as shown in Figure 9.25. The wood used is Spruce-Pine-Fir No.1/No.2, the loads are dead and live only (so that $C_D = 1.0$), and the wood is fabricated and used dry. Assume that the steel plate capacity is adequate.

Solution overview

Find the capacity of a single lag screw in withdrawal; divide the total load by this value to determine the required number of lag screws.

Problem solution

1. From Table A-9.16, the withdrawal design value, W , per inch of penetration, is 291 lb, for a 3-in.-long, ½-in.-diameter, lag screw. The adjusted value, $W' = W(C_D)(C_M) = 291(1.0)(1.0) = 291$ lb.

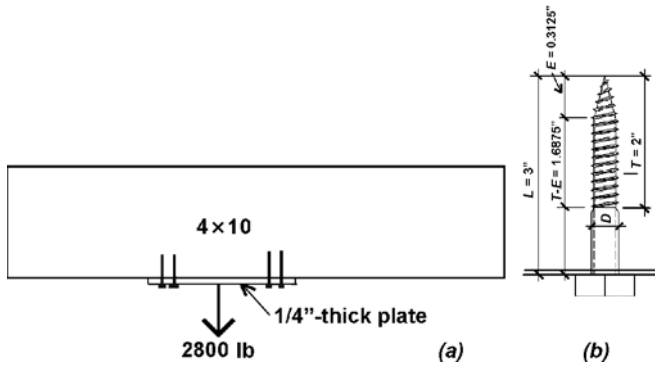**FIGURE 9.25**

Withdrawal load on lag screws for Example 9.8

2. From Table A-9.1, it can be seen that the actual penetration into the main member (i.e., the length of the threaded portion of the lag screw that engages the main member, not including the tapered tip, or $T - E = 1.6875$ in. Therefore, each lag screw resists $(291)(1.6875) = 491$ lb in withdrawal.
3. Since the total load to be resisted is 2800 lb, the required number of lag screws is $2800/491 = 5.7$. Round up and use six 3-in.-long, $\frac{1}{2}$ -in.-diameter lag screws.

Example 9.9 Analyze wood connection in withdrawal, using common nails

Problem definition

A steel bracket designed to hold heavy items is fastened to the floor joist above it using four 16d common nails, as shown in Figure 9.26. These nails must go through a $\frac{1}{2}$ -in. drywall ceiling, as well as the $\frac{1}{8}$ -in.-thick steel bracket itself, before reaching the wood joist, fabricated from Douglas Fir-Larch. How much load can the bracket carry, based on the capacity of the fasteners (and assuming that the strength of the bracket itself is adequate)?

Solution overview

Find the capacity of a single nail in withdrawal; multiply the single-nail capacity by the number of nails to find the capacity of the bracket.

Problem solution

1. From Table A-9.17, the withdrawal design value for a single 16d nail, W , per inch of penetration, is 40 lb. The adjusted value, $W' = W(C_D)(C_M) = 40(0.9)(1.0) = 36$ lb. The decision to use a value of $C_D = 0.9$ is based on an evaluation of the loads, which are essentially of a permanent nature (i.e., dead loads).
2. The actual penetration into the main member is the total nail length minus the drywall and steel thickness; from Table A-9.2, we see that $p = 3.5 - (\frac{1}{2} + \frac{1}{8}) = 2.875$ in. Therefore, each nail resists $(36)(2.875) = 103.5$ lb in withdrawal.

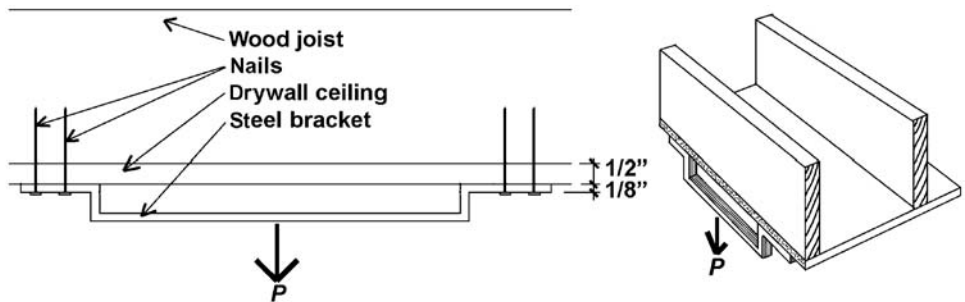


FIGURE 9.26


Withdrawal load on nailed bracket for Example 9.9

3. Since there are four nails, the total capacity of the rack is $P = 4(103.5) = 414\text{ lb}$. However, it would be wiser to use a threaded connector (such as a screw or lag screw) instead of a nail in this situation.

Bearing

Where a wooden column or beam bears on another structural element, a compressive stress acts on the bearing surfaces. The use of the plural (“surfaces”) indicates that bearing always acts in two directions, so that, for example, a joist bearing on a plate implies that the plate is also bearing on the joist. In theory, the bearing stress is the same on both surfaces; in practice, the effective bearing area in some cases may be increased by adding $\frac{3}{8}\text{ in.}$ in the direction of the bearing length—measured in the direction parallel to the grain of the wood—to account for the ability of the wood grain to distribute the load across a larger area. For the beam and post shown in Figure 9.27, the bearing stress of the post on the beam, or the beam on the post, is equal to the load, P , divided by the bearing area, $W \times T$. Since wood is weaker when stressed perpendicular to its grain, the critical bearing stress will almost always occur acting downward on the surface of the beam, rather than upward on the post. If the distance, D , measured from the edge of the post to the end of the beam, is greater than 3 in. , and the bearing length, W , of the post is less than 6 in. , we can reduce the effective bearing stress of the post on the beam by dividing the load, P , by the larger effective bearing area, $T(W + \frac{3}{8}\text{ in.})$. This stress is then compared to the adjusted allowable compressive stress (perpendicular to grain). For joists and other beams, the allowable stress is in compression, perpendicular to the grain of the wood, whereas when considering the bearing stress on columns, the allowable stress value is taken for compression parallel to grain (but without including the adjustment factor for stability, since buckling is not relevant at the surface where bearing stresses are being measured).

For compressive stresses parallel to grain, a steel plate must be used at the point of bearing to distribute such stresses more evenly across the surfaces in contact, but only in cases when these stresses exceed 75% of F_c^* . See Table A-3.4 for adjustments to allowable compressive stresses.

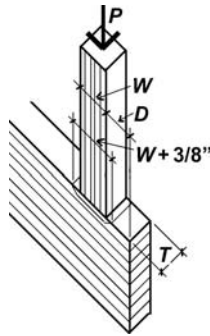**FIGURE 9.27**

Bearing of post on beam: the direction of grain is indicated by the parallel lines on each surface

Example 9.10 Check wood connection in bearing

Problem definition

A 4×4 post bears at the midpoint of a 4×10 girder. The 5000-lb load transferred to the girder through the post consists of live, dead, and wind loads. Check whether the bearing capacity is adequate, assuming that both members are Hem-Fir No.2.

Solution overview

Find the effective bearing area of the post on the girder; find the actual “effective” bearing stress on the girder; compare this stress to the allowable compressive stress perpendicular to grain.

Problem solution

1. Because the post has a bearing length less than 6 in., and is more than 3 in. from the end of the girder, we can use an effective bearing length $\frac{3}{8}$ in. greater than its actual bearing length of 3.5 in. (see Table A-4.1 for cross-sectional dimensions). The effective bearing area is therefore $= T \times (W + \frac{3}{8}) = 3.5(3.5 + 0.375) = 13.56 \text{ in}^2$. The actual bearing stress on surface of the girder is $5000/13.56 = 369 \text{ psi}$.
2. This value is compared with the adjusted allowable bearing stress, F'_{c-per} . From Table A-3.3, the design value for compression perpendicular to grain for the Hem-Fir girder is $F_{c-per} = 405 \text{ psi}$.
3. Assuming that the members are used indoors, the relevant adjustment factors are for size ($C_F = 1.0$) and wet service ($C_M = 1.0$) only; duration of load does not apply to compression perpendicular to grain. Therefore, $F'_{c-per} = 405(1.0)(1.0) = 405 \text{ psi}$, which is greater than the actual effective bearing stress. The connection is satisfactory with respect to bearing.
4. The 4×4 post need not be directly checked for bearing stress (since its allowable stress in compression parallel to grain will be greater than the girder's allowable stress perpendicular to grain). However, we check to see whether the actual stress on the post exceeds 75% of F^*_C , the allowable compressive stress parallel to grain with all adjustments except for the

column stability factor; if it does, a steel bearing plate should be specified. The actual stress is the load divided by the post area, or $5000/(3.5 \times 3.5) = 408$ psi, where the cross-sectional dimensions can be found in Table A-4.1. From Tables A-3.3 and A-3.4, the adjusted allowable stress (without C_p) multiplied by 75% is $(0.75)1300(1.15)(1.0) = 1121$ psi (the size factor is $C_F = 1.15$ for the 4×4 post). Since this value is greater than the actual stress, no bearing plates are required between the post and girder.

In the design of such a connection, it must not be assumed that gravity will hold the post firmly against the girder under all conditions; the two members must also be mechanically connected to guard against unintended movement.

STEEL


Steel structural elements are typically connected to each other using high-strength bolts or welds. Especially in so-called field connections—those that take place at the construction site—bolts are preferred, as they are easier, and generally less expensive, to execute in such contexts (outdoors, with unpredictable weather conditions, and without convenient access to welding equipment). Often, when welding is found to be either necessary or expedient, it occurs at the fabricating shop, although field welding is sometimes unavoidable.

Steel connections are designated according to the types of forces and/or bending moments that are intended to be resisted and that are symbolized by the hinges, rollers, or fixed constraints that populate load diagrams in statics texts (see Figure 9.1). In practice (see Figure 9.28), hinges and rollers become *simple* connections (previously designated as Type 2); fixed joints become *fully restrained*, or *FR*, connections (previously designated as Type 1); and the intermediate conditions between *simple* and *fully restrained* become *partially restrained*, or *PR*, connections (previously designated as Type 3).


Bolted connections

High-strength bolts typically used to connect steel elements are stronger than the bolts most often used to connect wood elements: the two most commonly specified bolts used in steel structures are designated A325 (with an ultimate strength, $F_u = 105$ ksi or 120 ksi) and A490 (with $F_u = 150$ ksi). In contrast, A307 bolts typically used in wood connections have an ultimate strength, $F_u = 60$ ksi. Bolts used to connect steel elements are stressed most commonly in shear, tension, or a combination of shear and tension, as illustrated in Figure 9.29.

For shear connections, most bolts are designed so that they “bear” against the edge of the bolt holes into which they are inserted. These are bearing-type, or “snug-tightened” joints, and a small amount of slip of the bolt within the slightly larger bolt hole is permitted. In the less common cases where no slip is desired—for example, in structures subjected to repeated stress reversals—so-called slip-critical connections are designed on the basis of the clamping force that the bolts place on the

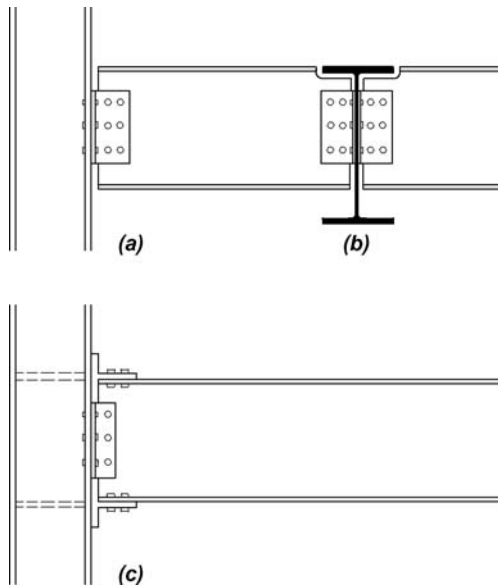**FIGURE 9.28**

Typical bolted connections for steel members: (a) *simple* column–beam connection—formerly designated as Type 2, (b) *simple* beam–girder connection—formerly designated as Type 2, and (c) *fully restrained (FR)* frame connection between column and girder—formerly designated as Type 1

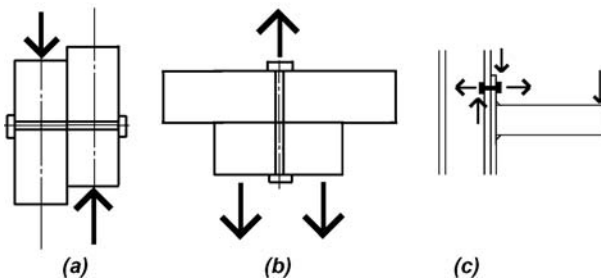**FIGURE 9.29**

Bolts stressed in (a) shear, (b) tension, and (c) shear and tension

steel elements being joined so that friction between the surfaces clamped together resists the tendency of the bolts to slip within the bolt holes. In either case (bearing or slip-critical bolt design), two separate strength criteria must be satisfied: (1) the shear strength of the bolt itself and (2) the compressive capacity of the elements being joined, as the bolts “bear” on the inside surface of the bolt holes.

Shear capacity

The nominal bolt shear stress can be taken as 60ksi for A325 bolts and 75ksi for A490 bolts: when divided by the safety factor for bolt shear, $\Omega = 2.00$, the allowable stresses become 30ksi for A325 bolts and 37.5ksi for A490 bolts. These values assume that the threaded part of the bolt shaft does not penetrate as far as the actual shear planes (designated as condition *X*, for threads “*eXcluded*” from the shear planes); in cases where the threaded portions of the shaft penetrate, or are included within, the shear planes (condition *N* for “*iNcluded*”), these available strengths are reduced by 80% to 24ksi for A325 bolts and 30ksi for A490 bolts. The capacity of a single bolt in shear is found by multiplying the appropriate available stress by the nominal bolt area and then by the number of shear planes in the connection (typically, either one or two, corresponding to single or double shear). Typical values for the available shear strength of bolts can be found in Table A-9.18. The shear capacity of the connection is the sum of the capacities of the individual bolts, that is, the single-bolt capacity times the number of bolts in the connection. Slip-critical bolts are given a lower nominal shear stress, effectively requiring more bolts per connection and thereby ensuring that no slip will occur.

Bearing capacity

The nominal bearing capacity $R_n = 3.0d_b t F_u$, of a bolt depends on the strength of the material being bolted, measured by its minimum tensile strength, F_u , but it may be reduced if the bolt holes are too closely spaced or too close to the edge of the material being connected (when such clear spacing between bolt holes, or between a hole and the material edge, is less than 2 in., multiply R_n by $L_c/2$, where L_c is the smallest clear distance measured in the direction of the applied force). In this equation, d_b is the nominal bolt diameter and t is the thickness of the material upon which the bolt is bearing. For bolts in single shear, the governing thickness is the thickness of the thinner element being joined. For bolts in double shear, the relevant thickness is either that of the middle piece or the combined thicknesses of the two outer (side) pieces, whichever is less (assuming that all elements being joined are made from the same material). For connections made from different types of steel, bearing capacity should be computed for each element, based on its own thickness and material properties, with the smaller capacity governing the connection design for bearing.

Dividing the nominal bearing capacity by the safety factor for bearing, $\Omega = 2.0$, we get the available strength for a bolt in bearing, $R_n/\Omega = 1.5d_b t F_u$, multiplied by $L_c/2$ as before, where the clear bolt hole spacing (or distance to the edge) is less than 2 in. The available strength is reduced by 80% for cases where the small deformations associated with bolt bearing, at ordinary service loads, are considered to be a design issue. Typical values for the available bearing strength of bolts can be found in Table A-9.19. The bearing capacity of the connection is the sum of the capacities of the individual bolts, that is, the single-bolt capacity times the number of bolts in the connection. The bolt hole diameter (assuming standard holes) used in the calculation of bolt hole spacing can be taken as $\frac{1}{8}$ in. greater than the nominal bolt diameter, rather than using a bolt hole diameter $\frac{1}{8}$ in. larger as is required in

the calculation of net area for steel tension elements (see Chapter 6). For example, the clear bolt hole spacing for $\frac{3}{4}$ -in.-diameter bolts spaced 3 in. on center in the direction of the force, $L_c = 2\frac{3}{16}$ in., is found by subtracting the bolt hole diameter ($\frac{3}{4} + \frac{1}{16} = 1\frac{1}{16}$ in.) from the centerline spacing (3 in.).

Minimum and maximum spacing

Bolts that are used to connect steel elements are also subjected to minimum and maximum spacing rules. The basic suggested minimum centerline spacing between bolts is three times the nominal bolt diameter, d_b , although a spacing no greater than $2\frac{1}{2}$ times d_b is permitted. The minimum centerline distance to any edge varies, depending on the bolt diameter. Minimum spacing and edge distance requirements are given in Table A-9.20 for typical bolt sizes.

In addition to these minimum spacing requirements, bolts are also subjected to maximum spacing rules, with 12 in. being the maximum centerline bolt spacing, in the direction of the applied load, permitted for plates bolted to another element (e.g., to another plate, or to a rolled section). Where either element being joined is less than $\frac{1}{2}$ in. thick, this maximum spacing may be reduced to 24 times the thickness of the thinner element. Similarly, the maximum edge distance, measured from the bolt centerline, is 6 in., which may be reduced for elements less than $\frac{1}{2}$ in. thick to 12 times the element thickness. These requirements can be found in Table A-9.20, part C, for typical member thicknesses.

Tension, shear and block shear

Where bolt holes reduce the cross-sectional area of a tension element, the design of the tension element itself must account for this reduced net, or effective net, area, as described in Chapter 6. For coped beams bolted to the webs of girders, block shear must be checked, as described in Chapter 8.

Example 9.11 Design bolted connection for steel tension element

Problem definition


Examine the W8 $\times$ 24 wide-flange shape used as a tension element in a steel truss (the section's capacity was determined to be 148 kips in Example 6.4 when using two lines of $\frac{3}{4}$ in. diameter bolts). Find the required number of bolts so that their available strength is no less than the beam's tension capacity. Assume A36 steel for the W8 $\times$ 24 section, and A490 high-strength bearing-type bolts (threads included in the shear plane).

Problem overview

Find the required number of bolts based on bolt shear; check for bolt bearing.

Problem solution

1. *Required number of bolts* (design based on shear): From Table A-9.18, part A, for A490 bolts and $\frac{3}{4}$ -in. bolt diameter, the shear capacity per bolt is 16.6 kips, assuming

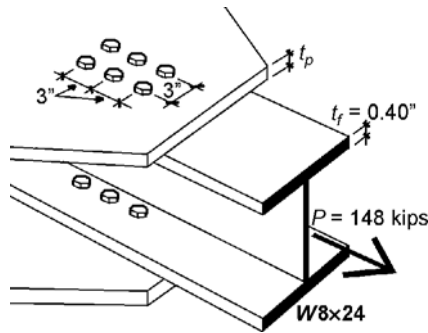**FIGURE 9.30**


Connection of W8 × 24 tension element using two lines per flange of high-strength bolts for Example 9.10

threads excluded from the single shear plane. Based on Note 1 (for threads *included* in shear plane), this value is reduced by 80%, so the capacity per bolt becomes $0.80(16.6) = 13.28$ kips per bolt. The required number of bolts is equal to the total capacity divided by the capacity per bolt, or $148/13.28 = 11.1$ bolts. Clearly, this number must be rounded up to an integer that is divisible by 4, so that the four lines of bolts distributed on the two flanges all have the same number; therefore, we provisionally select 12 bolts, as shown in Figure 9.30.

2. *Check required number of bolts* (based on bearing capacity): From Table A-9.19, the bearing capacity per bolt, per inch of A36 material thickness, is 65.3 kips. As can be seen from Table A-4.3, the flange thickness of a W8 × 24 section is 0.40 in. Therefore, the capacity of a single bolt, based on bearing on the flange thickness, is $0.40(65.3) = 26.12$ kips. The total capacity of the 12-bolt connection, again based on bearing, is $12(26.12) = 313$ kips. Since this capacity is no smaller than the capacity determined in step 1 for shear, the provisional selection of 12 bolts is satisfactory. For a bearing capacity less than that determined for shear, the number of bolts would need to be increased accordingly, and the bolt design would be governed by bearing instead of shear.

Welded connections

Two pieces of steel may be welded together, not by directly melting one piece into the other, but rather by depositing melted steel contained in a separate electrode along the surfaces of the two steel pieces to be joined. Naturally, some melting of the joined pieces occurs as the “weld” steel is deposited; however, the weld and adjacent surfaces rapidly cool and harden as the electrode moves along the weld line, effectively connecting the pieces together. While there are numerous types of weld geometries—including groove welds, plug welds, and slot welds—the most common is the triangular fillet weld. In what follows, we discuss the strength of fillet welds subjected to loads parallel, perpendicular, or angled to the weld line.

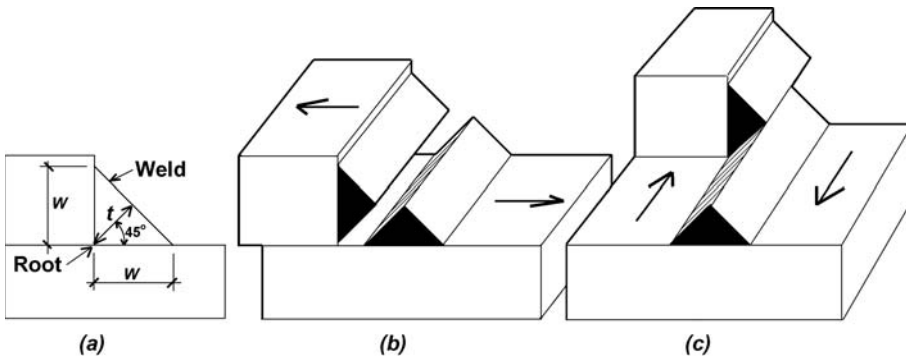**FIGURE 9.31**

Three views of a typical fillet weld illustrating (a) the root, size (leg length), w , and throat dimension, t , as well as two modes of failure on the throat surface, based on either (b) tension or (c) shear

As can be seen in Figure 9.31, a fillet weld is assumed to fail along the surface defined by its throat, labeled t in Figure 9.31a, whether the weld itself is stressed in tension, compression, or shear. With symmetrical welds angled at 45° to the surfaces being joined, it can be seen that the throat dimension, t , equals $0.707w$ (where w is the hypotenuse of a 45° right triangle with both legs equal to t). For a weld of length, L , the surface area resisting either tension, compression, or shear is, therefore, $A_w = tL = 0.707wL$. A typical 1-in. length of weld (i.e., with $L = 1$), therefore, has a failure surface area of $A_{w1} = 0.707w$. The nominal strength (capacity) of a weld loaded “longitudinally”—that is, as shown in Figure 9.31c—is found by multiplying this surface area by the weld strength, taken as $0.6F_{EXX}$, where F_{EXX} depends on the strength of the electrode used. For A36 ($F_y = 36$ ksi) and A992 ($F_y = 50$ ksi) steel, an electrode is typically specified with $F_{EXX} = 70$ ksi, designated generically as E70XX. Putting this all together, we can compute the nominal strength of a 1-in.-long longitudinal weld: $R_{wl} = 0.707(0.6 \times 70)(w) = 29.69w$ kips per inch of weld length. The available strength is found by dividing this nominal capacity by the safety factor, $\Omega = 2.0$, so that $R_{wl}/\Omega = 14.85w$ kips per inch of weld.

The general equation for all fillet welds, loaded longitudinally as shown in Figure 9.31c, transversely as shown in Figure 9.31b, or at any angle in between, is:

$$R_n/\Omega = 14.85w(1.0 + 0.50 \sin^{1.5}\theta) \quad (9.1)$$

where

R_n/Ω = the available strength of a 1-in.-long weld (kips).

θ = the angle (from 0° to 90°) between the weld line and the direction of load.

w = the weld size, or leg length (in.).

It can be seen that for longitudinal welds, with $\theta = 0^\circ$, the parenthetical term drops out, and Equation 9.1 is as derived earlier. For $\theta = 90^\circ$ (a transverse weld), the capacity increases by a factor of $(1.0 + 0.50 \sin^{1.5} 90^\circ) = 1.5$. The available strengths for longitudinal and transverse welds are, therefore, as follows: for a 1-in.-long longitudinal weld, we get

$$R_{wl}/\Omega = 14.85w \quad (9.2)$$

while the available strength for a 1-in.-long transverse weld is

$$R_{wt}/\Omega = 1.5(14.85w) = 22.27w \quad (9.3)$$

In these equations, R_{wl}/Ω and R_{wt}/Ω are the available strengths (kips) of a 1-in.-long weld oriented, respectively, longitudinally or transversely to the load, and w is the weld size, or leg length (in.). Where both longitudinal and transverse welds occur in the same connection, the available strength is taken as either $(R_{wl}/\Omega + R_{wt}/\Omega)$ or $(0.85R_{wl}/\Omega + 1.5R_{wt}/\Omega)$, whichever is greater. Other constraints on fillet weld design are discussed next.


Weld size limits

Weld sizes cannot simply be determined on the basis of Equations 9.2 or 9.3 in order to satisfy the requirements for available strength of a connection. Rather, they are also constrained by the dimensions of the material welded together. Minimum weld sizes must be proportioned according to the thickness of the materials being joined; while maximum weld sizes must be no larger than the edge along which the weld is deposited or, where the edge is $\frac{1}{4}$ in. or more thick, must be at least $\frac{1}{6}$ in. smaller than any such edge (these size constraints are summarized in Table A-9.21). For this reason, it is more common to first establish a provisional weld size according to these minimum and maximum limits and then determine the required total weld length. For connections with combinations of longitudinal and transverse welds, the design process is necessarily iterative, unless one of the weld lengths, either for the longitudinal or transverse portion, can be initially determined from the connection geometry.


The minimum length of a fillet weld is required to be at least four times its leg size. Otherwise, the effective size of the weld, used in calculations, must be taken as no more than one-fourth of the weld length. For example, the minimum weld length for a $\frac{1}{2}$ -in. leg size is $4 \times \frac{1}{2} = 2$ in. If a $\frac{1}{2}$ -in. weld size is used with a shorter weld length—say, 1 in.—the effective weld size used in calculating the available strength of the weld would be no more than the actual length (1 in.) divided by 4, or $\frac{1}{4}$ in., even though the actual weld size is $\frac{1}{2}$ in.

Longitudinal welds

For symmetrical and parallel longitudinal welds, the weld length, L , must be no smaller than the distance between the two weld lines, W , as shown in Figure 9.32.

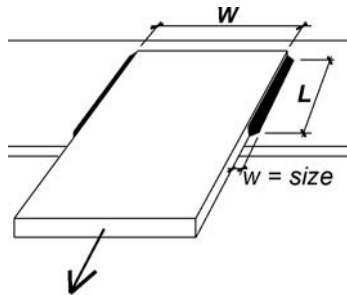**FIGURE 9.32**

Parallel, longitudinal welds

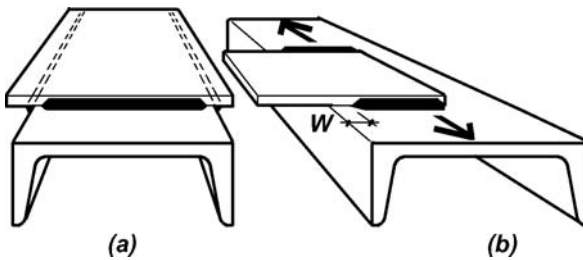**FIGURE 9.33**

Termination of fillet welds where (a) welds occur on opposite sides of a common plane and (b) a lap joint extends beyond a tension element

Where such welds transmit force to the “end” of an element subject to tension or compression (i.e., through an “end-loaded” weld), an effective length $L_e = \beta L$ is used to compute the weld capacity, where β is defined as follows:

$$0.6 \leq \beta = 1.2 - 0.002(L/w) \leq 1.0 \quad (9.4)$$

In other words, where the ratio of weld length to weld size is $L/w \leq 100$, $\beta = 1.0$, and the effective length equals the actual weld length. Otherwise, $\beta = 1.2 - 0.002(L/w)$, with a lower limit of $\beta = 0.60$ where the ratio of weld length to weld size, $L/w \geq 300$.

Fillet weld terminations

In certain cases, fillet welds must be terminated before reaching the edge of the steel elements they are connecting in order to prevent damage (notching, gouging) of the element’s edge. Figure 9.33a illustrates a condition where the fillet weld at the underside of a plate (shown as a dotted line) must be interrupted at the corners before turning 90° and being deposited on the opposite side of the same plate.

Figure 9.33*b* illustrates a lap joint that extends beyond a tension element; in such cases, the fillet weld must terminate a distance equal to the weld size, w , from the edge of the tension element.

Shear strength of connecting elements

Where welded connecting elements such as gussets, angles, or other plates are subjected to shear, the required thickness, t , of such elements can be found by equating the available shear strength of the connector, per unit length, to the available longitudinal weld strength, again per unit length. The available shear strength of the connector is $0.6F_u t/\Omega$, while that of a single longitudinal weld, from Equation 9.2, is $R_{wl}/\Omega = 14.85w$. For a connector welded on both sides of the plate, the available strength of the weld doubles to $2 \times 14.85w = 29.69w$. Equating these strengths using a safety factor, $\Omega = 2.00$ and a tensile strength, $F_u = 58$ ksi (corresponding to a connector fabricated from A36 steel), we get the following required connector thickness, t_{min} (in.) for a given weld size, w (in.), where the connector plate is welded on both sides:

$$t_{min} = 29.69w(2.0)/(0.6 \times 58) = 1.71w \quad (9.5)$$

Example 9.12 Find capacity of welded connectors with transverse or longitudinal welds

Problem definition

Find the capacities of the 6-in.-wide, $\frac{7}{8}$ -in.-thick plates shown in Figure 9.34, welded to (1) a wide-flange shape with transverse welds and (2) an 8-in.-deep channel shape with longitudinal welds. In each case, assume that the plates are fabricated from A36 steel and that the weld size is $\frac{3}{8}$ in. Use an E70xx electrode with $F_u = 70$ ksi.

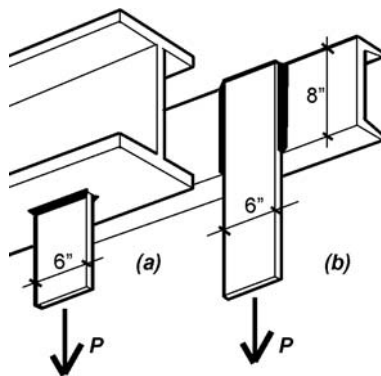


FIGURE 9.34

Connector plate capacity for Example 9.11 using (a) transverse welds and (b) longitudinal welds

Solution overview

Find the capacity of the welds; confirm that the tensile capacity of the plates is no smaller than the weld capacity.

Problem solution

1. Based on Equations 9.2 and 9.3, we can express the capacity of the transverse and longitudinal welds as follows:

For the transverse weld, the unit capacity is $R_{wt}/\Omega = 1.5(14.85w) = 1.5(14.85)(\frac{3}{8}) = 8.35$ kips per inch of weld. There is a total of $6 \times 2 = 12$ in. of transverse weld on the two plates (since the plate width is $W = 6$ in.), so the total capacity for the transverse welds is $P_t = 8.35(12) = 100.2$ kips.

For the longitudinal weld, the unit capacity is $R_{wl}/\Omega = 14.85w = 14.85(\frac{3}{8}) = 5.57$ kips per inch of weld. Since this is an “end-loaded” condition, the ratio of weld length to weld size must be checked: $L/w = 8/(\frac{3}{8}) = 21.3$ is no greater than 100, so the effective weld length equals the actual length, which is 8 in. There is a total of $8 \times 2 = 16$ in. of longitudinal weld on the plate, so the total capacity for the longitudinal welds is $P_l = 5.57(16) = 89.1$ kips. The weld length, $L = 8$ in., cannot be smaller than the distance between the two weld lines, in this case equal to the plate width of 6 in.

2. The tensile capacity of both plates is based on the smaller of the following: either the capacity to resist tensile yielding on the gross area or to resist rupture on the net area. The capacity based on yielding (see Chapter 6) is $0.6F_yA_g = 0.6(36)(\frac{7}{8} \times 6) = 113.4$ kips. The capacity based on rupture is $0.5F_uA_n = 0.5(58)(\frac{7}{8} \times 6) = 152.2$ kips. The governing tensile capacity, 113.4 kips, is larger than the actual capacity of either weld condition, so the strength of the welds governs both designs. For short gusset plates, the effective net area is taken as equal to the net area, so long as it is no bigger than 85% of the gross area.
3. **Conclusion:** The capacity of Plate *a*, P_t , equals 100.2 kips; and the capacity of Plate *b*, P_l , equals 89.1 kips.

Example 9.13 Find capacity of welded connector with angled load

Problem definition


Find the capacity of the $\frac{1}{2}$ -in.-thick plate shown in Figure 9.35, welded to a wide-flange column shape. Assume that the plate is fabricated from A36 steel and that the weld size is $\frac{3}{16}$ in., on both sides of the plate. Use an E70xx electrode with $F_u = 70$ ksi.

Solution overview

Confirm that the shear capacity of the plate is greater than the capacity of the weld; compute the available strength of the weld.

Problem solution

1. From Equation 9.5, the required thickness of the plate (i.e., the plate thickness consistent with the maximum available shear strength of a weld on both sides of a connector plate)

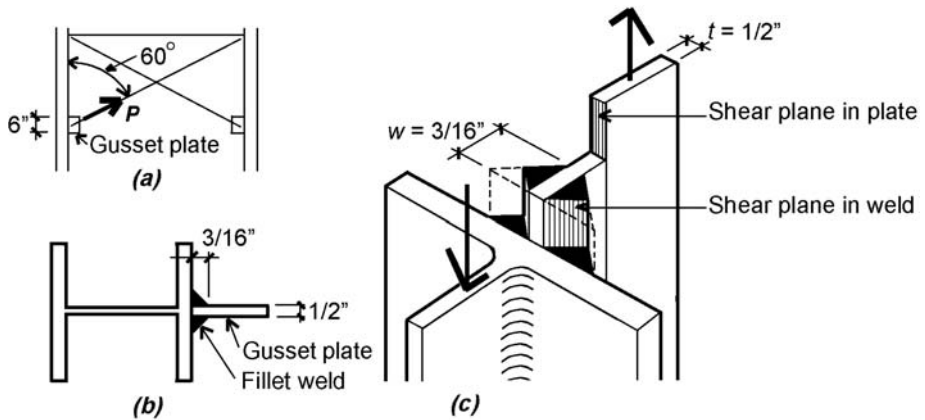**FIGURE 9.35**

Connector plate capacity for Example 9.12: a gusset plate welded to a W-shape is shown (a) in elevation, (b) in section, and (c) in a schematic “cut-away” view showing the potential shear failure planes for the plate and fillet welds

- is $t_{min} = 1.71w = 1.71(\frac{3}{16}) = 0.32$ in. In this calculation, we have compared the weld and plate shear strength as if the load were parallel to the weld, even though the actual load on the connector is oriented at a 60° angle to the weld line.
2. Since the actual plate thickness of $\frac{1}{2}$ in. is larger than the required thickness, $t_{min} = 0.32$ in., the weld will fail in shear before the plate does. For this reason, we can find the capacity (available strength) of the connector by determining the available strength of the weld, per inch of length, according to Equation 9.1:

$$R_n/\Omega = 14.85w(1.0 + 0.50\sin^{1.5}\theta) = 14.85(\frac{3}{16})(1.0 + 0.50\sin^{1.5}60) = 3.91$$
 kips per inch of weld.
 3. The total weld length is $6 \times 2 = 12$ in., so the total available strength of the connector, $P = 12(3.91) = 46.9$ kips.


Example 9.14 Design a welded connector with both longitudinal and transverse welds

Problem definition

Find the required longitudinal weld length, L , on the two $\frac{1}{2}$ -in.-thick plates shown in Figure 9.36, to resist a load, $P = 80$ kips. Assume that the plate is fabricated from A36 steel. Use an E70xx electrode with $F_u = 70$ ksi.

Solution overview

Confirm that capacity of both plates is no less than 80 kips; find the required longitudinal weld length so that the total weld capacity is no less than 80 kips.

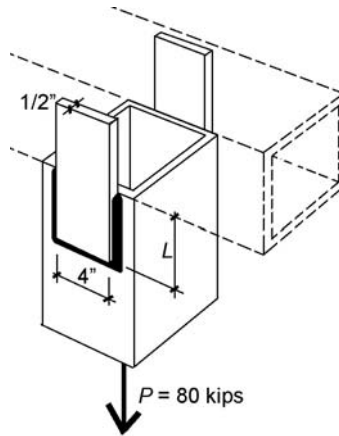**FIGURE 9.36**

View of welded plate connectors for Example 9.13

Problem solution

1. The tensile capacity of the both plates is based on the smaller of the following: either the capacity to resist tensile yielding on the gross area or to resist rupture on the net area. The capacity based on yielding (see Chapter 6) is $0.6F_yA_g = 0.6(36)(\frac{1}{2} \times 4 \times 2) = 86.4$ kips. The capacity based on rupture is $0.5F_uA_n = 0.5(58)(\frac{1}{2} \times 4 \times 2) = 116$ kips. The governing tensile capacity, 86.4 kips, is larger than the actual load of 80 kips, so the plates are satisfactory. For short gusset plates, the effective net area is taken as equal to the net area, so long as it is no bigger than 85% of the gross area.
2. From Table A-9.21, for a $\frac{1}{2}$ -in.-thick plate, the minimum weld size is $\frac{3}{16}$ in., and the maximum weld size is $\frac{1}{2} - \frac{1}{16} = \frac{7}{16}$ in. For this example, we will choose a weld size between those limits, with $w = \frac{3}{8}$ in.

3. Based on Equations 9.2 and 9.3, we can express the capacity of the longitudinal and transverse welds as follows:

For the longitudinal weld, the unit capacity, $R_{wl}/\Omega = 14.85w = 14.85(\frac{3}{16}) = 2.784$ kips per inch of weld. There is a total of $4L$ in. of longitudinal weld on the two plates (where L is the length of each longitudinal segment), so the total capacity for the longitudinal welds is $P_l = 2.784(4L) = 11.138L$ kips.

For the transverse weld, the unit capacity, $R_{wt}/\Omega = 1.5(14.85w) = 1.5(14.85)(\frac{3}{16}) = 4.177$ kips per inch of weld. There is a total of $4 \times 2 = 8$ in. of transverse weld on the two plates (since the plate width is $W = 4$ in.), so the total capacity for the transverse welds is $P_t = 4.177(8) = 33.413$ kips.

4. Where both longitudinal and transverse welds occur in the same connection, the available strength is taken as either (a) $R_{wl}/\Omega + R_{wt}/\Omega$ or (b) $0.85R_{wl}/\Omega + 1.5R_{wt}/\Omega$, whichever is greater. The terms R_{wl}/Ω and R_{wt}/Ω refer to the available strengths (capacities) of the longitudinal and transverse welds, respectively; therefore, we must test both

alternatives, setting the capacities equal to the load, $P = 80$ kips, and solving for the required length, L :

$$R_w/\Omega + R_{wt}/\Omega = 11.138L + 33.413 = 80; \text{ from which } L = 4.18 \text{ in.}$$

$$0.85R_w/\Omega + 1.5R_{wt}/\Omega = 0.85(11.138L) + 1.5(33.413) = 80; \text{ from which } L = 3.16 \text{ in.}$$

5. Since the *greater* capacity of the two alternatives may be used, the *smaller* length, $L = 3.16$ in., is acceptable. Looked at another way, if the length for both alternatives were set at $L = 3.16$ in., case (a) would have a capacity smaller than 80 kips, while case (b) would have a capacity exactly equal to 80 kips; it can be seen that case (b) has the greater capacity and, therefore, would govern the design. Increasing the length to 4.18 in. found in case (a) is not required. We round up the required length for the longitudinal weld to $3\frac{1}{2}$ in. ■

REINFORCED CONCRETE

Reinforced concrete elements are not ordinarily “connected” in the usual sense of the term; rather, they are most often cast together into a monolithic assembly. Of course, there are construction joints between sections of the structure cast separately, but even at such joints, opposite faces of concrete brought together in compression bear against each other just as if they had been monolithically cast, and steel reinforcement in tension is made to extend through each construction joint so that tensile forces in the bars continue from one side of the joint to the other.


The following discussion, therefore, does not include any reference to the types of welds, bolts, screws, or nails commonly found in wood or steel construction, where discrete structural elements subjected to tension, compression, or bending must be explicitly connected in order to function together as a coherent structural system. Instead, two “quasi-connections,” both typical of reinforced concrete construction, shall be examined: the end condition of a continuous beam and the lapped splicing of reinforcing bars where the bottom of one column is cast against the top of another column.

Development length, tension


The fact that much reinforcing steel is subjected to tension raises an important question: what prevents such steel bars from being pulled out of, or slipping within, the concrete into which they have been placed? As can be seen in Figure 9.37, any bending of a structural element literally stretches the tension region while the compression region shortens.

If the surface between the reinforcing bars and adjacent concrete were smooth and frictionless, the bars would remain “unstretched” as the beam bent; in general, it is the bond between the steel bars and concrete that guarantees that such slippage will not occur. This bond is primarily a result of bumps, or deformations, placed on the surface of the reinforcement that create a mechanical interlocking of the steel and concrete surfaces, as shown schematically in Figure 9.38.

The strength of this bond, per unit of bar length, has been measured experimentally, so the total necessary bar length required to resist any tendency for the bar to

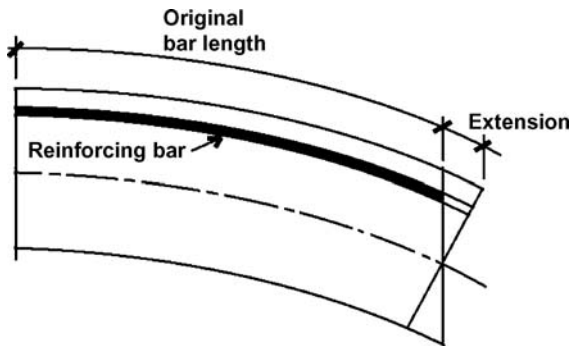**FIGURE 9.37**


Extension of rebar in tension zone of reinforced concrete element

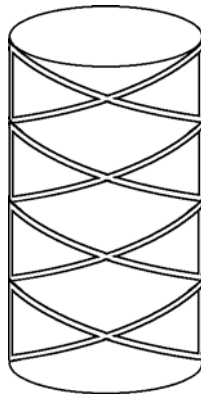**FIGURE 9.38**

Schematic representation of a deformed reinforcing bar (rebar)

be pulled through the concrete can be determined for any given tension stress. This required bar length is called the development length, l_d , and is shown in Equation 9.6 for No. 7 or larger uncoated bars with normal-weight concrete and adequate bar spacing, or adequate spacing plus confinement with ties or stirrups, to prevent splitting of the concrete. Specifically, as illustrated in Figure 9.39, the bars must have a clear space between them at least equal to twice the bar diameter, that is, at least equal to $2d_b$, and clear cover at least equal to the bar diameter, d_b . Alternatively, if adequate stirrups or ties are used throughout the development length region to confine the bars and prevent splitting of the concrete, the minimum clear spacing requirement may be reduced to d_b :

$$l_d = \frac{f_y \psi_t}{20 \sqrt{f'_c}} d_b \quad (9.6)$$

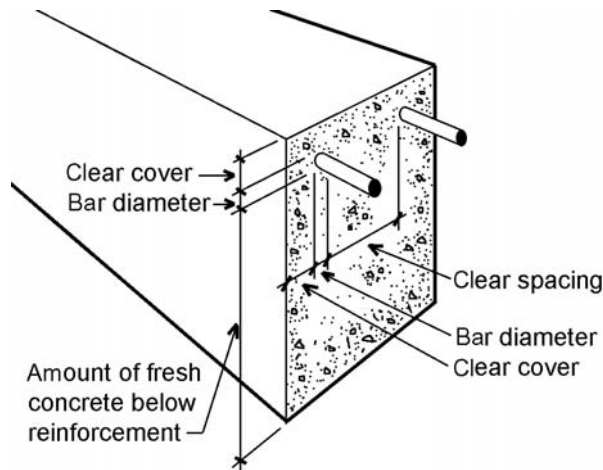
**FIGURE 9.39**

Clear cover and spacing requirements for reinforced concrete beams

In Equation 9.6, l_d is the development length for tension (in.); f_y is the yield stress of the steel reinforcement (psi); f'_c is the compressive strength of the concrete (psi); ψ_t is a coefficient equal to 1.0, except when there is at least 12 in. of freshly cast concrete below the steel bars, in which case $\psi_t = 1.3$ (accounting for the negative impact on the bond between steel and concrete caused by rising air and water within a large mass of freshly cast concrete); and d_b is the reinforcing bar diameter (in.). Where the minimum conditions for spacing and stirrups (or ties) described here are not met, the development length must be increased by a factor of 1.5. Where the bar size is smaller than No. 7, the development length is multiplied by 0.8. In no case may the development length be less than 12 in. Typical values for development length are tabulated in Table A-9.22 for common bar sizes.

Development length is influenced primarily by three factors: assuming adequate bar spacing and/or ties to prevent splitting of the concrete, the required development length becomes larger if the tensile strength of the concrete decreases (concrete's tensile strength is proportional to the square root of its compressive strength); the required development length also increases if the stress in the bar increases (that stress being at most equal to the yield stress of the steel); and the development length increases as well if the surface area of the bar decreases (the surface area being proportional to the bar diameter). These three parameters can all be found in Equation 9.6.

If we imagine an isolated and discrete concrete beam within a continuous concrete structure, it is easier to see where and how the concept of development length becomes important. As can be seen in Figure 9.40, a typical reinforced concrete beam-girder "connection" must resist the shear force and bending moment

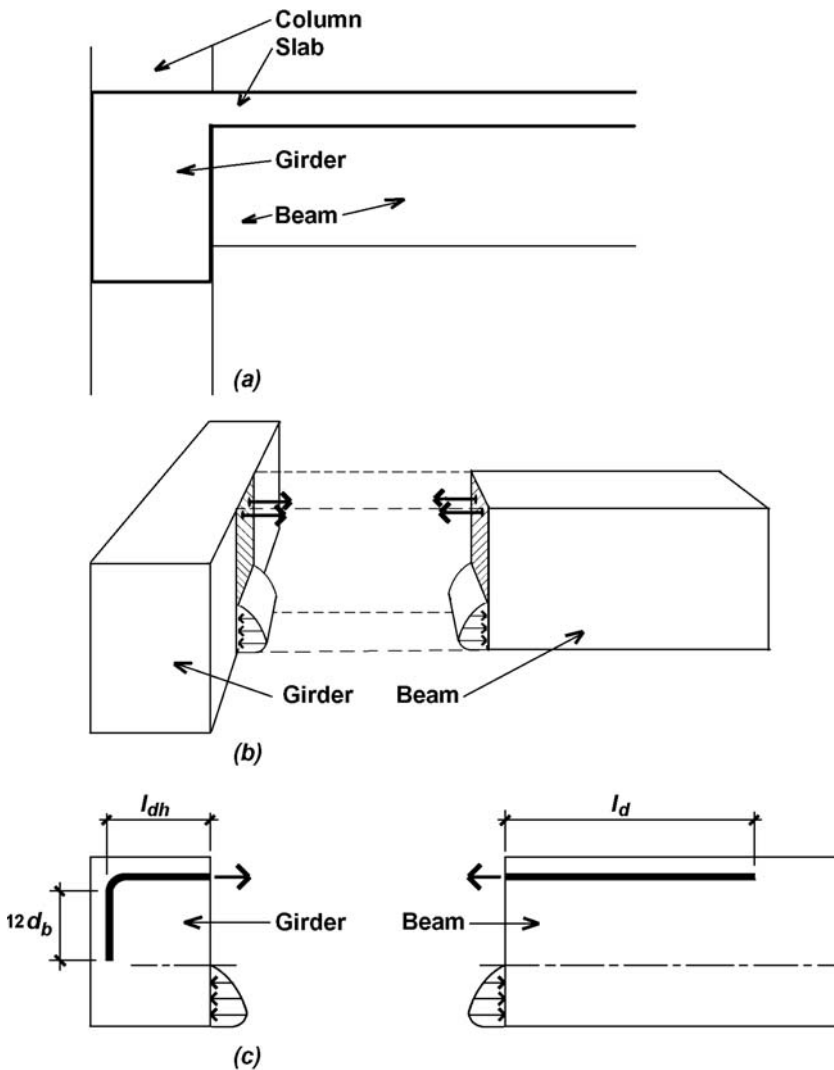**FIGURE 9.40**

Development length of straight bars and standard hook: (a) section through typical slab and girder, (b) exploded view showing "connection" between beam and girder (with slab omitted for clarity), and (c) required development length of hook (in girder) and straight bar (in beam)

that occur at the surface where they come together. The shear force is resisted through the shear resistance of the concrete itself, the longitudinal steel bars, and the steel ties or stirrups provided for that purpose (the latter not shown in Figure 9.40 for clarity). The bending moment, in turn, is resolved into a compressive force

(the resultant of the stress distribution shown below the neutral axis for “negative” bending) and a tensile force (carried by the longitudinal steel reinforcement shown above the neutral axis). The compressive force presents no particular problems, as the concrete in the beam “pushes” against the concrete in the girder. The tensile force, however, could pull the bars out of the girder and beam, unless those bars develop sufficient bond with the concrete to resist that tendency or are otherwise anchored into the concrete. In the case of the beam, sufficient space is available to develop that bond strength by making sure that the bars extend into the beam for a distance at least as great as the required development length, l_d (see Equation 9.6). For an exterior girder, however, it is likely that sufficient space is not available, and a 90° or 180° hook is often required.

As shown in Figure 9.40c, a 90° hook must be extended a distance of $12d_b$ below the bent portion of the bar, which in turn is defined by an inner radius that cannot be less than $3d_b$ for bars smaller than No. 9; $4d_b$ for No. 9, No. 10, and No. 11 bars; and $5d_b$ for No. 14 and No. 18 bars. In these guidelines, d_b refers to the bar diameter. The required development length for such hooks, l_{db} , is given by the following equation for uncoated bars and normal-weight concrete:

$$l_{db} = \frac{0.02f_y}{\sqrt{f'_c}} d_b \quad (9.7)$$

In this equation, l_{db} is the development length for hooks (in.), f_y = the yield stress of the steel reinforcement (psi), f'_c is the compressive strength of the concrete (psi), and d_b is the bar diameter (in.). In no case may the development length for a hook be less than $8d_b$ or 6 in. Typical values are tabulated in Table A-9.23 for common bar sizes.

It is possible to reduce this length even further, if certain requirements are met that increase the level of confinement of the hook, making it less likely to split the concrete:

l_{db} may be multiplied by 0.7 for all bar hooks (except those with No. 14 and No. 18 bars) with side cover of at least 2.5 in. and, for 90° hooks only, cover beyond the hook of at least 2 in.

l_{db} may be multiplied by 0.8 for all bar hooks (except those with No. 14 and No. 18 bars) where perpendicular ties or stirrups, spaced no more than $3d_b$ along the development length, enclose them; or, for 90° hooks only, where parallel ties or stirrups enclose the “vertical” and “bent” parts of the hook, also spaced no more than $3d_b$.

l_{db} may also be multiplied by the ratio of required steel bar area to provided steel bar area, except in cases where the yield stress, f_y , must be specifically accounted for.

These reduction factors are cumulative; that is, they may be combined.

Example 9.15 Find required development length for straight bar and 90° hook in reinforced concrete structure

Problem definition

A reinforced concrete beam frames into an exterior girder, as shown in Figure 9.41, and the negative moment at the connection is resisted using No. 8 bars with 2 in. clear spacing between them. The required area for each bar, $A_{s-required} = 0.74 \text{ in}^2$. Perpendicular ties (not shown) are provided along the development length of the hook within the girder, spaced at 3 in. on center, and side cover of 3 in. is provided. Assume $f'_c = 4000 \text{ psi}$ and $f_y = 60,000 \text{ psi}$. Find the required development length, l_d , of the bars within the beam, the hook development length, l_{dh} , and hook extension beyond the bend, within the girder.

Solution overview

Find the nominal development lengths for a No. 8 bar, using 4000-psi concrete, in Table A-9.22 (for the beam) and Table A-9.23 (for the hook in the girder). Multiply these base values by the appropriate factors shown in the notes accompanying each table.

Problem solution

1. The nominal development length required for the No. 8 bar in the beam is 48 in. (Table A-9.22). This value is multiplied by 1.3 (see Note 2) and $A_{s-required}/A_{s-provided} = 0.74/0.79 = 0.937$ (see Note 3) so that the final value for the required development length is $l_d = 48(1.3)(0.937) = 58.5 \text{ in.}$ or, rounded up to the nearest inch, 59 in. The value for $A_{s-required} = 0.74$ was given (or otherwise would be computed); the value for $A_{s-provided}$ is simply the actual area of a No. 8 bar (see Table A-4.10). The computed development length exceeds the absolute minimum of 12 in. (see Note 5).
2. The nominal development length for the 90° hook in the beam is 19 in. (Table A-9.23). This value is multiplied by 0.7 (see Note 1), 0.8 (see Note 2), and $A_{s-required}/A_{s-provided} = 0.74/0.79 = 0.937$ (see Note 3) so that the final value for the required hook development length is $l_{dh} = 19(0.7)(0.8)(0.937) = 9.97 \text{ in.}$ or, rounded up to the nearest inch, 10 in. The actual dimensions of the girder would need to be able to accommodate this required length. The computed development length for hooks exceeds the two absolute minimums

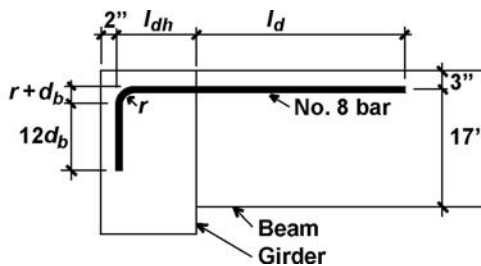


FIGURE 9.41

Required rebar development length for Example 9.14

(see Note 6): $8d_b = 8(1.0) = 8\text{ in.}$, or 6 in. Checking the minimum radius and minimum length of the “vertical” portion of the hook (see Note 5), we see that the required extension of the bar below the bend is $12d_b = 12(1.0) = 12\text{ in.}$, and the minimum inner radius for a No. 8 bar is $3d_b = 3(1.0) = 3\text{ in.}$

There are two other requirements for tension reinforcement in continuous beams. First, for so-called positive-moment reinforcement—where tension occurs at the *bottom* of reinforced concrete beams—one-fourth of the rebars need to be extended at least 6 in. into the supports at each end of the beam. Second, for negative-moment reinforcement—where tension occurs at the *top* of the beam, typically in the vicinity of supports—at least one-third of the rebars need to extend beyond the point of inflection (where the negative moment becomes zero, and the curvature changes from negative to positive), a distance of d , $12d_b$, or $l_n/16$, whichever is greater; d is the effective depth of the beam; d_b is the rebar diameter; and l_n is the clear span, measured between the faces of supports.

Development length, compression

For a steel reinforcing bar in compression, much of the stress in the steel can be transferred to the concrete through direct bearing of the bar end on the concrete. For that reason, the required development length in compression, l_{dc} , is smaller than that required when bars are stressed in tension, and is given by the greater of the following values:

$$l_{dc} = \frac{0.02f_y}{\sqrt{f'_c}} d_b \text{ and } l_{dc} = 0.0003f_y d_b \quad (9.8)$$

In these equations, l_{dc} is the development length (in.) for normal-weight concrete in compression, f_y is the yield stress of the steel reinforcement (psi), f'_c is the compressive strength of the concrete (psi), and d_b is the bar diameter (in.). As with bars in tension, it is possible to reduce this required length by multiplying the greater value found in Equation 9.8 by the ratio of $A_{s\text{-required}}/A_{s\text{-provided}}$. In addition, the required development length may be multiplied by 0.75 in columns with adequate spirals or ties (specifically, with a minimum ¼-in. spiral at no more than a 4-in. pitch or with No. 4 ties spaced at no more than 4 in. on center). In no case can the development length for compression be less than 8 in. Typical values are tabulated in Table A-9.24 for common bar sizes.

Bar splices in tension

Since the length of reinforcing bars is limited by manufacturing and transportation constraints, it is often necessary to splice them together, at least in cases where the continuity assumed in design indicates lengths greater than those available from a single bar. While it is possible to weld bars together, or to use special mechanical

splicing devices, the most common method for creating continuity between two bars in tension is by lapping them a sufficient distance so that tensile stresses can be transferred through the bond developed between the steel bars and adjacent concrete. For virtually all tension splices, the required lap distance is taken as $1.3l_d$, where the development length, l_d , is defined as in Equation 9.6 (or as tabulated in Table A-9.22), except that the 12-in.-minimum length does not apply, and a reduction of the development length based on the ratio of provided to required steel area is not permitted. There are some limits placed on larger bar sizes: No. 14 and No. 18 bars cannot be lap spliced in tension.

Bar splices in compression

Columns are almost always cast floor by floor, with longitudinal reinforcement left extending vertically beyond the current floor level so that it can be spliced into the column steel for the next floor being cast. For $f_y \leq 60$ ksi and $f'_c \geq 3000$ psi, the required lap distance for compression is taken as:

$$\text{required compressive lap distance} = 0.0005f_y d_b \quad (9.9)$$

This required lap distance equals $30d_b$ for 60-ksi steel bars, with an absolute minimum lap distance of 12 in. In these equations, f_y is the yield stress of the steel reinforcement (psi), f'_c is the compressive strength of the concrete (psi), and d_b is the bar diameter (in.). It should be emphasized that in many reinforced concrete columns, especially those explicitly designed to resist bending moment as well as compressive force, a given lap splice may need to resist tension, compression, or both tension and compression under different loading scenarios. For bars that resist only compression, and where confinement is provided by ties or spirals, it is possible to create splices, not by lapping the bars, but instead by placing their ends in contact so that they bear directly upon each other. However, even in such cases where no tension is anticipated, all columns must maintain some ability to resist unexpected tension forces so that either additional "tension" steel must be provided in such cases or compressive lap splices must be used (since compressive lap splices provide sufficient resistance to unexpected tension forces in the bars). The required length of column lap splices in compression may be reduced where sufficient confinement, in the form of ties or spirals, is provided. Specifically, if the bar area of a tie (taken as the total tie area cut in section, as shown in Figure 9.42) is greater or equal to $0.0015bs$ —where b = the greater column cross-sectional thickness (in.) and s = the tie spacing (in.)—the required lap distance may be multiplied by 0.83. With spirals, the required lap length may be multiplied by 0.75. In any case, the lap length can never be taken less than 12 in. Limits placed on larger bars are relaxed somewhat for lap splices in compression: No. 14 and No. 18 bars cannot be lap spliced to each other but may be lap spliced to No. 11 and smaller bars. In cases where two different bar sizes are lap spliced together in compression, the required splice length is found by (1) computing the required development length for the

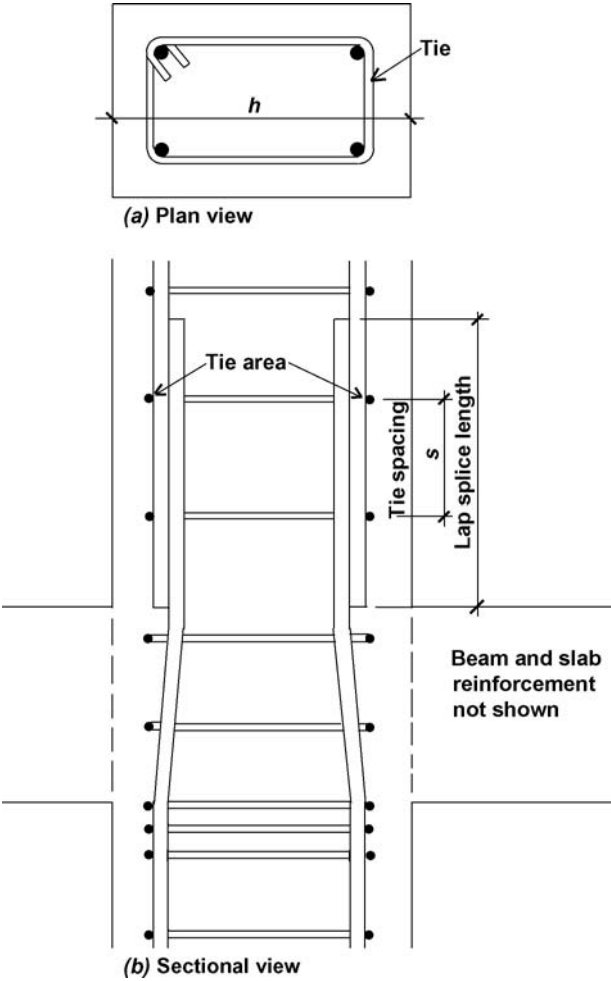


FIGURE 9.42

Column lap splice parameters

larger bar, (2) computing the required lap splice length for the smaller bar, and (3) using the larger of these two values.

For a column resisting only compressive forces, the required lap length is determined for the bars originating in the upper column; the bars extended upward from the lower column that terminate in the upper column must satisfy the requirements for compressive development length (Equation 9.8). In practice, the larger of these two criteria (compressive development length for the lower bars and required lap splice length for the upper bars) determines the minimum splice length. Since loads typically are smaller in upper-level columns, it is possible that smaller bar sizes can

be used in the upper columns; these smaller bars can be spliced with larger bars extending upward from the lower column. In such cases, different bar diameters, d_b , must be used in determining lap splice length and development length.

Example 9.16 Find required length of compression column splice in reinforced concrete structure

Problem definition

A 12 in. $\times$ 16 in. reinforced concrete column is configured as shown in Figure 9.42. The longitudinal (vertical) bars in the lower column consist of four No. 9 bars, which extend into the upper column. Four No. 8 bars originate in the upper column and are spliced to the lower column bars as shown. The longitudinal steel is confined by No. 3 ties spaced at 9 in. on center. Assuming only compressive stress in the column, with $f_y = 60$ ksi and $f'_c = 3000$ psi, what is the required splice length?

Solution overview

Find the compressive lap splice length based on the diameter of the No. 8 bars in the upper column. Find the required compressive development length based on the No. 9 bars extended into the upper column. Use the larger of these two values for the column splice length.

Problem solution

1. *Lap splice.* From Equation 9.9, the minimum lap splice length for the No. 8 bars is $0.0005f_y d_b = 0.0005(60,000)(1.0) = 30$ in. To check whether the 0.83 reduction factor may be used, it is necessary to see if the No. 3 bar area for the ties is greater than or equal to $0.0015hs$, where $h = 16$ in. (the larger of the overall column dimensions) and $s = 9$ in. (the tie spacing). Using twice the area of a single tie (Table A-4.10), we find that $2(0.11) = 0.22 \geq 0.0015(16)(9) = 0.216$, so the lap splice length may be reduced to $30(0.83) = 24.9$ in. or, rounding up, 25 in.
2. *Development length.* From Equation 9.8, we get:

$$l_{dc} = \frac{0.02(60,000)}{\sqrt{3000}}(1.128) = 21.9 \text{ in. and } l_{dc} = 0.0003(60,000)(1.128) = 20.3 \text{ in.}$$

The bar diameter, d_b , is found in Table A-4.10. Using the larger value and rounding up, the minimum development length is $l_{dc} = 22$ in. Because the tie spacing is greater than 4 in. on center, no reduction in development length may be taken.


3. Comparing the requirements for lap splice length and development length, the larger of the two values will be used: 25 in.

This page intentionally left blank

Tables for Chapter 1 (statics)

1

Table A-1.1 Derivation of rules for drawing shear and moment diagrams¹

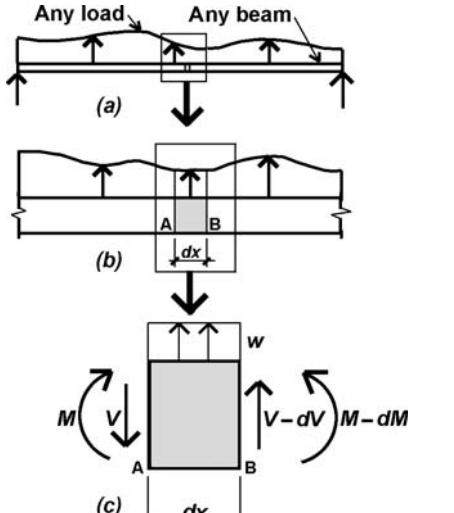 (a) Any load, Any beam (b) (c)	Take any beam with variable load, as shown at left (diagram <i>a</i>). Then take an elemental slice of the beam with length, dx, and average load, w, over that length (diagram <i>b</i>). There is a shear force and moment on the left face of the element (V and M), and, because the load, w, is assumed to act in an upward direction (positive), there is a slightly smaller shear and moment on the right face (diagram <i>c</i>). Rules 1 and 2 derive from the horizontal equilibrium of that elemental slice, while Rules 3 and 4 derive from the rotational equilibrium of the same element.
From horizontal equilibrium: $\Sigma F_y = wdx - V + V - dV = 0$ Solving for w, we get Rule 1 (at right):	Rule 1: $w = dV/dx$ Solving for dv, we get $dV = wdx$, or, integrating, we get Rule 2: Rule 2: $\Delta V_A^B = \int_A^B wdx$

(Continued)

Table A-1.1 (Continued)

From rotational (moment) equilibrium: $\Sigma M_B = -Vdx + wdx(dx/2) +$ $M - (M + dM) = 0$ We can omit the dx^2 term, because it is so small, and, solving for V, get Rule 3 (at right):	Rule 3: $V = dM/dx$ Solving for dM, we get $dM = Vdx$, or, integrating, we get Rule 4: Rule 4: $\Delta M_A^B = \int_A^B Vdx$
---	---

Note:

1. The four rules are expressed mathematically in Table A-1.1; they may also be expressed in words, as follows:

Rule 1: At any point along a beam, the slope of the shear diagram equals the value of the load (the “infinite” slope of the shear diagram at concentrated loads can be seen as a shorthand approximation to the actual condition of the load being distributed over some finite length, rather than existing at a point).

Rule 2: Between any two points along a beam, the change in the value of shear equals the total load (between those points).

Rule 3: The slope of the moment diagram at any point equals the value of the shear force at that point.

Rule 4: The change in the value of bending moment between any two points equals the “area of the shear diagram” between those points.

Tables for Chapter 2

(loads)

2

Table A-2.1 Dead loads

A. Basic volumetric weights in pounds per cubic foot (pcf)

Stone:	
Sandstone	144
Granite	165
Marble	173
Brick/CMU/concrete:	
Normal-weight reinforced concrete	150
Metals:	
Aluminum	165
Steel	492
Lead	710
Glass	160
Wood	165
Water	64
Earth:	
Dry clay	63
Silt, moist and packed	96
Wet sand and gravel	120
Insulation:	
Glass fiber batts	0.8
Expanded polystyrene boards	0.9–1.8
Extruded polystyrene boards	2.2
Polyisocyanurate boards	2.0
Fiberboard	1.5

(Continued)

Table A-2.1 (Continued)
B. Distributed loads in pounds per square feet (psf)

Wood floor system: 2 × 10 joists at 16 in. on center, wood finish floor and subfloor, gypsum board ceiling	10.5
Steel floor system: 4½-in. corrugated steel deck with concrete slab, tile floor, mechanical ducts, suspended tile ceiling	47
Concrete floor system: 6-in. reinforced concrete slab, tile floor, mechanical ducts, suspended tile ceiling	80
Floor-ceiling components:	
Harwood finish floor, 7⁄8 in.	4.0
Wood subfloor, ¾ in.	2.5
Acoustical tile with suspended steel channels	3.0
Mechanical duct allowance	4.0
Steel stud partition allowance	8.0
Sheathing:	
Plywood, per ½-in. thickness	0.40
Gypsum board, per ½-in. thickness	0.55

C. Linear loads in pounds per foot (lb/ft)

Steel beam, ordinary span and spacing	30–50
Steel girder, ordinary span and spacing	60–100
Wood joist, 2 × 10	4.0
Brick-CMU cavity wall, 12 ft high	1000

Table A-2.2 Live loads

A. Typical live loads based on occupancy (psf)

Assembly areas with fixed seats	60
Assembly areas with movable seats	100
Lobbies, corridors (first floor)	100
Dining rooms and restaurants	100
Garages for passenger cars	50
Libraries, reading rooms	60
Libraries, stack areas (not less than)	150
Manufacturing, light	125
Manufacturing, heavy	250
Office buildings	50
Dwellings and hotels (except as noted later)	40
Note: Residential sleeping areas	30
Schools (classrooms)	40
Schools (corridors above first floor)	80
Stadium and arena bleachers	100
Stairs and exitways	100
Stores, retail (first floor)	100
Stores, retail (upper floors)	75
Stores, wholesale (all floors)	125

B. Live load reduction coefficient^{1,2,3,4}

$$\text{Live load reduction coefficient} = 0.25 + \frac{15}{\sqrt{K_{LL}A_T}}$$

- Notes for Part B:
- K_{LL} is the live load element factor and is defined as follows for selected common beam and column configurations:
 $K_{LL} = 4$ for columns without cantilever slabs
 $K_{LL} = 3$ for edge columns with cantilever slabs
 $K_{LL} = 2$ for corner columns with cantilever slabs
 $K_{LL} = 2$ for beams (except as noted later)
 $K_{LL} = 1$ for one-way and two-way slabs; edge beams with cantilever slabs; and anything else not previously mentioned.
 - A_T is the tributary area of the element being considered (ft^2).
 - No live load reduction applies when $K_{LL}A_T < 400 \text{ ft}^2$.
 - Reduction coefficient cannot be taken greater than 1.0; nor can it be smaller than 0.5 for elements supporting a single floor level or smaller than 0.4 for all other conditions. See Chapter 2 for additional restrictions.

Table A-2.3 Environmental loads¹

City, State	Ground Snow Load (psf)	Basic Wind Speed, V (mph)	Seismic Ground Motion ²		
			S _s	S ₁	T _L
Boston, MA	35	105	0.35	0.08	6
Chicago, IL	25	90	0.20	0.06	12
Little Rock, AR	5	90	0.50	0.17	12
Houston, TX	0	120	0.10	0.05	12
Ithaca, NY	35	90	0.20	0.07	6
Los Angeles, CA	0	85	2.00	1.00	³ 12
Miami, FL	0	150	0.06	0.02	8
New York, NY	30	105	0.40	0.09	6
Philadelphia, PA	25	90	0.30	0.08	6
Phoenix, AZ	0	90	0.25	0.10	6
Portland, ME	50	100	0.37	0.10	6

- Notes:
- 1. Approximate values taken from snow, wind, and seismic maps.
 - 2. S_s and S₁ are, respectively, the maximum considered earthquake ground motions of 0.2-second (short) and 1-second (long) spectral response acceleration (5% of critical damping) for site class B, measured as a fraction of the acceleration due to gravity. T_L is the so-called long-period transition period (in seconds).
 - 3. Los Angeles regions adjacent to the ocean have a value of T_L = 8.

Table A-2.4 Snow load Importance factor, I_s

Category	Description	Factor
I	Low hazard (minor storage, etc.)	0.8
II	Regular (ordinary buildings)	1.0
III	Substantial hazard (schools, jails, places of assembly with no fewer than 300 occupants)	1.1
IV	Essential facilities (hospitals, fire stations, etc.)	1.2

Table A-2.5 Wind coefficients
A. Velocity pressure coefficient, K^1

Height above Grade, ² z (ft)	Exposure B^3	Exposure C^4	Exposure D^5
500	1.57	1.78	1.90
400	1.47	1.69	1.82
300	1.35	1.59	1.73
200	1.20	1.46	1.62
100	0.99	1.27	1.43
90	0.96	1.24	1.41
80	0.93	1.21	1.38
70	0.89	1.17	1.35
60	0.85	1.14	1.31
50	0.81	1.09	1.27
45	0.79	1.07	1.25
40	0.76	1.04	1.22
35	0.73	1.01	1.19
30	0.70	0.98	1.16
25	0.67	0.95	1.13
20	0.62	0.90	1.08
0–15	0.57	0.85	1.03

Notes for Part A:

1. Values of K are based on the following equation, where z is the height above grade (ft); $\alpha = 7.0$ for Exposure B, 9.5 for Exposure C, and 11.5 for Exposure D; and $z_g = 1200$ for Exposure B, 900 for Exposure C, and 700 for Exposure D:

$$K = 2.01 \left(\frac{z}{z_g} \right)^{2/\alpha}$$

When using tabular values for K , linear interpolation between values is permitted.

2. When computing pressures on windward surfaces, use height z corresponding to height for which pressure is being computed; for all other surfaces, use $z = h$ (mean roof height: i.e., use this single value of z for the entire surface). See Table A-2.5, Part H, for graphic explanation of building geometry parameters.

3. Exposure B refers to urban or suburban areas, wooded areas, etc.

4. Exposure C refers to open terrain with scattered obstructions, including water surfaces in hurricane regions.

5. Exposure D refers to flat, unobstructed areas like mud flats, salt flats, or water outside of hurricane regions.

(Continued)

Table A-2.5 (Continued)
B. External pressure coefficient for walls, C_p^1

Orientation	$0 < L/B \leq 1$	$L/B = 2$	$L/B \geq 4$
Windward	0.8	0.8	0.8
Leeward	-0.5	-0.3	-0.2
Side	-0.7	-0.7	-0.7

Note for Part B:
1. L and B are the plan dimensions of the rectangular building, with B being the dimension of the windward and leeward walls, and L the dimension of the sidewalls. See Table A-2.5, Part H, for graphic explanation of building geometry parameters.

C. External pressure coefficient on windward slope of roof, C_{pr} , for wind direction normal to ridge^{1,2,7}

Roof Angle, θ (deg)	$h/L \leq 0.25$	$h/L = 0.50$	$h/L \geq 1.0$
⁶ $\theta < 10$ $0 < D \leq h/2$	-0.9, -0.18	-0.9, -0.18	³ -1.3, -0.18
$h/2 < D \leq h$	-0.9, -0.18	-0.9, -0.18	-0.7, -0.18
$h < D \leq 2h$	-0.5, -0.18	-0.5, -0.18	-0.7, -0.18
$2h < D$	-0.3, -0.18	-0.3, -0.18	-0.7, -0.18
⁶ $\theta = 10$	-0.7, -0.18	-0.9, -0.18	³ -1.3, -0.18
$\theta = 15$	-0.5, ⁴ 0.0	-0.7, -0.18	-1.0, -0.18
$\theta = 20$	-0.3, 0.2	-0.4, ⁴ 0.0	-0.7, -0.18
$\theta = 25$	-0.2, 0.3	-0.3, 0.2	-0.5, ⁴ 0.0
$\theta = 30$	-0.2, 0.3	-0.2, 0.2	-0.3, 0.2
$\theta = 35$	⁴ 0.0, 0.4	-0.2, 0.3	-0.2, 0.2
$\theta = 45$	0.4	⁴ 0.0, 0.4	⁴ 0.0, 0.3
⁵ $\theta \geq 60$	0.01 θ	0.01 θ	0.01 θ

Notes for Part C:
1. Where two values are given, either may apply, and both must be considered. Interpolation between adjacent values is permitted, but must be between numbers of the same sign; where no number of the same exists, use 0.0.
2. Values are used with K taken at mean roof height. Units of length for D , h , and L must be consistent with each other. For roof angles less than 10° , D refers to the range of horizontal distances from the windward eave (edge) for which the value of C_p applies; h is the height of the eave above grade for roof angles no greater than 10° , otherwise, h is the mean roof height above grade; L is the horizontal length of the building parallel to the wind direction. See Table A-2.5, Part H, for graphic explanation of building geometry parameters.
3. Value of -1.3 may be reduced depending on the area it is acting on: for areas no greater than 100ft^2 , no reduction; for areas of 200ft^2 , multiply by 0.9; for areas no smaller than 1000ft^2 , multiply by 0.8; interpolate between given values.
4. Values of 0.0 are used only to interpolate between adjacent fields.
5. Roof angles greater than 80° are treated as windward walls, with $C_p = 0.8$.
6. See Note 2 for roof height, h , where roof angle is no greater than 10° .
7. Negative numbers indicate "suction," that is, forces acting away from the building surface; positive numbers indicate forces "pushing" against the building surface.

(Continued)

Table A-2.5 (Continued)D. External pressure coefficient on leeward slope of roof, C_{p_r} , for wind direction normal to ridge^{1,2,3}

Roof Angle, θ (deg)	$h/L \leq 0.25$	$h/L = 0.50$	$h/L \geq 1.0$
$\theta = 10$	-0.3	-0.5	-0.7
$\theta = 15$	-0.5	-0.5	-0.6
$\theta \geq 20$	-0.6	-0.6	-0.6

Notes for Part D:

1. The height h is measured to the eave for roof angles equal to 10° , otherwise, h is the mean roof height above grade; L is the horizontal length of the building parallel to the wind direction. See Table A-2.5, Part H, for graphic explanation of building geometry parameters.

2. For roof angles less than 10° , the roof is considered to be flat, and no leeward pressures are computed. Instead, use the values in Table A.2.4, Part C, for the entire roof.

3. Interpolation is permitted between values.

4. Negative numbers indicate "suction," that is, forces acting away from the building surface; positive numbers indicate forces "pushing" against the building surface.

E. External pressure coefficient on roof, C_{p_r} , for wind direction parallel to ridge, for all roof angles^{1,2,3,4,5}

Applicable Roof Area	$h/L \leq 0.25$	$h/L = 0.50$	$h/L \geq 1.0$
$0 < D \leq h/2$	-0.9, -0.18	-0.9, -0.18	³ -1.3, -0.18
$h/2 < D \leq h$	-0.9, -0.18	-0.9, -0.18	-0.7, -0.18
$h < D \leq 2h$	-0.5, -0.18	-0.5, -0.18	-0.7, -0.18
$2h < D$	-0.3, -0.18	-0.3, -0.18	-0.7, -0.18

Notes for Part E:

1. Where two values are given, either may apply, and both must be considered. Interpolation between adjacent values is permitted, but must be between numbers of the same sign.

2. Values are used with K taken at mean roof height. Units of length for D , h , and L must be consistent with each other. For all roof angles, D refers to the range of horizontal distances from the windward eave (edge) for which the value of C_p applies; h is the height of the eave above grade for roof angles no greater than 10° , otherwise, h is the mean roof height above grade; L is the horizontal length of the building parallel to the wind direction. See Table A-2.5, Part H, for graphic explanation of building geometry parameters.

3. Value of -1.3 may be reduced depending on the area it is acting on: for areas no greater than 100ft^2 , no reduction; for areas of 200ft^2 , multiply by 0.9; for areas no smaller than 1000ft^2 , multiply by 0.8; interpolate between given values.

4. Roof angles greater than 80° are treated as windward walls, with $C_p = 0.8$.

5. Negative numbers indicate "suction," that is, forces acting away from the building surface; positive numbers indicate forces "pushing" against the building surface.

F. Gust effect factor, G

In lieu of more complex calculations, use $G = 0.85$ for so-called rigid buildings: such buildings are in most cases no more than four times taller than their minimum width, and have a fundamental frequency of at least 1 Hz (1 cycle per second).

(Continued)

Table A-2.5 (Continued)


G. Importance factor, I_W

Category	Description	Factor
I	Low hazard (minor storage, etc.)	¹ 0.87
II	Regular (ordinary buildings)	1.0
III	Substantial hazard (schools, jails, places of assembly with no fewer than 300 occupants)	1.15
IV	Essential facilities (hospitals, fire stations, etc.)	1.15

Note for Part G:

1. The low hazard factor may be reduced to 0.77 in hurricane-prone regions with wind speed, $V > 100$ mph.

H. Graphic definition of building parameters¹

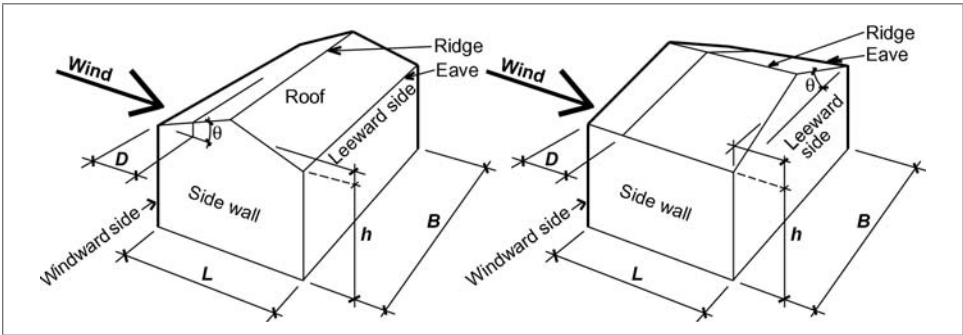

Note for Part H:

1. When using Table A-2.5, Parts C, D, and E, the roof height, h , is measured to the mean roof elevation, except for roof angles less than or equal to 10° , in which case h is measured to the eave, as indicated by the dotted line.

Table A-2.6 Seismic coefficients

A. Site coefficient, F_a

Site Class	S_s				
	≤ 0.25	0.5	0.75	1.0	≥ 1.25
A = hard rock	0.8	0.8	0.8	0.8	0.8
B = rock	1.0	1.0	1.0	1.0	1.0
C = dense soil or soft rock	1.2	1.2	1.1	1.0	1.0
D = stiff soil	1.6	1.4	1.2	1.1	1.0
E = soft soil	2.5	1.7	1.2	0.9	0.9
F = liquefiable soils, etc.	Need site-specific investigation				

B. Site coefficient, F_v

Site Class	S_1				
	≤ 0.1	0.2	0.3	0.4	≥ 0.5
A = hard rock	0.8	0.8	0.8	0.8	0.8
B = rock	1.0	1.0	1.0	1.0	1.0
C = dense soil or soft rock	1.7	1.6	1.5	1.4	1.3
D = stiff soil	2.4	2.0	1.8	1.6	1.5
E = soft soil	3.5	3.2	2.8	2.4	2.4
F = liquefiable soils, etc.	Need site-specific investigation				

C. Design elastic response acceleration, S_{DS} and S_{D1}

$^1S_{DS} = \frac{2}{3}(F_a)(S_s)$	$^1S_{D1} = \frac{2}{3}(F_v)(S_1)$
------------------------------------	------------------------------------

Note for Part C:

1. See Table A-2.3 for selected values of S_s and S_1 . See Table A-2.5, Parts A and B, for F_a and F_v , respectively.

D. Response modification coefficient, R (including height and other limitations based on seismic design category¹)

Bearing Wall Systems			
01. Special reinforced concrete shear walls (¹ categories D, E limited to 160 ft; F limited to 100 ft ¹)	5	06. Ordinary precast shear walls (¹ not permitted in categories C–F)	3
02. Ordinary reinforced concrete shear walls (¹ not permitted in categories D–F)	4	07. Special reinforced masonry shear walls (¹ categories D, E limited to 160 ft; F limited to 100 ft)	5
03. Detailed plain concrete shear walls (¹ not permitted in categories C–F)	2	08. Intermediate reinforced masonry shear walls (¹ not permitted in categories D–F)	3.5
04. Ordinary plain concrete shear walls (not permitted in categories C–F)	1.5	09. Ordinary reinforced masonry shear walls (¹ not permitted in categories D–F; C limited to 160 ft)	2
05. Intermediate precast shear walls (^{1,2} categories D–F limited to 40 ft)	4	10. Detailed plain masonry shear walls (¹ not permitted in categories C–F)	2

(Continued)

Table A-2.6 (Continued)

Bearing Wall Systems (Continued)			
11. Ordinary plain masonry shear walls (¹ not permitted in categories C–F)	1.5	10. Ordinary precast shear walls (¹ not permitted in categories C–F)	4
12. Prestressed masonry shear walls (¹ not permitted in categories C–F)	1.5	11. Composite steel and concrete eccentrically braced frames (¹ categories D, E limited to 160 ft; F limited to 100 ft)	8
13. Light-framed walls, wood-structural/sheet-steel shear panels (¹ categories D–F limited to 65 ft)	6.5	12. Composite steel and concrete concentrically braced frames (¹ categories D, E limited to 160 ft; F limited to 100 ft)	5
14. Light-framed walls with shear panels—all other materials (¹ not permitted in categories E, F; D limited to 35 ft)	2	13. Ordinary composite steel and concrete braced frames (¹ not permitted in categories D–F)	3
15. Light-framed wall systems using flat strap bracing (¹ categories D–F limited to 65 ft)	4	14. Composite steel plate shear walls (¹ categories D, E limited to 160 ft; F limited to 100 ft)	6.5
Building frame systems			
01. Steel eccentrically braced frames, moment-resisting, connections at columns away from links (¹ categories D, E limited to 160 ft; F limited to 100 ft)	8	15. Special composite reinforced concrete shear walls with steel elements (¹ categories D, E limited to 160 ft; F limited to 100 ft)	6
02. Steel eccentrically braced frames, non-moment-resisting, connections at columns away from links (¹ categories D, E limited to 160 ft; F limited to 100 ft)	7	16. Ordinary composite reinforced concrete shear walls with steel elements (¹ not permitted in categories D–F)	5
03. Special steel concentrically braced frames (¹ categories D, E limited to 160 ft; F limited to 100 ft)	6	17. Special reinforced masonry shear walls (¹ categories D, E limited to 160 ft; F limited to 100 ft)	5.5
04. Ordinary steel concentrically braced frames (^{1,2} categories D, E limited to 35 ft; F not permitted)	3.25	18. Intermediate reinforced masonry shear walls (¹ not permitted in categories D–F)	4
05. Special reinforced concrete shear walls (¹ categories D, E limited to 160 ft; F limited to 100 ft)	6	19. Ordinary reinforced masonry shear walls (¹ category C limited to 160 ft; not permitted in categories D–F)	2
06. Ordinary reinforced concrete shear walls (¹ not permitted in categories D–F)	5	20. Detailed plain masonry shear walls (¹ not permitted in categories C–F)	2
07. Detailed plain concrete shear walls (¹ not permitted in categories C–F)	2	21. Ordinary plain masonry shear walls (¹ not permitted in categories C–F)	1.5
08. Ordinary plain concrete shear walls (¹ not permitted in categories C–F)	1.5	22. Prestressed masonry shear walls (¹ not permitted in categories C–F)	1.5
09. Intermediate precast shear walls (^{1,2} categories D–F limited to 40 ft)	5	23. Light-framed walls with wood-structural/sheet-steel shear panels (¹ categories D–F limited to 65 ft)	7

(Continued)

Table A-2.6 (Continued)

24. Light-framed walls with shear panels—all other materials (¹ not permitted in categories <i>E, F</i> ; <i>D</i> limited to 35ft)	2.5	10. Composite partially restrained moment frames (¹ categories <i>B, C</i> limited to 160ft; <i>D</i> limited to 100ft; not permitted in categories <i>E, F</i>)	6
25. Buckling-restrained braced frames, non-moment-resisting beam-column connections (¹ categories <i>D, E</i> limited to 160ft; <i>F</i> limited to 100ft)	7	11. Ordinary composite moment frames (¹ not permitted in categories <i>C–F</i>)	3
26. Buckling-restrained braced frames, moment-resisting beam-column connections (¹ categories <i>D, E</i> limited to 160ft; <i>F</i> limited to 100ft)	8	Dual systems with special moment frames that resist at least 25% of seismic forces	
27. Special steel plate shear wall (¹ categories <i>D, E</i> limited to 160ft; <i>F</i> limited to 100ft)	7	01. Steel eccentrically braced frames (no limits)	8
—	—	02. Special steel concentrically braced frames (no limits)	7
—	—	03. Special reinforced concrete shear walls (no limits)	7
Moment-Resisting Frame Systems		04. Ordinary reinforced concrete shear walls (¹ not permitted in categories <i>D–F</i>)	6
01. Special steel moment frames (no limits)	8	05. Composite steel and concrete eccentrically braced frames (no limits)	8
02. Special steel truss moment frames (¹ category <i>D</i> limited to 160ft; <i>E</i> limited to 100ft; not permitted in category <i>F</i>)	7	06. Composite steel and concrete concentrically braced frames (no limits)	6
03. Intermediate steel moment frames (^{1,2} category <i>D</i> limited to 35ft; not permitted in categories <i>E–F</i>)	4.5	07. Composite steel plate shear walls (no limits)	7.5
04. Ordinary steel moment frames (^{1,2} not permitted in categories <i>D–F</i>)	3.5	08. Special composite reinforced concrete shear walls with steel elements (no limits)	7
05. Special reinforced concrete moment frames (no limits)	8	09. Ordinary composite reinforced concrete shear walls with steel elements (¹ not permitted in categories <i>D–F</i>)	6
06. Intermediate reinforced concrete moment frames (¹ not permitted in categories <i>D–F</i>)	5	10. Special reinforced masonry shear walls (no limits)	5.5
07. Ordinary reinforced concrete moment frames (¹ not permitted in categories <i>C–F</i>)	3	11. Intermediate reinforced masonry shear walls (¹ not permitted in categories <i>D–F</i>)	4
08. Special composite steel and concrete moment frames (no limits)	8	12. Buckling-restrained braced frame (no limits)	8
09. Intermediate composite moment frames (¹ not permitted in categories <i>D–F</i>)	5	13. Special steel plate shear walls (no limits)	8

(Continued)

Table A-2.6 (Continued)

Dual systems with intermediate moment frames that resist at least 25% of seismic forces		02. Intermediate steel moment frames (^{1,2} categories <i>B–D</i> limited to 35 ft; not permitted in categories <i>E, F</i>)	1.5
01. Special steel concentrically braced frames (¹ not permitted in categories <i>E–F</i> ; <i>D</i> limited to 35 ft)	6	03. Ordinary steel moment frames (^{1,2} categories <i>B, C</i> limited to 35 ft; not permitted in categories <i>D–F</i>)	1.25
02. Special reinforced concrete shear walls (¹ category <i>D</i> limited to 160 ft; <i>E–F</i> limited to 100 ft)	6.5	04. Special reinforced concrete moment frames (¹ categories <i>B–F</i> limited to 35 ft)	2.5
03. Ordinary reinforced masonry shear walls (¹ category <i>C</i> limited to 160 ft; not permitted in categories <i>D–F</i>)	3	05. Intermediate concrete moment frames (¹ categories <i>B, C</i> limited to 35 ft; not permitted in categories <i>D–F</i>)	1.5
04. Intermediate reinforced masonry shear walls (¹ not permitted in categories <i>D–F</i>)	3.5	06. Ordinary concrete moment frames (¹ category <i>B</i> limited to 35 ft; not permitted in categories <i>C–F</i>)	1
05. Composite steel and concrete concentrically braced frames (¹ not permitted in category <i>F</i> ; <i>D</i> limited to 160 ft; <i>E</i> limited to 100 ft)	5.5	07. Timber frames (¹ categories <i>B–D</i> limited to 35 ft; not permitted in categories <i>E, F</i>)	1.5
06. Ordinary composite braced frames (¹ not permitted in categories <i>D–F</i>)	3.5	Miscellaneous other systems	
07. Ordinary composite reinforced concrete shear walls with steel elements (¹ not permitted in categories <i>D–F</i>)	5	Steel systems not specifically detailed for seismic resistance, excluding cantilevered column systems (¹ not permitted in categories <i>C–F</i>)	3
08. Ordinary reinforced concrete shear walls (¹ not permitted in categories <i>D–F</i>)	5.5	Shear wall-frame interactive system with ordinary reinforced concrete moment frames and shear walls (¹ not permitted in categories <i>D–F</i>)	4.5
Cantilevered column systems detailed to conform with:			
01. Special steel moment frames (¹ categories <i>B–F</i> limited to 35 ft)	2.5		

Notes for Part D:
¹Seismic design categories are described in Table A-2.6, Part G, and range from A (least severe) to F (most severe).
²Height limits may be increased in certain cases, and buildings may be permitted in certain cases for this seismic force-resisting system (refer to building codes).

(Continued)

Table A-2.6 (Continued)E. Fundamental period of vibration, T (seconds)—approximate value, and ²exponent, k

T^1	Structure	C_T	x
$T = C_T h_n^x$	Steel moment-resisting frame	0.028	0.8
	Concrete moment-resisting frame	0.016	0.9
	Steel eccentrically braced frame	0.030	0.75
	All other structural types	0.020	0.75

Notes for Part E:

1. h_n is the building height (ft).2. k accounts for the more complex effect of longer periods of vibration on the distribution of story forces and equals 1 for periods ≤ 0.5 second, and 2 for periods ≥ 2.5 seconds (with linear interpolation permitted for periods between 0.5 and 2.5 seconds).F. Importance factor, I_E

Occupancy Category	Description	Factor
I	Low hazard (minor storage, etc.)	1.0
II	Regular (ordinary buildings)	1.0
III	Substantial hazard (schools, jails, places of assembly with no fewer than 300 occupants)	1.25
IV	Essential facilities (hospitals, fire stations, etc.)	1.50

G. Seismic design category¹

Occupancy Category	$20 \leq S_{DS} < 0.167$ or $0 \leq S_{D1} < 0.067$	$20.167 \leq S_{DS} < 0.33$ or $0.067 \leq S_{D1} < 0.133$	$20.33 \leq S_{DS} < 0.50$ or $0.133 \leq S_{D1} < 0.20$	$20.50 \leq S_{DS}$ or $0.20 \leq S_{D1}$	$S_1 \geq 0.75$
I	A	B	C	D	E
II	A	B	C	D	E
III	A	B	C	D	E
IV	A	C	D	D	F

Notes for Part G:

1. Where more than one category applies, use the more severe category (i.e., B before A; C before B, etc.)

2. For buildings with $S_1 < 0.75$, it is permissible to use only the S_{DS} criteria (i.e., one need not consider the criteria involving S_{D1}), but only where all of the following apply:(a) $T < 0.8S_{D1}/S_{DS}$ where the period T is found in Table A-2.5, Part E, and S_{D1} and S_{DS} are found in Table A-2.6, Part C.

(b) Floor-roof systems (acting as regular structural "diaphragms" with span-depth ratios no greater than 3) are concrete slabs or metal decks with concrete infill; or, for flexible diaphragms, lateral-force-resisting vertical elements (such as shear walls or trusses) are no more than 40 ft apart.

Table A-2.6 (Continued)
H. Seismic response coefficient, ¹C_s

S_I and T	Upper Limit for C_s	Lower Limit for C_s	² Provisional C_s
$S_I < 0.6$ and $T \leq T_L$	$\frac{S_{D1}}{(TR/I_E)}$	0.01	$\frac{S_{DS}}{(R/I_E)}$
$S_I < 0.6$ and $T > T_L$	$\frac{S_{D1}T_L}{(T^2R/I_E)}$		
$S_I \geq 0.6$ and $T \leq T_L$	$\frac{S_{D1}}{(TR/I_E)}$	$\frac{0.5S_1}{(R/I_E)}$	
$S_I \geq 0.6$ and $T > T_L$	$\frac{S_{D1}T_L}{(T^2R/I_E)}$		

Notes for Part H:
1. Values for S_I and T_L for selected cities can be found in Table A-2.3; values for S_{DS} and S_{D1} are found in Table A-2.6, Part C; values for R are found in Table A-2.6, Part D; approximate values for T are found in Table A-2.6, Part E; and values for I_E are found in Table A-2.6, Part F.
2. Use the "provisional" value for C_s when it falls between the lower and upper limits; otherwise, use the lower limit (when the provisional value is below the lower limit) or the upper limit (when the provisional value is above the upper limit).

Tables for Chapter 3 (material properties)

3

Table A-3.1 Design values for tension, F_t (psi) for visually graded lumber and glued laminated timber

A. Dimension lumber (2 to 4 in. thick)

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1000	675	575	325	¹ 800
Douglas Fir-Larch (North)	825	n/a	n/a	300	² 500
Douglas Fir-South	900	600	525	300	
Hem-Fir	925	625	525	300	¹ 725
Hem-Fir (North)	775	n/a	n/a	325	² 575
Spruce-Pine-Fir	700	n/a	n/a	250	² 450
Spruce-Pine-Fir (South)	575	400	350	200	
Southern Pine ³	1000	650	525	300	

B. Beams and stringers⁴

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	950	675	425	n/a	
Douglas Fir-Larch (North)	950	675	425	n/a	
Douglas Fir-South	900	625	425	n/a	
Hem-Fir	750	525	350	n/a	
Hem-Fir (North)	725	500	325	n/a	
Spruce-Pine-Fir	650	450	300	n/a	
Spruce-Pine-Fir (South)	625	450	300	n/a	
Southern Pine ⁵	900	550	525	n/a	

(Continued)

Table A-3.1 (Continued)

C. Posts and timbers⁶

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1000	825	475	n/a	
Douglas Fir-Larch (North)	1000	825	475	n/a	
Douglas Fir-South	950	775	450	n/a	
Hem-Fir	800	650	375	n/a	
Hem-Fir (North)	775	625	375	n/a	
Spruce-Pine-Fir	700	550	325	n/a	
Spruce-Pine-Fir (South)	675	550	325	n/a	
Southern Pine ⁵	900	550	525	n/a	

D. Glued laminated softwood timber

Species	Grade (and Identification No.)			
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)
Douglas Fir-Larch (DF)	900	1250	1450	1600
	L3 (ID#22)			
Softwood Species (SW)	525			
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)
Alaska Cedar (AC)	725	975	1250	1250
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)
Southern Pine (SP)	1200	1400	1350	1550

Notes:

1. No.1 and better.

2. No.1/No.2.

3. Values for Southern Pine for dimension lumber are approximate: typical published values include the size factor and, therefore, list different values for each lumber width, whereas the values in this table have been normalized (i.e., do not include the size factor) and have been rounded down to values that may be slightly conservative.

4. Beams and stringers are a subset of the "timbers" size category, 5in. × 5in. or larger, where the width is at least 4in. bigger than the thickness.

5. Southern Pine values for timbers (beams and stringers; posts and timbers) are for wet service conditions.

6. Posts and timbers are a subset of the "timbers" size category, 5in. × 5in. or larger, where the width is equal to, or no more than 2in. bigger than, the thickness.

Table A-3.2 Adjustments to allowable stress in tension, F_t , for visually graded lumber and glued laminated softwood timber

A. Size factor

Size factor, $C_F = 1.0$ for tension stress, except for the following sizes of dimension lumber:							
Size	C_F	Size	C_F	Size	C_F	Size	C_F
2 × 2	1.5	2 × 8	1.2	12 × 14, 4 × 14	0.9	4 × 8	1.2
2 × 4	1.5	2 × 10	1.1	4 × 4	1.5	4 × 10	1.1
2 × 6	1.3	2 × 12	1.0	4 × 6	1.3	4 × 12	1.0

B. Wet service factor

Wet service factor , $C_M = 1.0$, except for glulam with a moisture content of at least 16% (e.g., used outdoors), in which case $C_M = 0.8$. In any dry service condition, $C_M = 1.0$.
--

C. Load duration factor

Load duration factor, C_D , is as follows:		
Load Type	Duration	C_D
Dead load, D	Permanent	0.90
Live load, L	10 years	1.00
Snow load, S	2 months	1.15
Construction load, L_r	1 week	1.25
Wind or seismic load, W or E	10 minutes	1.60
Impact load, I	Instant	2.00

D. Temperature factor, C_t

Temperature, T (°F)	C_t
$T \leq 100^\circ\text{F}$	1.0
$100^\circ\text{F} < T \leq 150^\circ\text{F}$	0.9

Note:

1. $C_F = 0.9$ for all 2× or 4× dimension lumber having nominal width greater or equal to 14.

Table A-3.3 Design values for compression (psi), parallel to grain (F_c) and perpendicular to grain (F_{c-per}) for visually graded lumber and glued laminated softwood timber
A. Dimension lumber (2 to 4 in. thick)

Species	F_c (parallel to grain)					F_{c-per} (perpendicular to grain)
	Select Structural	No. 1	No. 2	No. 3	Miscellaneous	All Grades ⁷
Douglas Fir-Larch	1700	1500	1350	775	¹ 1550	625
Douglas Fir-Larch (North)	1900	n/a	n/a	825	² 1400	625
Douglas Fir-South	1600	1450	1450	775		520
Hem-Fir	1500	1350	1300	725	¹ 1350	405
Hem-Fir (North)	1700	n/a	n/a	850	² 1450	405
Spruce-Pine-Fir	1400	n/a	n/a	650	² 1150	425
Spruce-Pine-Fir (South)	1200	1050	1000	575		335
Southern Pine ³	1800	1575	1425	825		565

B. Beams and stringers⁴

Species	F_c (parallel to grain)					F_{c-per} (perpendicular to grain)
	Select Structural	No. 1	No. 2	No. 3	Miscellaneous	All Grades ⁷
Douglas Fir-Larch	1100	925	600	n/a		625
Douglas Fir-Larch (North)	1100	925	600	n/a		625
Douglas Fir-South	1000	850	550	n/a		520
Hem-Fir	925	750	500	n/a		405
Hem-Fir (North)	900	750	475	n/a		405
Spruce-Pine-Fir	775	625	425	n/a		425
Spruce-Pine-Fir (South)	675	550	375	n/a		335
Southern Pine ⁵	950	825	525	n/a		375

C. Posts and timbers⁶

Species	F_c (parallel to grain)					F_{c-per} (perpendicular to grain)
	Select Structural	No. 1	No. 2	No. 3	Miscellaneous	All Grades ⁷
Douglas Fir-Larch	1150	1000	700	n/a		625
Douglas Fir-Larch (North)	1150	1000	700	n/a		625
Douglas Fir-South	1050	925	650	n/a		520
Hem-Fir	975	850	575	n/a		405
Hem-Fir (North)	950	850	575	n/a		405
Spruce-Pine-Fir	800	700	500	n/a		425
Spruce-Pine-Fir (South)	700	625	425	n/a		335
Southern Pine ⁵	950	825	525	n/a		375

(Continued)

Table A-3.3 (Continued)
D. Glued laminated softwood timber

Species	Grade (and Identification No.)							
	F_c (parallel to grain)				F_{c-per} (perpendicular to grain)			
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)
Douglas Fir-Larch ⁸ (DF)	1550	1950	2300	2400	560	560	650	650
(less than 4 laminations)	1200	1600	1850	2100	560	560	650	650
	L3 (ID#22)				L3 (ID#22)			
Softwood Species ⁸ (SW)	850				315			
(less than 4 laminations)	675				315			
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)
Alaska Cedar ⁸ (AC)	1150	1450	1900	1900	470	470	560	560
(less than 4 laminations)	1100	1450	1900	1900	470	470	560	560
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)
Southern Pine ⁸ (SP)	1900	2200	2100	2300	650	740	650	740
(less than 4 laminations)	1150	1350	1450	1700	650	740	650	740
Species	Combination Symbol							
	F_c (parallel to grain)				F_{c-per} (perpendicular to grain)			
	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E
Various species ⁹	925	925	1000	1600	315	425	500	650

Notes:

1. No.1 and better.

2. No.1/No.2.

3. Values for Southern Pine for dimension lumber are approximate: typical published values include the size factor and, therefore, list different values for each lumber width, whereas the values in this table have been normalized (i.e., do not include the size factor) and have been rounded down to values that may be slightly conservative.

4. Beams and stringers are a subset of the “timbers” size category, 5 in. × 5 in. or larger, where the width is at least 4 in. bigger than the thickness.

5. Southern Pine values for timbers (beams and stringers; posts and timbers) are for wet service conditions.

6. Posts and timbers are a subset of the “timbers” size category, 5 in. × 5 in. or larger, where the width is equal to, or no more than 2 in. bigger than, the thickness.

7. Values for compression perpendicular to grain apply to all the size categories listed in this table (i.e., listed under compression parallel to grain). However, “dense” variations of Douglas Fir-Larch and Southern Pine, not listed here, have higher values.

8. These species designations are designed primarily for axially loaded elements (compression and tension).

9. These combination designations are designed primarily for bending elements, although they can be used in axial compression or tension with the values that appear in this table. Values for F_{c-per} (compression perpendicular to grain) are based on loading perpendicular to the wide face of the laminations.

Table A-3.4 Adjustments to allowable stress in compression, F_c , for visually graded lumber and glued laminated softwood timber
A. Size factor³

Size factor, $C_F = 1.0$ for compression stress, except for the following sizes of dimension lumber:							
Size	C_F	Size	C_F	Size	C_F	Size	C_F
2 × 2	1.15	2 × 8	1.05	12 × 14, 4 × 14	0.9	4 × 8	1.05
2 × 4	1.15	2 × 10	1.00	4 × 4	1.15	4 × 10	1.00
2 × 6	1.10	2 × 12	1.00	4 × 6	1.10	4 × 12	1.00

B. Wet service factor

Wet service factor, C_M , is as follows: for ²dimension lumber, $C_M = 0.8$; for timbers, $C_M = 0.91$; for glulam, $C_M = 0.73$. In any dry service condition, $C_M = 1.0$.

C. Load duration factor⁴

Load duration factor, C_D , is as follows:		
Load Type	Duration	C_D
Dead load, D	Permanent	0.90
Live load, L	10 years	1.00
Snow load, S	2 months	1.15
Construction load, L_r	1 week	1.25
Wind or seismic load, W or E	10 minutes	1.60
Impact load, I	Instant	2.00

D. Column stability factor⁵

The column stability factor, C_P , is as follows:

$$C_P = A - \sqrt{A^2 - B}$$

where:

$$A = [1 + (F_{cE}/F_c^*)]/(2c)$$
$$B = (F_{cE}/F_c^*)/c$$
$$F_{cE} = 0.822E'_{min}/(l_e/d)^2$$
$$F_c^* = F_c C_D C_M C_F$$
$$E'_{min} = E_{min} C_M \text{ (see Table A-3.9 for adjustments to } E \text{ and } E_{min})$$

d = cross-sectional dimension (in.) corresponding to the unbraced length, l_e ; where the unbraced length is the same for both axes of the cross section, d should be taken as the smaller cross-sectional dimension; otherwise, use the larger value of l_e/d

l_e = the unbraced length corresponding to the cross-sectional dimension, d

c = 0.8 for sawn lumber, and 0.9 for glulam

(Continued)

Table A-3.4 (Continued)E. Temperature factor, C_t

Temperature, T (°F)	C_t (used dry)	C_t (used wet)
$T \leq 100^\circ\text{F}$	1.0	1.0
$100^\circ\text{F} < T \leq 125^\circ\text{F}$	0.8	0.7
$125^\circ\text{F} < T \leq 150^\circ\text{F}$	0.7	0.5

Notes:

1. $C_F = 0.9$ for all 2× or 4× dimension lumber having nominal width greater or equal to 14.
2. $C_M = 1.0$ for dimension lumber when $F_c C_F \leq 750$ psi.
3. Size factor adjustments are not used for compression perpendicular to grain.
4. Load duration adjustments are not used for compression perpendicular to grain.
5. Column stability factor adjustments are not used for compression perpendicular to grain.

Table A-3.5 Design values for bending, F_b (psi) for visually graded lumber and glued laminated softwood timber

A. Dimension lumber (2 to 4 in. thick)

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1500	1000	900	525	¹ 1200
Douglas Fir-Larch (North)	1350	n/a	n/a	475	² 850
Douglas Fir-South	1350	925	850	500	
Hem-Fir	1400	975	850	500	¹ 1100
Hem-Fir (North)	1300	n/a	n/a	575	² 1000
Spruce-Pine-Fir	1250	n/a	n/a	500	² 875
Spruce-Pine-Fir (South)	1300	875	775	450	
Southern Pine ³	1700	1075	875	500	

B. Beams and stringers⁴

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1600	1350	875	n/a	
Douglas Fir-Larch (North)	1600	1300	875	n/a	
Douglas Fir-South	1550	1300	825	n/a	
Hem-Fir	1300	1050	675	n/a	
Hem-Fir (North)	1250	1000	675	n/a	
Spruce-Pine-Fir	1100	900	600	n/a	
Spruce-Pine-Fir (South)	1050	900	575	n/a	
Southern Pine ⁵	1500	1350	850	n/a	

(Continued)

Table A-3.5 (Continued)
C. Posts and timbers⁶

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1500	1200	750	n/a	
Douglas Fir-Larch (North)	1500	1200	725	n/a	
Douglas Fir-South	1450	1150	675	n/a	
Hem-Fir	1200	975	575	n/a	
Hem-Fir (North)	1150	925	550	n/a	
Spruce-Pine-Fir	1050	850	500	n/a	
Spruce-Pine-Fir (South)	1000	800	475	n/a	
Southern Pine ⁵	1500	1350	850	n/a	

D. Glued laminated softwood timber bent about x-axis (loaded perpendicular to wide face of laminations)

Species	Grade (and Identification No.)							
	F_b (for beams with $d > 15$ in.)				F_b (for beams with $d \leq 15$ in.)			
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)
Douglas Fir-Larch ⁷ (DF)	1100	1496	1760	1936	1250	1700	2000	2200
	L3 (ID#22)				L3 (ID#22)			
Softwood Species ⁷ (SW)	638				725			
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)
Alaska Cedar ⁷ (AC)	880	1188	1496	1672	1000	1350	1700	1900
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)
Southern Pine ⁷ (SP)	1232	1408	1584	1848	1400	1600	1800	2100
Species	Combination Symbols for Stress Classes							
	F_b (for positive bending ⁹)				F_b (for negative bending ⁹)			
	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E
Various species ⁸	1600	2000	2400	2400	925	1100	1450	1450

(Continued)

Table A-3.5 (Continued)

E. Glued laminated softwood timber bent about y-axis (loaded parallel to wide face of laminations)

Species	Grade (and Identification No.)							
	F_b (for 4 or more laminations)				F_b (for 3 laminations)			
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)
Douglas Fir-Larch ⁷ (DF)	1450	1800	2100	2400	1250	1600	1850	2100
	L3 (ID#22)				L3 (ID#22)			
Softwood Species ⁷ (SW)	800				700			
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)
Alaska Cedar ⁷ (AC)	1100	1400	1850	1850	975	1250	1650	1650
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)
Southern Pine ⁷ (SP)	1750	2000	1950	2300	1550	1800	1750	2100
Species	Combination Symbols for Stress Classes							
	F_b (all cases)							
	16F-1.3E		20F-1.5E		24F-1.7E		24F-1.8E	
Various species ⁸	800		800		1050		1450	

Notes:

1. No. 1 and better.

2. No. 1/No. 2.

3. Values for Southern Pine for dimension lumber are approximate: typical published values include the size factor and, therefore, list different values for each lumber width, whereas the values in this table have been normalized (i.e., do not include the size factor) and have been rounded down to values that may be slightly conservative.

4. Beams and stringers are a subset of the "timbers" size category, 5 in. $\times$ 5 in. or larger, where the width is at least 4 in. bigger than the thickness.

5. Southern Pine values for timbers (beams and stringers; posts and timbers) are for wet service conditions.

6. Posts and timbers are a subset of the "timbers" size category, 5 in. $\times$ 5 in. or larger, where the width is equal to, or no more than 2 in. bigger than, the thickness.7. These species designations are designed primarily for axially loaded elements (compression and tension), although they can be used for bending with the values that appear in this table. For bending about the x-axis only, these elements are assumed to have no special tension laminations; such special tension laminations would increase the bending design values (for all cross-section sizes bent about the x-axis) to the values shown for $d \leq 15$ in. multiplied by a factor of 1.18.

8. These combination designations are designed primarily for simply supported bending elements (i.e., for beams with only positive bending moments), and are manufactured with higher strength grades of wood used in the extreme fibers (for bending about the x-axis) where bending stresses are greatest.


9. The combination symbols in this table refer to cross sections that are "unbalanced"; that is, they are manufactured to optimize the behavior of simply supported beams with only positive curvature. Where such unbalanced combinations are used for beams subjected to negative bending moments—that is, for continuous or cantilevered beams—lower values for F_b must be used at those cross sections with negative moment. For beams subjected to reversals of curvature (and, therefore, both positive and negative bending), "balanced" (symmetrical) combinations can be specified where F_b is the same for both positive and negative bending; for example, combination symbols 16F-V6 with $F_b = 1600$ psi; 20F-V7 with $F_b = 2000$ psi; and 24F-V8 with $F_b = 2400$ psi.

Table A-3.6 Adjustments to allowable stress in bending, F_b , for visually graded lumber and glued laminated softwood timber

A. Size factor

Size factor, C_F. (1) For glulam, size factor does not apply (use smaller of C_V and C_L —see Table A-3.6, Parts C and F). (2) For timbers (beams and stringers; posts and timbers): when $d > 12$ in., $C_F = (12/d)^{1/5}$; when loaded on the wide face, $C_F = 0.86$ (select structural), 0.74 (No. 1), or 1.00 (No. 2); otherwise, $C_F = 1.00$. (3) For dimension lumber, C_F is as shown here:							
Size	C_F	Size	C_F	Size	C_F	Size	C_F
2 × 2	1.5	2 × 8	1.2	12 × 14	0.9	4 × 8	1.3
2 × 4	1.5	2 × 10	1.1	4 × 4	1.5	4 × 10	1.2
2 × 6	1.3	2 × 12	1.0	4 × 6	1.3	14 × 12	1.1

B. Flat use factor

Flat use factor, C_{fu}, is used only when dimension lumber (or glulam) is oriented about its weak axis:							
(1) For dimension lumber:							
Size	C_{fu}	Size	C_{fu}	Size	C_{fu}	Size	C_{fu}
2 × 4	1.10	2 × 10	1.20	4 × 6	1.05	4 × 12	1.10
2 × 6	1.15	2 × 12	1.20	4 × 8	1.05	4 × 14	1.10
2 × 8	1.15	2 × 14	1.20	4 × 10	1.10	4 × 16	1.10
(2) For glulam:							
For glulam beams bent about their weak (y) axis, and where the depth, $d < 12$ in.:							
$C_{fu} = (12/d)^{1/5}$							
The approximate values shown below can be used as an alternative:							
Depth, d (in.)	C_{fu}	Depth, d (in.)	C_{fu}				
2½	1.19	6¾	1.07				
3 or 3⅜	1.16	8½ or 8¾	1.04				
5 or 5⅜	1.10	10½ or 10¾	1.01				

(Continued)

Table A-3.6 (Continued)

C. Volume factor

The volume factor, C_V , is used only for glulam beams loaded about their strong axes, and only if smaller than C_L (see later discussion). For these conditions:

$$C_V = \left(\frac{21}{L} \right)^{1/x} \left(\frac{12}{d} \right)^{1/x} \left(\frac{5.125}{b} \right)^{1/x} \leq 1.0$$

where

L = the length of the simply supported beam, or, for other beam types, the distance between points of zero moment (ft)

d = beam depth (in.)

b = beam width (in.)

x = 10 (except x = 20 for Southern Pine only)

D. Wet service factor


Wet service factor, C_M , is as follows: for 2dimension lumber, C_M = 0.85; for timbers, C_M = 1.0; for glulam, C_M = 0.8. In any dry service condition, C_M = 1.0.

E. Repetitive member factor

Repetitive member factor, C_r , = 1.15, is used only for dimension lumber spaced 24 in. on center or less (typically the case with joists and rafters).

(Continued)

Table A-3.6 (Continued)
F. Beam stability factor

The beam stability factor, C_L, may apply to glulam and timber beams but not ordinarily to dimension lumber—and only when the compression edge of the beam is unbraced by a roof or floor deck. For continuously braced beams—that is, when $l_e = 0$—$C_L = 0$. For glulam, use only the smaller value of C_L or C_V. For timbers, combine C_L with the size factor, C_F. Use only when the beam depth is greater than its width. For these conditions: $C_L = A - \sqrt{A^2 - B}$ Where $A = \frac{1 + (F_{bE}/F_b^*)}{1.9}$ $B = \frac{(F_{bE}/F_b^*)}{0.95}$ $F_{be} = \frac{1.20b^2E'_{min}}{l_e d}$ $F_b^* = F_b$ with all adjustments except C_V, C_L, and C_{fu} $E'_{min} = E_{min}C_M$ (see Table A-3.9 for adjustments to E and E_{min}) d = beam depth (in.) b = beam width (in.) l_u = the unsupported (unbraced) length (in.), that is, the greatest distance between lateral braces, including bridging or blocking, along the length of the beam l_e = the effective unsupported length (in.) where continuous lateral support is not provided as shown in these selected loading patterns:	
Load Arrangement  Uniform load: no lateral support except at ends.	Effective Length, l_e $l_e = 2.06l_u$ for $l_u/d < 7$ $l_e = 1.63l_u + 3d$ for $l_u/d \geq 7$
 Single point load at midspan: no lateral support except at ends.	$l_e = 1.80l_u$ for $l_u/d < 7$ $l_e = 1.37l_u + 3d$ for $l_u/d \geq 7$
 Single point load at midspan: lateral support under load and ends only.	$l_e = 1.11l_u$
 Point loads at third points: lateral support under loads and ends only.	$l_e = 1.68l_u$
 Point loads at quarter points: lateral support under loads and ends only.	$l_e = 1.54l_u$

Notes:
1. $C_F = 0.9$ for all 2× dimension lumber having nominal width greater or equal to 14. $C_F = 1.0$ for all 4× dimension lumber having nominal width greater or equal to 14.
2. $C_M = 1.0$ for dimension lumber when $F_b C_F \leq 1150$ psi.

(Continued)

Table A-3.6 (Continued)

G. Load duration factor

Load duration factor, C_D , is as follows:		
Load Type	Duration	C_D
Dead load, D	Permanent	0.90
Live load, L	10 years	1.00
Snow load, S	2 months	1.15
Construction load, L_r	1 week	1.25
Wind or seismic load, W or E	10 minutes	1.60
Impact load, I	Instant	2.00

H. Temperature factor, C_t

Temperature, T (°F)	C_t (used dry)	C_t (used wet)
$T \leq 100^\circ\text{F}$	1.0	1.0
$100^\circ\text{F} < T \leq 125^\circ\text{F}$	0.8	0.7
$125^\circ\text{F} < T \leq 150^\circ\text{F}$	0.7	0.5

Table A-3.7 Design values for shear, F_v (psi) for visually graded lumber and glued laminated softwood timber

A. Dimension lumber (2 to 4 in. thick)

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	180	180	180	180	¹ 180
Douglas Fir-Larch (North)	180	n/a	n/a	180	² 180
Douglas Fir-South	180	180	180	180	
Hem-Fir	150	150	150	150	¹ 150
Hem-Fir (North)	145	n/a	n/a	145	² 145
Spruce-Pine-Fir	135	n/a	n/a	135	² 135
Spruce-Pine-Fir (South)	135	135	135	135	
Southern Pine	175	175	175	175	

B. Timbers³

Species	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	170	170	170	n/a	
Douglas Fir-Larch (North)	170	170	170	n/a	
Douglas Fir-South	165	165	165	n/a	
Hem-Fir	140	140	140	n/a	
Hem-Fir (North)	135	135	135	n/a	
Spruce-Pine-Fir	125	125	125	n/a	
Spruce-Pine-Fir (South)	125	125	125	n/a	
Southern Pine ⁴	165	165	165	n/a	

C. Glued laminated softwood timber bent about x-axis (loaded perpendicular to wide face of laminations)

Species	Grade (and Identification No.)			
	F_v (for bending about x-axis ⁷)			
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)
Douglas Fir-Larch ⁵ (DF)	265	265	265	265
	L3 (ID#22)			
Softwood Species ⁵ (SW)	195			
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)
Alaska Cedar ⁵ (AC)	265	265	265	265
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)
Southern Pine ⁵ (SP)	300	300	300	300
Species	Combination Symbols for Stress Classes			
	F_v (for bending about x-axis ⁷)			
	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E
Various species ⁶	195	210	210	265

(Continued)

Table A-3.7 (Continued)

D. Glued laminated softwood timber bent about y-axis (loaded parallel to wide face of laminations)

Species	Grade (and Identification No.)			
	F_v (for bending about y-axis ⁷)			
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)
Douglas Fir-Larch ⁵ (DF)	230	230	230	230
	L3 (ID#22)			
Softwood Species ⁵ (SW)	170			
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)
Alaska Cedar ⁵ (AC)	230	230	230	230
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)
Southern Pine ⁵ (SP)	260	260	260	260
Species	Combination Symbols for Stress Classes			
	F_v (for bending about y-axis ⁷)			
	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E
Various species ⁶	170	185	185	230

Notes:

1. No. 1 and better.

2. No. 1/No. 2.

3. Timbers include "beams and stringers" and "posts and timbers," that is, all cross sections 5 in. $\times$ 5 in. or larger.

4. Southern Pine values for timbers (beams and stringers; posts and timbers) are for wet service conditions.

5. These species designations are designed primarily for axially loaded elements (compression and tension), although they can be used for bending with the shear values that appear in this table.

6. These combination designations are designed primarily for bending elements, and are manufactured with higher-strength grades of wood used in the extreme fibers where bending stresses are greatest when bent about the x-axis.

7. These values for horizontal shear must be reduced by a factor of 0.72 when used in the design of mechanical connections.

Table A-3.8 Adjustments to allowable stress in shear, F_v , for visually graded lumber and glued laminated softwood timber

A. Wet service factor

Wet service factor, C_M , is as follows: for dimension lumber, $C_M = 0.97$; for timbers, $C_M = 1.0$; for glulam, $C_M = 0.875$. In any dry service condition, $C_M = 1.0$.

B. Load duration factor

Load duration factor, C_D , is as follows:		
Load Type	Duration	C_D
Dead load, D	Permanent	0.90
Live load, L	10 years	1.00
Snow load, S	2 months	1.15
Construction load, L_r	1 week	1.25
Wind or seismic load, W or E	10 minutes	1.60
Impact load, I	Instant	2.00

C. Temperature factor, C_t

Temperature, T (°F)	C_t (used dry)	C_t (used wet)
$T \leq 100^\circ\text{F}$	1.0	1.0
$100^\circ\text{F} < T \leq 125^\circ\text{F}$	0.8	0.7
$125^\circ\text{F} < T \leq 150^\circ\text{F}$	0.7	0.5

Table A-3.9 Design values for modulus of elasticity, E and E_{min} (psi) for visually graded lumber and glued laminated softwood timber (values and adjustments)A. Modulus of elasticity, E (psi)⁵

Dimension Lumber (2 to 4 in. thick)	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1,900,000	1,700,000	1,600,000	1,400,000	¹ 1,800,000
Douglas Fir-Larch (North)	1,900,000	n/a	n/a	1,400,000	² 1,600,000
Douglas Fir-South	1,400,000	1,300,000	1,200,000	1,100,000	
Hem-Fir	1,600,000	1,500,000	1,300,000	1,200,000	¹ 1,500,000
Hem-Fir (North)	1,700,000	n/a	n/a	1,400,000	² 1,600,000
Spruce-Pine-Fir	1,500,000	n/a	n/a	1,200,000	² 1,400,000
Spruce-Pine-Fir (South)	1,300,000	1,200,000	1,100,000	1,000,000	
Southern Pine	1,800,000	1,700,000	1,600,000	1,400,000	
Timbers ³	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	1,600,000	1,600,000	1,300,000	n/a	
Douglas Fir-Larch (North)	1,600,000	1,600,000	1,300,000	n/a	
Douglas Fir-South	1,200,000	1,200,000	1,000,000	n/a	
Hem-Fir	1,300,000	1,300,000	1,100,000	n/a	
Hem-Fir (North)	1,300,000	1,300,000	1,100,000	n/a	
Spruce-Pine-Fir	1,300,000	1,300,000	1,100,000	n/a	
Spruce-Pine-Fir (South)	1,200,000	1,200,000	1,000,000	n/a	
Southern Pine ⁴	1,500,000	1,500,000	1,200,000	n/a	
Glued Laminated Softwood Timber	Grade (and Identification No.)				
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)	
Douglas Fir-Larch ⁷ (DF)	1,500,000	1,600,000	1,900,000	2,000,000	
	L3 (ID#22)				
Softwood Species ^{7,9} (SW)	1,000,000				
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)	
Alaska Cedar ⁷ (AC)	1,200,000	1,300,000	1,600,000	1,600,000	
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)	
Southern Pine ⁷ (SP)	1,400,000	1,700,000	1,700,000	1,900,000	
	Combination Symbols for Stress Classes				
	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E	
Various species (bending about x-axis) ⁸	1,300,000	1,500,000	1,700,000	1,800,000	
Various species (bending about y-axis) ⁸	1,100,000	1,200,000	1,300,000	1,600,000	

(Continued)

Table A-3.9 (Continued)
B. Minimum modulus of elasticity, E_{min} (psi)⁶

Dimension Lumber (2 to 4 in. thick)	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	690,000	620,000	580,000	510,000	¹ 660,000
Douglas Fir-Larch (North)	690,000	n/a	n/a	510,000	² 580,000
Douglas Fir-South	510,000	470,000	440,000	400,000	
Hem-Fir	580,000	550,000	470,000	440,000	¹ 550,000
Hem-Fir (North)	620,000	n/a	n/a	510,000	² 580,000
Spruce-Pine-Fir	550,000	n/a	n/a	440,000	² 510,000
Spruce-Pine-Fir (South)	470,000	440,000	400,000	370,000	
Southern Pine	660,000	620,000	580,000	510,000	
Timbers ³	Select Structural	No. 1	No. 2	No. 3	Miscellaneous
Douglas Fir-Larch	580,000	580,000	470,000	n/a	
Douglas Fir-Larch (North)	580,000	580,000	470,000	n/a	
Douglas Fir-South	440,000	440,000	370,000	n/a	
Hem-Fir	470,000	470,000	400,000	n/a	
Hem-Fir (North)	470,000	470,000	400,000	n/a	
Spruce-Pine-Fir	470,000	470,000	370,000	n/a	
Spruce-Pine-Fir (South)	440,000	440,000	370,000	n/a	
Southern Pine ⁴	550,000	550,000	440,000	n/a	
Glued Laminated Softwood Timber	Grade (and Identification No.)				
	L3 (ID#1)	L2 (ID#2)	L2D (ID#3)	L1D (ID#5)	
Douglas Fir-Larch ⁷ (DF)	780,000	830,000	980,000	104,000	
	L3 (ID#22)				
Softwood Species ^{7,10} (SW)	520,000				
	L3 (ID#69)	L2 (ID#70)	L1D (ID#71)	L1S (ID#72)	
Alaska Cedar ⁷ (AC)	620,000	670,000	830,000	830,000	
	N2M14 (ID#47)	N2D14 (ID#48)	N1M16 (ID#49)	N1D14 (ID#50)	
Southern Pine ⁷ (SP)	730,000	880,000	880,000	980,000	
	Combination Symbols for Stress Classes				
	16F-1.3E	20F-1.5E	24F-1.7E	24F-1.8E	
Various species (bending about x-axis) ⁸	670,000	780,000	880,000	930,000	
Various species (bending about y-axis) ⁸	570,000	620,000	670,000	830,000	

(Continued)

Table A-3.9 (Continued)

C. Wet service adjustment (C_M) to E and E_{min}

When applicable, the wet service factor, C_M , is as follows: for dimension lumber, $C_M = 0.9$; for glulam, $C_M = 0.833$; for any other condition, $C_M = 1.0$. In any dry service condition, $C_M = 1.0$.

D. Temperature factor adjustment (C_t) to E and E_{min}

Temperature, T (°F)	C_t
$T \leq 100^\circ\text{F}$	1.0
$100^\circ\text{F} < T \leq 150^\circ\text{F}$	0.9

Notes:

1. No. 1 and better.
2. No. 1/No. 2.
3. Timbers include “beams and stringers” and “posts and timbers,” that is, all cross sections 5 in. $\times$ 5 in. or larger.
4. Southern Pine values for timbers (beams and stringers; posts and timbers) are for wet service conditions.
5. The modulus of elasticity, E , is an average value, used in the calculation of beam deflections, but not for column or beam stability calculations.
6. The minimum modulus of elasticity, E_{min} , is a conservative (low) value, based on statistical analyses of moduli for tested samples and is used in calculations of column buckling (C_P) and beam stability (C_L).
7. These species designations are designed primarily for axially loaded elements (compression and tension), although they can be used in any context with the values that appear in this table.
8. These combination designations are designed primarily for bending elements, although they can be used in any context with the values that appear in this table.
9. The design values for E shown for “softwood species” must be reduced from 1,000,000 psi to 900,000 psi when the following species are used in combination: Western Cedars, Western Cedars (North), Western Woods, and Redwood (open grain).
10. The design values for E_{min} shown for “softwood species” must be reduced from 520,000 psi to 470,000 psi when the following species are used in combination: Western Cedars, Western Cedars (North), Western Woods, and Redwood (open grain).

Table A-3.10 Use of load duration factor, C_D , for wood elements

Where more than one load type acts on a wood structural element, C_D corresponds to the load of shortest duration. Values of C_D for tension, compression, bending, and shear can be found in Tables A-3.2, A-3.4, A-3.6, and A-3.8, respectively. It is sometimes necessary to check various combinations of loads (where the corresponding value of C_D changes) to determine the critical loading condition. Because the strength of lumber depends on the duration of loading, it is possible that a smaller load, with a longer duration, will be more critical than a larger load that acts on the element for less time.

For example, consider a wooden column supporting the following loads:

- A “construction” or roof live load, $L_R = 6000\text{ lb}$.
- A live load, $L = 20,000\text{ lb}$.
- A dead load, $D = 15,000\text{ lb}$.
- A snow load, $S = 16,000\text{ lb}$.

L_R and S are not considered simultaneously because it is unlikely that roof maintenance or construction will occur during a major snow storm.

Several load combinations should be analyzed, per Table A-5.1 (using Allowable Stress Design for wood):

1. $D + L$ with $C_D = 1.0$ (corresponding to the live load).
2. $D + S$ with $C_D = 1.15$ (corresponding to the snow load).
3. $D + 0.75L + 0.75S$ with $C_D = 1.15$ (corresponding to the snow load).

It is usually unnecessary to go through the entire design procedure for each load combination; instead, divide the loads in each case by the corresponding load duration factor to get a measure of the relative “load effects”; that is:

1. $(15,000 + 20,000)/1.00 = 35,000/1.0 = 35,000\text{ lb}$.
2. $(15,000 + 8,000)/1.15 = 23,000/1.15 = 20,000\text{ lb}$.
3. $(15,000 + 0.75 \times 20,000 + 0.75 \times 16,000)/1.15 = \mathbf{42,000}/1.15 = \underline{36,522\text{ lb}}$.

The third load combination is the critical one in this case, based on the underlined value being largest of the three choices. However, the structural element should be designed for the bold-faced value of $42,000\text{ lb}$ —and not the underlined value of $36,522\text{ lb}$, which is used only to determine the governing load value. The governing duration of load factor, $C_D = 1.15$, will then be applied, not to the loads, but to the allowable stress.

Where only “occupancy” live loads and dead loads are present, C_D can almost always be taken as 1.0 (corresponding to the load duration factor for live loads). The case of dead load acting alone, with $C_D = 0.9$, is critical only when more than 90% of the total load is dead load.

Table A-3.11 Specific gravity for selected wood species

Species or Species Combination	Specific Gravity (based on oven-dry weight and volume)
Douglas Fir-Larch	0.50
Douglas Fir-Larch (North)	0.49
Douglas Fir-South	0.46
Hem-Fir	0.43
Hem-Fir (North)	0.46
Spruce-Pine-Fir	0.42
Spruce-Pine-Fir (South)	0.36
Southern Pine	0.55

Table A-3.12 Steel properties¹

Category	ASTM Designation	Yield Stress, F_y (ksi)	(Ultimate) Tensile Stress, F_u (ksi)	Preferred for these Shapes
Carbon	A36	36	58	M, S, C, MC, L, plates ⁴ and bars
	A500 Gr. B	42	58	HSS round
	A500 Gr. B	46	58	HSS rectangular
	A53 Gr. B	² 35	60	Pipe
High-strength, low-alloy	A992	50	65	³ W
	A572 Gr. 50	50	65	HP
Corrosion resistant, high-strength, low-alloy	A588	50	70	
	A242	42–50	63–70	
Low-alloy reinforcing bars	A615	40	60	Rebar
		60	90	
		75	100	
Bolts	A325	n/a	120	High-strength bolts, 0.5- to 1-in. diameter
		n/a	105	High-strength bolts, >1- to 1.5-in. diameter
	A490	n/a	150	High-strength bolts, 0.5- to 1.5-in. diameter
	A307 Gr. A	n/a	60	Common bolts
Cold-formed	A653 Gr. 33	33	45	Connector plates ⁴ in wood construction

Notes:

1. The modulus of elasticity for these steels can be taken as 29,000 ksi.

2. Steel with $F_y = 35$ ksi may be designed as if yield stress were $F_y = 36$ ksi.

3. W-shapes have formerly been specified in A36; current practice in the United States is to use A992 with $F_y = 50$ ksi.

4. In wood fastener design, the dowel bearing strength of connector plates is $F_e = 1.5F_u$ (for A36 hot-rolled steel) and $1.375F_u$ (for A653 GR 33 cold-formed steel). These values are 1.6 times less than those permitted in steel structures so that they can be used in yield limit equations for wood members that have load duration adjustments (adjustments that may be as high as 1.6 for wind or seismic).

Table A-3.13 Steel allowable stresses and available strengths

Type of Structural Action	Allowable Stress ¹ (same units as F_y or F_u)	Available Strength Limit States (with safety factor, Ω) ⁴
Tension	$F_t^{gross} = 0.60F_y$ (yielding)	$P_a \leq \frac{P_n}{\Omega} = \frac{F_y A_g}{1.67}$
	$F_t^{net} = 0.50F_u$ (rupture)	$P_a \leq \frac{P_n}{\Omega} = \frac{F_u A_e}{2.0}$
Compression	See Tables A-7.3–A-7.6 (analysis) or A-7.2 (design)	
Bending, ² assuming laterally braced, compact section	$F_b = 0.60F_y$ (used with plastic section modulus, Z_x) or	$M_a \leq \frac{M_n}{\Omega} = \frac{F_y Z_x}{1.67}$
	$F_b = 0.66F_y$ (used with elastic section modulus, S_x)	The available strength method has no official limit state for the elastic moment
Shear ³	$F_v = 0.40F_y$	$V_a \leq \frac{V_n}{\Omega} = \frac{0.6F_y A_w}{1.50}$

Notes:

1. Allowable stresses, although no longer officially sanctioned by the American Institute of Steel Construction, result in the same values that are obtained when considering available strength, except in the case of bending. For bending, the limit state defined by the elastic moment, formerly the basis of allowable stress design, is no longer applicable, although it can still be used with somewhat conservative results for laterally braced, compact sections. On the other hand, an allowable stress equation can be formulated based on the plastic section modulus that is equivalent to the available strength equation for laterally braced, compact sections.

2. The allowable stress for bending, $0.66F_y$, used with the elastic section modulus, S_x , gives a generally conservative value compared with using $\Omega = 1.67$ and the plastic section modulus, Z_x . To reconcile these two different safety factors, it is necessary to approximate the ratio of Z_x/S_x , which varies depending on the cross section. This ratio can be taken conservatively as 1.1 for W-shapes; therefore, $Z_x = 1.1S_x$, and the allowable moment, $M_p/\Omega = F_y Z_x/\Omega = 1.1F_y S_x/\Omega = 1.1F_y S_x/1.67 = 0.66F_y S_x$, which corresponds to the assumptions used for an allowable bending stress.


3. Both the allowable stress and available strength values for shear assume I-shaped rolled members meeting the slenderness criteria for beam webs. For beam webs that do not meet slenderness criteria for shear, a reduced allowable shear stress, $F_v = 0.36F_y$, is used. This is equivalent to using an increased allowable strength design safety factor, $\Omega = 1.67$, and applies to the following W-shapes: W12 $\times$ 14, W16 $\times$ 26, W24 $\times$ 55, W30 $\times$ 90, W33 $\times$ 118, W36 $\times$ 135, W40 $\times$ 149, and W44 $\times$ 230. For the rectangular HSS listed in Table A-4.6, the reduced shear stress, $F_v = 0.36F_y$, is also used, with a web area, A_w , equal to $2ht$ (where t is the wall thickness of the web and h can be assumed to equal the nominal depth minus $3t$). The value for the coefficient C_v is equal to 1.0 for all W-shapes and is not included in the shear equations. For cross sections with very thin webs, this coefficient needs to be considered.

4. In these equations for various limit states, the subscript “a” refers to the available strength of the cross section, that is, the strength that is considered safe. The subscript “n” refers to the nominal strength of the cross section, that is, the actual limit state of the material. In other words, P_a is equivalent to the maximum tension force that the cross section can safely sustain; M_a is equivalent to the maximum bending moment that the cross section can safely sustain; and V_a is equivalent to the maximum shear force that the cross section can safely sustain.

Tables for Chapter 4 (sectional properties)

4

Table A-4.1 Dimensions and properties of lumber

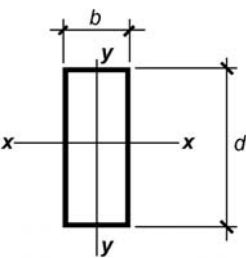	Properties of rectangular cross sections: Cross-sectional area, $A = bd$ Section modulus, $S_x = bd^2/6$ Moment of inertia, $I_x = bd^3/12$ Moment of inertia, $I_y = db^3/12$
--	--

A. Dimension Lumber

Dimension Lumber, Nominal Size	Actual Size, $b \times d$ (in.)	Area (in ²)	S_x (in ³)	I_x (in ⁴)	I_y (in ⁴)
2 × 3	1.5 × 2.5	3.75	1.563	1.953	0.703
2 × 4	1.5 × 3.5	5.25	3.063	5.359	0.984
2 × 6	1.5 × 5.5	8.25	7.563	20.80	1.547
2 × 8	1.5 × 7.25	10.88	13.14	47.63	2.039
2 × 10	1.5 × 9.25	13.88	21.39	98.93	2.602
2 × 12	1.5 × 11.25	16.88	31.64	178.0	3.164
2 × 14	1.5 × 13.25	19.88	43.89	290.8	3.727
4 × 4	3.5 × 3.5	12.25	7.146	12.51	12.51
4 × 6	3.5 × 5.5	19.25	17.65	48.53	19.65
4 × 8	3.5 × 7.25	25.38	30.66	111.1	25.90
4 × 10	3.5 × 9.25	32.38	49.91	230.8	33.05
4 × 12	3.5 × 11.25	39.38	73.83	415.3	40.20
4 × 14	3.5 × 13.25	46.38	102.4	678.5	47.34
4 × 16	3.5 × 15.25	53.38	135.7	1034.4	54.49

(Continued)

Table A-4.1 (Continued)
B. Beams and stringers

Beams and Stringers, Nominal Size	Actual Size, <i>b</i> × <i>d</i> (in.)	Area (in ²)	<i>S_x</i> (in ³)	<i>I_x</i> (in ⁴)	<i>I_y</i> (in ⁴)
6 × 10	5.5 × 9.5	52.25	82.73	393.0	131.7
6 × 12	5.5 × 11.5	63.25	121.2	697.1	159.4
6 × 14	5.5 × 13.5	74.25	167.1	1128	187.2
6 × 16	5.5 × 15.5	85.25	220.2	1707	214.9
6 × 18	5.5 × 17.5	96.25	280.7	2456	242.6
6 × 20	5.5 × 19.5	107.3	348.6	3398	270.4
8 × 12	7.5 × 11.5	86.25	165.3	950.5	404.3
8 × 14	7.5 × 13.5	101.3	227.8	1538	474.6
8 × 16	7.5 × 15.5	116.3	300.3	2327	544.9
8 × 18	7.5 × 17.5	131.3	382.8	3350	615.2
8 × 20	7.5 × 19.5	146.3	475.3	4634	685.5
10 × 14	9.5 × 13.5	128.3	288.6	1948	964.5
10 × 16	9.5 × 15.5	147.3	380.4	2948	1107
10 × 18	9.5 × 17.5	166.3	484.9	4243	1250
12 × 16	11.5 × 15.5	178.3	460.5	3569	1964
12 × 18	11.5 × 17.5	201.3	587.0	5136	2218
12 × 20	11.5 × 19.5	224.3	728.8	7106	2471
14 × 18	13.5 × 17.5	236.3	689.1	6029	3588
14 × 20	13.5 × 19.5	263.3	855.6	8342	3998
16 × 20	15.5 × 19.5	302.3	982.3	9578	6051

C. Posts and timbers

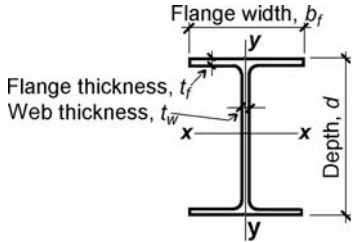
Posts and Timbers, Nominal Size	Actual Size, <i>b</i> × <i>d</i> (in.)	Area (in ²)	<i>S_x</i> (in ³)	<i>I_x</i> (in ⁴)	<i>I_y</i> (in ⁴)
6 × 6	5.5 × 5.5	30.25	27.73	76.26	76.26
6 × 8	5.5 × 7.5	41.25	51.56	193.4	104.0
8 × 8	7.5 × 7.5	56.25	70.31	263.7	263.7
8 × 10	7.5 × 9.5	71.25	112.8	535.9	334.0
10 × 10	9.5 × 9.5	90.25	142.9	678.8	678.8
10 × 12	9.5 × 11.5	109.3	209.4	1204	821.7
12 × 12	11.5 × 11.5	132.3	253.5	1458	1458
12 × 14	11.5 × 13.5	155.3	349.3	2358	1711
14 × 14	13.5 × 13.5	182.3	410.1	2768	2768
14 × 16	13.5 × 15.5	209.3	540.6	4189	3178
16 × 16	15.5 × 15.5	240.3	620.6	4810	4810
16 × 18	15.5 × 17.5	271.3	791.1	6923	5431
18 × 18	17.5 × 17.5	306.3	893.2	7816	7816
18 × 20	17.5 × 19.5	341.3	1109	10,810	8709

Table A-4.2 Dimensions of typical glulam posts and beams

Southern Pine (1⅜-in. laminations)		Western Species ¹ (1½-in. laminations)	
Width (in.)	Depth (in.)	Width (in.)	Depth (in.)
2⅞ or 2½	5½ to 24¾	2 or 2½	6 to 27
3 or 3⅞	5½ to 24¾	3⅞	6 to 27
5 or 5⅞	5½ to 35¾	5⅞	6 to 36
6¾	6⅞ to 48⅞	6¾	7½ to 48
8½	8¾ to 63¼	8¾	9 to 63
10½	9⅝ to 77	10¾	10½ to 81
12	11 to 86⅞	12¼	12 to 88½
14	13¾ to 100⅞	14¼	13½ to 102

Note:
1. Western Species (WS) consists of numerous species groups, not all of which are produced in the western United States, including Alaska Cedar (AC), Douglas Fir-Larch (DF) and Douglas Fir South (DFS), Eastern Spruce (ES), Hem-Fir (HF), Softwood Species (SW), and Spruce Pine Fir (SPF).

Table A-4.3 Dimensions and properties of steel W-sections

		Cross-sectional area = A Moment of inertia = I Section modulus, $S_x = 2I_x/d$ Sectional modulus, $S_y = 2I_y/b_f$ Radius of gyration, $r_x = \sqrt{(I_x/A)}$ Radius of gyration, $r_y = \sqrt{(I_y/A)}$								
Designation	A (in ²)	d (in.)	t_w (in.)	b_f (in.)	t_f (in.)	S_x (in ³)	Z_x (in ³)	I_x (in ⁴)	I_y (in.)	r_y (in.)
W4 × 13	3.83	4.16	0.280	4.06	0.345	5.46	6.28	11.3	3.86	1.00
W5 × 16	4.71	5.01	0.240	5.00	0.360	8.55	9.63	21.4	7.51	1.26
W5 × 19	5.56	5.15	0.270	5.03	0.430	10.2	11.6	26.3	9.13	1.28
W6 × 8.5 ²	2.52	5.83	0.170	3.94	0.195	5.10	5.73	14.9	1.99	0.890
W6 × 9 ²	2.68	5.90	0.170	3.94	0.215	5.56	6.23	16.4	2.20	0.905
W6 × 12	3.55	6.03	0.230	4.00	0.280	7.31	8.30	22.1	2.99	0.918
W6 × 16	4.74	6.28	0.260	4.03	0.405	10.2	11.7	32.1	4.43	0.967
W6 × 15 ¹	4.43	5.99	0.230	5.99	0.260	9.72	10.8	29.1	9.32	1.45
W6 × 20	5.87	6.20	0.260	6.02	0.365	13.4	14.9	41.4	13.3	1.50
W6 × 25	7.34	6.38	0.320	6.08	0.455	16.7	18.9	53.4	17.1	1.52
W8 × 10 ²	2.96	7.89	0.170	3.94	0.205	7.81	8.87	30.8	2.09	0.841
W8 × 13	3.84	7.99	0.230	4.00	0.255	9.91	11.4	39.6	2.73	0.843
W8 × 15	4.44	8.11	0.245	4.02	0.315	11.8	13.6	48.0	3.41	0.876
W8 × 18	5.26	8.14	0.230	5.250	0.330	15.2	17.0	61.9	7.97	1.23
W8 × 21	6.16	8.28	0.250	5.270	0.400	18.2	20.4	75.3	9.77	1.26

(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t _w (in.)	b _f (in.)	t _f (in.)	S _x (in ³)	Z _x (in ³)	I _x (in ⁴)	I _y (in.)	r _y (in.)
W8 × 24	7.08	7.93	0.245	6.50	0.400	20.9	23.1	82.7	18.3	1.61
W8 × 28	8.24	8.06	0.285	6.54	0.465	24.3	27.2	98.0	21.7	1.62
W8 × 31 ²	9.12	8.00	0.285	8.00	0.435	27.5	30.4	110	37.1	2.02
W8 × 35	10.3	8.12	0.310	8.02	0.495	31.2	34.7	127	42.6	2.03
W8 × 40	11.7	8.25	0.360	8.07	0.560	35.5	39.8	146	49.1	2.04
W8 × 48	14.1	8.50	0.400	8.11	0.685	43.2	49.0	184	60.9	2.08
W8 × 58	17.1	8.75	0.510	8.22	0.810	52.0	59.8	228	75.1	2.10
W8 × 67	19.7	9.00	0.570	8.28	0.935	60.4	70.1	272	88.6	2.12
W10 × 12 ²	3.54	9.87	0.190	3.96	0.210	10.9	12.6	53.8	2.18	0.785
W10 × 15	4.41	10.0	0.230	4.00	0.270	13.8	16.0	68.9	2.89	0.810
W10 × 17	4.99	10.1	0.240	4.01	0.330	16.2	18.7	81.9	3.56	0.845
W10 × 19	5.62	10.2	0.250	4.02	0.395	18.8	21.6	96.3	4.29	0.874
W10 × 22	6.49	10.2	0.240	5.75	0.360	23.2	26.0	118	11.4	1.33
W10 × 26	7.61	10.3	0.260	5.77	0.440	27.9	31.3	144	14.1	1.36
W10 × 30	8.84	10.5	0.300	5.81	0.510	32.4	36.6	170	16.7	1.37
W10 × 33	9.71	9.73	0.290	7.96	0.435	35.0	38.8	171	36.6	1.94
W10 × 39	11.5	9.92	0.315	7.99	0.530	42.1	46.8	209	45.0	1.98
W10 × 45	13.3	10.10	0.350	8.02	0.620	49.1	54.9	248	53.4	2.01
W10 × 49	14.4	10.0	0.340	10.0	0.560	54.6	60.4	272	93.4	2.54
W10 × 54	15.8	10.1	0.370	10.0	0.615	60.0	66.6	303	103	2.56
W10 × 60	17.6	10.2	0.420	10.1	0.680	66.7	74.6	341	116	2.57
W10 × 68	20.0	10.4	0.470	10.1	0.770	75.7	85.3	394	134	2.59
W10 × 77	22.6	10.6	0.530	10.2	0.870	85.9	97.6	455	154	2.60
W10 × 88	25.9	10.8	0.605	10.3	0.990	98.5	113	534	179	2.63
W10 × 100	29.4	11.1	0.680	10.3	1.120	112	130	623	207	2.65
W10 × 112	32.9	11.4	0.755	10.4	1.250	126	147	716	236	2.68
W12 × 14 ³	4.16	11.9	0.200	3.97	0.225	14.9	17.4	88.6	2.36	0.753
W12 × 16	4.71	12.0	0.220	3.99	0.265	17.1	20.1	103	2.82	0.773
W12 × 19	5.57	12.2	0.235	4.01	0.350	21.3	24.7	130	3.76	0.822
W12 × 22	6.48	12.3	0.260	4.03	0.425	25.4	29.3	156	4.66	0.848
W12 × 26	7.65	12.2	0.230	6.49	0.380	33.4	37.2	204	17.3	1.51
W12 × 30	8.79	12.3	0.260	6.52	0.440	38.6	43.1	238	20.3	1.52
W12 × 35	10.3	12.5	0.300	6.56	0.520	45.6	51.2	285	24.5	1.54
W12 × 40	11.7	11.9	0.295	8.01	0.515	51.5	57.0	307	44.1	1.94
W12 × 45	13.1	12.1	0.335	8.05	0.575	57.7	64.2	348	50.0	1.95
W12 × 50	14.6	12.2	0.370	8.08	0.640	64.2	71.9	391	56.3	1.96
W12 × 53	15.6	12.1	0.345	10.0	0.575	70.6	77.9	425	95.8	2.48
W12 × 58	17.0	12.2	0.360	10.0	0.640	78.0	86.4	475	107	2.51

(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t_w (in.)	b_f (in.)	t_f (in.)	S_x (in ³)	Z_x (in ³)	I_x (in ⁴)	I_y (in.)	r_y (in.)
W12 × 65 ²	19.1	12.1	0.390	12.0	0.605	87.9	96.8	533	174	3.02
W12 × 72	21.1	12.3	0.430	12.0	0.670	97.4	108	597	195	3.04
W12 × 79	23.2	12.4	0.470	12.1	0.735	107	119	662	216	3.05
W12 × 87	25.6	12.5	0.515	12.1	0.810	118	132	740	241	3.07
W12 × 96	28.2	12.7	0.550	12.2	0.900	131	147	833	270	3.09
W12 × 106	31.2	12.9	0.610	12.2	0.990	145	164	933	301	3.11
W12 × 120	35.3	13.1	0.710	12.3	1.11	163	186	1070	345	3.13
W12 × 136	39.9	13.4	0.790	12.4	1.25	186	214	1240	398	3.16
W12 × 152	44.7	13.7	0.870	12.5	1.40	209	243	1430	454	3.19
W12 × 170	50.0	14.0	0.960	12.6	1.56	235	275	1650	517	3.22
W12 × 190	55.8	14.4	1.06	12.7	1.74	263	311	1890	589	3.25
W12 × 210	61.8	14.7	1.18	12.8	1.90	292	348	2140	664	3.28
W12 × 230	67.7	15.1	1.29	12.9	2.07	321	386	2420	742	3.31
W12 × 252	74.0	15.4	1.40	13.0	2.25	353	428	2720	828	3.34
W12 × 279	81.9	15.9	1.53	13.1	2.47	393	481	3110	937	3.38
W12 × 305	89.6	16.3	1.63	13.2	2.71	435	537	3550	1050	3.42
W12 × 336	98.8	16.8	1.78	13.4	2.96	483	603	4060	1190	3.47
W14 × 22	6.49	13.7	0.230	5.00	0.335	29.0	33.2	199	7.00	1.04
W14 × 26	7.69	13.9	0.255	5.03	0.420	35.3	40.2	245	8.91	1.08
W14 × 30	8.85	13.8	0.270	6.73	0.385	42.0	47.3	291	19.6	1.49
W14 × 34	10.0	14.0	0.285	6.75	0.455	48.6	54.6	340	23.3	1.53
W14 × 38	11.2	14.1	0.310	6.77	0.515	54.6	61.5	385	26.7	1.55
W14 × 43	12.6	13.7	0.305	8.00	0.530	62.6	69.6	428	45.2	1.89
W14 × 48	14.1	13.8	0.340	8.03	0.595	70.2	78.4	484	51.4	1.91
W14 × 53	15.6	13.9	0.370	8.06	0.660	77.8	87.1	541	57.7	1.92
W14 × 61	17.9	13.9	0.375	10.0	0.645	92.1	102	640	107	2.45
W14 × 68	20.0	14.0	0.415	10.0	0.720	103	115	722	121	2.46
W14 × 74	21.8	14.2	0.450	10.1	0.785	112	126	795	134	2.48
W14 × 82	24.0	14.3	0.510	10.1	0.855	123	139	881	148	2.48
W14 × 90 ²	26.5	14.0	0.440	14.5	0.710	143	157	999	362	3.70
W14 × 99 ²	29.1	14.2	0.485	14.6	0.780	157	173	1110	402	3.71
W14 × 109	32.0	14.3	0.525	14.6	0.860	173	192	1240	447	3.73
W14 × 120	35.3	14.5	0.590	14.7	0.940	190	212	1380	495	3.74
W14 × 132	38.8	14.7	0.645	14.7	1.03	209	234	1530	548	3.76
W14 × 145	42.7	14.8	0.680	15.5	1.09	232	260	1710	677	3.98
W14 × 159	46.7	15.0	0.745	15.6	1.19	254	287	1900	748	4.00
W14 × 176	51.8	15.2	0.830	15.7	1.31	281	320	2140	838	4.02
W14 × 193	56.8	15.5	0.890	15.7	1.44	310	355	2400	931	4.05
W14 × 211	62.0	15.7	0.980	15.8	1.56	338	390	2660	1030	4.07
W14 × 233	68.5	16.0	1.07	15.9	1.72	375	436	3010	1150	4.10
W14 × 257	75.6	16.4	1.18	16.0	1.89	415	487	3400	1290	4.13
W14 × 283	83.3	16.7	1.29	16.1	2.07	459	542	3840	1440	4.17

(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t _w (in.)	b _f (in.)	t _f (in.)	S _x (in ³)	Z _x (in ³)	I _x (in ⁴)	I _y (in.)	r _y (in.)
W14 × 311	91.4	17.1	1.41	16.2	2.26	506	603	4330	1610	4.20
W14 × 342	101	17.5	1.54	16.4	2.47	558	672	4900	1810	4.24
W14 × 370	109	17.9	1.66	16.5	2.66	607	736	5440	1990	4.27
W14 × 398	117	18.3	1.77	16.6	2.85	656	801	6000	2170	4.31
W14 × 426	125	18.7	1.88	16.7	3.04	706	869	6600	2360	4.34
W14 × 455	134	19.0	2.02	16.8	3.21	756	936	7190	2560	4.38
W14 × 500	147	19.6	2.19	17.0	3.50	838	1050	8210	2880	4.43
W14 × 550	162	20.2	2.38	17.2	3.82	931	1180	9430	3250	4.49
W14 × 605	178	20.9	2.60	17.4	4.16	1040	1320	10800	3680	4.55
W14 × 665	196	21.6	2.83	17.7	4.52	1150	1480	12400	4170	4.62
W14 × 730	215	22.4	3.07	17.9	4.91	1280	1660	14300	4720	4.69
W16 × 26 ³	7.68	15.7	0.250	5.50	0.345	38.4	44.2	301	9.59	1.12
W16 × 31	9.13	15.9	0.275	5.53	0.440	47.2	54.0	375	12.4	1.17
W16 × 36	10.6	15.9	0.295	6.99	0.430	56.5	64.0	448	24.5	1.52
W16 × 40	11.8	16.0	0.305	7.00	0.505	64.7	73.0	518	28.9	1.57
W16 × 45	13.3	16.1	0.345	7.04	0.565	72.7	82.3	586	32.8	1.57
W16 × 50	14.7	16.3	0.380	7.07	0.630	81.0	92.0	659	37.2	1.59
W16 × 57	16.8	16.4	0.430	7.12	0.715	92.2	105	758	43.1	1.60
W16 × 67	19.7	16.3	0.395	10.2	0.665	117	130	954	119	2.46
W16 × 77	22.6	16.5	0.455	10.3	0.760	134	150	1110	138	2.47
W16 × 89	26.2	16.8	0.525	10.4	0.875	155	175	1300	163	2.49
W16 × 100	29.5	17.0	0.585	10.4	0.985	175	198	1490	186	2.51
W18 × 35	10.3	17.7	0.300	6.00	0.425	57.6	66.5	510	15.3	1.22
W18 × 40	11.8	17.9	0.315	6.02	0.525	68.4	78.4	612	19.1	1.27
W18 × 46	13.5	18.1	0.360	6.06	0.605	78.8	90.7	712	22.5	1.29
W18 × 50	14.7	18.0	0.355	7.50	0.570	88.9	101	800	40.1	1.65
W18 × 55	16.2	18.1	0.390	7.53	0.630	98.3	112	890	44.9	1.67
W18 × 60	17.6	18.2	0.415	7.56	0.695	108	123	984	50.1	1.68
W18 × 65	19.1	18.4	0.450	7.59	0.750	117	133	1070	54.8	1.69
W18 × 71	20.8	18.5	0.495	7.64	0.810	127	146	1170	60.3	1.70
W18 × 76	22.3	18.2	0.425	11.0	0.680	146	163	1330	152	2.61
W18 × 86	25.3	18.4	0.480	11.1	0.770	166	186	1530	175	2.63
W18 × 97	28.5	18.6	0.535	11.1	0.870	188	211	1750	201	2.65
W18 × 106	31.1	18.7	0.590	11.2	0.940	204	230	1910	220	2.66
W18 × 119	35.1	19.0	0.655	11.3	1.06	231	262	2190	253	2.69
W18 × 130	38.2	19.3	0.670	11.2	1.20	256	290	2460	278	2.70
W18 × 143	42.1	19.5	0.730	11.2	1.32	282	322	2750	311	2.72
W18 × 158	46.3	19.7	0.810	11.3	1.44	310	356	3060	347	2.74
W18 × 175	51.3	20.0	0.890	11.4	1.59	344	398	3450	391	2.76
W18 × 192	56.4	20.4	0.960	11.5	1.75	380	442	3870	440	2.79
W18 × 211	62.1	20.7	1.06	11.6	1.91	419	490	4330	493	2.82

(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t_w (in.)	b_f (in.)	t_f (in.)	S_x (in ³)	Z_x (in ³)	I_x (in ⁴)	I_y (in.)	r_y (in.)
W18 × 234	68.8	21.1	1.16	11.7	2.11	466	549	4900	558	2.85
W18 × 258	75.9	21.5	1.28	11.8	2.30	514	611	5510	628	2.88
W18 × 283	83.3	21.9	1.40	11.9	2.50	565	676	6170	704	2.91
W18 × 311	91.6	22.3	1.52	12.0	2.74	624	754	6970	795	2.95
W21 × 44	13.0	20.7	0.350	6.50	0.450	81.6	95.4	843	20.7	1.26
W21 × 50	14.7	20.8	0.380	6.53	0.535	94.5	110	984	24.9	1.30
W21 × 57	16.7	21.1	0.405	6.56	0.650	111	129	1170	30.6	1.35
W21 × 48 ²	14.1	20.6	0.350	8.14	0.430	93.0	107	959	38.7	1.66
W21 × 55	16.2	20.8	0.375	8.22	0.522	110	126	1140	48.4	1.73
W21 × 62	18.3	21.0	0.400	8.24	0.615	127	144	1330	57.5	1.77
W21 × 68	20.0	21.1	0.430	8.27	0.685	140	160	1480	64.7	1.80
W21 × 73	21.5	21.2	0.455	8.30	0.740	151	172	1600	70.6	1.81
W21 × 83	24.3	21.4	0.515	8.36	0.835	171	196	1830	81.4	1.83
W21 × 93	27.3	21.6	0.580	8.42	0.930	192	221	2070	92.9	1.84
W21 × 101	29.8	21.4	0.500	12.3	0.800	227	253	2420	248	2.89
W21 × 111	32.7	21.5	0.550	12.3	0.875	249	279	2670	274	2.90
W21 × 122	35.9	21.7	0.600	12.4	0.960	273	307	2960	305	2.92
W21 × 132	38.8	21.8	0.650	12.4	1.04	295	333	3220	333	2.93
W21 × 147	43.2	22.1	0.720	12.5	1.15	329	373	3630	376	2.95
W21 × 166	48.8	22.5	0.750	12.4	1.36	380	432	4280	435	2.99
W21 × 182	53.6	22.7	0.830	12.5	1.48	417	476	4730	483	3.00
W21 × 201	59.2	23.0	0.910	12.6	1.63	461	530	5310	542	3.02
W24 × 55 ³	16.2	23.6	0.395	7.01	0.505	114	134	1350	29.1	1.34
W24 × 62	18.2	23.7	0.430	7.04	0.590	131	153	1550	34.5	1.38
W24 × 68	20.1	23.7	0.415	8.97	0.585	154	177	1830	70.4	1.87
W24 × 76	22.4	23.9	0.440	8.99	0.680	176	200	2100	82.5	1.92
W24 × 84	24.7	24.1	0.470	9.02	0.770	196	224	2370	94.4	1.95
W24 × 94	27.7	24.3	0.515	9.07	0.875	222	254	2700	109	1.98
W24 × 103	30.3	24.5	0.550	9.00	0.980	245	280	3000	119	1.99
W24 × 104	30.6	24.1	0.500	12.8	0.750	258	289	3100	259	2.91
W24 × 117	34.4	24.3	0.550	12.8	0.850	291	327	3540	297	2.94
W24 × 131	38.5	24.5	0.605	12.9	0.960	329	370	4020	340	2.97
W24 × 146	43.0	24.7	0.650	12.9	1.09	371	418	4580	391	3.01
W24 × 162	47.7	25.0	0.705	13.0	1.22	414	468	5170	443	3.05
W24 × 176	51.7	25.2	0.750	12.9	1.34	450	511	5680	479	3.04
W24 × 192	56.3	25.5	0.810	13.0	1.46	491	559	6260	530	3.07
W24 × 207	60.7	25.7	0.870	13.0	1.57	531	606	6820	578	3.08
W24 × 229	67.2	26.0	0.960	13.1	1.73	588	675	7650	651	3.11
W24 × 250	73.5	26.3	1.04	13.2	1.89	644	744	8490	724	3.14
W24 × 279	82.0	26.7	1.16	13.3	2.09	718	835	9600	823	3.17
W24 × 306	89.8	27.1	1.26	13.4	2.28	789	922	10700	919	3.20

(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t _w (in.)	b _f (in.)	t _f (in.)	S _x (in ³)	Z _x (in ³)	I _x (in ⁴)	I _y (in.)	r _y (in.)
W24 × 335	98.4	27.5	1.38	13.5	2.48	864	1020	11900	1030	3.23
W24 × 370	109	28.0	1.52	13.7	2.72	957	1130	13400	1160	3.27
W27 × 84	24.8	26.7	0.460	10.0	0.640	213	244	2850	106	2.07
W27 × 94	27.7	26.9	0.490	10.0	0.745	243	278	3270	124	2.12
W27 × 102	30.0	27.1	0.515	10.0	0.830	267	305	3620	139	2.15
W27 × 114	33.5	27.3	0.570	10.1	0.930	299	343	4080	159	2.18
W27 × 129	37.8	27.6	0.610	10.0	1.10	345	395	4760	184	2.21
W27 × 146	43.1	27.4	0.605	14.0	0.975	414	464	5630	443	3.20
W27 × 161	47.6	27.6	0.660	14.0	1.08	458	515	6310	497	3.23
W27 × 178	52.5	27.8	0.725	14.1	1.19	505	570	7020	555	3.25
W27 × 194	57.2	28.1	0.750	14.0	1.34	559	631	7860	619	3.29
W27 × 217	64.0	28.4	0.830	14.1	1.50	627	711	8910	704	3.32
W27 × 235	69.4	28.7	0.910	14.2	1.61	677	772	9700	769	3.33
W27 × 258	76.0	29.0	0.980	14.3	1.77	745	852	10800	859	3.36
W27 × 281	82.9	29.3	1.06	14.4	1.93	814	936	11900	953	3.39
W27 × 307	90.4	29.6	1.16	14.4	2.09	887	1030	13100	1050	3.41
W27 × 336	98.9	30.0	1.26	14.6	2.28	972	1130	14600	1180	3.45
W27 × 368	108	30.4	1.38	14.7	2.48	1060	1240	16200	1310	3.48
W27 × 539	159	32.5	1.97	15.3	3.54	1570	1890	25600	2110	3.65
W30 × 90 ³	26.4	29.5	0.470	10.4	0.610	245	283	3610	115	2.09
W30 × 99	29.1	29.7	0.520	10.5	0.670	269	312	3990	128	2.10
W30 × 108	31.7	29.8	0.545	10.5	0.760	299	346	4470	146	2.15
W30 × 116	34.2	30.0	0.565	10.5	0.850	329	378	4930	164	2.19
W30 × 124	36.5	30.2	0.585	10.5	0.930	355	408	5360	181	2.23
W30 × 132	38.9	30.3	0.615	10.5	1.00	380	437	5770	196	2.25
W30 × 148	43.5	30.7	0.650	10.5	1.18	436	500	6680	227	2.28
W30 × 173	51.0	30.4	0.655	15.0	1.07	541	607	8230	598	3.42
W30 × 191	56.3	30.7	0.710	15.0	1.19	600	675	9200	673	3.46
W30 × 211	62.2	30.9	0.775	15.1	1.32	665	751	10300	757	3.49
W30 × 235	69.2	31.3	0.830	15.1	1.50	748	847	11700	855	3.51
W30 × 261	76.9	31.6	0.930	15.2	1.65	829	943	13100	959	3.53
W30 × 292	85.9	32.0	1.02	15.3	1.85	930	1060	14900	1100	3.58
W30 × 326	95.8	32.4	1.14	15.4	2.05	1040	1190	16800	1240	3.60
W30 × 357	105	32.8	1.24	15.5	2.24	1140	1320	18700	1390	3.64
W30 × 391	115	33.2	1.36	15.6	2.44	1250	1450	20700	1550	3.67
W33 × 118 ³	34.7	32.9	0.550	11.5	0.740	359	415	5900	187	2.32
W33 × 130	38.3	33.1	0.580	11.5	0.855	406	467	6710	218	2.39
W33 × 141	41.6	33.3	0.605	11.5	0.960	448	514	7450	246	2.43
W33 × 152	44.8	33.5	0.635	11.6	1.06	487	559	8160	273	2.47
W33 × 169	49.5	33.8	0.670	11.5	1.22	549	629	9290	310	2.50

(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t_w (in.)	b_f (in.)	t_f (in.)	S_x (in ³)	Z_x (in ³)	I_x (in ⁴)	I_y (in.)	r_y (in.)
W33 × 201	59.2	33.7	0.715	15.7	1.15	686	773	11600	749	3.56
W33 × 221	65.2	33.9	0.775	15.8	1.28	759	857	12900	840	3.59
W33 × 241	71.0	34.2	0.830	15.9	1.40	831	940	14200	933	3.62
W33 × 263	77.5	34.5	0.870	15.8	1.57	919	1040	15900	1040	3.66
W33 × 291	85.7	34.8	0.960	15.9	1.73	1020	1160	17700	1160	3.68
W33 × 318	93.6	35.2	1.04	16.0	1.89	1110	1270	19500	1290	3.71
W33 × 354	104	35.6	1.16	16.1	2.09	1240	1420	22000	1460	3.74
W33 × 387	114	36.0	1.26	16.2	2.28	1350	1560	24300	1620	3.77
W36 × 135 ³	39.7	35.6	0.600	12.0	0.790	439	509	7800	225	2.38
W36 × 150	44.2	35.9	0.625	12.0	0.940	504	581	9040	270	2.47
W36 × 160	47.0	36.0	0.650	12.0	1.02	542	624	9760	295	2.50
W36 × 170	50.1	36.2	0.680	12.0	1.10	581	668	10500	320	2.53
W36 × 182	53.6	36.3	0.725	12.1	1.18	623	718	11300	347	2.55
W36 × 194	57.0	36.5	0.765	12.1	1.26	664	767	12100	375	2.56
W36 × 210	61.8	36.7	0.830	12.2	1.36	719	833	13200	411	2.58
W36 × 232	68.1	37.1	0.870	12.1	1.57	809	936	15000	468	2.62
W36 × 256	75.4	37.4	0.960	12.2	1.73	895	1040	16800	528	2.65
W36 × 231	68.1	36.5	0.760	16.5	1.26	854	963	15600	940	3.71
W36 × 247	72.5	36.7	0.800	16.5	1.35	913	1030	16700	1010	3.74
W36 × 262	77.0	36.9	0.840	16.6	1.44	972	1100	17900	1090	3.76
W36 × 282	82.9	37.1	0.885	16.6	1.57	1050	1190	19600	1200	3.80
W36 × 302	88.8	37.3	0.945	16.7	1.68	1130	1280	21100	1300	3.82
W36 × 330	97.0	37.7	1.02	16.6	1.85	1240	1410	23300	1420	3.83
W36 × 361	106	38.0	1.12	16.7	2.01	1350	1550	25700	1570	3.85
W36 × 395	116	38.4	1.22	16.8	2.20	1490	1710	28500	1750	3.88
W36 × 441	130	38.9	1.36	17.0	2.44	1650	1910	32100	1990	3.92
W36 × 487	143	39.3	1.50	17.1	2.68	1830	2130	36000	2250	3.96
W36 × 529	156	39.8	1.61	17.2	2.91	1990	2330	39600	2490	4.00
W36 × 652	192	41.1	1.97	17.6	3.54	2460	2910	50600	3230	4.10
W36 × 800	236	42.6	2.38	18.0	4.29	3040	3650	64700	4200	4.22
W40 × 149 ³	43.8	38.2	0.630	11.8	0.830	513	598	9800	229	2.29
W40 × 167	49.2	38.6	0.650	11.8	1.03	600	693	11600	283	2.40
W40 × 183	53.3	39.0	0.650	11.8	1.20	675	774	13200	331	2.49
W40 × 211	62.0	39.4	0.750	11.8	1.42	786	906	15500	390	2.51
W40 × 235	69.0	39.7	0.830	11.9	1.58	875	1010	17400	444	2.54
W40 × 264	77.6	40.0	0.960	11.9	1.73	971	1130	19400	493	2.52
W40 × 278	82.0	40.2	1.03	12.0	1.81	1020	1190	20500	521	2.52
W40 × 294	86.3	40.4	1.06	12.0	1.93	1080	1270	21900	562	2.55
W40 × 327	96.0	40.8	1.18	12.1	2.13	1200	1410	24500	640	2.58
W40 × 331	97.5	40.8	1.22	12.2	2.13	1210	1430	24700	644	2.57
W40 × 392	115	41.6	1.42	12.4	2.52	1440	1710	29900	803	2.64

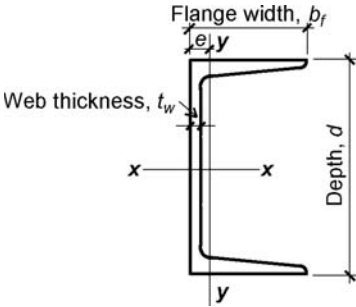
(Continued)

Table A-4.3 (Continued)

Designation	A (in ²)	d (in.)	t _w (in.)	b _f (in.)	t _f (in.)	S _x (in ³)	Z _x (in ³)	I _x (in ⁴)	I _y (in.)	r _y (in.)
W40 × 199	58.5	38.7	0.650	15.8	1.07	770	869	14900	695	3.45
W40 × 215	63.4	39.0	0.650	15.8	1.22	859	964	16700	796	3.54
W40 × 249	73.3	39.4	0.750	15.8	1.42	993	1120	19600	926	3.55
W40 × 277	81.4	39.7	0.830	15.8	1.58	1100	1250	21900	1040	3.58
W40 × 297	87.4	39.8	0.930	15.8	1.65	1170	1330	23200	1090	3.54
W40 × 324	95.3	40.2	1.00	15.9	1.81	1280	1460	25600	1220	3.58
W40 × 362	107	40.6	1.12	16.0	2.01	1420	1640	28900	1380	3.60
W40 × 372	109	40.6	1.16	16.1	2.05	1460	1680	29600	1420	3.60
W40 × 397	117	41.0	1.22	16.1	2.20	1560	1800	32000	1540	3.64
W40 × 431	127	41.3	1.34	16.2	2.36	1690	1960	34800	1690	3.65
W40 × 503	148	42.1	1.54	16.4	2.76	1980	2310	41600	2040	3.72
W40 × 593	174	43.0	1.79	16.7	3.23	2340	2760	50400	2520	3.80
W44 × 230 ³	67.7	42.9	0.710	15.8	1.22	971	1100	20800	796	3.43
W44 × 262	76.9	43.3	0.785	15.8	1.42	1110	1270	24100	923	3.47
W44 × 290	85.4	43.6	0.865	15.8	1.58	1240	1410	27000	1040	3.49
W44 × 335	98.5	44.0	1.03	15.9	1.77	1410	1620	31100	1200	3.49

Notes:
1. Section not compact for steel with $F_y = 36 \text{ ksi}$ or $F_y = 50 \text{ ksi}$.
2. Section compact for steel with $F_y = 36 \text{ ksi}$, but not compact for steel with $F_y = 50 \text{ ksi}$.
3. Section webs do not meet slenderness criteria for shear for which the allowable stress can be taken as $F_v = 0.4F_y$; instead, use a reduced allowable shear stress, $F_v = 0.36F_y$.

Table A-4.4 Dimensions and properties of steel C and MC channels

		Cross-sectional area = A					
		Dimension to y-axis = e					
		Moment of inertia = I					
		Section modulus, $S_x = 2I_x/d$					
		Radius of gyration, $r_x = \sqrt{(I_x/A)}$					
		Radius of gyration, $r_y = \sqrt{(I_y/A)}$					
Designation	A (in ²)	d (in.)	t_w (in.)	b_f (in.)	e (in.)	I_x (in ⁴)	I_y (in ⁴)
C3 × 3.5	1.09	3.00	0.132	1.37	0.443	1.57	0.169
C3 × 4.1	1.20	3.00	0.170	1.41	0.437	1.65	0.191
C3 × 5	1.47	3.00	0.258	1.50	0.439	1.85	0.241
C3 × 6	1.76	3.00	0.356	1.60	0.455	2.07	0.300
C4 × 4.5	1.38	4.00	0.125	1.58	0.493	3.65	0.289
C4 × 5.4	1.58	4.00	0.184	1.58	0.457	3.85	0.312
C4 × 7.2	2.13	4.00	0.321	1.72	0.459	4.58	0.425
C5 × 6.7	1.97	5.00	0.190	1.75	0.484	7.48	0.470
C5 × 9	2.64	5.00	0.325	1.89	0.478	8.89	0.624
C6 × 8.2	2.39	6.00	0.200	1.92	0.512	13.1	0.687
C6 × 10.5	3.08	6.00	0.314	2.03	0.500	15.1	0.860
C6 × 13	3.81	6.00	0.437	2.16	0.514	17.3	1.05
C7 × 9.8	2.87	7.00	0.210	2.09	0.541	21.2	0.957
C7 × 12.2	3.60	7.00	0.314	2.19	0.525	24.2	1.16
C7 × 14.7	4.33	7.00	0.419	2.30	0.532	27.2	1.37
C8 × 11.5	3.37	8.00	0.220	2.26	0.572	32.5	1.31
C8 × 13.7	4.04	8.00	0.303	2.34	0.554	36.1	1.52
C8 × 18.5	5.51	8.00	0.487	2.53	0.565	43.9	1.97
C9 × 13.4	3.94	9.00	0.233	2.43	0.601	47.8	1.75
C9 × 15	4.41	9.00	0.285	2.49	0.586	51.0	1.91
C9 × 20	5.87	9.00	0.448	2.65	0.583	60.9	2.41
C10 × 15.3	4.48	10.0	0.240	2.60	0.634	67.3	2.27
C10 × 20	5.87	10.0	0.379	2.74	0.606	78.9	2.80
C10 × 25	7.34	10.0	0.526	2.89	0.617	91.1	3.34
C10 × 30	8.81	10.0	0.673	3.03	0.649	103	3.93
C12 × 20.7	6.08	12.0	0.282	2.94	0.698	129	3.86
C12 × 25	7.34	12.0	0.387	3.05	0.674	144	4.45
C12 × 30	8.81	12.0	0.510	3.17	0.674	162	5.12
C15 × 33.9	10.0	15.0	0.400	3.40	0.788	315	8.07
C15 × 40	11.8	15.0	0.520	3.52	0.778	348	9.17
C15 × 50	14.7	15.0	0.716	3.72	0.799	404	11.0

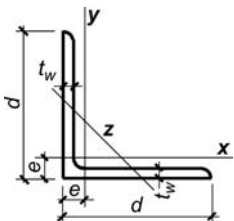
(Continued)

Table A-4.4 (Continued)

Designation	A (in ²)	d (in.)	t_w (in.)	b_f (in.)	e (in.)	I_x (in ⁴)	I_y (in ⁴)
MC3 × 7.1	2.11	3.00	0.312	1.94	0.653	2.72	0.666
MC4 × 13.8	4.03	4.00	0.500	2.50	0.849	8.85	2.13
MC6 × 6.5	1.95	6.00	0.155	1.85	0.513	11.0	0.565
MC6 × 7	2.09	6.00	0.179	1.88	0.501	11.4	0.603
MC6 × 12	3.53	6.00	0.310	2.50	0.704	18.7	1.85
MC6 × 15.1	4.44	6.00	0.316	2.94	0.940	24.9	3.46
MC6 × 16.3	4.79	6.00	0.375	3.00	0.927	26.0	3.77
MC6 × 15.3	4.49	6.00	0.340	3.50	1.05	25.3	4.91
MC6 × 18	5.29	6.00	0.379	3.50	1.12	29.7	5.88
MC7 × 19.1	5.61	7.00	0.352	3.45	1.08	43.1	6.06
MC7 × 22.7	6.67	7.00	0.503	3.60	1.04	47.4	7.24
MC8 × 8.5	2.50	8.00	0.179	1.87	0.428	23.3	0.624
MC8 × 18.7	5.50	8.00	0.353	2.98	0.849	52.4	4.15
MC8 × 20	5.88	8.00	0.400	3.03	0.840	54.4	4.42
MC8 × 21.4	6.28	8.00	0.375	3.45	1.02	61.5	6.58
MC8 × 22.8	6.70	8.00	0.427	3.50	1.01	63.8	7.01
MC9 × 23.9	7.02	9.00	0.400	3.45	0.981	84.9	7.14
MC9 × 25.4	7.47	9.00	0.450	3.50	0.970	87.9	7.57
MC10 × 6.5	1.95	10.0	0.152	1.17	0.194	22.9	0.133
MC10 × 8.4	2.46	10.0	0.170	1.50	0.284	31.9	0.326
MC10 × 22	6.45	10.0	0.290	3.32	0.990	102	6.40
MC10 × 25	7.35	10.0	0.380	3.41	0.953	110	7.25
MC10 × 28.5	8.37	10.0	0.425	3.95	1.12	126	11.3
MC10 × 33.6	9.87	10.0	0.575	4.10	1.09	139	13.1
MC10 × 41.1	12.1	10.0	0.796	4.32	1.09	157	15.7
MC12 × 10.6	3.10	12.0	0.190	1.50	0.269	55.3	0.378
MC12 × 31	9.12	12.0	0.370	3.67	1.08	202	11.3
MC12 × 35	10.3	12.0	0.465	3.77	1.05	216	12.6
MC12 × 40	11.8	12.0	0.590	3.89	1.04	234	14.2
MC12 × 45	13.2	12.0	0.710	4.01	1.04	251	15.8
MC12 × 50	14.7	12.0	0.835	4.14	1.05	269	17.4
MC13 × 31.8	9.35	13.0	0.375	4.00	1.00	239	11.4
MC13 × 35	10.3	13.0	0.447	4.07	0.980	252	12.3
MC13 × 40	11.8	13.0	0.560	4.19	0.963	273	13.7
MC13 × 50	14.7	13.0	0.787	4.41	0.974	314	16.4
MC18 × 42.7	12.6	18.0	0.450	3.95	0.877	554	14.3
MC18 × 45.8	13.5	18.0	0.500	4.00	0.866	578	14.9
MC18 × 51.9	15.3	18.0	0.600	4.10	0.858	627	16.3
MC18 × 58	17.1	18.0	0.700	4.20	0.862	675	17.6


Table A-4.5 Dimensions and properties of selected steel L angles

A. Angles with equal legs

 Cross-sectional area = A Dimension to x- or y-axis = e Moment of inertia = I Radius of gyration, $r_x = r_y = \sqrt{I_x/A}$ Radius of gyration, $r_z = \sqrt{I_z/A}$						
Designation	A (in ²)	d (in.)	t_w (in.)	e (in.)	I_x or I_y (in ⁴)	I_z (in ⁴)
L2 × 2 × 1/8 ^{1,2}	0.484	2.00	0.1250	0.534	0.189	0.0751
L2 × 2 × 1/4	0.938	2.00	0.2500	0.586	0.346	0.141
L2 × 2 × 5/16	1.15	2.00	0.3125	0.609	0.414	0.173
L2 × 2 × 3/8	1.36	2.00	0.3750	0.632	0.476	0.203
L3 × 3 × 3/16 ^{1,2}	1.09	3.00	0.1875	0.812	0.948	0.374
L3 × 3 × 1/4	1.44	3.00	0.2500	0.836	1.23	0.491
L3 × 3 × 3/8	2.11	3.00	0.3750	0.884	1.75	0.712
L3 × 3 × 1/2	2.75	3.00	0.5000	0.929	2.20	0.924
L4 × 4 × 1/4 ^{1,2}	1.94	4.00	0.2500	1.08	3.00	1.18
L4 × 4 × 3/8	2.86	4.00	0.3750	1.13	4.32	1.73
L4 × 4 × 1/2	3.75	4.00	0.5000	1.18	5.52	2.25
L4 × 4 × 3/4	5.44	4.00	0.7500	1.27	7.62	3.25
L5 × 5 × 5/16 ^{1,2}	3.03	5.00	0.3125	1.35	7.44	3.01
L5 × 5 × 7/16	4.18	5.00	0.4375	1.40	10.0	4.08
L5 × 5 × 5/8	5.86	5.00	0.6250	1.47	13.6	5.61
L5 × 5 × 7/8	7.98	5.00	0.8750	1.56	17.8	7.56
L6 × 6 × 5/16 ^{1,2}	3.67	6.00	0.3125	1.60	13.0	5.20
L6 × 6 × 1/2	5.77	6.00	0.5000	1.67	19.9	8.04
L6 × 6 × 3/4	8.46	6.00	0.7500	1.77	28.1	11.6
L6 × 6 × 1	11.0	6.00	1.0000	1.86	35.4	15.0
L8 × 8 × 1/2 ^{1,2}	7.75	8.00	0.5000	2.17	48.8	19.7
L8 × 8 × 5/8	9.61	8.00	0.6250	2.21	59.6	24.2
L8 × 8 × 7/8	13.2	8.00	0.8750	2.31	79.7	32.7
L8 × 8 × 1 1/8	16.7	8.00	1.1250	2.40	98.1	40.9

(Continued)

Table A-4.5 (Continued)
B. Angles with unequal legs

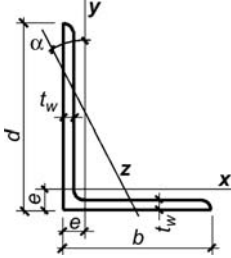	Cross-sectional area = A Dimension to y-axis = e Moment of inertia = I Radius of gyration, $r_x = \sqrt{I_x/A}$ Radius of gyration, $r_y = \sqrt{I_y/A}$ Radius of gyration, $r_z = \sqrt{I_z/A}$									
	Designation	A (in ²)	d (in.)	b (in.)	t_w (in.)	e (in.)	I_x (in ⁴)	I_y (in ⁴)	I_z (in ⁴)	α (°)
	L3 × 2 × 1/4	1.19	3.00	2.00	0.2500	0.487	1.09	0.390	0.223	23.6
	L3 × 2 × 5/16	1.46	3.00	2.00	0.3125	0.511	1.32	0.467	0.271	23.4
	L3 × 2 × 3/8	1.73	3.00	2.00	0.3750	0.535	1.54	0.539	0.318	23.1
	L3 × 2 × 1/2	2.25	3.00	2.00	0.5000	0.580	1.92	0.667	0.409	22.4
	L3 × 2½ × 1/4	1.31	3.00	2.50	0.2500	0.653	1.16	0.734	0.356	34.3
	L3 × 2½ × 5/16	1.67	3.00	2.50	0.3125	0.677	1.41	0.888	0.437	34.2
	L3 × 2½ × 3/8	1.92	3.00	2.50	0.3750	0.701	1.65	1.03	0.514	34.0
	L3 × 2½ × 1/2	2.50	3.00	2.50	0.5000	0.746	2.07	1.29	0.666	33.7
	L3½ × 2½ × 1/4 ²	1.44	3.50	2.50	0.2500	0.607	1.81	0.775	0.425	26.7
	L3½ × 2½ × 5/16	1.78	3.50	2.50	0.3125	0.632	2.20	0.937	0.518	26.6
	L3½ × 2½ × 3/8	2.11	3.50	2.50	0.3750	0.655	2.56	1.09	0.608	26.3
	L3½ × 2½ × 1/2	2.75	3.50	2.50	0.5000	0.701	3.24	1.36	0.782	25.9
	L4 × 3 × 1/4 ^{1,2}	1.69	4.00	3.00	0.2500	0.725	2.75	1.33	0.691	29.2
	L4 × 3 × 3/8	2.48	4.00	3.00	0.3750	0.775	3.94	1.89	1.01	28.9
	L4 × 3 × 1/2	3.25	4.00	3.00	0.5000	0.822	5.02	2.40	1.30	28.5
	L4 × 3 × 5/8	3.89	4.00	3.00	0.6250	0.867	6.01	2.85	1.59	28.1
	L4 × 3½ × 1/4 ^{1,2}	1.81	4.00	3.50	0.2500	0.897	2.89	2.07	0.950	37.2
	L4 × 3½ × 5/16	2.25	4.00	3.50	0.3125	0.923	3.53	2.52	1.17	37.1
	L4 × 3½ × 3/8	2.67	4.00	3.50	0.3750	0.947	4.15	2.96	1.38	37.1
	L4 × 3½ × 1/2	3.50	4.00	3.50	0.5000	0.994	5.30	3.76	1.808	36.9
	L5 × 3 × 1/4 ^{1,2}	1.94	5.00	3.00	0.2500	0.648	5.09	1.41	0.825	20.4
	L5 × 3 × 5/16 ^{1,2}	2.40	5.00	3.00	0.3125	0.673	6.24	1.72	1.01	20.2
	L5 × 3 × 3/8 ²	2.86	5.00	3.00	0.3750	0.698	7.35	2.01	1.20	20.0
	L5 × 3 × 1/2	3.75	5.00	3.00	0.5000	0.746	9.43	2.55	1.55	19.6

(Continued)


Table A-4.5 (Continued)

Designation	A (in ²)	d (in.)	b (in.)	t_w (in.)	e (in.)	I_x (in ⁴)	I_y (in ⁴)	I_z (in ⁴)	α (°)
L5 × 3½ × ¼ ^{1,2}	2.06	5.00	3.50	0.2500	0.804	5.36	2.20	1.19	26.1
L5 × 3½ × ⅜ ²	3.05	5.00	3.50	0.3750	0.854	7.75	3.15	1.74	25.9
L5 × 3½ × ½	4.00	5.00	3.50	0.5000	0.901	9.96	4.02	2.25	25.6
L5 × 3½ × ¾	5.81	5.00	3.50	0.7500	0.993	13.9	5.52	3.22	24.9
L6 × 3½ × ⅝ ^{1,2}	2.87	6.00	3.50	0.3125	0.756	10.9	2.84	1.70	19.4
L6 × 3½ × ⅜ ^{1,2}	3.42	6.00	3.50	0.3750	0.781	12.9	3.33	2.00	19.2
L6 × 3½ × ½	4.50	6.00	3.50	0.5000	0.829	16.6	4.24	2.58	18.9
L6 × 4 × ⅜ ^{1,2}	3.61	6.00	4.00	0.3750	0.933	13.4	4.86	2.73	24.0
L6 × 4 × ½	4.75	6.00	4.00	0.5000	0.981	17.3	6.22	3.55	23.7
L6 × 4 × ⅝	5.86	6.00	4.00	0.6250	1.03	21.0	7.48	4.32	23.5
L6 × 4 × ⅞	7.98	6.00	4.00	0.8750	1.12	27.7	9.70	5.82	22.8
L7 × 4 × ⅜ ^{1,2}	3.98	7.00	4.00	0.3750	0.861	20.5	5.06	3.05	18.7
L7 × 4 × ½ ²	5.25	7.00	4.00	0.5000	0.910	26.6	6.48	3.95	18.5
L7 × 4 × ⅝	6.48	7.00	4.00	0.6250	0.958	32.4	7.79	4.80	18.2
L7 × 4 × ¾	7.69	7.00	4.00	0.7500	1.00	37.8	9.00	5.64	18.0
L8 × 4 × ½ ^{1,2}	5.75	8.00	4.00	0.5000	0.854	38.6	6.75	4.32	14.9
L8 × 4 × ⅝	7.11	8.00	4.00	0.6250	0.902	47.0	8.11	5.24	14.7
L8 × 4 × ¾	8.44	8.00	4.00	0.7500	0.949	55.0	9.37	6.13	14.4
L8 × 4 × 1	11.0	8.00	4.00	1.0000	1.04	69.7	11.6	7.87	13.9
L8 × 6 × ½ ^{1,2}	6.75	8.00	6.00	0.5000	1.46	44.4	21.7	11.5	29.1
L8 × 6 × ⅝	8.36	8.00	6.00	0.6250	1.51	54.2	26.4	14.1	29.0
L8 × 6 × ⅞	11.5	8.00	6.00	0.8750	1.60	72.4	34.9	18.9	28.6
L8 × 6 × 1	13.0	8.00	6.00	1.0000	1.65	80.9	38.8	21.3	28.5

Notes:

1. Section not compact for steel with $F_y = 36$ ksi.2. Section slender for steel with $F_y = 36$ ksi.

Table A-4.6 Dimensions and properties of selected steel rectangular and square hollow structural sections (HSS)

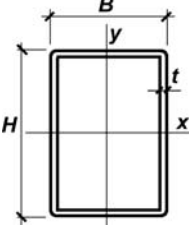	Cross-sectional area = A Cross-sectional dimensions appear in designation as follows: HSS $H \times B \times t$, where: Larger dimension (in.) = H Smaller dimension (in.) = B Nominal wall thickness (in.) ¹ = t Moment of inertia = I Section modulus, $S_x = 2I_x/H$ Section modulus, $S_y = 2I_y/B$ Radius of gyration, $r_x = \sqrt{(I_x/A)}$ Radius of gyration, $r_y = \sqrt{(I_y/A)}$							
	Designation	A (in ²)	Design wall thickness, t (in.) ¹	S_x (in ³)	Z_x (in ³)	I_x (in ⁴)	I_y (in ⁴)	r_y (in.)
	HSS2 × 2 × $\frac{3}{16}$	1.19	0.174	0.641	0.797	0.641	0.641	0.733
	HSS2 × 2 × $\frac{1}{4}$	1.51	0.233	0.747	0.964	0.747	0.747	0.704
	HSS2½ × 2½ × $\frac{3}{16}$	1.54	0.174	1.08	1.32	1.35	1.35	0.937
	HSS2½ × 2½ × $\frac{5}{16}$	2.35	0.291	1.46	1.88	1.82	1.82	0.880
	HSS3 × 3 × $\frac{3}{16}$	1.89	0.174	1.64	1.97	2.46	2.46	1.14
	HSS3 × 3 × $\frac{3}{8}$	3.39	0.349	2.52	3.25	3.78	3.78	1.06
	HSS3½ × 3½ × $\frac{3}{16}$	2.24	0.174	2.31	2.76	4.05	4.05	1.35
	HSS3½ × 3½ × $\frac{3}{8}$	4.09	0.349	3.71	4.69	6.49	6.49	1.26
HSS4 × 3 × $\frac{3}{16}$	2.24	0.174	2.47	3.00	4.93	3.16	1.19	
HSS4 × 3 × $\frac{3}{8}$	4.09	0.349	3.97	5.12	7.93	5.01	1.11	
HSS4 × 4 × $\frac{1}{4}$	3.37	0.233	3.90	4.69	7.80	7.80	1.52	
HSS4 × 4 × $\frac{1}{2}$	6.02	0.465	5.97	7.70	11.9	11.9	1.41	
HSS6 × 4 × $\frac{1}{4}$	4.30	0.233	6.96	8.53	20.9	11.1	1.61	
HSS6 × 4 × $\frac{1}{2}$	7.88	0.465	11.3	14.6	34.0	17.8	1.50	
HSS6 × 6 × $\frac{1}{4}$	5.24	0.233	9.54	11.2	28.6	28.6	2.34	
HSS6 × 6 × $\frac{5}{8}$	11.7	0.581	18.4	23.2	55.2	55.2	2.17	
HSS8 × 4 × $\frac{1}{4}$	5.24	0.233	10.6	13.3	42.5	14.4	1.66	
HSS8 × 4 × $\frac{5}{8}$	11.7	0.581	20.5	27.4	82.0	26.6	1.51	

(Continued)

Table A-4.6 (Continued)

Designation	A (in ²)	Design wall thickness, t (in.) ¹	S _x (in ³)	Z _x (in ³)	I _x (in ⁴)	I _y (in ⁴)	r _y (in.)
HSS8 × 8 × 1/4 ²	7.10	0.233	17.7	20.5	70.7	70.7	3.15
HSS8 × 8 × 5/8	16.4	0.581	36.5	44.7	146	146	2.99
HSS12 × 4 × 1/4	7.10	0.233	19.9	25.6	119	21.0	1.72
HSS12 × 4 × 5/8	16.4	0.581	40.8	55.5	245	40.4	1.57
HSS12 × 8 × 1/4 ²	8.96	0.233	30.6	36.6	184	98.8	3.32
HSS12 × 8 × 5/8	21.0	0.581	66.1	82.1	397	210	3.16
HSS12 × 12 × 1/4 ²	10.8	0.233	41.4	47.6	248	248	4.79
HSS12 × 12 × 5/8	25.7	0.581	91.4	109	548	548	4.62
HSS16 × 4 × 5/16	11.1	0.291	38.5	51.1	308	33.2	1.73
HSS16 × 4 × 5/8	21.0	0.581	67.3	92.9	539	54.1	1.60
HSS16 × 8 × 5/16	13.4	0.291	56.4	69.4	451	155	3.40
HSS16 × 8 × 5/8	25.7	0.581	102	129	815	274	3.27
HSS16 × 12 × 5/16 ²	15.7	0.291	74.4	87.7	595	384	4.94
HSS16 × 12 × 5/8	30.3	0.581	136	165	1090	700	4.80
HSS16 × 16 × 3/8	21.5	0.349	109	126	873	873	6.37
HSS16 × 16 × 5/8	35.0	0.581	171	200	1370	1370	6.25
HSS20 × 4 × 3/8	16.0	0.349	65.7	89.3	657	47.6	1.73
HSS20 × 4 × 1/2	20.9	0.465	83.8	115	838	58.7	1.68
HSS20 × 8 × 3/8	18.7	0.349	92.6	117	926	222	3.44
HSS20 × 8 × 5/8	30.3	0.581	144	185	1440	338	3.34
HSS20 × 12 × 3/8 ²	21.5	0.349	120	144	1200	547	5.04
HSS20 × 12 × 5/8	35.0	0.581	188	230	1880	851	4.93


Notes:

1. The nominal wall thickness, t , in the designation for an HSS shape (e.g., 1/2 in. or 1/4 in.) is different from the "design wall thickness," t , which is tabulated for each section and which is permitted to be smaller than the nominal value.

2. Section is not compact, based on flange slenderness; use reduced nominal bending strength, M_n , as follows:

$$M_n = M_p - (M_p - F_y S) \left(3.57 \frac{b}{t} \sqrt{\frac{F_y}{E}} - 4.0 \right) \leq M_p.$$

Table A-4.7 Dimensions and properties of selected steel round hollow structural sections (HSS)

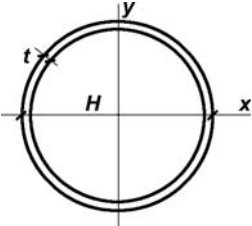 Cross-sectional area = A Cross-sectional dimension appear in designation as follows: HSS $H \times t$, where: Diameter (in.) = H Nominal wall thickness (in.)¹ = t Moment of inertia = I Section modulus, $S = 2I/H$ Radius of gyration, $r = \sqrt{I/A}$				
Designation	A (in ²)	Design wall thickness, t (in.) ¹	I (in ⁴)	r (in.)
HSS1.660 × 0.140	0.625	0.130	0.184	0.543
HSS1.990 × 0.120	0.624	0.111	0.251	0.634
HSS1.990 × 0.188	0.943	0.174	0.355	0.613
HSS2.375 × 0.125	0.823	0.116	0.527	0.800
HSS2.375 × 0.250	1.57	0.233	0.910	0.762
HSS2.500 × 0.125	0.869	0.116	0.619	0.844
HSS2.500 × 0.250	1.66	0.233	1.08	0.806
HSS3.000 × 0.125	1.05	0.116	1.09	1.02
HSS3.000 × 0.250	2.03	0.233	1.95	0.982
HSS3.500 × 0.125	1.23	0.116	1.77	1.20
HSS3.500 × 0.313	2.93	0.291	3.81	1.14
HSS4.000 × 0.125	1.42	0.116	2.67	1.37
HSS4.000 × 0.313	3.39	0.291	5.87	1.32
HSS6.000 × 0.250	4.22	0.233	17.6	2.04
HSS6.000 × 0.500	8.09	0.465	31.2	1.96
HSS8.625 × 0.250	6.14	0.233	54.1	2.97
HSS8.625 × 0.625	14.7	0.581	119	2.85
HSS10.000 × 0.250	7.15	0.233	85.3	3.45
HSS10.000 × 0.625	17.2	0.581	191	3.34
HSS12.750 × 0.375	13.6	0.349	262	4.39
HSS12.750 × 0.500	17.9	0.465	339	4.35
HSS14.000 × 0.375	15.0	0.349	349	4.83
HSS14.000 × 0.625	24.5	0.581	552	4.75
HSS16.000 × 0.375	17.2	0.349	526	5.53
HSS16.000 × 0.625	28.1	0.581	838	5.46
HSS18.000 × 0.500	25.6	0.465	985	6.20
HSS20.000 × 0.500	28.5	0.465	1360	6.91

Note:
1. The nominal wall thickness, t , in the designation for an HSS shape (e.g., 1/2 in. or 1/4 in.) is different from the "design wall thickness," t , which is tabulated for each section and which is permitted to be smaller than the nominal value.

Table A-4.8 Dimensions and properties of selected steel pipe

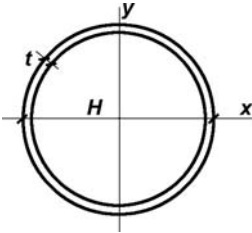
		Cross-sectional area = A Diameter (in.) = H Moment of inertia = I Section modulus, $S = 2I/H$ Radius of gyration, $r = \sqrt{I/A}$			
Designation	A (in ²)	Design wall thickness, t (in.)	Diameter (in.)	I (in ⁴)	r (in.)
Standard weight steel pipe					
Pipe 2 Std.	1.00	0.143	2.38	0.627	0.791
Pipe 2½ Std.	1.59	0.189	2.88	1.45	0.952
Pipe 3 Std.	2.08	0.201	3.50	2.85	1.17
Pipe 3½ Std.	2.51	0.211	4.00	4.52	1.34
Pipe 4 Std.	2.97	0.221	4.50	6.82	1.51
Pipe 5 Std.	4.03	0.241	5.56	14.3	1.88
Pipe 6 Std.	5.22	0.261	6.63	26.5	2.25
Pipe 8 Std.	7.85	0.300	8.63	68.1	2.95
Pipe 10 Std.	11.1	0.340	10.8	151	3.68
Pipe 12 Std.	13.6	0.349	12.8	262	4.39
Extra strong steel pipe					
Pipe 2 x-Strong	1.39	0.204	2.38	0.827	0.771
Pipe 2½ x-Strong	2.11	0.257	2.88	1.83	0.930
Pipe 3 x-Strong	2.83	0.280	3.50	3.70	1.14
Pipe 3½ x-Strong	3.44	0.296	4.00	5.94	1.31
Pipe 4 x-Strong	4.14	0.315	4.50	9.12	1.48
Pipe 5 x-Strong	5.72	0.349	5.56	19.5	1.85
Pipe 6 x-Strong	7.88	0.403	6.63	38.3	2.20
Pipe 8 x-Strong	11.9	0.465	8.63	100	2.89
Pipe 10 x-Strong	15.0	0.465	10.8	199	3.64
Pipe 12 x-Strong	17.9	0.465	12.8	339	4.35
Double-extra strong steel pipe					
Pipe 2 xx-Strong	2.51	0.406	2.38	1.27	0.711
Pipe 2½ xx-Strong	3.81	0.514	2.88	2.78	0.854
Pipe 3 xx-Strong	5.16	0.559	3.50	5.79	1.06
Pipe 4 xx-Strong	7.64	0.628	4.50	14.7	1.39
Pipe 5 xx-Strong	10.7	0.699	5.56	32.2	1.74
Pipe 6 xx-Strong	14.7	0.805	6.63	63.5	2.08
Pipe 8 xx-Strong	20.0	0.816	8.63	154	2.78

Table A-4.9 Dimensions of reinforced concrete beams, columns, and slabs

A. Cover requirements (from outside face of concrete to face of closest rebar)

Interior	1½ in. (or ¾ in. for slabs)
Exterior or exposed to ground	2 in. (or 1½ in. for No. 5 bars or smaller)
Formed directly to ground	3 in.

B. Typical gross dimensions

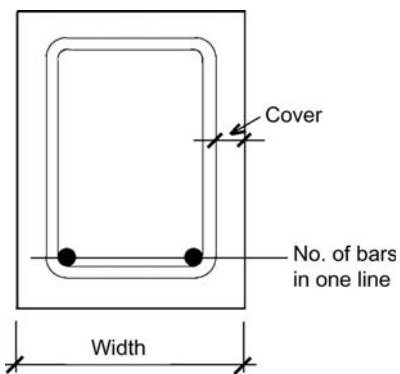
Beams and columns	Round to the nearest inch, or 2-in. increment, for all outside (gross) dimensions
Slabs	Round to ½-in. increment (or 1-in. increment if more than 6 in. thick)

Table A-4.10 Steel reinforcement—rebar—areas (in²) for groups of bars


Designation and diameter			Number of bars									
Bar No. ¹	Bar No. ² (SI units)	Dia. (in.)	1	2	3	4	5	6	7	8	9	10
3	10	0.375	0.11									
4	13	0.500	0.20	0.40	0.60	0.80	1.00	1.20	1.40	1.60	1.80	2.00
5	16	0.625	0.31	0.62	0.93	1.24	1.55	1.86	2.17	2.48	2.79	3.10
6	19	0.750	0.44	0.88	1.32	1.76	2.20	2.64	3.08	3.52	3.96	4.40
7	22	0.875	0.60	1.20	1.80	2.40	3.00	3.60	4.20	4.80	5.40	6.00
8	25	1.000	0.79	1.58	2.37	3.16	3.95	4.74	5.53	6.32	7.11	7.90
9	29	1.128	1.00	2.00	3.00	4.00	5.00	6.00	7.00	8.00	9.00	10.00
10	32	1.270	1.27	2.54	3.81	5.08	6.35	7.62	8.89	10.16	11.43	12.70
11	36	1.410	1.56	3.12	4.68	6.24	7.80	9.36	10.92	12.48	14.04	15.60
14	43	1.693	2.25	4.50	6.75	9.00	11.25	13.50	15.75	18.00	20.25	22.50
18	57	2.257	4.00	8.00	12.00	16.00	20.00	24.00	28.00	32.00	36.00	40.00

Notes:
1. Rebars in the United States were traditionally designated by the nominal diameter (in.) multiplied by 8. Rebars are no longer marked using this designation (see Note 2).
2. Rebars are currently marked by the approximate number of millimeters in their diameter, although designation by nominal diameter (in.) multiplied by 8 is still widely used in the United States.

Table A-4.11 Reinforced concrete minimum width or diameter (in.) based on bar spacing
A. Minimum width (in.) for beams³


						
Designation		Number of bars in one line				
Bar No. ¹	Bar No. ² (SI units)	2	3	4	5	6
4	13	6.33	8.17	10.00	11.83	13.67
5	16	6.58	8.54	10.50	12.46	14.42
6	19	6.83	8.92	11.00	13.08	15.17
7	22	7.08	9.29	11.50	13.71	15.92
8	25	7.33	9.67	12.00	14.33	16.67
9	29	7.58	10.04	12.50	14.96	17.42
10	32	7.83	10.42	13.00	15.58	18.17
11	36	8.13	10.88	13.63	16.38	19.13

B. Minimum width (in.) for tied columns³

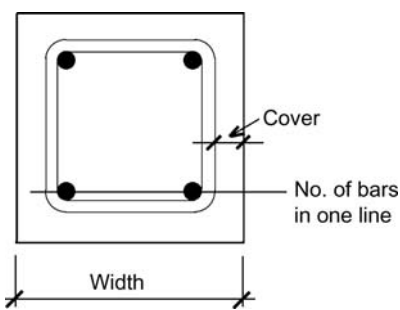						
Designation		Number of bars in one line				
Bar No. ¹	Bar No. ² (SI units)	2	3	4	5	6
4	13	6.50	8.50	10.50	12.50	14.50
5	16	6.75	8.88	11.00	13.13	15.25
6	19	7.00	9.25	11.50	13.75	16.00
7	22	7.25	9.63	12.00	14.38	16.75
8	25	7.50	10.00	12.50	15.00	17.50
9	29	7.94	10.75	13.56	16.38	19.19
10	32	8.38	11.50	14.63	17.75	20.88
11	36	8.81	12.25	15.69	19.13	22.56
14	43	10.13	14.50	18.88	23.25	27.63
18	57	11.88	17.50	23.13	28.75	34.38

(Continued)

Table A-4.11 (Continued)
C. Minimum diameter (in.) for spiral columns³

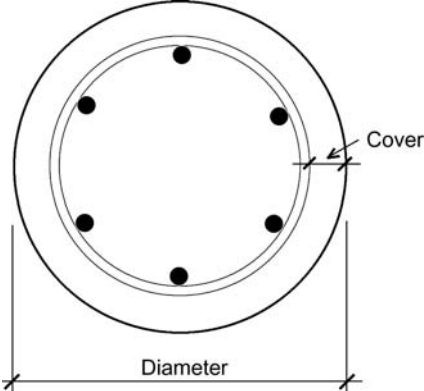

The diagram shows a circular cross-section of a spiral column. It features an outer circle representing the concrete and an inner circle representing the spiral. Six reinforcement bars are shown as black dots arranged in a hexagonal pattern within the spiral. A dimension line at the bottom indicates the 'Diameter' of the column. An arrow points to the gap between the spiral and the outer concrete face, labeled 'Cover'.

Designation		Number of bars in column				
Bar No. ¹	Bar No. ² (SI units)	6	8	10	12	14
4	13	8.50	9.73	10.97	12.23	13.49
5	16	8.88	10.18	11.50	12.84	14.17
6	19	9.25	10.63	12.03	13.44	14.86
7	22	9.63	11.08	12.56	14.05	15.55
8	25	10.00	11.53	13.09	14.66	16.23
9	29	10.75	12.47	14.23	15.99	17.76
10	32	11.50	13.42	15.36	17.32	19.29
11	36	12.25	14.36	16.50	18.66	20.82
14	43	14.50	17.18	19.91	22.65	25.41
18	57	17.50	20.95	24.45	27.98	31.53

Notes:

1. Rebars in the United States were traditionally designated by the nominal diameter (in.) divided by 8. Rebars are no longer marked using this designation.

2. Rebars are currently designated (and marked) by the approximate number of millimeters in their diameter.

3. These minimum dimensions assume 1-in. maximum aggregate; 1½-in. cover (measured from outside face of rebar or spiral to face of concrete); and ½-in.-diameter stirrups, ties, or spiral. Minimum widths or diameters are typically rounded up to nearest inch, or to the nearest even inch. The amount of column steel is also limited by required reinforcement ratio, ρ_g , between 0.01 and 0.08.

Tables for Chapter 5 (design approaches)

5

Table A-5.1 Combined load factors¹

A. Strength design

Load Combinations	Combined Loads and Factors
Dead load	$1.4D$
Dead, live, and roof or snow	$1.2D + 1.6L + 0.5(L_R \text{ or } S)$
Dead, roof or snow, and live ² or wind	$1.2D + 1.6(L_R \text{ or } S) + (L \text{ or } 0.8W)$
Dead, wind, live, ² and roof or snow	$1.2D + 1.6W + L + 0.5(L_R \text{ or } S)$
Dead, earthquake, live, ² and snow	$1.2D + 1.0E + L + 0.2S$
Dead and wind	$0.9D + 1.6W$
Dead and seismic	$0.9D + 1.0E$

B. Allowable stress design

Load Combinations	Combined Loads and Factors
Dead load	D
Dead and live	$D + L$
Dead and roof or snow	$D + (L_R \text{ or } S)$
Dead, live, and roof or snow	$D + 0.75L + 0.75(L_R \text{ or } S)$
Dead and wind or earthquake	$D + (W \text{ or } 0.7E)$
Dead, wind or earthquake, live, and roof or snow	$D + 0.75(W \text{ or } 0.7E) + 0.75L + 0.75(L_R \text{ or } S)$
Dead and wind	$0.6D + W$
Dead and earthquake	$0.6D + 0.7E$

Where only D , L , S , and L_R are present, the allowable stress load combinations are commonly reduced to the following:

Load Combinations	Combined Loads and Factors
Dead and live	$D + L$
Dead and roof or snow	$D + (L_R \text{ or } S)$
Dead, live, and roof or snow	$D + 0.75L + 0.75(L_R \text{ or } S)$

Notes:

1. Only the following loads are considered in this table:

D = dead load; L = live load; L_R = roof live load (construction, maintenance); W = wind load; S = snow load; E = earthquake load (omitted are fluid, flood, lateral earth pressure, rain, and self-straining forces).

2. The load factor for L in these three cases only can be taken as 0.5 when $L \leq 100$ psf (except for garages or places of public assembly).

Table A-5.2 Reinforced concrete strength reduction factors, ϕ and α

Type of Behavior	ϕ	α^1
Bending	² 0.9	n/a
Axial tension	0.9	n/a
Axial compression: spiral columns	³ 0.75	0.85
Axial compression: tied columns	³ 0.65	0.80
Shear	0.75	n/a



Notes:

- 1. α accounts for unintended eccentricity or bending moment.
- 2. ϕ decreases linearly from value listed at $\varepsilon_t = 0.005$ to 0.817 at $\varepsilon_t = 0.004$.
- 3. ϕ increases linearly from value listed at $\varepsilon_t = 0.002$ to 0.9 at $\varepsilon_t = 0.005$.

Tables for Chapter 6 (tension elements)

6

Table A-6.1 Shear lag coefficient, U , for bolted and welded steel connections in tension

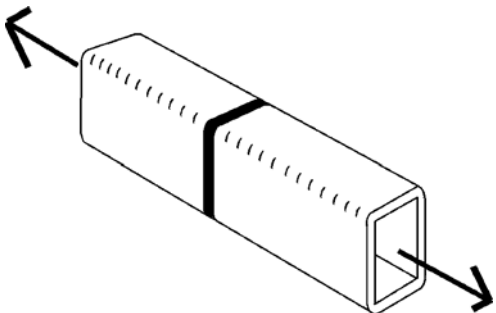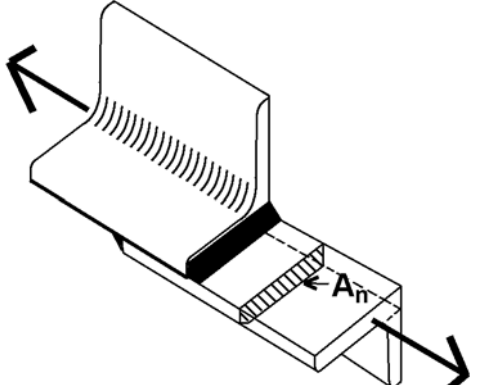Condition	Shear Lag Coefficient, U	Diagram
All parts of the element (e.g., web, flanges, legs) are connected by bolts or welds.	$U = 1.0$	
Transverse welds connecting some, but not all, of the cross-sectional "parts."	$U = 1.0$, but the net area, A_n , is taken as only that portion of the element cross section (consisting of flanges, webs, legs, and so on) that is directly connected by the transverse welds.	

(Continued)

Table A-6.1 (Continued)

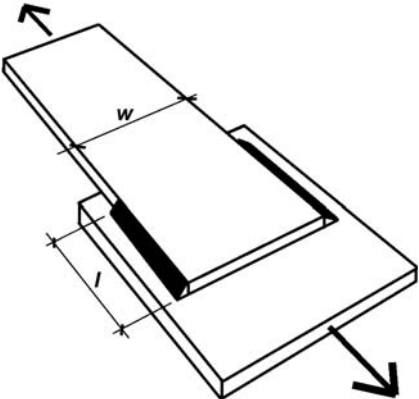
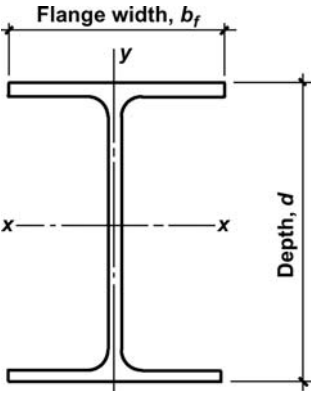
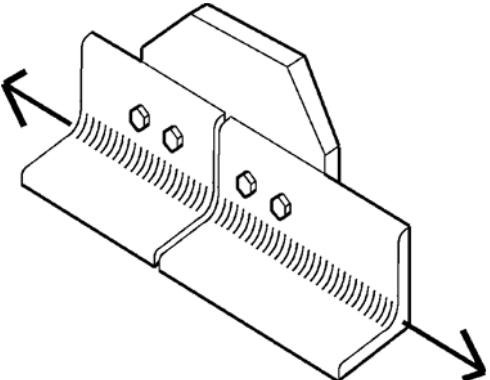
Condition	Shear Lag Coefficient, U	Diagram
Longitudinal welds connecting steel plates.	$U = 1.0$ where $l \geq 2w$. $U = 0.87$ where $2w > l \geq 1.5w$. $U = 0.75$ where $1.5w > l \geq w$.	 A 3D perspective diagram showing two rectangular steel plates of width w and length l joined by longitudinal welds along their long edges. Arrows indicate tensile forces applied to the ends of the plates.
Bolts connecting wide-flange (W) shapes; M, S, HP shapes; or Tees made from any of those sections.	$U = 0.90$ where $b_f \geq 0.67d$ and flange is connected with at least 3 bolts per line. $U = 0.85$ where $b_f < 0.67d$ and flange is connected with at least 3 bolts per line. $U = 0.70$ where only the web is connected with at least 4 bolts per line.	 A 2D cross-sectional diagram of a wide-flange (W) shape. The flange width is labeled b_f and the depth is labeled d . A vertical y -axis passes through the center of the web, and a horizontal x -axis passes through the center of the flanges.
Bolts connecting single angles (L).	$U = 0.80$ where one leg of the angle is connected with at least 4 bolts per line. $U = 0.75$ where one leg of the angle is connected with 2 or 3 bolts per line.	 A 3D perspective diagram showing two L-shaped steel angles connected by bolts. The bolts are arranged in two vertical lines, one on each leg of the angles. Arrows indicate tensile forces applied to the ends of the angles.

Table A-6.2 Allowable force (lb) based on row and group tear-out^{1,2}

Row Tear-out	Group Tear-out
$Z'_{RT} = r_n n_1 (F'_v) s_{crit} (t)$	$Z'_{GT} = n_1 (F'_v) s_{crit} (t) + F'_t A_t$

Notes:

1. The terms in the equations for Z'_{RT} and Z'_{GT} are defined as follows:

- Z'_{RT} = the maximum force that can be safely resisted by all fasteners subjected to row tear-out (lb)
- Z'_{GT} = the maximum force that can be safely resisted by all fasteners subjected to group tear-out (lb)
- r_n = the number of rows of fasteners
- n_1 = the number of fasteners in a typical row
- F'_v = the adjusted allowable shear stress for the wood element (psi)
- F'_t = the adjusted allowable tension stress for the wood element (psi)
- A_t = the area subjected to tension stress between the top and bottom rows of fasteners (in²)
- s_{crit} = the minimum spacing between fasteners, or the distance of the first fastener to the end of the member, if smaller (in.)
- t = the member thickness (in.)


2. Row and group tear-out apply to wood tension members when the following conditions are met: (a) the direction of the tension force is parallel to the grain of the tension element, (b) the fasteners consist of bolts or lag screws, and (c) the connection consists of multiple fasteners in a row for row tear-out and multiple rows of fasteners for group tear-out.

This page intentionally left blank

Tables for Chapter 7 (columns)

7

Table A-7.1 Effective length coefficient, K , for wood and steel columns

						
Description	Pinned at both ends	Fixed at one end; pinned at the other	Fixed at one end; only horizontal translation allowed at the other end	Fixed at both ends	Fixed at one end; free at the other end (cantilever)	Pinned at one end; only horizontal translation allowed at the other end
"Ideal" K	1.0	0.7	1.0	0.5	2.0	2.0
"Code" K	1.0	0.8	1.2	0.65	2.1	2.0–2.4 ¹

Note:

1. Use 2.0 for steel columns; 2.4 for wood columns.

Table A-7.2 Allowable axial loads (kips), A992 steel wide-flange columns ($F_y = 50$ ksi)

	Effective (unbraced) length, KL (ft)												
	6	7	8	9	10	11	12	13	14	15	16	17	18
W4 × 13	78.4	68.4	58.4	48.8	39.9	33.0	27.7	23.6	20.3	17.7	15.6	n/a ¹	n/a ¹
W5 × 16	111	101	92.2	82.4	72.6	63.2	54.2	46.1	39.8	34.6	30.4	27.0	24.0
W5 × 19	132	121	110	98.9	87.5	76.4	65.9	56.2	48.5	42.2	37.1	32.9	29.3
W6 × 8.5	46.7	39.3	32.2	25.7	20.8	17.2	14.4	12.3	10.6	n/a ¹	n/a ¹	n/a ¹	n/a ¹
W6 × 9	50.5	42.7	35.2	28.2	22.9	18.9	15.9	13.5	11.6	10.1	n/a ¹	n/a ¹	n/a ¹
W6 × 12	67.7	57.6	47.7	38.5	31.2	25.8	21.6	18.4	15.9	13.8	n/a ¹	n/a ¹	n/a ¹
W6 × 16	94.6	81.7	69.0	57.0	46.2	38.2	32.1	27.3	23.6	20.5	18.0	n/a ¹	n/a ¹
W6 × 20	148	139	130	120	110	99.7	89.5	79.6	70.2	61.2	53.8	47.7	42.5
W6 × 25	186	175	164	151	139	126	114	101	89.9	78.6	69.1	61.2	54.6
W8 × 31	248	240	231	221	210	199	188	176	164	152	141	129	118
W8 × 35	281	272	261	250	238	226	213	200	186	173	160	147	134
W8 × 40	319	309	297	285	271	257	243	228	213	198	183	168	154
W8 × 48	386	374	361	346	330	314	297	279	262	244	226	208	191
W8 × 58	469	455	439	421	403	383	363	341	320	299	277	256	236
W8 × 67	542	525	507	487	466	444	420	396	372	348	323	299	276
W10 × 33	262	253	243	231	219	207	194	181	168	154	142	129	117
W10 × 39	312	301	289	276	263	248	233	218	203	188	173	158	144
W10 × 45	362	350	337	322	306	290	273	256	238	221	204	187	171
W10 × 49	406	398	388	377	366	353	340	327	313	298	283	269	254
W10 × 54	446	437	426	415	402	389	375	360	345	329	313	297	281
W10 × 60	497	487	475	463	449	434	418	402	385	368	350	332	314
W10 × 68	565	554	541	527	511	495	477	459	440	420	400	380	360
W10 × 77	639	626	612	596	579	560	540	520	498	476	454	431	408
W10 × 88	734	719	703	685	665	645	622	599	575	550	525	499	473
W10 × 100	833	817	799	779	757	734	709	683	656	628	599	570	541
W10 × 112	934	916	896	874	850	824	797	768	739	708	676	644	612
W12 × 40	316	305	292	279	264	249	234	218	202	186	171	156	141
W12 × 45	355	342	328	313	297	280	263	245	227	210	193	176	159
W12 × 50	396	382	366	350	332	313	294	275	255	235	216	197	179

(Continued)

Table A-7.2 (Continued)

	Effective (unbraced) length, KL (ft)												
	6	7	8	9	10	11	12	13	14	15	16	17	18
W12 × 53	439	429	418	406	393	379	365	349	333	317	301	284	268
W12 × 58	479	468	457	444	430	415	400	383	366	349	331	314	296
W12 × 65	548	540	531	520	509	497	484	470	456	441	425	409	393
W12 × 72	606	597	587	576	563	550	536	521	505	488	471	454	436
W12 × 79	666	657	646	633	620	605	590	573	556	538	519	500	481
W12 × 87	736	725	713	700	685	669	652	634	615	596	575	554	533
W12 × 96	811	799	786	772	756	738	720	700	680	658	636	613	590
W12 × 106	898	885	871	855	837	818	798	777	754	731	706	681	656
W12 × 120	1016	1002	986	968	949	928	905	881	856	829	802	774	746
W12 × 136	1150	1134	1116	1096	1075	1051	1026	999	971	942	912	880	848
W12 × 152	1289	1272	1252	1230	1206	1180	1153	1123	1092	1060	1026	992	957
W12 × 170	1443	1424	1402	1378	1352	1323	1293	1260	1226	1191	1154	1116	1077
W12 × 190	1611	1591	1567	1541	1512	1480	1447	1411	1374	1335	1294	1252	1209
W12 × 210	1786	1763	1737	1709	1677	1643	1607	1568	1527	1484	1440	1394	1347
W12 × 230	1958	1933	1906	1875	1841	1804	1764	1723	1678	1632	1584	1535	1484
W12 × 252	2141	2115	2085	2052	2016	1976	1934	1888	1841	1791	1740	1686	1631
W12 × 279	2372	2343	2311	2275	2236	2193	2147	2098	2046	1992	1936	1878	1819
W12 × 305	2597	2566	2532	2493	2451	2405	2356	2304	2248	2190	2130	2068	2003
W12 × 336	2866	2834	2797	2755	2710	2661	2608	2551	2492	2429	2364	2297	2228
W14 × 43	339	326	312	297	280	264	246	229	211	194	177	160	144
W14 × 48	380	366	350	334	316	297	278	259	239	220	201	183	165
W14 × 53	421	406	389	370	351	330	309	288	266	245	224	204	185
W14 × 61	503	491	479	464	449	433	416	398	380	361	342	322	303
W14 × 68	562	549	535	520	503	485	466	446	425	404	383	362	340
W14 × 74	613	600	584	568	550	530	510	488	466	444	421	397	374
W14 × 82	675	660	643	625	605	584	561	538	513	488	463	438	412
W14 × 90	771	764	755	745	734	722	710	696	682	667	651	635	618
W14 × 99	847	839	829	818	807	794	780	765	749	733	716	698	680
W14 × 109	932	923	912	901	888	874	859	843	826	808	789	769	749

(Continued)

Table A-7.2 (Continued)

	Effective (unbraced) length, KL (ft)												
	6	7	8	9	10	11	12	13	14	15	16	17	18
W14 × 120	1028	1018	1007	994	980	964	948	930	911	892	871	850	828
W14 × 132	1130	1120	1107	1093	1078	1061	1043	1024	1003	982	960	936	912
W14 × 145	1248	1237	1225	1211	1196	1179	1161	1142	1122	1100	1078	1055	1030
W14 × 159	1365	1353	1340	1325	1309	1291	1271	1251	1229	1205	1181	1156	1129
W14 × 176	1514	1502	1487	1471	1453	1433	1412	1389	1364	1339	1312	1284	1255
W14 × 193	1661	1647	1632	1614	1594	1573	1550	1525	1499	1471	1442	1412	1381
W14 × 211	1814	1799	1782	1763	1741	1718	1693	1667	1638	1608	1577	1544	1510
W14 × 233	2005	1988	1970	1949	1926	1901	1874	1844	1813	1781	1747	1711	1674
W14 × 257	2213	2196	2175	2153	2127	2100	2070	2039	2005	1969	1932	1893	1853
W14 × 283	2440	2421	2399	2374	2347	2317	2285	2251	2214	2176	2135	2093	2049
W14 × 311	2678	2657	2633	2607	2577	2545	2511	2473	2434	2392	2348	2302	2255
W14 × 342	2960	2938	2912	2883	2851	2817	2779	2738	2696	2650	2602	2553	2501
W14 × 370	3196	3172	3145	3114	3080	3043	3003	2960	2914	2865	2814	2761	2706
W14 × 398	3432	3407	3378	3345	3309	3270	3228	3183	3134	3083	3029	2973	2915
W14 × 426	3667	3641	3610	3576	3539	3497	3453	3405	3354	3300	3243	3184	3122
W14 × 455	3933	3905	3873	3837	3797	3754	3707	3656	3602	3545	3486	3423	3358
W14 × 500	4317	4287	4252	4214	4171	4124	4073	4019	3961	3900	3836	3769	3698
W14 × 550	4759	4727	4690	4649	4603	4553	4498	4440	4378	4312	4243	4170	4095
W14 × 605	5232	5198	5158	5114	5065	5011	4952	4890	4823	4753	4678	4600	4519
W14 × 665	5764	5728	5685	5638	5585	5528	5465	5398	5327	5251	5172	5088	5001
W14 × 730	6327	6287	6242	6192	6136	6074	6008	5936	5860	5779	5694	5605	5512

Note:

1. Slenderness ratio, $KL/r > 200$, for this effective length.

Table A-7.3 Allowable stresses for A992 steel columns ($F_y = 50$ ksi)

KL/r	F_c (ksi)	KL/r	F_c (ksi)	KL/r	F_c (ksi)
1	29.9	34	27.5	67	21.6
2	29.9	35	27.4	68	21.4
3	29.9	36	27.2	69	21.1
4	29.9	37	27.1	70	20.9
5	29.9	38	26.9	71	20.7
6	29.9	39	26.8	72	20.5
7	29.8	40	26.6	73	20.3
8	29.8	41	26.5	74	20.1
9	29.8	42	26.3	75	19.8
10	29.7	43	26.2	76	19.6
11	29.7	44	26.0	77	19.4
12	29.6	45	25.8	78	19.2
13	29.6	46	25.6	79	19.0
14	29.5	47	25.5	80	18.8
15	29.5	48	25.3	81	18.5
16	29.4	49	25.1	82	18.3
17	29.3	50	24.9	83	18.1
18	29.2	51	24.8	84	17.9
19	29.2	52	24.6	85	17.7
20	29.1	53	24.4	86	17.4
21	29.0	54	24.2	87	17.2
22	28.9	55	24.0	88	17.0
23	28.8	56	23.8	89	16.8
24	28.7	57	23.6	90	16.6
25	28.6	58	23.4	91	16.3
26	28.5	59	23.2	92	16.1
27	28.4	60	23.0	93	15.9
28	28.3	61	22.8	94	15.7
29	28.2	62	22.6	95	15.5
30	28.0	63	22.4	96	15.3
31	27.9	64	22.2	97	15.0
32	27.8	65	22.0	98	14.8
33	27.6	66	21.8	99	14.6

(Continued)

Table A-7.3 (Continued)

<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)
100	14.4	134	8.37	168	5.33
101	14.2	135	8.25	169	5.26
102	14.0	136	8.13	170	5.20
103	13.8	137	8.01	171	5.14
104	13.6	138	7.89	172	5.08
105	13.4	139	7.78	173	5.02
106	13.2	140	7.67	174	4.96
107	13.0	141	7.56	175	4.91
108	12.8	142	7.45	176	4.85
109	12.6	143	7.35	177	4.80
110	12.4	144	7.25	178	4.74
111	12.2	145	7.15	179	4.69
112	12.0	146	7.05	180	4.64
113	11.8	147	6.96	181	4.59
114	11.6	148	6.86	182	4.54
115	11.4	149	6.77	183	4.49
116	11.2	150	6.68	184	4.44
117	11.0	151	6.59	185	4.39
118	10.8	152	6.51	186	4.34
119	10.6	153	6.42	187	4.30
120	10.4	154	6.34	188	4.25
121	10.3	155	6.26	189	4.21
122	10.1	156	6.18	190	4.16
123	9.94	157	6.10	191	4.12
124	9.78	158	6.02	192	4.08
125	9.62	159	5.95	193	4.04
126	9.47	160	5.87	194	3.99
127	9.32	161	5.80	195	3.95
128	9.17	162	5.73	196	3.91
129	9.03	163	5.66	197	3.87
130	8.89	164	5.59	198	3.83
131	8.76	165	5.52	199	3.80
132	8.63	166	5.45	200	3.76
133	8.50	167	5.39		

Table A-7.4 Allowable stresses for A500 Grade B HSS rectangular columns ($F_y = 46$ ksi)

KL/r	F_c (ksi)	KL/r	F_c (ksi)	KL/r	F_c (ksi)
1	27.5	34	25.5	67	20.4
2	27.5	35	25.4	68	20.2
3	27.5	36	25.2	69	20.0
4	27.5	37	25.1	70	19.8
5	27.5	38	25.0	71	19.6
6	27.5	39	24.9	72	19.4
7	27.5	40	24.7	73	19.2
8	27.4	41	24.6	74	19.1
9	27.4	42	24.5	75	18.9
10	27.4	43	24.3	76	18.7
11	27.3	44	24.2	77	18.5
12	27.3	45	24.0	78	18.3
13	27.2	46	23.9	79	18.1
14	27.2	47	23.7	80	17.9
15	27.1	48	23.6	81	17.7
16	27.1	49	23.4	82	17.5
17	27.0	50	23.3	83	17.3
18	27.0	51	23.1	84	17.1
19	26.9	52	23.0	85	16.9
20	26.8	53	22.8	86	16.7
21	26.7	54	22.6	87	16.6
22	26.7	55	22.5	88	16.4
23	26.6	56	22.3	89	16.2
24	26.5	57	22.1	90	16.0
25	26.4	58	22.0	91	15.8
26	26.3	59	21.8	92	15.6
27	26.2	60	21.6	93	15.4
28	26.1	61	21.4	94	15.2
29	26.0	62	21.3	95	15.0
30	25.9	63	21.1	96	14.8
31	25.8	64	20.9	97	14.6
32	25.7	65	20.7	98	14.4
33	25.6	66	20.5	99	14.2

(Continued)

Table A-7.4 (Continued)

<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)
100	14.1	134	8.37	168	5.33
101	13.9	135	8.25	169	5.26
102	13.7	136	8.13	170	5.20
103	13.5	137	8.01	171	5.14
104	13.3	138	7.89	172	5.08
105	13.1	139	7.78	173	5.02
106	12.9	140	7.67	174	4.96
107	12.8	141	7.56	175	4.91
108	12.6	142	7.45	176	4.85
109	12.4	143	7.35	177	4.80
110	12.2	144	7.25	178	4.74
111	12.0	145	7.15	179	4.69
112	11.8	146	7.05	180	4.64
113	11.7	147	6.96	181	4.59
114	11.5	148	6.86	182	4.54
115	11.3	149	6.77	183	4.49
116	11.1	150	6.68	184	4.44
117	11.0	151	6.59	185	4.39
118	10.8	152	6.51	186	4.34
119	10.6	153	6.42	187	4.30
120	10.4	154	6.34	188	4.25
121	10.3	155	6.26	189	4.21
122	10.1	156	6.18	190	4.16
123	9.94	157	6.10	191	4.12
124	9.78	158	6.02	192	4.08
125	9.62	159	5.95	193	4.04
126	9.47	160	5.87	194	3.99
127	9.32	161	5.80	195	3.95
128	9.17	162	5.73	196	3.91
129	9.03	163	5.66	197	3.87
130	8.89	164	5.59	198	3.83
131	8.76	165	5.52	199	3.80
132	8.63	166	5.45	200	3.76
133	8.50	167	5.39		

Table A-7.5 Allowable stresses for A500 Grade B HSS round columns ($F_y = 42$ ksi)

KL/r	F_c (ksi)	KL/r	F_c (ksi)	KL/r	F_c (ksi)
1	25.1	34	23.4	67	19.1
2	25.1	35	23.3	68	18.9
3	25.1	36	23.2	69	18.8
4	25.1	37	23.1	70	18.6
5	25.1	38	23.0	71	18.5
6	25.1	39	22.9	72	18.3
7	25.1	40	22.8	73	18.1
8	25.1	41	22.7	74	18.0
9	25.0	42	22.6	75	17.8
10	25.0	43	22.4	76	17.6
11	25.0	44	22.3	77	17.5
12	24.9	45	22.2	78	17.3
13	24.9	46	22.1	79	17.1
14	24.8	47	22.0	80	17.0
15	24.8	48	21.8	81	16.8
16	24.8	49	21.7	82	16.6
17	24.7	50	21.6	83	16.5
18	24.7	51	21.4	84	16.3
19	24.6	52	21.3	85	16.1
20	24.5	53	21.2	86	16.0
21	24.5	54	21.0	87	15.8
22	24.4	55	20.9	88	15.6
23	24.3	56	20.7	89	15.5
24	24.3	57	20.6	90	15.3
25	24.2	58	20.5	91	15.1
26	24.1	59	20.3	92	15.0
27	24.0	60	20.2	93	14.8
28	24.0	61	20.0	94	14.6
29	23.9	62	19.9	95	14.4
30	23.8	63	19.7	96	14.3
31	23.7	64	19.6	97	14.1
32	23.6	65	19.4	98	13.9
33	23.5	66	19.2	99	13.8

(Continued)

Table A-7.5 (Continued)

<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)
100	13.6	134	8.37	168	5.33
101	13.4	135	8.25	169	5.26
102	13.3	136	8.13	170	5.20
103	13.1	137	8.01	171	5.14
104	12.9	138	7.89	172	5.08
105	12.8	139	7.78	173	5.02
106	12.6	140	7.67	174	4.96
107	12.4	141	7.56	175	4.91
108	12.3	142	7.45	176	4.85
109	12.1	143	7.35	177	4.80
110	12.0	144	7.25	178	4.74
111	11.8	145	7.15	179	4.69
112	11.6	146	7.05	180	4.64
113	11.5	147	6.96	181	4.59
114	11.3	148	6.86	182	4.54
115	11.2	149	6.77	183	4.49
116	11.0	150	6.68	184	4.44
117	10.8	151	6.59	185	4.39
118	10.7	152	6.51	186	4.34
119	10.5	153	6.42	187	4.30
120	10.4	154	6.34	188	4.25
121	10.2	155	6.26	189	4.21
122	10.1	156	6.18	190	4.16
123	9.93	157	6.10	191	4.12
124	9.78	158	6.02	192	4.08
125	9.62	159	5.95	193	4.04
126	9.47	160	5.87	194	3.99
127	9.32	161	5.80	195	3.95
128	9.17	162	5.73	196	3.91
129	9.03	163	5.66	197	3.87
130	8.89	164	5.59	198	3.83
131	8.76	165	5.52	199	3.80
132	8.63	166	5.45	200	3.76
133	8.50	167	5.39		

Table A-7.6 Allowable stresses for A36¹ steel columns ($F_y = 36$ ksi)

KL/r	F_c (ksi)	KL/r	F_c (ksi)	KL/r	F_c (ksi)
1	21.6	34	20.3	67	17.0
2	21.6	35	20.2	68	16.9
3	21.5	36	20.1	69	16.8
4	21.5	37	20.1	70	16.7
5	21.5	38	20.0	71	16.5
6	21.5	39	19.9	72	16.4
7	21.5	40	19.8	73	16.3
8	21.5	41	19.7	74	16.2
9	21.5	42	19.6	75	16.0
10	21.4	43	19.6	76	15.9
11	21.4	44	19.5	77	15.8
12	21.4	45	19.4	78	15.6
13	21.4	46	19.3	79	15.5
14	21.3	47	19.2	80	15.4
15	21.3	48	19.1	81	15.3
16	21.3	49	19.0	82	15.1
17	21.2	50	18.9	83	15.0
18	21.2	51	18.8	84	14.9
19	21.2	52	18.7	85	14.7
20	21.1	53	18.6	86	14.6
21	21.1	54	18.5	87	14.5
22	21.0	55	18.4	88	14.3
23	21.0	56	18.3	89	14.2
24	20.9	57	18.2	90	14.1
25	20.9	58	18.1	91	13.9
26	20.8	59	17.9	92	13.8
27	20.7	60	17.8	93	13.7
28	20.7	61	17.7	94	13.5
29	20.6	62	17.6	95	13.4
30	20.6	63	17.5	96	13.3
31	20.5	64	17.4	97	13.1
32	20.4	65	17.3	98	13.0
33	20.4	66	17.1	99	12.9

(Continued)

Table A-7.6 (Continued)

<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)	<i>KL/r</i>	<i>F_c</i> (ksi)
100	12.7	134	8.38	168	5.33
101	12.6	135	8.25	169	5.26
102	12.5	136	8.13	170	5.20
103	12.3	137	8.01	171	5.14
104	12.2	138	7.89	172	5.08
105	12.1	139	7.78	173	5.02
106	11.9	140	7.67	174	4.96
107	11.8	141	7.56	175	4.91
108	11.7	142	7.45	176	4.85
109	11.5	143	7.35	177	4.80
110	11.4	144	7.25	178	4.74
111	11.3	145	7.15	179	4.69
112	11.1	146	7.05	180	4.64
113	11.0	147	6.96	181	4.59
114	10.9	148	6.86	182	4.54
115	10.7	149	6.77	183	4.49
116	10.6	150	6.68	184	4.44
117	10.5	151	6.59	185	4.39
118	10.4	152	6.51	186	4.34
119	10.2	153	6.42	187	4.3
120	10.1	154	6.34	188	4.25
121	9.97	155	6.26	189	4.21
122	9.85	156	6.18	190	4.16
123	9.72	157	6.10	191	4.12
124	9.59	158	6.02	192	4.08
125	9.47	159	5.95	193	4.04
126	9.35	160	5.87	194	3.99
127	9.22	161	5.80	195	3.95
128	9.10	162	5.73	196	3.91
129	8.98	163	5.66	197	3.87
130	8.86	164	5.59	198	3.83
131	8.73	165	5.52	199	3.80
132	8.61	166	5.45	200	3.76
133	8.49	167	5.39		

Note:
1. Steel pipe fabricated with A53 Grade B steel and *F_y* = 35 ksi may be analyzed using this table for *F_y* = 36 ksi.

Table A-7.7 Specifications for steel ties and spirals in reinforced concrete columns

Ties
Use minimum No. 3 bars to confine longitudinal steel up to No. 10; use minimum No. 4 bars for No. 11, 14, and 18 longitudinal steel. Spacing of ties is the smaller of: • $16 \times$ longitudinal bar diameter • $48 \times$ tie bar diameter • Smallest column dimension Ties must be arranged so that corner bars are bounded by a tie bent at a 90° angle, and alternate longitudinal bars (between the corners) are restrained by a tie bent to at least 135°. No unsupported longitudinal bar shall be farther than 6 in. clear on either side of a laterally supported bar.
Spirals
Use a continuous bar or wire of at least $\frac{3}{8}$-in. diameter, with the clear space measured between turns of the spiral no more than 3 in. and no less than 1 in. A minimum ratio, ρ_s, of the volume of spiral steel to the volume of concrete inside the spiral (the “core”) is also specified: $\rho_s = 0.45(A_g/A_c - 1)(f'_c/f_y)$ with $f_y \leq 60$ ksi; A_g = the gross concrete area, and A_c = the area of the “core” within the spiral.

This page intentionally left blank

Tables for Chapter 8 (beams)

8

Table A-8.1 Allowable deflection for span, L^1

A. Live, snow, or wind load only

Floor Beams	Roof Beams
Basic: $L/360$	No ceiling: $L/180$ Nonplaster ceiling: $L/240$ Plaster ceiling: $L/360$


B. Combined live and dead load

Floor Beams	Roof Beams
Basic: $L/240$	No ceiling: $L/120$ Nonplaster ceiling: $L/180$ Plaster ceiling: $L/240$

Note:

1. Use span, L , in inch units for allowable deflection in inch units; for cantilevers, use twice the actual cantilevered span for L .

Table A-8.2 Deflection calculations¹
A. Deflection coefficient, *C*, for maximum deflection,² Δ (in.), where $\Delta = CPL^3/(EI_x)$

				
	22.46	9.33	4.49	216
	35.94	16.07	8.99	n/a
	61.34	26.27	13.31	n/a
	85.54	36.12	17.97	n/a
	n/a	n/a	n/a	576

B. Recommended minimum thickness (in.) of reinforced concrete beams and slabs for deflection control^{3,4}

				
Beams	12L/16	12L/18.5	12L/21	12L/8
Slabs	12L/20	12L/24	12L/28	12L/10

- Notes:
1. Beam diagram symbols in top row of tables represent the following conditions (from left to right): simply supported, one end pinned and one end continuous, both ends continuous, and cantilever.
 2. Units for maximum deflection equation are as follows:
 Δ = maximum deflection (in.)
 C = deflection coefficient (already accounts for unit conversion)
 L = span (ft)
 E = modulus of elasticity (psi when load is in lb; or ksi when load is in kips)
 I = moment of inertia (in⁴)
 P = concentrated load or resultant of uniformly distributed load (lb or kips)
 w = uniformly distributed load (lb/ft or kips/ft)
 3. Concrete recommendations are for normal-weight concrete where adjacent construction is not likely to be damaged by excessive deflections.
 4. Units for span, L, are feet, for minimum thickness in inches.

Table A-8.3 “Adjusted” section modulus ($C_F S_x$) values for wood sections in bending (lightest shown in bold face)

Shape	$C_F S_x$ (in ³)	Shape	$C_F S_x$ (in ³)	Shape	$C_F S_x$ (in ³)
2 × 4	4.594	6 × 10	82.73	8 × 22	541.6
Double 2 × 4 ¹	9.188	Triple 2 × 12 ¹	94.92	12 × 18	562.9
2 × 6	9.831	4 × 14	102.4	10 × 20	570.4
Triple 2 × 4 ¹	13.78	Triple 2 × 14 ¹	118.5	8 × 24	640.6
2 × 8	15.77	6 × 12	121.2	14 × 18	660.8
Double 2 × 6 ¹	19.66	4 × 16	135.7	10 × 22	686.0
4 × 6	22.94	6 × 14	164.9	12 × 20	690.5
2 × 10	23.53	8 × 12	165.3	14 × 20	810.6
Triple 2 × 6 ¹	29.49	6 × 16	214.1	10 × 24	811.5
Double 2 × 8 ¹	31.54	8 × 14	224.9	12 × 22	830.4
2 × 12	31.64	6 × 18	269.2	16 × 20	930.7
2 × 14	39.50	10 × 14	284.8	14 × 22	974.8
4 × 8	39.86	8 × 16	291.9	12 × 24	982.3
Double 2 × 10¹	47.06	6 × 20	330.3	16 × 22	1119
Triple 2 × 8 ¹	47.31	8 × 18	367.1	14 × 24	1153
4 × 10	59.89	10 × 16	369.7	18 × 22	1264
Double 2 × 12¹	63.28	6 × 22	397.1	16 × 24	1324
Triple 2 × 10 ¹	70.59	12 × 16	447.6	18 × 24	1495
Double 2 × 14 ¹	79.00	8 × 20	450.4	20 × 24	1666
4 × 12	81.21	10 × 18	465.0		

Note:

1. “Double” or “triple” indicates that two or three sections, respectively, are nailed together to create a single bending element.


Table A-8.4 Plastic section modulus (Z_x) values: lightest laterally braced steel compact shapes for bending, $F_y = 50$ ksi

Shape	Z_x (in ³)	² L_p (ft)	Shape	Z_x (in ³)	² L_p (ft)	Shape	Z_x (in ³)	² L_p (ft)
W6 × 8.5 ¹	5.59	3.14	W21 × 50	110	4.59	W36 × 182	718	9.01
W6 × 9 ¹	6.23	3.20	W18 × 55	112	5.90	W40 × 183	774	8.80
W8 × 10 ¹	8.77	3.14	W21 × 55	126	6.11	W40 × 199	869	12.2
W10 × 12 ¹	12.5	2.87	W24 × 55	134	4.73	W40 × 211	906	8.87
W12 × 14	17.4	2.66	W21 × 62	1441	6.25	W40 × 215	964	12.5
W12 × 16	20.1	2.73	W24 × 62	153	4.87	W44 × 230	1100	12.1
W10 × 19	21.6	3.09	W21 × 68	160	6.36	W40 × 249	1120	12.5
W12 × 19	24.7	2.90	W24 × 68	177	6.61	W44 × 262	1270	12.3
W10 × 22	26.0	4.70	W24 × 76	200	6.78	W44 × 290	1410	12.3
W12 × 22	29.3	3.00	W24 × 84	224	6.89	W40 × 324	1460	12.6
W14 × 22	33.2	3.67	W27 × 84	244	7.31	W44 × 335	1620	12.3
W12 × 26	37.2	5.33	W30 × 90	283	7.38	W40 × 362	1640	12.7
W14 × 26	40.2	3.81	W30 × 99	312	7.42	W40 × 372	1680	12.7
W16 × 26	44.2	3.96	W30 × 108	346	7.59	W40 × 392	1710	9.33
W14 × 30	47.3	5.26	W30 × 116	378	7.74	W40 × 397	1800	12.9
W16 × 31	54.0	4.13	W33 × 118	415	8.19	W40 × 431	1960	12.9
W14 × 34	54.6	5.40	W33 × 130	467	8.44	W36 × 487	2130	14.0
W18 × 35	66.5	4.31	W36 × 135	509	8.41	W40 × 503	2310	13.1
W16 × 40	73.0	5.55	W33 × 141	514	8.58	W36 × 529	2330	14.1
W18 × 40	78.4	4.49	W40 × 149	598	8.09	W40 × 593	2760	13.4
W21 × 44	95.4	4.45	W36 × 160	624	8.83	W36 × 652	2910	14.5
W21 × 48	107	6.09	W40 × 167	693	8.48	W36 × 800	3650	14.9

Notes:
1. Section is just out of range to qualify as compact for $F_y = 50$ ksi steel. Because the nominal flexural strength of the section must be reduced a small percentage to account for slenderness of the noncompact flanges, the value for plastic section modulus has been reduced by the same percentage so that it may be used, as is, in the bending strength equation: $Z_{req} = \Omega M_{max}/F_y$.
2. L_p , the largest unbraced length for which the section can be considered compact, is computed for $F_y = 50$ ksi steel. The comparable unbraced length for A36 steel is larger and is equal to $4.16r_y$ (ft), where r_y is the section's radius of gyration about the y-axis (in.)—see Table A-4.3.


Table A-8.5 Available moment for A992 wide-flange (W) shapes^{1,2}

A. Available moments from 0 to 100 ft-kips

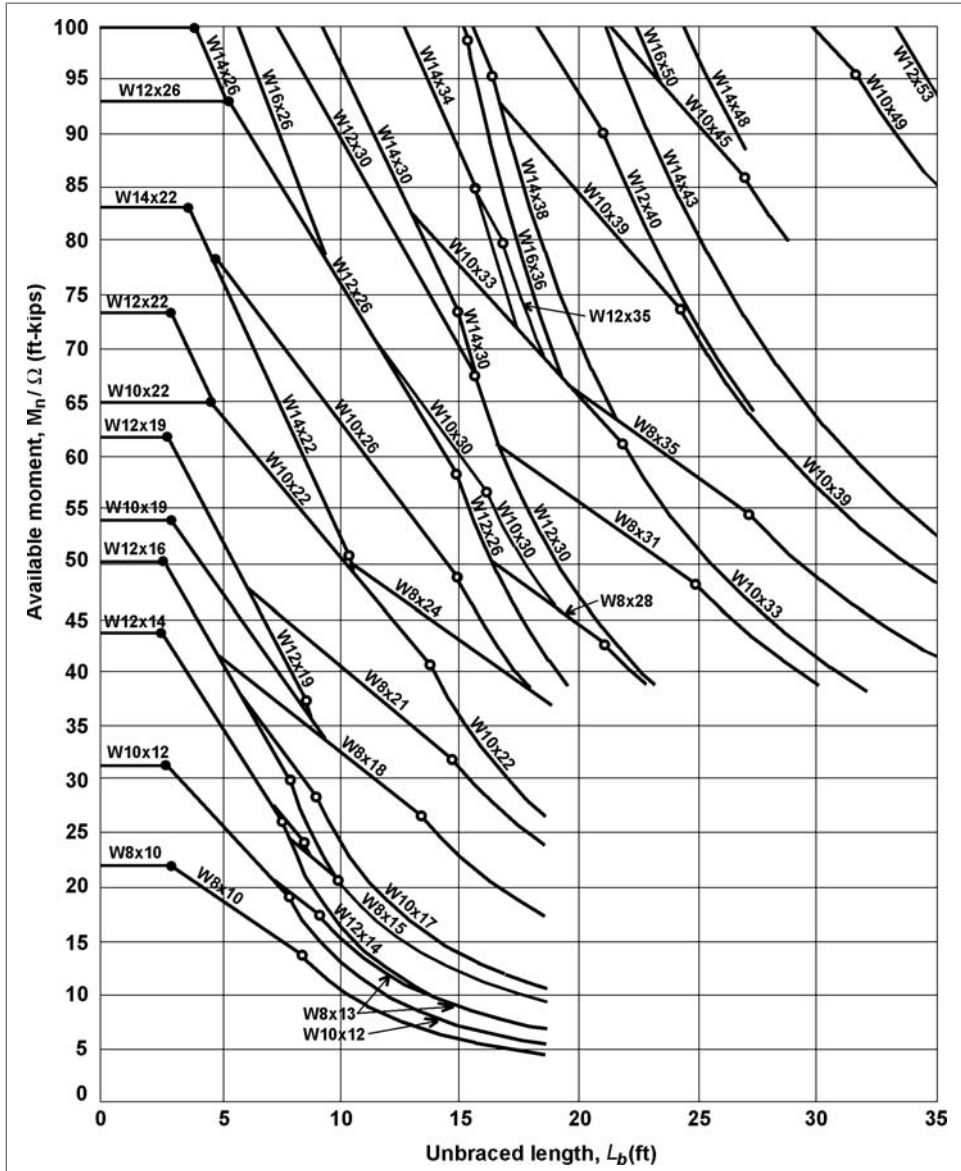

(Continued)

Table A-8.5 (Continued)
B. Available moments from 100 to 200 ft-kips

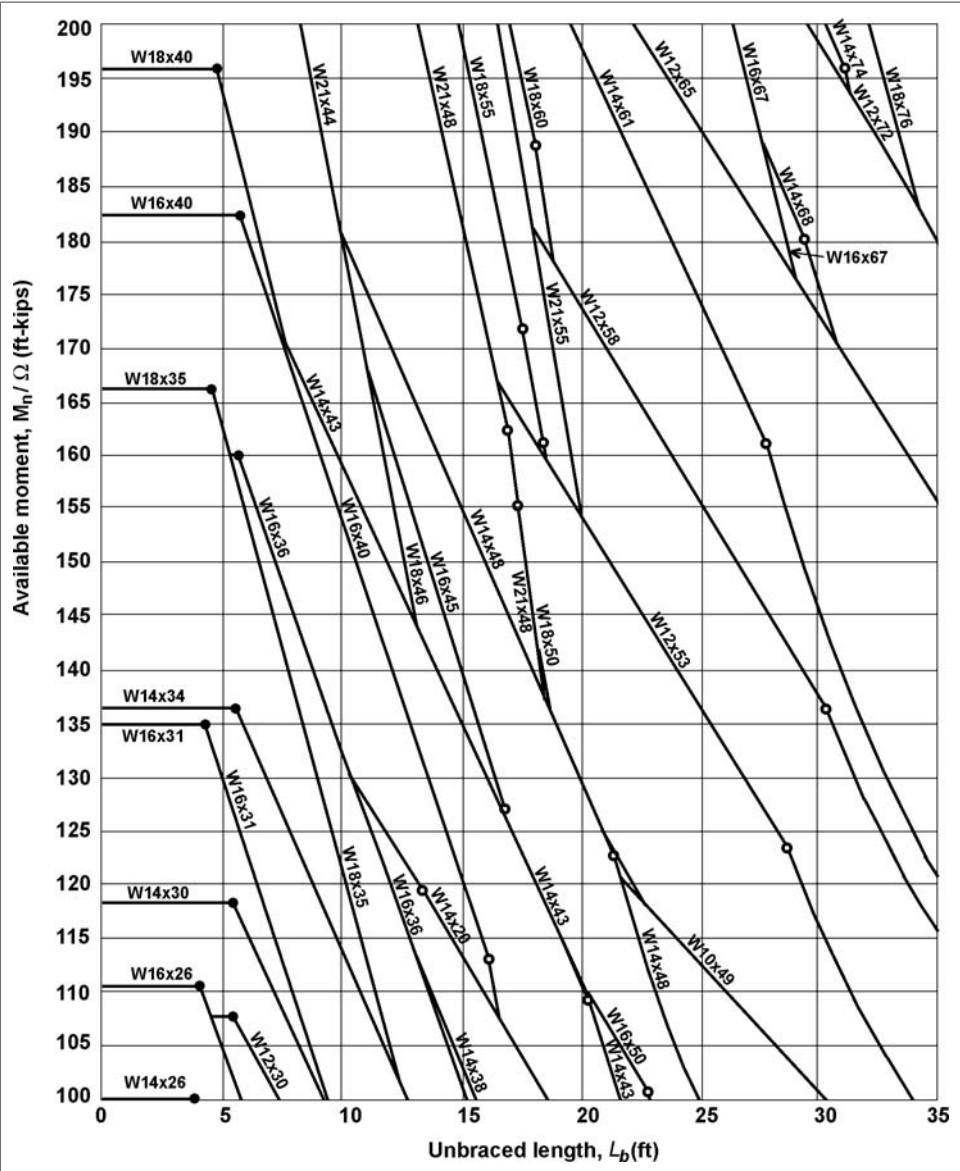

(Continued)

Table A-8.5 (Continued)
D. Available moments from 400 to 600 ft-kips


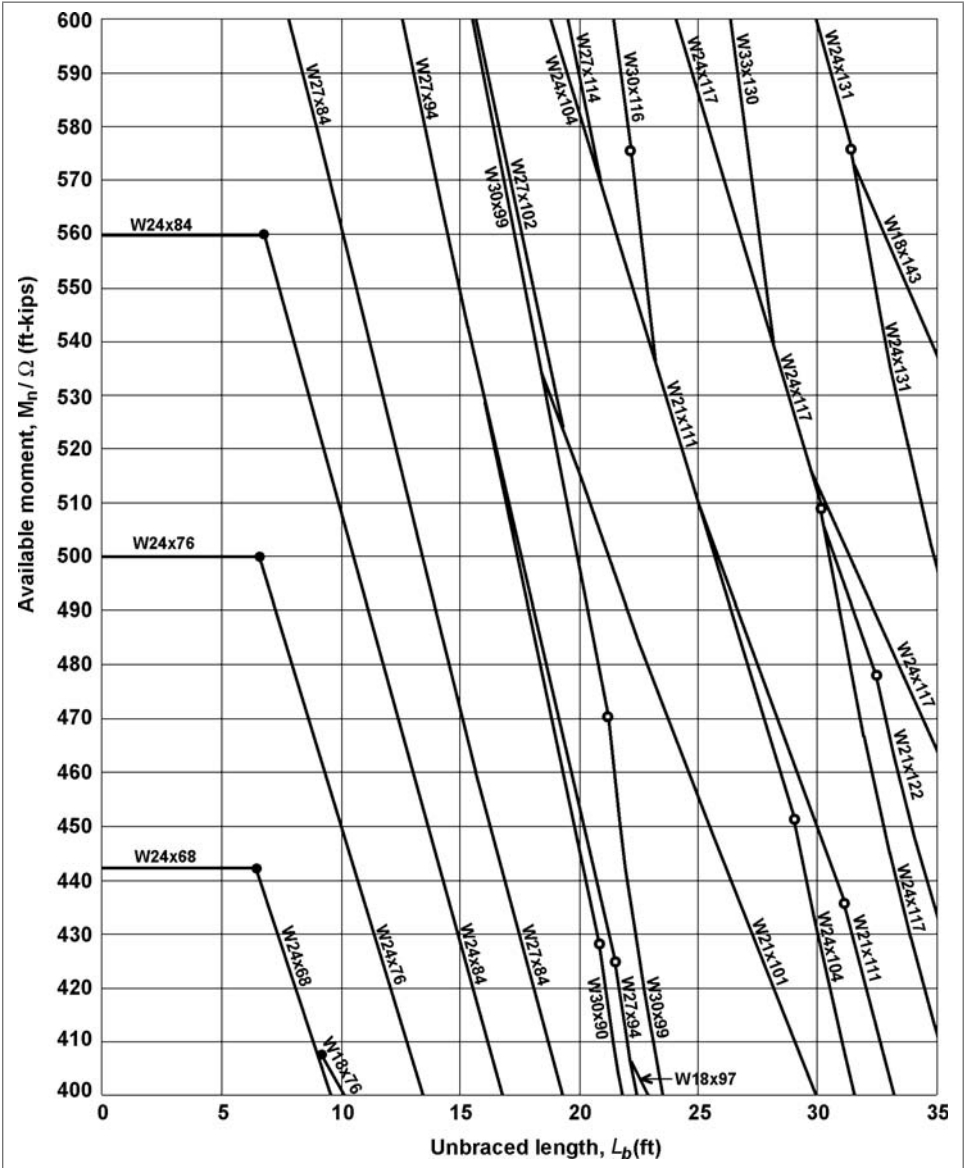



Table A-8.5 (Continued)
F. Available moments from 1000 to 2000 ft-kips

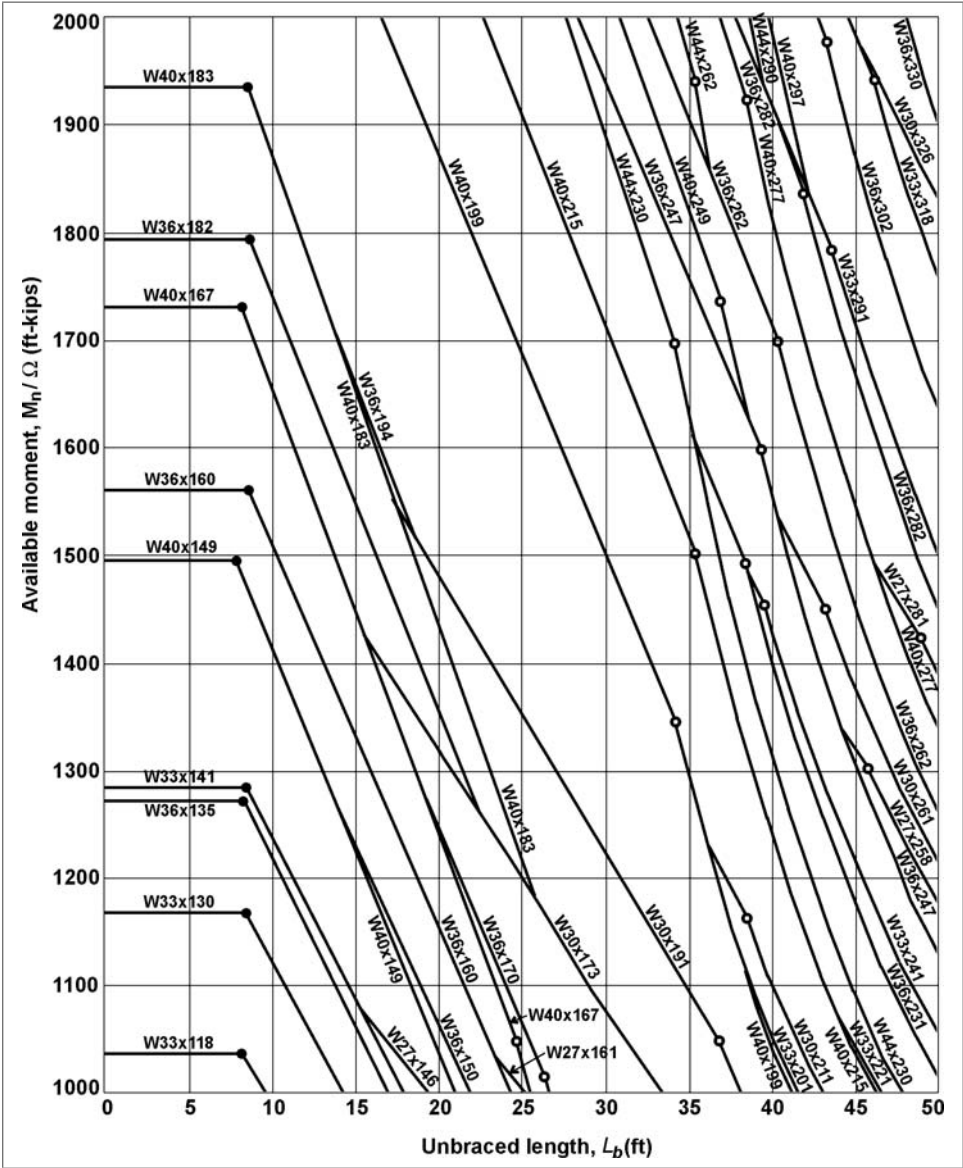

(Continued)


Table A-8.5 (Continued)

G. Available moments from 2000 to 5000 ft-kips

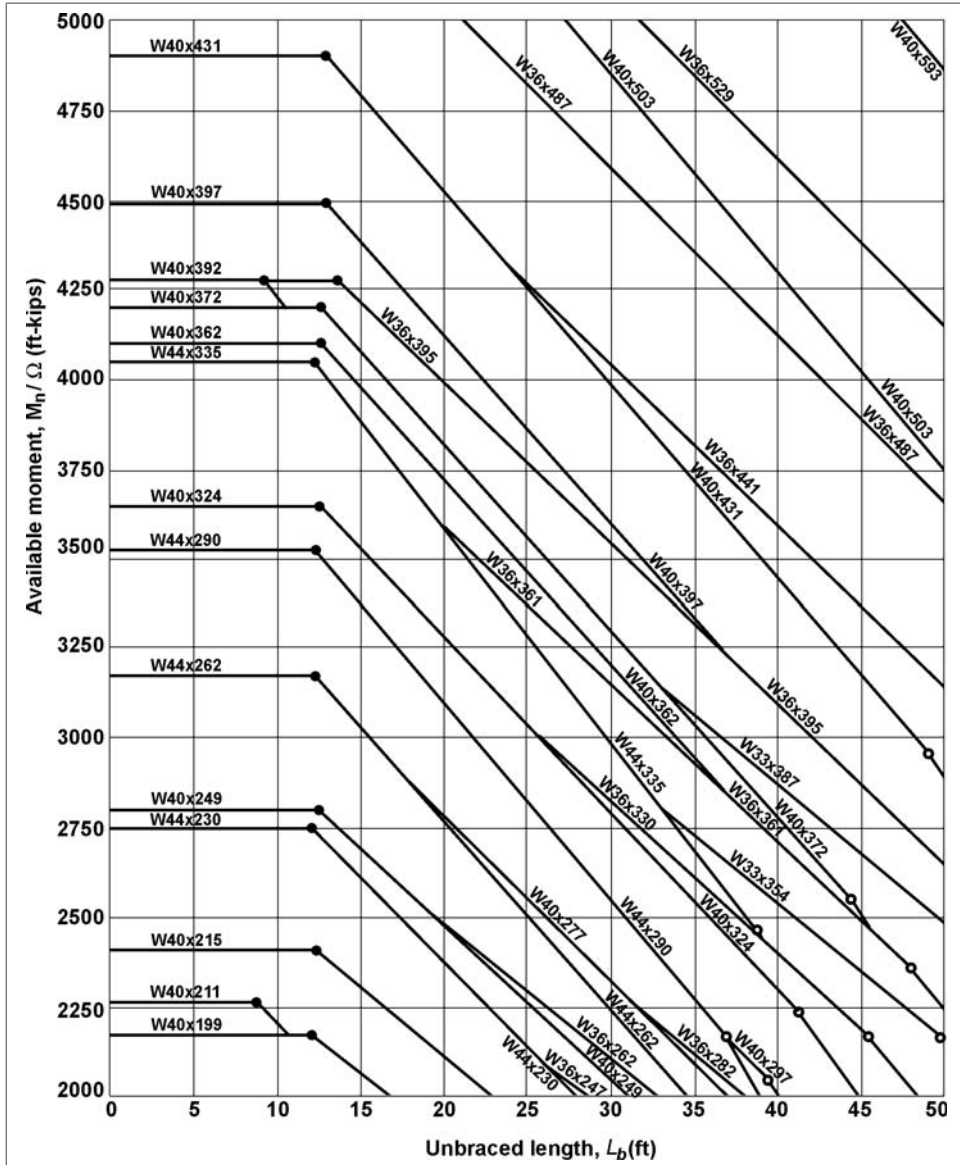

(Continued)

Table A-8.5 (Continued)
H. Available moments from 5000 to 10,000 ft-kips

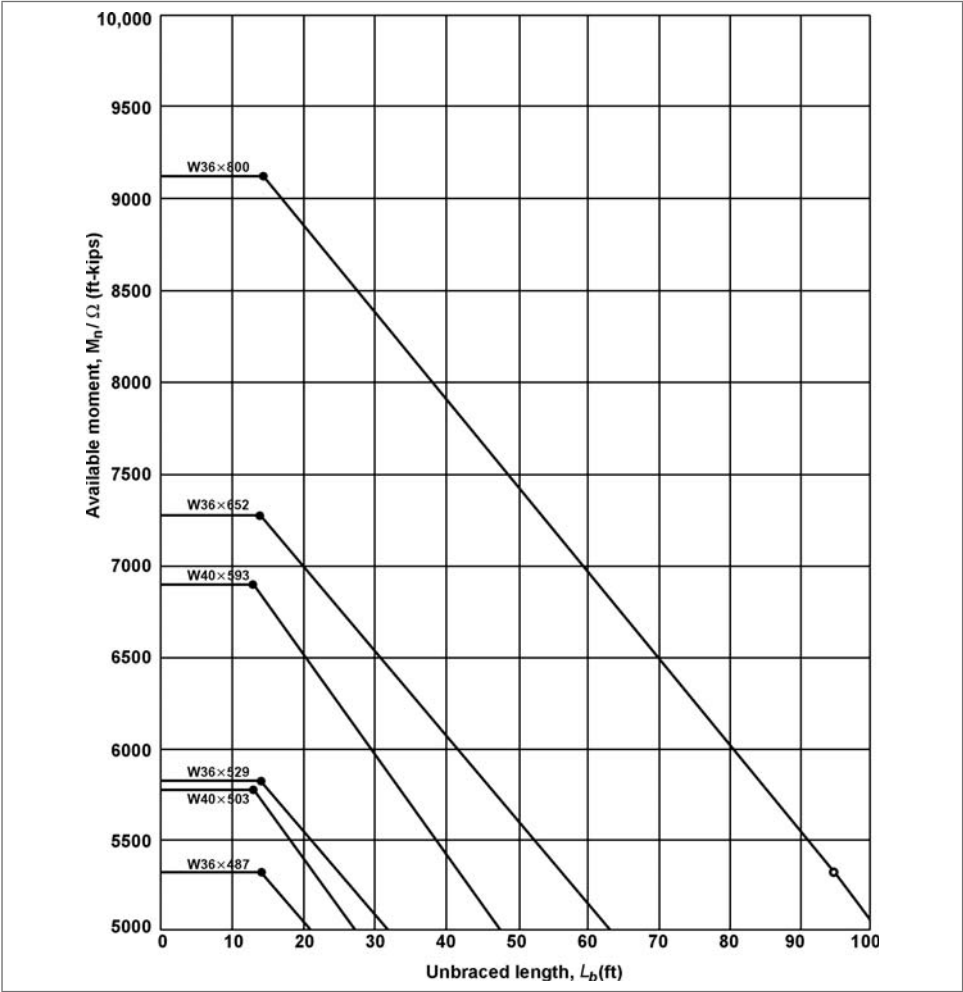

Notes:

1. Values are based on the conservative assumption that the “lateral-torsional buckling modifier,” $C_b = 1.0$. This conservative value of $C_b = 1.0$ is quite close to the actual value for simply supported beams with equally spaced point loads of equal weight, where the beam is braced at those points only, except for the special case of a single point load at midspan, in which case $C_b = 1.364$. Actual values for C_b can be found for each unbraced beam segment by calculating the bending moments at the quarter-points along each segment (M_A , M_B , and M_C , with M_B being the moment at the midpoint of the segment), as well as the maximum moment, M_{max} , within each segment, and then inserting these values into Equation 8.13, reproduced as follows:

$$C_b = \frac{12.5M_{max}}{2.5M_{max} + 3M_A + 4M_B + 3M_C} \leq 3.0$$

In any case, the available moment cannot exceed M_p/Ω , the value for braced, compact sections given in Table A-8.4.

2. Solid circles represent the maximum unbraced length, L_p , for which a plastic moment can be achieved before the onset of lateral-torsional buckling; open circles represent the maximum unbraced length, L_r , for which an elastic moment can be achieved before the onset of lateral-torsional buckling (see Figure 8.24).

Table A-8.6 “Shear” equations for reinforced concrete beams¹

A. Capacity of steel stirrups ² (lb)	$V_s = \frac{2A_s f_y d}{s}$
B. Required stirrup spacing ² (in.)	$s \leq \frac{2A_s f_y d}{V_s}$
C. Capacity of concrete ³ (lb)	$V_c = 2bd\sqrt{f'_c}$
D. Strength design equation ²	$V_u \leq \phi(V_c + V_s)$
E. Required steel capacity (lb) from strength design equation ²	$V_s \geq \frac{V_u}{\phi} - V_c$
F. Maximum stirrup spacing ³ (in.)	For $V_s \leq 2V_c$, the smaller of: • $d/2$ • 24 in. • $2A_s f_y / (50b)$ For $V_s > 2V_c$, the smaller of: • $d/4$ • 12 in. • $2A_s f_y / (50b)$
G. Design shear where no stirrups are needed ² (lb)	$V_u = 0.5\phi V_c$

Notes:

1. Units are as follows:

b = cross section width (in.)

d = cross section effective depth (in.)

s = stirrup spacing (in.)

A_s = stirrup bar area, one “prong” only (in.²)

f_y = yield stress of steel stirrup (psi)

f'_c = cylinder strength of concrete (psi)

V_u = design (factored) shear force (lb)

V_c = capacity of concrete to resist shear (lb)

V_s = capacity of steel stirrups to resist shear (lb)

ϕ = 0.75 for shear (see Table A-5.2)

2. Units specified for lb and psi units according to Note 1 may be changed to kips and ksi in these equations only.

3. The concrete cylinder strength f'_c must be in psi units in Table 8.6, part C (with the resulting value of V_c in lb units), and the steel yield stress f_y must be psi units in part F (with in. units resulting).

Table A-8.8 Limits on steel ratio for “tension-controlled” reinforced concrete beams¹

f'_c (psi)	Limits on Steel Ratio, $\rho_{\min} - \rho_{\max}$
3000	0.00333 – 0.01350
4000	0.00333 – 0.01810
5000	0.00354 – 0.02130

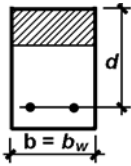
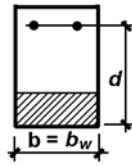
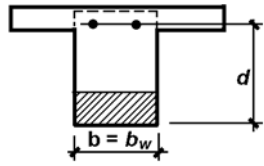
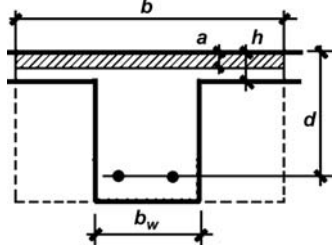
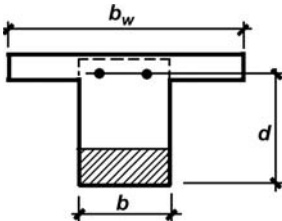
Note:
1. Values are for $f_y = 60 \text{ ksi}$, $\phi = 0.9$, and steel strain, $\varepsilon_t = 0.005$ for $\rho_{\max}$.

Table A-8.9 Values of R and ρ for reinforced concrete beams, T-beams, and one-way slabs (using 60-ksi steel)¹

R (ksi)			r	b/b_w
$f'_c = 3 \text{ ksi}$	$f'_c = 4 \text{ ksi}$	$f'_c = 5 \text{ ksi}$		
0.0197	0.0197	0.0198	^b 0.00033	10
0.0221	0.0221	0.0221	^b 0.00037	9
0.0251	0.0251	0.0251	^b 0.00042	8
0.0286	0.0287	0.0287	^b 0.00048	7
0.0334	0.0334	0.0335	^b 0.00056	6
0.0493	0.0494	0.0495	^b 0.00083	4
0.0657	0.0659	0.0661	^b 0.00111	3
0.0982	0.0987	0.099	^b 0.00167	2
0.106	0.106	0.107	^d 0.00180	1.83
0.192	0.194	0.195	^a 0.00333	1
0.229	0.232	0.233	^c 0.00400	0.83
0.282	0.287	0.289	^c 0.00500	0.67
0.335	0.341	0.345	^c 0.00600	0.56
0.369	0.377	0.381	^c 0.00667	0.50
0.385	0.394	0.399	0.00700	—
0.435	0.446	0.453	0.00800	—
0.483	0.497	0.506	0.00900	—
0.529	0.547	0.558	0.01000	—
0.575	0.596	0.609	0.01100	—
0.618	0.644	0.659	0.01200	—
0.661	0.691	0.708	0.01300	—
0.681	0.714	0.733	^e 0.01350	—
—	0.736	0.757	0.01400	—
—	0.781	0.805	0.01500	—
—	0.824	0.852	0.01600	—
—	0.867	0.898	0.01700	—
—	0.908	0.943	0.01800	—
—	0.913	0.947	^e 0.01810	—
—	—	0.987	0.01900	—
—	—	1.031	0.02000	—
—	—	1.073	0.02100	—
—	—	1.086	^e 0.02130	—

(Continued)

Table A-8.9 (Continued)

Keyed Notes for Minimum and Maximum Steel Ratio, ρ_{min} and ρ_{max}		
a. Minimum steel ratio for rectangular beams and negative-moment, indeterminate T-beams: $b/b_w = 1.0$ and $\rho_{min} = 0.00333$ (or 0.00354 for $f'_c = 5$ ksi)		
 Positive moment rectangular beam	 Negative moment rectangular beam	 Negative moment indeterminate T-beam
b. Minimum steel ratio for positive- moment T-beams: $\rho_{min} < 0.00333$ and is shown for b/b_w between 1 and 10 The effective width, b , of a positive- moment T-beam is considered to be the smaller of the following: $b = \frac{1}{4}$ beam span $b =$ centerline distance between beams $b =$ web width + 16 times slab thickness		
		
c. Minimum steel ratio for negative- moment determinate T-beams (e.g., precast sections and cantilevers) $\rho_{min} > 0.00333$ and is shown for b/b_w between 1.0 and 0.5 (with $\rho_{min} = 0.00667$ for values of $b/b_w < 0.5$)		
		
d. Minimum steel ratio for one-way slabs $\rho_{min} = 0.00180$ for slabs; the same steel ratio applies to shrinkage and temperature control steel perpendicular to slab longitudinal bar		
e. Maximum steel ratio $\rho_{max} = 0.01350$ for $f'_c = 3$ ksi $\rho_{max} = 0.01800$ for $f'_c = 4$ ksi $\rho_{max} = 0.02130$ for $f'_c = 5$ ksi		


Note:

1. $M_u \leq \phi b d^2 R$, where $\phi = 0.9$, $R = \rho f_y (1 - 0.59 \rho f_y / f'_c)$, and $\rho = A_s / b d$. When using this table, R , f_y , and f'_c are in ksi units; b is the compressive zone cross-sectional width (or effective width); b_w is the tension zone width; and d is the effective depth, all in inch units. For positive-moment T-beams, results are valid only when compressive stress block depth, $a = \rho f_y d / (0.85 f'_c) \leq$ slab thickness, h . Steel strain at failure, $\epsilon_t = 0.005$ for ρ_{max} (i.e., only tension-controlled sections are considered).

Tables for Chapter 9 (connections)

9

Table A-9.1 Selected lag screw (lag bolt) dimensions

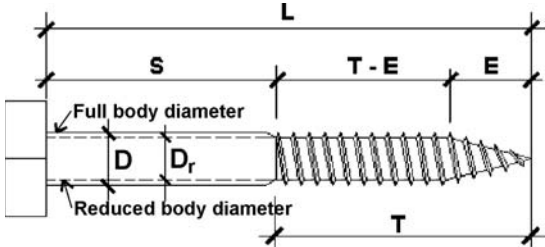

L (in.)	D (in.)	D_r (in.)	T (in.)	$T-E$ (in.)	E (in.)
3	0.250	0.173	2.0	1.8125	0.1875
3	0.375	0.265	2.0	1.7500	0.2500
3	0.500	0.371	2.0	1.6875	0.3125
3	0.625	0.471	2.0	1.6250	0.3750
4	0.250	0.173	2.5	2.3125	0.1875
4	0.375	0.265	2.5	2.2500	0.2500
4	0.500	0.371	2.5	2.1875	0.3125
4	0.625	0.471	2.5	2.1250	0.3750
5	0.250	0.173	3.0	2.8125	0.1875
5	0.375	0.265	3.0	2.7500	0.2500
5	0.500	0.371	3.0	2.6875	0.3125
5	0.625	0.471	3.0	3.6250	0.3750
6	0.250	0.173	3.5	3.3125	0.1875
6	0.375	0.265	3.5	3.2500	0.2500
6	0.500	0.371	3.5	3.1875	0.3125
6	0.625	0.471	3.5	3.1250	0.3750

Table A-9.2 Selected common wire nail dimensions



			
Designation ¹	L (in.)	D (in.)	E (in.) ²
6d	2.00	0.113	0.226
8d	2.50	0.131	0.262
10d	3.00	0.148	0.296
12d	3.25	0.148	0.296
16d	3.50	0.162	0.324
20d	4.00	0.192	0.384
30d	4.50	0.207	0.414
40d	5.00	0.225	0.450
50d	5.50	0.244	0.488

Notes:

1. The designation for nails once had some relation to the cost of 100 nails; it now refers only to the nail's size. The letter "d" in the designation refers to the pennyweight of the nails and is said to be derived from the biblical use of denarius (hence "d") as the historical equivalent of the modern penny (hence "pennyweight"). We continue to use the abbreviation "d" to stand for "penny" and we say "10-penny nail" when reading "10d nail."

2. E = approximate length of tapered tip, assumed to be equal to 2D.

Table A-9.3 Penetration and dowel bearing length¹

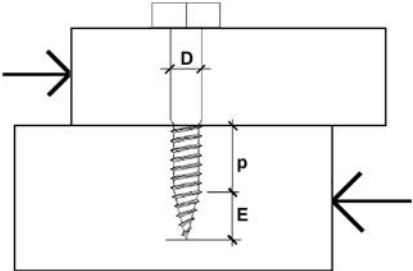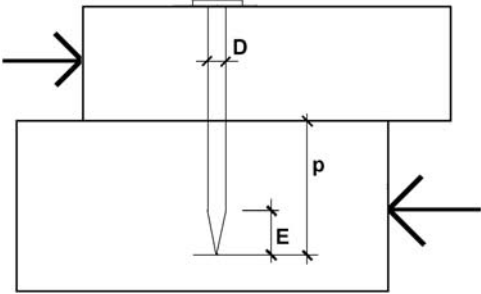Type of Fastener	Required Penetration Distance, p	
	Absolute Minimum	Minimum for Full Value of Z
Lag screw ² 	$4D$	$8D$
Nail ³ 	$6D$	$10D$
Bolt ⁴	n/a	n/a

- Notes:
1. The dowel bearing length in the main member, used in yield limit calculations, may be different from the penetration as defined earlier: for lag screws, the dowel bearing length in the main member equals the penetration (which excludes the tapered tip); however, for nailed connections, the dowel bearing length in the main member includes the tapered tip where $p \geq 10D$, but otherwise excludes the tapered tip (the length of which can be approximated as $2D$).
 2. For lag screws where the penetration, p , falls between the two values shown in the table, the lateral design value, Z , is multiplied by $p/(8D)$. Therefore, where the penetration equals the absolute minimum value of $4D$, the lateral design value is taken as one half the tabular (or computed) value of Z .
 3. For nails where the penetration, p , falls between the two values shown in the table, the lateral design value, Z , is multiplied by $p/(10D)$. Therefore, where the penetration equals the absolute minimum value of $6D$, the lateral design value is taken as 0.6 times the tabular (or computed) value of Z .
 4. For bolts, "penetration" is always, by definition, 100% through both the main member and side member(s), so there is no need to calculate its effect on the lateral design value, Z .

Table A-9.4 Duration of load adjustment factor, C_D , for wood connectors¹

Load Type	Duration	C_D
Dead load	Permanent	0.90
Live load	10 years	1.00
Snow	2 months	1.15
Construction	1 week	1.25
Wind/seismic	10 minutes	1.60

Note:
1. Applies to both dowel-type connectors and connectors subject to withdrawal loads.

Table A-9.5 Wet service adjustment factor, C_M , for wood connectors^{1,2}

Fastener Type with Lateral Load	C_M
"Dowel-type," wet when made, dry in-service:	Varies as follows:
1 fastener only	1.00
2 fasteners in row parallel to grain	1.00
Multiple rows of fasteners parallel to grain, separate splice plate each row	1.00
Fastener with diameter < ½ in.	0.70
"Dowel-type," wet when used (in-service)	0.70
Fastener Type with Withdrawal Load	C_M
Nails, wet when made, dry in-service	0.25
Nails, dry when made, wet in-service	0.25
Nails, wet when made, wet in-service	0.25
Lag screws and wood screws, wet in-service	0.70

Notes:
1. Applies to both dowel-type connectors and connectors subject to withdrawal loads.
2. $C_M = 1.0$ for fasteners that are dry when fabricated and when used (in-service).

Table A-9.6 Group action adjustment factor, C_g , for wood connectors^{1,2,3,4}

A. C_g for bolt (or lag screw) connections for wood members with same properties: $E = 1,400,000$ psi; bolt or lag screw diameter, $D = \frac{3}{4}$ in.; spacing between fasteners in a row, $s = 3$ in.

$A_m =$ Area of Main Member, in ²	Number of Fasteners in Row	$A_s =$ Area of Side Member(s), in ²								
		5	8	11	14	17	30	40	56	64
5	2	1.000	0.991	0.987	0.985	0.983	0.980	0.979	0.978	0.978
	3	0.984	0.962	0.952	0.947	0.943	0.936	0.933	0.931	0.931
	4	0.954	0.918	0.902	0.893	0.887	0.875	0.871	0.868	0.867
	5	0.914	0.866	0.844	0.831	0.823	0.807	0.802	0.798	0.796
	6	0.867	0.809	0.783	0.768	0.758	0.739	0.733	0.728	0.726
	7	0.817	0.752	0.723	0.707	0.696	0.675	0.688	0.662	0.660
	8	0.766	0.698	0.667	0.650	0.638	0.616	0.608	0.602	0.600
	9	0.716	0.647	0.616	0.598	0.587	0.563	0.556	0.549	0.547
	10	0.669	0.601	0.570	0.552	0.540	0.517	0.510	0.503	0.501
8	2	0.991	1.000	0.996	0.993	0.992	0.989	0.988	0.987	0.987
	3	0.962	0.990	0.979	0.973	0.970	0.962	0.959	0.957	0.956
	4	0.918	0.971	0.953	0.942	0.936	0.922	0.918	0.914	0.913
	5	0.866	0.943	0.918	0.903	0.894	0.875	0.869	0.863	0.862
	6	0.809	0.910	0.877	0.859	0.847	0.823	0.815	0.809	0.806
	7	0.752	0.873	0.834	0.812	0.798	0.770	0.761	0.753	0.751
	8	0.698	0.833	0.790	0.766	0.750	0.719	0.708	0.700	0.697
	9	0.647	0.792	0.746	0.720	0.703	0.670	0.659	0.650	0.647
	10	0.601	0.751	0.704	0.677	0.659	0.624	0.613	0.603	0.600
11	2	0.987	0.996	1.000	0.998	0.996	0.993	0.992	0.991	0.991
	3	0.952	0.979	0.993	0.986	0.983	0.975	0.972	0.97	0.969
	4	0.902	0.953	0.978	0.967	0.961	0.947	0.942	0.938	0.937
	5	0.844	0.918	0.958	0.942	0.932	0.911	0.905	0.899	0.897
	6	0.783	0.877	0.932	0.911	0.898	0.871	0.862	0.855	0.853
	7	0.723	0.834	0.903	0.877	0.861	0.828	0.818	0.809	0.806
	8	0.667	0.790	0.870	0.841	0.822	0.785	0.772	0.762	0.759
	9	0.616	0.746	0.836	0.804	0.783	0.741	0.728	0.717	0.713
	10	0.570	0.704	0.801	0.766	0.744	0.700	0.685	0.673	0.669
14	2	0.985	0.993	0.998	1.000	0.998	0.995	0.994	0.993	0.993
	3	0.947	0.973	0.986	0.994	0.990	0.982	0.979	0.977	0.976
	4	0.893	0.942	0.967	0.983	0.976	0.961	0.956	0.952	0.951
	5	0.831	0.903	0.942	0.966	0.956	0.934	0.927	0.921	0.919
	6	0.768	0.859	0.911	0.945	0.931	0.902	0.893	0.885	0.883
	7	0.707	0.812	0.877	0.921	0.903	0.867	0.856	0.846	0.843
	8	0.650	0.766	0.841	0.894	0.873	0.831	0.817	0.805	0.802
	9	0.598	0.720	0.804	0.864	0.841	0.793	0.778	0.765	0.761
	10	0.552	0.677	0.766	0.834	0.808	0.756	0.739	0.725	0.721

(Continued)

Table A-9.6 (Continued)

A_m = Area of Main Member, in ²	Number of Fasteners in Row	A_s = Area of Side Member(s), in ²								
		5	8	11	14	17	30	40	56	64
17	2	0.983	0.992	0.996	0.998	1.000	0.997	0.996	0.995	0.995
	3	0.943	0.970	0.983	0.990	0.995	0.987	0.984	0.982	0.981
	4	0.887	0.936	0.961	0.976	0.986	0.971	0.966	0.962	0.961
	5	0.823	0.894	0.932	0.956	0.972	0.950	0.943	0.936	0.934
	6	0.758	0.847	0.898	0.931	0.954	0.924	0.914	0.906	0.904
	7	0.696	0.798	0.861	0.903	0.934	0.895	0.883	0.873	0.869
	8	0.638	0.750	0.822	0.873	0.910	0.864	0.850	0.837	0.833
	9	0.587	0.703	0.783	0.841	0.885	0.832	0.815	0.801	0.797
	10	0.540	0.659	0.744	0.808	0.858	0.799	0.781	0.765	0.760
30	2	0.980	0.989	0.993	0.995	0.997	1.000	0.999	0.998	0.998
	3	0.936	0.962	0.975	0.982	0.987	0.997	0.995	0.992	0.991
	4	0.875	0.922	0.947	0.961	0.971	0.992	0.987	0.983	0.981
	5	0.807	0.875	0.911	0.934	0.950	0.984	0.976	0.969	0.967
	6	0.739	0.823	0.871	0.902	0.924	0.973	0.963	0.953	0.950
	7	0.675	0.770	0.828	0.867	0.895	0.961	0.947	0.935	0.931
	8	0.616	0.719	0.785	0.831	0.864	0.946	0.929	0.914	0.909
	9	0.563	0.670	0.741	0.793	0.832	0.930	0.909	0.891	0.886
	10	0.517	0.624	0.700	0.756	0.799	0.912	0.888	0.867	0.861
40	2	0.979	0.988	0.992	0.994	0.996	0.999	1.000	0.999	0.999
	3	0.933	0.959	0.972	0.979	0.984	0.995	0.998	0.996	0.995
	4	0.871	0.918	0.942	0.956	0.966	0.987	0.994	0.989	0.988
	5	0.802	0.869	0.905	0.927	0.943	0.976	0.988	0.981	0.979
	6	0.733	0.815	0.862	0.893	0.914	0.963	0.980	0.970	0.967
	7	0.668	0.761	0.818	0.856	0.883	0.947	0.970	0.957	0.954
	8	0.608	0.708	0.772	0.817	0.850	0.929	0.959	0.943	0.938
	9	0.556	0.659	0.728	0.778	0.815	0.909	0.946	0.927	0.921
	10	0.510	0.613	0.685	0.739	0.781	0.888	0.932	0.909	0.902
56	2	0.978	0.987	0.991	0.993	0.995	0.998	0.999	1.000	1.000
	3	0.931	0.957	0.970	0.977	0.982	0.992	0.996	0.999	0.998
	4	0.868	0.914	0.938	0.952	0.962	0.983	0.989	0.996	0.994
	5	0.798	0.863	0.899	0.921	0.936	0.969	0.981	0.991	0.989
	6	0.728	0.809	0.855	0.885	0.906	0.953	0.970	0.985	0.982
	7	0.662	0.753	0.809	0.846	0.873	0.935	0.957	0.978	0.974
	8	0.602	0.700	0.762	0.805	0.837	0.914	0.943	0.970	0.965
	9	0.549	0.650	0.717	0.765	0.801	0.891	0.927	0.961	0.954
	10	0.503	0.603	0.673	0.725	0.765	0.867	0.909	0.950	0.942

(Continued)

Table A-9.6 (Continued)

A_m = Area of Main Member, in ²	Number of Fasteners in Row	A_s = Area of Side Member(s), in ²								
		5	8	11	14	17	30	40	56	64
64	2	0.978	0.987	0.991	0.993	0.995	0.998	0.999	1.000	1.000
	3	0.931	0.956	0.969	0.976	0.981	0.991	0.995	0.998	0.999
	4	0.867	0.913	0.937	0.951	0.961	0.981	0.988	0.994	0.996
	5	0.796	0.862	0.897	0.919	0.934	0.967	0.979	0.989	0.992
	6	0.726	0.806	0.853	0.883	0.904	0.950	0.967	0.982	0.987
	7	0.660	0.751	0.806	0.843	0.869	0.931	0.954	0.974	0.981
	8	0.600	0.697	0.759	0.802	0.833	0.909	0.938	0.965	0.974
	9	0.547	0.647	0.713	0.761	0.797	0.886	0.921	0.954	0.965
	10	0.501	0.600	0.669	0.721	0.760	0.861	0.902	0.942	0.956

B. C_g for bolt (or lag screw) connections for wood main member with $E = 1,400,000$ psi; steel side member(s) with $E = 29,000,000$ psi; bolt or lag screw diameter, $D = \frac{3}{4}$ in.; spacing between fasteners in a row, $s = 3$ in.

A_m = Area of Main Member, in ²	Number of Fasteners in Row	A_s = Area of Steel Side Member(s), in ²								
		1	2	3	4	5	7	10	12	15
5	2	0.973	0.969	0.968	0.967	0.967	0.966	0.966	0.966	0.966
	3	0.915	0.905	0.902	0.900	0.899	0.898	0.897	0.897	0.896
	4	0.838	0.824	0.819	0.816	0.815	0.813	0.812	0.811	0.811
	5	0.758	0.739	0.733	0.73	0.728	0.726	0.724	0.724	0.723
	6	0.682	0.660	0.653	0.650	0.648	0.645	0.643	0.643	0.642
	7	0.613	0.591	0.583	0.579	0.577	0.575	0.573	0.572	0.571
	8	0.554	0.531	0.523	0.519	0.517	0.514	0.512	0.512	0.511
	9	0.502	0.480	0.472	0.468	0.466	0.463	0.461	0.461	0.460
	10	0.458	0.436	0.429	0.425	0.423	0.420	0.419	0.418	0.417
8	2	0.986	0.982	0.980	0.980	0.979	0.979	0.978	0.978	0.978
	3	0.951	0.941	0.937	0.935	0.934	0.933	0.932	0.932	0.932
	4	0.901	0.884	0.878	0.875	0.874	0.872	0.870	0.870	0.869
	5	0.843	0.819	0.812	0.808	0.806	0.803	0.801	0.800	0.799
	6	0.782	0.754	0.744	0.740	0.737	0.734	0.731	0.730	0.729
	7	0.722	0.691	0.680	0.675	0.672	0.668	0.666	0.664	0.663
	8	0.666	0.633	0.621	0.616	0.612	0.609	0.606	0.605	0.604
	9	0.615	0.580	0.569	0.563	0.560	0.556	0.553	0.552	0.550
	10	0.569	0.534	0.522	0.517	0.513	0.509	0.506	0.505	0.504

(Continued)

Table A-9.6 (Continued)

A_m = Area of Main Member, in ²	Number of Fasteners in Row	A_s = Area of Steel Side Member(s), in ²								
		5	8	11	14	17	30	40	56	64
11	2	0.992	0.988	0.986	0.986	0.985	0.985	0.984	0.984	0.984
	3	0.970	0.959	0.955	0.953	0.952	0.951	0.950	0.950	0.949
	4	0.935	0.916	0.910	0.907	0.905	0.903	0.902	0.901	0.900
	5	0.892	0.866	0.857	0.853	0.850	0.847	0.845	0.844	0.843
	6	0.844	0.811	0.800	0.795	0.792	0.788	0.785	0.784	0.783
	7	0.794	0.756	0.743	0.737	0.733	0.729	0.726	0.725	0.723
	8	0.745	0.703	0.689	0.682	0.678	0.673	0.670	0.668	0.667
	9	0.698	0.653	0.639	0.631	0.627	0.622	0.618	0.616	0.615
	10	0.654	0.608	0.592	0.585	0.580	0.575	0.571	0.569	0.568
14	2	0.996	0.991	0.990	0.989	0.989	0.988	0.988	0.988	0.988
	3	0.981	0.969	0.966	0.964	0.963	0.961	0.960	0.960	0.960
	4	0.956	0.936	0.930	0.927	0.925	0.923	0.921	0.920	0.920
	5	0.924	0.896	0.886	0.882	0.879	0.876	0.873	0.873	0.872
	6	0.886	0.850	0.838	0.832	0.829	0.825	0.822	0.820	0.819
	7	0.846	0.802	0.788	0.781	0.777	0.772	0.768	0.767	0.766
	8	0.804	0.755	0.739	0.731	0.726	0.721	0.716	0.715	0.713
	9	0.762	0.709	0.691	0.683	0.677	0.671	0.667	0.665	0.664
	10	0.721	0.665	0.647	0.638	0.632	0.626	0.621	0.619	0.617
17	2	0.998	0.994	0.992	0.991	0.991	0.990	0.990	0.990	0.990
	3	0.988	0.976	0.973	0.971	0.970	0.968	0.967	0.967	0.967
	4	0.970	0.950	0.943	0.940	0.938	0.936	0.934	0.934	0.933
	5	0.946	0.917	0.907	0.902	0.899	0.896	0.893	0.892	0.892
	6	0.917	0.878	0.865	0.859	0.855	0.851	0.848	0.847	0.845
	7	0.884	0.837	0.822	0.814	0.809	0.804	0.800	0.799	0.797
	8	0.849	0.795	0.777	0.768	0.763	0.757	0.752	0.750	0.749
	9	0.813	0.753	0.733	0.723	0.717	0.711	0.706	0.704	0.702
	10	0.777	0.712	0.691	0.680	0.674	0.667	0.661	0.659	0.657
30	2	0.997	0.998	0.997	0.996	0.996	0.995	0.995	0.995	0.994
	3	0.987	0.991	0.988	0.986	0.984	0.983	0.982	0.982	0.981
	4	0.970	0.980	0.973	0.969	0.967	0.965	0.963	0.962	0.962
	5	0.947	0.964	0.953	0.948	0.945	0.941	0.938	0.937	0.936
	6	0.919	0.944	0.929	0.922	0.918	0.913	0.909	0.908	0.906
	7	0.888	0.921	0.902	0.893	0.888	0.881	0.877	0.875	0.873
	8	0.855	0.896	0.873	0.862	0.856	0.848	0.842	0.840	0.838
	9	0.821	0.869	0.843	0.830	0.822	0.813	0.807	0.804	0.802
	10	0.786	0.841	0.812	0.797	0.788	0.779	0.771	0.768	0.765
40	2	0.996	1.000	0.998	0.998	0.997	0.997	0.996	0.996	0.996
	3	0.983	0.996	0.993	0.991	0.989	0.988	0.987	0.987	0.986
	4	0.963	0.990	0.983	0.979	0.977	0.975	0.973	0.972	0.971
	5	0.936	0.981	0.970	0.964	0.961	0.957	0.954	0.953	0.952
	6	0.905	0.968	0.953	0.945	0.941	0.936	0.932	0.930	0.929
	7	0.871	0.954	0.934	0.924	0.918	0.911	0.906	0.904	0.902
	8	0.835	0.937	0.913	0.900	0.893	0.885	0.879	0.876	0.874
	9	0.798	0.919	0.890	0.875	0.867	0.857	0.849	0.847	0.844
	10	0.761	0.899	0.865	0.849	0.839	0.828	0.819	0.816	0.813

(Continued)

Table A-9.6 (Continued)

A_m = Area of Main Member, in ²	Number of Fasteners in Row	A_s = Area of Steel Side Member(s), in ²								
		5	8	11	14	17	30	40	56	64
56	2	0.994	0.999	1.000	0.999	0.998	0.998	0.998	0.997	0.997
	3	0.980	0.994	0.997	0.995	0.994	0.992	0.991	0.991	0.991
	4	0.957	0.985	0.992	0.988	0.986	0.983	0.982	0.981	0.980
	5	0.927	0.974	0.984	0.979	0.975	0.971	0.969	0.967	0.966
	6	0.893	0.959	0.975	0.967	0.962	0.957	0.953	0.951	0.949
	7	0.856	0.942	0.963	0.953	0.947	0.939	0.934	0.932	0.930
	8	0.817	0.922	0.950	0.937	0.929	0.920	0.914	0.911	0.908
	9	0.778	0.901	0.935	0.919	0.910	0.899	0.891	0.888	0.885
	10	0.740	0.879	0.919	0.901	0.890	0.877	0.868	0.864	0.860
64	2	0.994	0.998	1.000	0.999	0.999	0.998	0.998	0.998	0.998
	3	0.979	0.993	0.998	0.996	0.995	0.994	0.993	0.992	0.992
	4	0.955	0.983	0.994	0.991	0.989	0.986	0.984	0.984	0.983
	5	0.925	0.971	0.987	0.983	0.980	0.976	0.973	0.972	0.971
	6	0.890	0.955	0.980	0.974	0.969	0.963	0.959	0.958	0.956
	7	0.852	0.936	0.970	0.962	0.956	0.949	0.943	0.941	0.939
	8	0.812	0.916	0.959	0.949	0.941	0.932	0.925	0.922	0.920
	9	0.772	0.893	0.946	0.935	0.925	0.914	0.905	0.902	0.899
	10	0.733	0.869	0.932	0.919	0.907	0.894	0.884	0.881	0.877

Notes:

1. Values in this table are conservative when using smaller fastener diameter, smaller fastener spacing, and greater modulus of elasticity.

2. For both the table and the exact method shown here, cross-sectional areas are used for A_m and A_s when the member is loaded parallel to grain; when loaded perpendicular to grain, an equivalent area is used for A_m or A_s , based on the member thickness (measured in a direction parallel to the fastener) multiplied by an equivalent member width. This equivalent width is taken as the distance between the outer rows of fasteners or, where there is only one row of fasteners, as the minimum spacing between rows that would be computed if there were multiple rows of fasteners.

3. $C_g = 1.0$ for dowel-type fasteners with diameter, $D < 0.25$ in. Other values for C_g can be determined exactly (for fastener diameters > 0.25 in. and ≤ 1.0 in.) based on the following method:

- Find the bolt or lag screw diameter, D .
- Find the so-called load/slip modulus, γ , as follows:
 $\gamma = 180,000(D^{1.5})$ for dowel-type fasteners in wood-wood connections.
 $\gamma = 270,000(D^{1.5})$ for dowel-type fasteners in wood-metal connection.
- Find s , the spacing (center-to-center) between fasteners in a row.
- Find E_m and E_s , the moduli of elasticity (psi) for the main and secondary members, respectively.
- Find A_m and A_s , the cross-sectional areas (in²) for the main member and for the side member (or the sum of the areas of the side members, if there are more than one), respectively.

$$f. \text{ Find } u = 1 + \gamma \left[\frac{s}{2} \left(\frac{1}{E_m A_m} + \frac{1}{E_s A_s} \right) \right] \text{ and } m = u - \sqrt{u^2 - 1}.$$

g. Find $R_{EA} = (E_s A_s)/(E_m A_m)$ or $(E_m A_m)/(E_s A_s)$, whichever is smaller.

h. Find n = the number of fasteners in a row.

$$i. \text{ Find } C_g = \left[\frac{m(1 - m^{2n})}{n[(1 + R_{EA} m^n)(1 + m) - 1 + m^{2n}]} \right] \left[\frac{1 + R_{EA}}{1 - m} \right].$$

4. Applies to dowel-type connectors only.

Table A-9.7 Geometry adjustment factor, C_{Δ} , for wood connectors (bolts and lag screws)
A. Spacing (in.) between fasteners in a row^{a,b,c}

Loading Direction	Absolute Minimum	Minimum for Full Value
Parallel to grain	3D	4D
Perpendicular to grain	3D	Whatever is required for attached members ^d

Notes for Part A:

a. Required spacing (in.) is a multiple of the fastener diameter, D (in.).

b. A distance below the absolute minimum is, of course, not permitted—in that case, the geometry factor is $C_{\Delta} = 0$. For any distance equal to or greater than the “minimum for full value,” the geometry factor is $C_{\Delta} = 1.0$. For spacing between the two values shown in the table, the geometry factor, C_{Δ} , is taken as the actual spacing divided by the minimum spacing for full value. For example, if the actual spacing between fasteners in a row, where the load was parallel to grain, is $3.5D$, the geometry factor, $C_{\Delta} = 3.5D/(4D) = 0.875$. If the spacing in this case equaled the absolute minimum of $3D$, the geometry factor, $C_{\Delta} = 3D/(4D) = 0.75$.

c. See general notes below.

d. For fasteners in a row, where the loading is perpendicular to grain, the minimum spacing necessary to obtain the full value of the geometry factor, that is, $C_{\Delta} = 1.0$, is based on meeting the requirements for the member to which it is attached (i.e., the member whose load is parallel to grain), as long as this distance is no less than the absolute minimum value of $3D$ (assuming that both members in the connection are not oriented so that the load is perpendicular to grain).

B. Spacing (in.) between rows of fasteners^{a,b,c}

Loading Direction	Condition	Minimum Spacing
Parallel to grain	All conditions	1.5D
Perpendicular to grain ^d	$\parallel D \leq 2$	2.5D
	$2 < \parallel D < 6$	$(5\parallel + 10D)/8$
	$\parallel D \geq 6$	5D

Notes for Part B:

a. Required spacing (in.) is a multiple of the fastener diameter, D (in.).

b. Where the minimum spacing between rows of fasteners is met, the geometry factor is $C_{\Delta} = 1.0$. Otherwise, where the spacing is below the minimum allowed, the connection is not permitted—that is, $C_{\Delta} = 0$. Interestingly, the maximum spacing between rows of fasteners is also limited in the following way: a 5-in.-maximum limit is placed on the spacing between the outer rows of fasteners, in cases where the rows are parallel to the grain of the wood. This reduces the possibility of splitting as the wood member shrinks or expands (due to changes in its moisture content) perpendicular to the grain, while the bolts are fixed in place by a connecting member.

c. See general notes below.

d. The fastener length, l (in.), is defined as the length of the fastener that is actually embedded within either the main member (the dowel bearing length—see Table A-9.3) or the total length within one or more secondary members, whichever is smaller. D is the fastener diameter (in.).

(Continued)

Table A-9.7 (Continued)C. End distance (in.)^{a,b,c}

Loading Direction	Absolute Minimum	Minimum for Full Value
Parallel to grain		
Compression	$2D$	$4D$
Tension-softwood	$3.5D$	$7D$
Tension-hardwood	$2.5D$	$5D$
Perpendicular to grain	$2D$	$4D$

Notes for Part C:

a. Required end distance (in.) is a multiple of the fastener diameter, D (in.).

b. A distance below the absolute minimum is, of course, not permitted—in that case, the geometry factor is $C_{\Delta} = 0$; for any distance equal to or greater than the “minimum for full value,” the geometry factor is $C_{\Delta} = 1.0$. For end distances between the two values shown in the table, the geometry factor, C_{Δ} , is taken as the actual end distance divided by the minimum distance for full value. For example, if the end distance of a fastener loaded parallel to grain in compression is $3D$, the geometry factor is $C_{\Delta} = 3D/(4D) = 0.75$. If the end distance in this case equaled the absolute minimum of $2D$, the geometry factor is $C_{\Delta} = 2D/(4D) = 0.50$.

c. See general notes below.

D. Edge distance (in.)^{a,b,c,d}

Loading Direction	Condition ¹	Minimum Edge Distance
Parallel to grain	$1/D \leq 6$ $1/D > 6$	$1.5D$ the greater of $1.5D$ or $\frac{1}{2}$ spacing between rows
Perpendicular to grain ^e	Loaded edge Unloaded edge	$4D$ $1.5D$

Notes for Part D:

a. Required edge distance (in.) is a multiple of the fastener diameter, D (in.).

b. Where the loading direction is parallel to grain, let l be the fastener length that is actually embedded within either the main member (the dowel bearing length—see Table A-9.3), or the total length within one or more secondary members, whichever is smaller. D is the bolt or lag screw diameter.

c. Loads should not be suspended in such a way that fasteners are stressing the wood members perpendicular to grain where such fasteners are inserted below the neutral axis (i.e., in the tension region) of a single beam.



d. See general notes below.

e. Where the minimum edge distance is met, the geometry factor is $C_{\Delta} = 1.0$. Otherwise, the connection is not permitted—that is, $C_{\Delta} = 0$.

(Continued)




Table A-9.7 (Continued)

E. Spacing and end-edge distances for loading parallel and perpendicular to grain

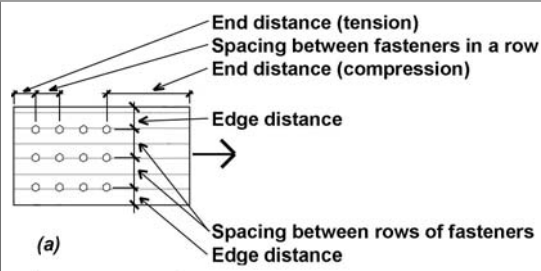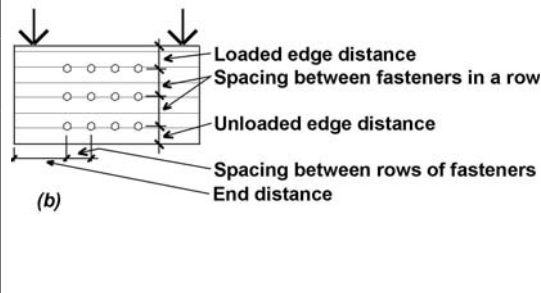 (a)	<i>End distance</i> is measured parallel to grain at the end of the member. Where the load is also parallel to grain, a distinction is made between the two member ends—one of which is in tension (i.e., where the fastener is bearing towards the member end) and one of which is in compression (where the fastener is bearing away from the member end)
 (b)	<i>Edge distance</i> is measured perpendicular to grain, for load parallel to grain <i>Loaded edge distance</i> is measured perpendicular to grain, for load perpendicular to grain; it refers to the edge that is “pushing” on the fasteners, that is, the edge where the fasteners are pushing against the member edge <i>Unloaded edge distance</i> is measured perpendicular to grain, for load perpendicular to grain; it refers to the opposite edge that isn’t loaded, that is, the edge where the fasteners are <i>not</i> pushing against the member edge
	Both <i>spacing between fasteners in a row</i> and <i>spacing between rows of fasteners</i> are self-evident, requiring only that a “row of fasteners” is clearly understood as being <i>parallel</i> to the direction of load, and having no necessary relationship to the direction of grain in the wood members

- General notes for Table A-9.7:
- 1. The geometry factor for any connection is taken as the smallest single value computed for any fastener in the connection, based on any of the criteria listed in Table A-9.7, parts A, B, C, or D, that is, for both spacing requirements as well as for end and edge distance. All such required spacing and distances are computed as multiples of the fastener diameter, D , for all wood fasteners comprising the connection; but only the smallest geometry factor found within the entire connection is applied to the connection design.
 - 2. $C_{\Delta} = 1.0$ for “end distance” and “spacing between fasteners in a row” when minimum conditions for the full value are met. There are also smaller allowable lengths for these parameters (although subject to an absolute minimum) that, while permitted, reduce the geometry factor to a value less than 1.0.
 - 3. A fastener row refers to a minimum of two fasteners in a line parallel to the direction of the load, whether or not it is parallel or perpendicular to the direction of the grain of wood. On the other hand, end and edge distance is measured parallel and perpendicular, respectively, to the direction of grain, not load, as shown in Table A-9.7, part E.
 - 4. Applies to dowel-type connectors only, and only when the fastener diameter, $D \geq \frac{1}{4}$ in. Otherwise, $C_{\Delta} = 1.0$.

Table A-9.8 Toe-nail adjustment factor, C_{tn} , for nails¹

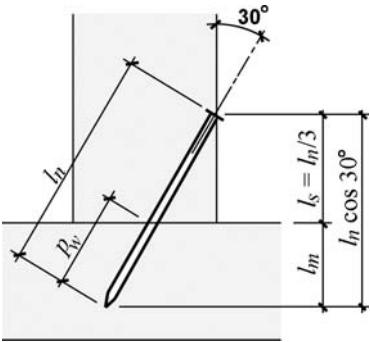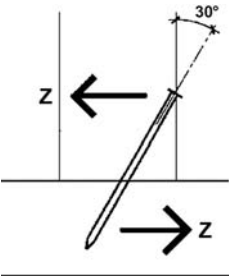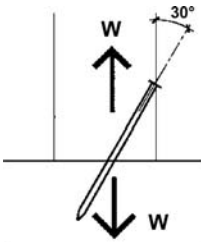
		
Diagram	Direction of Applied Force	C_{tn}
	For lateral design values, Z: Bearing lengths are as follows: In main member: $l_m = l_n \cos 30^\circ - l_n/3$ In side member: $l_s = l_n/3$ where l_n = length of nail	0.83
	For withdrawal design values, W: Depth of penetration, p_w is actual length of nail in main member.	0.67

Note:
1. Toe-nailing values are based on two assumptions:
That the nail is driven at an angle of approximately 30° to the face of the side member.
That the nail insertion point is one-third of the nail length ($l_n/3$) above the end of the side member.

Table A-9.9 Temperature factor, C_t , for wood fasteners

Temperature, T (°F)	C_t (used dry)	C_t (used wet)
$T \leq 100^\circ\text{F}$	1.0	1.0
$100^\circ\text{F} < T \leq 125^\circ\text{F}$	0.8	0.7
$125^\circ\text{F} < T \leq 150^\circ\text{F}$	0.7	0.5

Table A-9.10 Lateral design value, Z (lb) for bolts: single-shear connections, with 1½-in. side member thickness, both members same species (or same specific gravity)¹
A. Designation for single-shear lateral design values according to direction of grain²

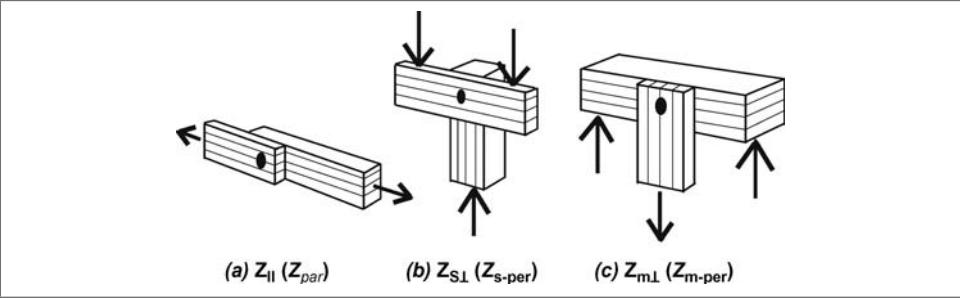

B. 1½-in. main member thickness

Species or Species Combination	½-in.-diameter Bolts			¾-in.-diameter Bolts			1-in.-diameter Bolts		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	480	300	300	720	420	420	970	530	530
Douglas Fir-Larch (North)	470	290	290	710	400	400	950	510	510
Douglas Fir-South	440	270	270	670	380	380	890	480	480
Hem-Fir	410	250	250	620	350	350	830	440	440
Hem-Fir (North)	440	270	270	670	380	380	890	480	480
Spruce-Pine-Fir	410	240	240	610	340	340	810	430	430
Spruce-Pine-Fir (South)	350	200	200	520	280	280	700	360	360
Southern Pine	530	330	330	800	460	460	1060	580	580

C. 3½-in. main member thickness

Species or Species Combination	½-in.-diameter Bolts			¾-in.-diameter Bolts			1-in.-diameter Bolts		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	610	370	430	1200	590	610	1830	680	740
Douglas Fir-Larch (North)	610	360	420	1190	560	490	1790	650	710
Douglas Fir-South	580	340	400	1140	520	550	1680	600	660
Hem-Fir	550	320	380	1100	460	500	1570	540	600
Hem-Fir (North)	580	340	400	1140	520	550	1680	600	660
Spruce-Pine-Fir	540	320	370	1080	450	480	1530	530	590
Spruce-Pine-Fir (South)	490	280	300	990	360	400	1320	420	480
Southern Pine	660	400	470	1270	660	690	2010	770	830

(Continued)

Table A-9.10 (Continued)

D. 5½-in. main member thickness


Species or Species Combination	5⁄8-in.-diameter Bolts			3⁄4-in.-diameter Bolts			1-in.-diameter Bolts		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	610	370	430	1200	590	790	2050	680	1060
Douglas Fir-Larch (North)	610	360	420	1190	560	780	2030	650	1010
Douglas Fir-South	580	340	400	1140	520	740	1930	600	940
Hem-Fir	550	320	380	1100	460	700	1800	540	860
Hem-Fir (North)	580	340	400	1140	520	740	1930	600	940
Spruce-Pine-Fir	540	320	370	1080	450	690	1760	530	830
Spruce-Pine-Fir (South)	490	280	330	990	360	570	1520	420	680
Southern Pine	660	400	470	1270	660	850	2150	770	1190

Notes:

1. Member thickness is measured parallel to the axis of the fastener.

2. Designations for lateral design values are as illustrated: (a) Z_{par} for both members with direction of grain parallel to load, (b) Z_{s-per} for side member with grain perpendicular to load and main member with grain parallel to load, and (c) Z_{m-per} for main member with grain perpendicular to load and side member with grain parallel to load. A fourth possibility, with both members having grain perpendicular to the direction of load, is rarely encountered and not included here. The official designations also shown beneath the illustrations contain "parallel" and "perpendicular" symbols instead of the abbreviations, "par" and "per," used in these tables and text.

Table A-9.11 Lateral design value, Z (lb) for bolts: double-shear connections, with 1½-in. side member thickness, both members same species (or same specific gravity)¹
A. Designation for double-shear lateral design values according to direction of grain²

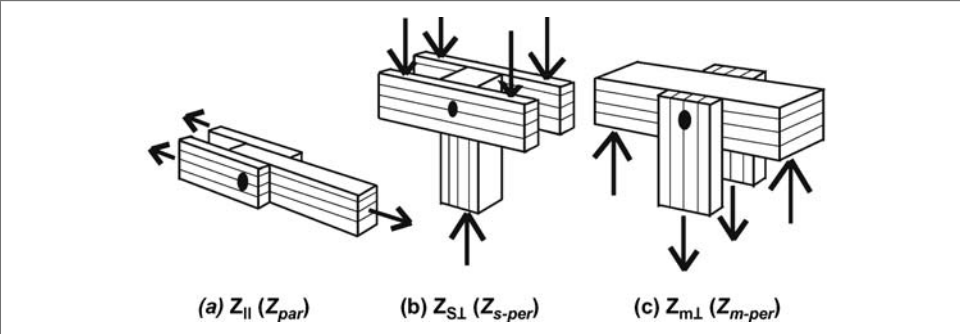

B. 1½-in. main member thickness

Species or Species Combination	½-in.-diameter Bolts			¾-in.-diameter Bolts			1-in.-diameter Bolts		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	1050	730	470	1580	1170	590	2100	1350	680
Douglas Fir-Larch (North)	1030	720	460	1550	1130	560	2060	1290	650
Douglas Fir-South	970	680	420	1450	1040	520	1930	1200	600
Hem-Fir	900	650	380	1350	920	460	1800	1080	540
Hem-Fir (North)	970	680	420	1450	1040	520	1930	1200	600
Spruce-Pine-Fir	880	640	370	1320	900	450	1760	1050	530
Spruce-Pine-Fir (South)	760	560	290	1140	720	360	1520	840	420
Southern Pine	1150	800	550	1730	1330	660	2310	1530	770

C. 3½-in. main member thickness

Species or Species Combination	½-in.-diameter Bolts			¾-in.-diameter Bolts			1-in.-diameter Bolts		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	1230	730	860	2400	1170	1370	4090	1350	1580
Douglas Fir-Larch (North)	1210	720	850	2380	1130	1310	4050	1290	1510
Douglas Fir-South	1160	680	810	2280	1040	1210	3860	1200	1400
Hem-Fir	1100	650	760	2190	920	1080	3600	1080	1260
Hem-Fir (North)	1160	680	810	2280	1040	1210	3860	1200	1400
Spruce-Pine-Fir	1080	640	740	2160	900	1050	3530	1050	1230
Spruce-Pine-Fir (South)	980	560	660	1990	720	840	3040	840	980
Southern Pine	1320	800	940	2550	1330	1550	4310	1530	1790

(Continued)

Table A-9.11 (Continued)

D. 5½-in. main member thickness


Species or Species Combination	⅝-in.-diameter Bolts			¾-in.-diameter Bolts			1-in.-diameter Bolts		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	1760	1040	1190	2400	1170	1580	4090	1350	2480
Douglas Fir-Larch (North)	1740	1030	1170	2380	1130	1550	4050	1290	2370
Douglas Fir-South	1660	940	1110	2280	1040	1480	3860	1200	2200
Hem-Fir	1590	840	1050	2190	920	1400	3600	1080	1980
Hem-Fir (North)	1660	940	1110	2280	1040	1480	3860	1200	2200
Spruce-Pine-Fir	1570	830	1040	2160	900	1380	3530	1050	1930
Spruce-Pine-Fir (South)	1430	660	920	1990	720	1230	3040	840	1540
Southern Pine	1870	1130	1290	2550	1330	1690	4310	1530	2700

Notes:

1. Member thickness is measured parallel to the axis of the fastener.

2. Designations for lateral design values are as illustrated: (a) Z_{par} for all members with direction of grain parallel to load, (b) Z_{s-per} for side members with grain perpendicular to load and main member with grain parallel to load, and (c) Z_{m-per} for main member with grain perpendicular to load and side members with grain parallel to load. A fourth possibility, with all members having grain perpendicular to the direction of load, is rarely encountered and not included here. The official designations also shown beneath the illustrations contain "parallel" and "perpendicular" symbols instead of the abbreviations, "par" and "per," used in these tables and text.

Table A-9.12 Lateral design value, Z (lb) for bolts: double-shear connections, with two ¼-in. A36 steel side plates¹
A. Designation for double-shear lateral design values according to direction of grain²

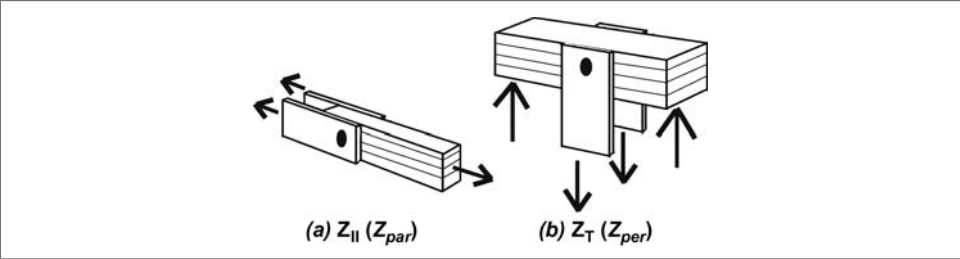

B. 1½-in. main member thickness

Species or Species Combination	½-in.-diameter Bolts		¾-in.-diameter Bolts		1-in.-diameter Bolts	
	Z_{par}	Z_{per}	Z_{par}	Z_{per}	Z_{par}	Z_{per}
Douglas Fir-Larch	1050	470	1580	590	2100	680
Douglas Fir-Larch (North)	1030	460	1550	560	2060	650
Douglas Fir-South	970	420	1450	520	1930	600
Hem-Fir	900	380	1350	460	1800	540
Hem-Fir (North)	970	420	1450	520	1930	600
Spruce-Pine-Fir	880	370	1320	450	1760	530
Spruce-Pine-Fir (South)	760	290	1140	360	1520	420
Southern Pine	1150	550	1730	660	2310	770

C. 3½-in. main member thickness

Species or Species Combination	½-in.-diameter Bolts		¾-in.-diameter Bolts		1-in.-diameter Bolts	
	Z_{par}	Z_{per}	Z_{par}	Z_{per}	Z_{par}	Z_{per}
Douglas Fir-Larch	1650	1030	3340	1370	4090	1580
Douglas Fir-Larch (North)	1640	1010	3320	1310	4810	1510
Douglas Fir-South	1590	970	3220	1210	4510	1400
Hem-Fir	1540	890	3120	1080	4200	1260
Hem-Fir (North)	1590	970	3220	1210	4510	1400
Spruce-Pine-Fir	1530	860	3080	1050	4110	1230
Spruce-Pine-Fir (South)	1430	680	2660	840	3540	980
Southern Pine	1720	1100	3480	1550	5380	1790

(Continued)

Table A-9.12 (Continued)

D. 5½-in. main member thickness

Species or Species Combination	⅝-in.-diameter Bolts		¾-in.-diameter Bolts		1-in.-diameter Bolts	
	Z_{par}	Z_{per}	Z_{par}	Z_{per}	Z_{par}	Z_{per}
Douglas Fir-Larch	2410	1420	3340	1890	5720	2480
Douglas Fir-Larch (North)	2390	1400	3320	1850	5670	2370
Douglas Fir-South	2330	1340	3220	1780	5510	2200
Hem-Fir	2260	1280	3120	1690	5330	1980
Hem-Fir (North)	2330	1340	3220	1780	5510	2200
Spruce-Pine-Fir	2230	1270	3090	1650	5280	1930
Spruce-Pine-Fir (South)	2090	1140	2890	1320	4930	1540
Southern Pine	2510	1510	3480	2000	5960	2810


Notes:

1. Member thickness is measured parallel to the axis of the fastener.

2. Designations for lateral design values are as illustrated: (a) Z_{par} for main member with direction of grain parallel to load and (b) Z_{per} for main member with grain perpendicular to load. The official designations also shown beneath the illustrations contain "parallel" and "perpendicular" symbols instead of the abbreviations, "par" and "per," used in these tables and text.

Table A-9.13 Lateral design value, Z (lb) for lag screws: single-shear connections, both members same species (or same specific gravity)^{1,2,3,4}

A. Designation for single-shear lateral design values according to direction of grain²

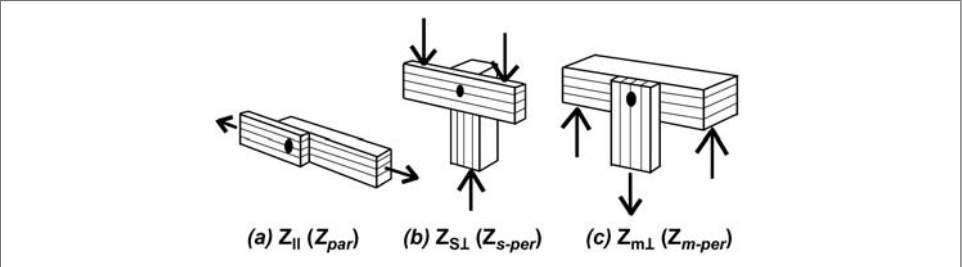

B. 1½-in. side member thickness

Species or Species Combination	½-in.-diameter Lag Screws			¾-in.-diameter Lag Screws			1-in.-diameter Lag Screws		
	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}	Z_{par}	Z_{s-per}	Z_{m-per}
Douglas Fir-Larch	390	220	270	770	440	510	1290	530	810
Douglas Fir-Larch (North)	390	220	260	760	430	510	1280	500	790
Douglas Fir-South	370	210	250	730	400	480	1230	470	760
Hem-Fir	350	190	240	700	360	450	1180	420	720
Hem-Fir (North)	370	210	250	730	400	480	1230	470	760
Spruce-Pine-Fir	350	190	240	690	350	440	1160	410	710
Spruce-Pine-Fir (South)	310	160	210	620	280	390	1070	330	630
Southern Pine	410	250	290	830	470	560	1360	600	870

(Continued)

Table A-9.13 (Continued)

C. 3½-in. side member thickness

Species or Species Combination	½-in.-diameter Lag Screws			¾-in.-diameter Lag Screws			1-in.-diameter Lag Screws		
	Z _{par}	Z _{s-per}	Z _{m-per}	Z _{par}	Z _{s-per}	Z _{m-per}	Z _{par}	Z _{s-per}	Z _{m-per}
Douglas Fir-Larch	390	270	270	960	600	610	1740	850	1060
Douglas Fir-Larch (North)	390	260	260	950	580	600	1730	830	1040
Douglas Fir-South	380	250	250	920	550	580	1670	790	1000
Hem-Fir	360	240	240	890	500	550	1610	740	950
Hem-Fir (North)	380	250	250	920	550	580	1670	790	1000
Spruce-Pine-Fir	360	240	240	880	490	540	1600	720	940
Spruce-Pine-Fir (South)	340	220	220	820	420	490	1450	630	850
Southern Pine	410	290	290	1010	650	650	1830	930	1120

Notes:

1. Member thickness is measured parallel to the axis of the fastener.

2. Designations for lateral design values are as illustrated: (a) Z_{par} for all members with direction of grain parallel to load, (b) Z_{s-per} for side members with grain perpendicular to load and main member with grain parallel to load, and (c) Z_{m-per} for main member with grain perpendicular to load and side members with grain parallel to load. A fourth possibility, with all members having grain perpendicular to the direction of load, is rarely encountered and not included here. The official designations also shown beneath the illustrations contain "parallel" and "perpendicular" symbols instead of the abbreviations, "par" and "per," used in these tables and text.

3. Tabular values are based on full value minimum penetration, p , into main member. For penetration into main member between $4D$ and $8D$, multiply tabular values by $p/(8D)$.

4. The reduced body diameter, D_r , is used in yield limit calculations for these lag screw lateral design values, except in the calculation of the dowel bearing strength for loading perpendicular to grain, F_{e-perp} , in which case the nominal diameter, D , is used.

Table A-9.14 Lateral design value, Z (lb) for common nails: single-shear connections, both members same species (or same specific gravity)^{1,2}

A. 3/4-in. side member thickness

Species or Species Combination	Nail Size (pennyweight)								
	6d	8d	10d	12d	16d	20d	30d	40d	50d
Douglas Fir-Larch	72	90	105	105	121	138	147	158	162
Douglas Fir-Larch (North)	71	87	102	102	117	134	143	154	158
Douglas Fir-South	65	80	94	94	108	125	133	144	147
Hem-Fir	58	73	85	85	99	114	122	132	136
Hem-Fir (North)	65	80	94	94	108	125	133	144	147
Spruce-Pine-Fir	57	70	83	83	96	111	119	129	132
Spruce-Pine-Fir (South)	46	58	69	69	80	93	101	110	113
Southern Pine	79	104	121	121	138	157	166	178	182

B. 1 1/2-in. side member thickness

Species or Species Combination	Nail Size (pennyweight)								
	6d	8d	10d	12d	16d	20d	30d	40d	50d
Douglas Fir-Larch	—	³ 69	118	118	141	170	186	205	211
Douglas Fir-Larch (North)	—	³ 66	115	115	138	166	182	201	206
Douglas Fir-South	—	³ 61	109	109	131	157	172	190	196
Hem-Fir	—	³ 55	102	102	122	147	161	178	181
Hem-Fir (North)	—	³ 61	109	109	131	157	172	190	196
Spruce-Pine-Fir	—	³ 53	100	100	120	144	158	172	175
Spruce-Pine-Fir (South)	—	³ 44	87	87	104	126	131	138	141
Southern Pine	—	³ 79	128	128	154	185	203	224	230

Notes:
1. Member thickness is measured parallel to the axis of the fastener.
2. Where values are not indicated, nail penetration into main member does not satisfy minimum requirements. Otherwise, except as indicated in Note 3, it is assumed that the minimum penetration of the nail into the main member is equal to 10D (see Table A-9.3 for notes on penetration).
3. These values include a reduction for penetration into main member because the penetration falls below the minimum for full value. The dowel bearing length in the main member, l_m , used in the calculation of these lateral design values does not include the length of the tapered tip, for the same reason (see Table A-9.2 for nail dimensions).

Table A-9.15 Method for determining lateral design value, Z , based on yield limit equations

For wood-wood or wood-metal connections that do not correspond to the parameters listed in the various Appendix tables, lateral design values may be determined using yield limit equations.

1. Using Table A-3.11 (specific gravity for wood members), find the specific gravity (G) for wood main and side member(s).
2. Find fastener diameter: use diameter, D , for bolts and nails (unthreaded shanks in contact with members) and reduced body diameter, D_r , for lag screws (in either case, designated as “ D ” in what follows);
3. Find dowel bearing strength, F_e , for main (F_{em}) and side (F_{es}) member(s), in psi units, using the appropriate specific gravity value for each wood member:
 - a. For $D > 0.25$ in. and wood members loaded parallel to grain, $F_e = 11,200G$.
 - b. For $D > 0.25$ in. and wood members loaded perpendicular to grain, $F_e = \frac{6100G^{1.45}}{\sqrt{D}}$.
 - c. For $D \leq 0.25$ in. and wood members, $F_e = 16,600G^{1.84}$.
 - d. For A36 steel, $F_e = 87,000$.
 - e. For A653 GR33 steel (used in certain die-formed galvanized connector plates), $F_e = 61,850$.
4. Find the dowel bending yield strength, F_{yb} , in psi units:
 - a. For bolts, use $F_{yb} = 45,000$.
 - b. For lag screws with $D = \frac{1}{4}$ in., use $F_{yb} = 70,000$; with $D = \frac{5}{16}$ in., use $F_{yb} = 60,000$; for $D \geq \frac{3}{8}$ in., use $F_{yb} = 45,000$.
 - c. For nails with 0.099 in. $\leq D \leq 0.142$ in., use $F_{yb} = 100,000$; with 0.142 in. $< D \leq 0.177$ in., use $F_{yb} = 90,000$; with 0.177 in. $< D \leq 0.236$ in., use $F_{yb} = 80,000$; with 0.236 in. $< D \leq 0.273$ in., use $F_{yb} = 70,000$.
5. Find the main member and side member dowel bearing lengths, l_m and l_s , in inches (see Table A-9.3 for guidance). Even where there are two side members, the side member bearing length only includes the bearing length in a single side member.
6. Compute the terms $R_e = F_{em}/F_{es}$ and $R_t = l_m/l_s$.
7. Compute the “reduction term,” R_d , which varies according to yield mode and fastener diameter, as follows:
 - a. For $D \leq 0.17$ in. (i.e., for nails 16d or smaller), $R_d = 2.2$.
 - b. For 0.17 in. $< D < 0.25$ in. (i.e., for most nails larger than 16d), $R_d = 10D + 0.5$.
 - c. For 0.25 in. $\leq D \leq 1$ in. (i.e., for most bolts and lag screws), $R_d = 4K_\theta$ (for Yield Modes I_m and I_s); $R_d = 3.6K_\theta$ (for Yield Mode II); and $R_d = 3.2K_\theta$ (for Yield Modes III_m, III_s, IV).

In these equations, $K_\theta = 1 + 0.25(\theta/90)$, where θ = the maximum angle (degrees) between the load and the direction of grain for either member: for example, where the load is parallel to the direction of grain in all members, $\theta = 0^\circ$, and $K_\theta = 1.0$; where one or more member's grain is perpendicular to the load, $\theta = 90^\circ$, and $K_\theta = 1.25$. For angles other than 0 or 90°, θ is always measured in such a way that it falls between 0 and 90 (i.e., instead of using $\theta = 120^\circ$, or $\theta = -45^\circ$, use $\theta = 60^\circ$ or $\theta = 45^\circ$, respectively).
8. Compute the coefficients k_1 , k_2 , and k_3 , as follows:

$$a. \quad k_1 = \frac{\sqrt{R_e + 2R_e^2(1 + R_t + R_t^2) + R_t^2R_e^3} - R_e(1 + R_t)}{(1 + R_e)}$$

$$b. \quad k_2 = -1 + \sqrt{2(1 + R_e) + \frac{2F_{yb}(1 + 2R_e)D^2}{3F_{em}l_m^2}}$$

$$c. \quad k_3 = -1 + \sqrt{\frac{2(1 + R_e)}{R_e} + \frac{2F_{yb}(2 + R_e)D^2}{3F_{em}l_s^2}}$$

(Continued)

Table A-9.15 (Continued)

9. Compute the lateral design value, Z , for all applicable yield modes (i.e., for all six modes in single shear, and for all modes except II and III_m in double shear), and select the smallest value:
a. For Yield Mode I_m, $Z = D I_m F_{em} / R_d$
b. For Yield Mode I_s, $Z = D I_s F_{es} / R_d$ for single shear and $Z = 2 D I_s F_{es} / R_d$ for double shear.
c. For Yield Mode II (single shear only), $Z = k_1 D I_s F_{es} / R_d$.
d. For Yield Mode III_m (single shear only), $Z = \frac{k_2 D I_m F_{em}}{(1 + 2 R_e) R_d}$
e. For Yield Mode III_s, $Z = \frac{k_3 D I_s F_{em}}{(2 + R_e) R_d}$ for single shear and $Z = \frac{2 k_3 D I_s F_{em}}{(2 + R_e) R_d}$ for double shear.
f. For Yield Mode IV, $Z = \frac{D^2}{R_d} \sqrt{\frac{2 F_{em} F_{yb}}{3(1 + R_e)}}$ for single shear and $Z = \frac{2 D^2}{R_d} \sqrt{\frac{2 F_{em} F_{yb}}{3(1 + R_e)}}$ for double shear.

Table A-9.16 Withdrawal design value, W , per inch of penetration (lb) for lag screws^{1,2}

Species or Species Combination	Unthreaded Shank Diameter, D (in.)								
	¼	5⁄16	¾	7⁄16	½	5⁄8	¾	7⁄8	1
Douglas Fir-Larch	225	266	305	342	378	447	513	576	636
Douglas Fir-Larch (North)	218	258	296	332	367	434	498	559	617
Douglas Fir-South	199	235	269	302	334	395	453	508	562
Hem-Fir	179	212	243	273	302	357	409	459	508
Hem-Fir (North)	199	235	269	302	334	395	453	508	562
Spruce-Pine-Fir	173	205	235	264	291	344	395	443	490
Spruce-Pine-Fir (South)	137	163	186	209	231	273	313	352	389
Southern Pine	260	307	352	395	437	516	592	664	734

Notes:
1. Penetration length for lag screws excludes tapered tip; see Table A-9.1 for dimensions and Table A-9.3 for notes on penetration.
2. Withdrawal design values assume penetration into side grain of wood member and must be reduced by 75% when inserted into end grain.

Table A-9.17 Withdrawal design value, W , per inch of penetration (lb) for nails^{1,2}

Species or Species Combination	Nail Size (pennyweight)								
	6d	8d	10d	12d	16d	20d	30d	40d	50d
Douglas Fir-Larch	28	32	36	36	40	47	50	55	60
Douglas Fir-Larch (North)	26	30	34	34	38	45	48	52	57
Douglas Fir-South	22	26	29	29	32	38	41	45	48
Hem-Fir	19	22	25	25	27	32	35	38	41
Hem-Fir (North)	22	26	29	29	32	38	41	45	48
Spruce-Pine-Fir	18	21	23	23	26	30	33	35	38
Spruce-Pine-Fir (South)	12	14	16	16	17	21	22	24	26
Southern Pine	35	41	46	46	50	59	64	70	76

Notes:

1. Penetration length for nails includes tapered tip; see Table A-9.2 for dimensions and Table A-9.3 for notes on penetration.

2. Withdrawal design values assume penetration into side grain of wood member. Nails subject to withdrawal are not permitted to be inserted into end grain of wood member.

Table A-9.18 Shear capacity, or available strength, for a high-strength bolt subjected to single shear with threads excluded from shear plane (kips)

A. Bearing-type connections¹

Bolt Type	Nominal Bolt Diameter (in.)							
	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$
A325	9.20	13.3	18.0	23.6	29.8	36.8	44.5	53.0
A490	11.5	16.6	22.5	29.5	37.3	46.0	55.7	66.3

B. Slip-critical connections (based on strength rather than serviceability)²

Bolt Type	Nominal Bolt Diameter (in.)							
	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$
A325	4.29	6.33	8.81	11.5	12.7	16.0	19.2	23.3
A490	5.42	7.91	11.1	14.5	18.1	23.1	27.3	33.4

Notes:

1. Capacities are tabulated for single-shear connections, with bolt threads excluded from all shear planes (condition X). For double shear, multiply values by 2; for threads included within shear planes (condition N), multiply values by 0.8. For double shear and threads included, multiply by $2 \times 0.8 = 1.6$.

2. Slip-critical capacities are based on standard holes and single-shear. For double shear, multiply values by 2. Slip-critical bolts must also satisfy bearing capacity values in Table A-9.19.

Table A-9.19 Bearing capacity, or available strength, for a high-strength bolt bearing on material 1 in. thick, with clear spacing between bolts (or edge) ≥ 2 in. (kips)¹

Material Being Connected	Nominal Bolt Diameter (in.)							
	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$
A36, $F_u = 58$ ksi	54.4	65.3	76.1	87.0	97.9	109	120	131
A992, $F_u = 65$ ksi	60.9	73.1	85.3	97.5	110	122	134	146

Note:
1. Capacity (available strength) is tabulated assuming that the bolt hole clear spacing (or clear spacing between bolt hole and material edge) in direction of force is no less than 2 in. For clear spacing less than 2 in., multiply capacity by $L_c/2$, where L_c is the actual clear spacing (in.). For cases where the small deformations associated with bolt bearing, at ordinary service loads, are considered to be a design issue, multiply capacity by 0.8. Where the thickness, t , of the material is other than 1 in., multiply the capacity by the thickness, t (in.). These multiplications are cumulative so that, for example, the capacity of a material with $t = \frac{5}{8}$ in., clear spacing between bolts of 1.75 in., and consideration of bearing deformations, would be equal to the tabular value multiplied by $(\frac{5}{8})(1.75)(0.8) = (\text{tabular value} \times 0.4375)$.

Table A-9.20 Minimum and maximum spacing and edge distance measured from bolt centerline for standard holes

A. Minimum bolt spacing (in.)

	Nominal Bolt Diameter (in.)							
	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$
Suggested	$1\frac{7}{8}$	$2\frac{1}{4}$	$2\frac{5}{8}$	3	$3\frac{3}{8}$	$3\frac{3}{4}$	$4\frac{1}{8}$	$4\frac{1}{2}$
Required	$1\frac{2}{3}$	2	$2\frac{1}{3}$	$2\frac{2}{3}$	3	$3\frac{1}{3}$	$3\frac{2}{3}$	4

B. Minimum edge distance (in.)¹


Type of Edge	Nominal Bolt Diameter (in.)							
	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$
Sheared edge	$1\frac{1}{8}$	$1\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{4}$	2	$2\frac{1}{4}$	$2\frac{13}{32}$	$2\frac{5}{8}$
Rolled or thermally cut edge	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{1}{2}$	$1\frac{3}{8}$	$1\frac{23}{32}$	$1\frac{7}{8}$

C. Maximum bolt spacing and edge distance (in.)

	Member Thickness (in.)							
	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{3}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$
Centerline spacing ³	6	9	12	12	12	12	12	12
Edge distance	3	$4\frac{1}{2}$	6	6	6	6	6	6

Notes:
1. Minimum edge distances, measured in the direction of force, may be reduced below these values, as long as bearing capacity is appropriately reduced (see Note 1 in Table A-9.19).
2. A value of $1\frac{1}{4}$ in. may be used for bolts at the ends of beam connection angles and shear end plates.
3. Maximum centerline spacing is measured in the direction of the applied load (longitudinally) and is valid for members not subject to corrosion, whether painted or not. For unpainted weathering steel, the maximum spacing is 7 in. or, where the thinner member is less than $\frac{1}{2}$ in., 14 times that member's thickness.

Table A-9.21 Size limitations (leg size, w) for fillet welds (in.)

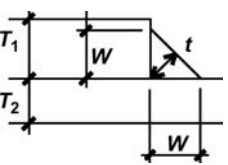	Thickness, T , of Material Being Joined (in.) ¹				
	$T < \frac{1}{4}$ in.	$T = \frac{1}{4}$ in.	$\frac{1}{4} < T \leq \frac{1}{2}$ in.	$\frac{1}{2} < T \leq \frac{3}{4}$ in.	$\frac{3}{4} < T$
Minimum weld size, w	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$
Maximum weld size, w	T	$\frac{3}{16}$	$T - \frac{1}{16}$ in.	$T - \frac{1}{16}$ in.	$T - \frac{1}{16}$ in.

Note:

1. For minimum weld size, the thickness, T , is the thinner of the two plate thicknesses being joined (either T_1 or T_2); for maximum weld size, the thickness, T , is the smallest thickness (edge) that the weld leg actually comes into contact with (T_1).

Table A-9.22 Development length in inches, l_d , for deformed bars in tension, uncoated, normal-weight concrete, with adequate spacing and/or stirrups^{1,2,3,4,5}

f'_c (psi)	Bar Number ["in.-lb." designation, with nominal diameter (in.) = bar number/8]										
	3	4	5	6	7	8	9	10	11	14	18
3000	17	22	28	33	48	55	62	70	78	93	124
4000	15	19	24	29	42	48	54	61	67	81	108
5000	13	17	22	26	38	43	48	54	60	72	96

Notes:

1. Bars must have a clear space between them at least equal to twice the bar diameter—that is, at least equal to $2d_b$ —and a clear cover at least equal to the bar diameter, d_b . Alternatively, if adequate stirrups or ties are used throughout the development length region to confine the bars and prevent splitting of the concrete, the minimum clear spacing requirement may be reduced to d_b . For bars not meeting these conditions, multiply values by 1.5.

2. Values assume "bottom" bars in tension (i.e., bars placed for positive moment in beams); for "top" bars in tension with at least 12 in. of freshly placed concrete below them, multiply values by 1.3.

3. Values may be multiplied by the ratio of required steel bar area to provided steel bar area, except in cases where the anchorage is required to reach the yield stress, f_y , or in certain high-risk seismic zones.

4. All of the modifications mentioned in Notes 1, 2, and 3 are cumulative; that is, a value may be multiplied by one or more of the applicable modification factors.

5. In any case, the development length, l_d , cannot be less than 12 in.

Table A-9.23 Development length for standard hooks in inches, l_{dh} , for uncoated bars, normal-weight concrete^{1,2,3,4,5,6}

f'_c (psi)	Bar Number ["in.-lb." designation, with nominal diameter = bar number/8]										
	3	4	5	6	7	8	9	10	11	14	18
3000	9	11	14	17	20	22	25	28	31	38	50
4000	8	10	12	15	17	19	22	25	27	33	43
5000	7	9	11	13	15	17	20	22	24	29	39

- Notes:
1. Values may be multiplied by 0.7 for all bar hooks (except those fabricated with No. 14 and No. 18 bars) with side cover of at least 2.5 in. and, for 90° hooks only, cover beyond the hook of at least 2 in.
 2. Values may be multiplied by 0.8 for all bar hooks (except those fabricated with No. 14 and No. 18 bars) where perpendicular ties or stirrups, spaced no more than $3d_b$ along the development length, enclose them; or, for 90° hooks only, where parallel ties or stirrups enclose the "vertical" and "bent" parts of the hook, also spaced no more than $3d_b$.
 3. Values may be multiplied by the ratio of required steel bar area to provided steel bar area, except in cases where the anchorage is required to reach the yield stress, f_y , or in certain high-risk seismic zones.
 4. All of the modifications mentioned in Notes 1, 2, and 3 are cumulative; that is, a value may be multiplied by one or more of the applicable modification factors.
 5. A 90° hook must be extended a distance of $12d_b$ below the bent portion of the bar, which in turn is defined by an inner radius that cannot be less than $3d_b$ for bars smaller than No. 9; $4d_b$ for No. 9, No. 10, and No. 11 bars; and $5d_b$ for No. 14 and No. 18 bars.
 6. In any case, the development length for hooks, l_{dh} , cannot be less than $8d_b$ or 6 in.

Table A-9.24 Development length in inches, l_{dc} , for deformed bars in compression^{1,2,3,4}

f'_c (psi)	Bar Number ["in.-lb." designation, with nominal diameter = bar number/8]										
	3	4	5	6	7	8	9	10	11	14	18
3000	9	11	14	17	20	22	25	28	31	38	50
4000	8	10	12	15	17	19	22	25	27	33	43
5000	8	9	12	14	16	18	21	23	26	31	41

- Notes:
1. Values may be multiplied by 0.75 where adequately confined by a spiral or ties (specifically, with a minimum ¼-in. spiral at no more than a 4-in. pitch or with No. 4 ties spaced at no more than 4 in. on center).
 2. Values may be multiplied by the ratio of required steel bar area to provided steel bar area, except in cases where the anchorage is required to reach the yield stress, f_y , or in certain high-risk seismic zones.
 3. All of the modifications mentioned in Notes 1 and 2 are cumulative; that is, a value may be multiplied by one or more of the applicable modification factors.
 4. In any case, the development length for compression, l_{dc} , cannot be less than 8 in.

Unit abbreviations and conversion

10

Table A-10.1 Unit abbreviations

SI (international system) Units	Inch-pound Units
m = meter	in. = inch
mm = millimeter	ft = foot
MPa = megapascal	<i>kip is unabbreviated</i>
N = newton	lb = pound
kN = kilonewton	psi = pounds per square inch
kg = kilogram	ksi = kips per square inch
km/h = kilometers per hour	psf = pounds per square foot
	pcf = pounds per cubic foot
	mph = miles per hour

Table A-10.2 Conversions from SI (international system) to inch-pound units

Length, Area, Volume, Section Modulus, and Moment of Inertia	Weight, Moment, and Speed	Pressure, Load per Unit Length, and Density
1 m = 3.2808 ft	1 N = 0.2248 lb	1 MPa = 145.0377 psi
1 mm = 0.0394 in.	1 kN = 0.2248 kips	1 MPa = 0.1450 ksi
1 mm ² = 0.00155 in ²	1 N-m = 0.738 ft-lb	1 kN/m = 0.0685 kips/ft
1 m ² = 10.7639 ft ²	1 kN-m = 0.738 ft-kips	1 kN/m ² = 20.8854 psf
1 m ³ = 35.3147 ft ³	1 N-m = 8.850 in-lb	1 kg/m ³ = 0.0624 pcf
1 mm ³ = 6.1024 × 10 ⁻⁵ in ³	1 kN-m = 8.850 in-kips	
1 mm ⁴ = 2.4025 × 10 ⁻⁶ in ⁴	1 km/h = 0.6214 mph	

Table A-10.3 Conversions from inch-pound to SI (international system) units

Length, Area, Volume, Section Modulus, and Moment of Inertia	Weight, Moment, and Speed	Pressure, Load per Unit Length, and Density
1 ft = 0.3048 m	1 lb = 4.4482 N	1 psi = 0.006895 MPa
1 in = 25.40 mm	1 kip = 4.4482 kN	1 ksi = 6.895 MPa
1 in ² = 645.16 mm ²	1 ft-lb = 1.3558 N-m	1 kip/ft = 14.59 kN/m
1 ft ² = 0.0929 m ²	1 ft-kip = 1.3558 kN-m	1 psf = 0.0479 kN/m ²
1 ft ³ = 0.0283 m ³	1 in-lb = 0.11298 N-m	1 pcf = 16.03 kg/m ³
1 in ³ = 16,387 mm ³	1 in-kip = 0.11298 kN-m	
1 in ⁴ = 416,231 mm ⁴	1 mph = 1.609 km/h	

References

American Concrete Institute, *Building Code Requirements for Structural Concrete* (ACI 818-08) and *Commentary*, 2008.

American Forest & Paper Association and American Wood Council, *National Design Specification for Wood Construction*, 2005 Edition, ANSI/AF&PA NDS-2005.

American Institute of Steel Construction, *Steel Construction Manual*, 13th Edition, 2005.

American Society of Civil Engineers, *Minimum Design Loads for Buildings and Other Structures* (ASCE/SEI 7-05), 2005.

This page intentionally left blank

Glossary

about [as in: compute moment *about* the neutral axis] *prep.* The term “about” is equivalent to saying, “by measuring moment arms perpendicularly from each force to.”

axial force *n.* A force parallel to the longitudinal axis of a structural element.

beams and stringers *n.* A subcategory of “timbers”; refers to lumber whose smaller nominal cross-sectional dimension exceeds 4 in. and whose larger nominal cross-sectional dimension is at least 4 in. bigger than the smaller dimension, thereby forming a rectangular shape appropriate for use as a beam, but not limited to that use.

bearing *ger.* The force exerted, in compression, by the surface of a structural element in contact with (i.e., pressing against) the surface of another element.

bending moment *n.* An effect on a structural element caused by the action of at least two parallel force components that are not co-linear, and resulting in a distribution of stress within the element's cross section characterized by maximum stress at the “extreme fibers” (opposite edges) and zero stress at the neutral axis.

bolt *n.* A type of fastener used in both wood and steel construction consisting of a head and threaded shank, onto which is placed a nut; bolts are first inserted into a bolt hole before being tightened.

brittle *adj.* Lacking ductility, that is, lacking the ability to absorb energy, therefore being susceptible to catastrophic and sudden failure, especially under dynamic loading.

cantilevered beam *n.* A beam that extends beyond one or both of its supports.

compact section *n.* Steel shapes proportioned so that, when used in bending, the strength and reserve capacity of the element will not be compromised by local flange or web buckling within those portions of the cross section subjected to compressive stress; this is primarily a function of the relative thickness of flanges and webs; for noncompact shapes, the available strength is reduced.

continuous beam *n.* Any beam that extends over more than two supports and is, therefore, *statically indeterminate*.

couple [of equal and opposite forces on a cross section in bending] *n.* Two equal and opposite forces, F , separated by a moment arm, τ (i.e., two such forces that are not co-linear), and therefore causing a moment, $M = F \times \tau$.

curing [of concrete] *ger.* The chemical process by which concrete hardens; the reaction of portland cement and water within the concrete mix.

cylinder strength [of concrete] *n.* The compressive stress at which a 6 in. $\times$ 12 in. cylinder of concrete, which has cured for 28 days, fractures.

deflection *n.* The movement measured perpendicular to the longitudinal axis of a structural element under load, typically a beam; the term usually refers to the *maximum* deflection, often at midspan.

determinate *adj.* Pertaining to a class of structures whose reactions can be determined using only equations of equilibrium; includes simply supported beams, cables, three-hinged arches, and pinned trusses formed from simple triangles.

development length *n.* For reinforcement in reinforced concrete structures, the minimum bar length such that any tendency for the bar to slip relative to the concrete is counteracted.

dimension lumber *n.* Lumber whose smaller nominal cross-sectional dimension is 4 in. or less; used extensively in light wood framing.

ductile *adj.* Having the capacity to absorb energy without fracturing; a quality of steel, but not of cast iron; of wood (in compression), but not of unreinforced concrete or masonry; see *brittle*.

elastic [behavior of material] *adj.* A material property characterized by a return to the initial shape after a load is first applied and then removed; associated with *linear* stress-strain behavior.

elastic moment *n.* The largest bending moment that can be sustained by a structural element such that all stresses within a given cross section are within the elastic range; in steel, the distribution of stresses coinciding with an elastic moment is linear, with a maximum value equal to the yield stress, F_y .

equilibrium *n.* A state of “rest,” or balance, characterized by the sum of all forces in any direction being zero and the sum of all moments about any axis being zero; in a “plane” (two-dimensional) structure, conditions of static equilibrium are met when all forces in the *x*- and *y*-directions (i.e., those axes that define the plane in which the structural element exists) equal zero, and all moments about the *z*-axis equal zero.

free-body diagram [FBD] *n.* A diagram of a structural element (or portion thereof) abstracted from its context, together with all forces and moments acting on the element, both externally (ordinary loads and reactions) and internally (at cross sections where the element has been “cut,” representing internal shears, axial forces, and bending moments).

force *n.* A vector with magnitude and direction represented by an arrow, ordinarily described as a *load* or *weight*, and measured in units of pounds or kips.

graded [lumber] *adj.* Having a mark that describes the quality of a given piece of lumber; typical grades include *select structural*, *No. 1*, *No. 2*, *No. 3*, *stud*, *construction*, *standard*, and *utility*.

grain [of lumber] *n.* The directional pattern observed on the surface of lumber (or manufactured products such as plywood) corresponding to the groups of cellulose fibers originally running longitudinally up the trunk of the tree.

indeterminate *adj.* Pertaining to a class of structures whose reactions cannot be determined using only equations of equilibrium; analysis of such structures requires, in addition to equilibrium, consideration of compatibility of displacements, and therefore of the *relative stiffness* of structural elements; such structures are also described as *redundant*, in that they contain elements, or constraints, beyond what is required for *equilibrium*.

influence area *n.* The area in plan within which a load will have an effect upon (i.e., influence) a structural element, formerly used in the calculation of *live load reduction*; not to be confused with *tributary area*, but rather equal to the tributary area times the live load element factor, K_{LL} .

internal hinge *n.* A connecting device within a structural form that prevents translation (vertical or horizontal moment) of one side relative to the other, but allows rotation; present in three-hinged arches and multi-span determinate beams.

joist [steel or wood] *n.* One of a series of closely spaced and parallel beams supporting a floor; in wood-frame construction, joists are commonly made from *dimension lumber* and spaced at 16 in. or 24 in. on center.

knot [in lumber] *n.* A defect in a piece of lumber characterized by the interruption of the board's parallel grain by circular rings corresponding to the former position of a branch.

lag screw *n.* A type of fastener used in wood construction consisting of a head, shank, and tapered tip; part of the shank and tapered tip are threaded; sometimes called *lag bolt*.

leeward *adj.* Referring to the side of a building on the far side relative to the direction of the wind; see *windward*.

lignin *n.* The “glue” binding cellulose fibers together within a wood cross section.

linear [e.g., stretching and shortening on a cross section subjected to bending] *adj.* In a straight line; referring to the straight-line stress-strain (or load-deformation) curves of certain materials, within their elastic ranges.

live load reduction *n.* The permitted reduction of live loads assumed to be present on relatively large areas, justified by the probabilistic argument that the worst-case live load values found in building codes (determined for relatively small areas) are increasingly less likely to be valid as the areas being considered get larger; calculations for live load reduction were formerly based on the so-called *influence area*, but now are based on the *tributary area* multiplied by a live load element factor, K_{LL} .

live load element factor [see *influence area*]

main member *n.* Where two structural elements are connected using nails or lag screws, the member into which the fastener end terminates; with bolts, the thicker of the two members, if any; or the middle member in three-member (usually bolted) connections.

moisture content *n.* A measure of the water within a piece of wood, defined as the weight of water divided by the dry weight of the wood and expressed as a percentage; the moisture content (m.c.) separating dry (“seasoned”) and wet (“green”) lumber is about 19%.

modulus of elasticity *n.* A material property defined as the change in stress divided by the change in strain; therefore, the slope of a stress-strain curve, implicated in the “stiffness,” but not the strength, of a material.

moment of inertia *n.* For structural elements subjected to bending, a cross-sectional property indicating the section’s contribution to stiffness; calculated by finding the sum of the products of areas and the square of their distances to the centroidal axis of the section.

nail *n.* A type of fastener used to connect two pieces of wood consisting of a head, shank, and tapered tip; typically driven into the wood by means of a hammer or pneumatic device.

penetration *n.* For nails and lag screws, the length of the fastener within the main member.

plane structure *n.* A structure or structural element that can be modeled as existing, and moving under the application of loads, on a two-dimensional (plane) surface.

plastic [behavior of material] *adj.* A material property characterized by a failure to return to the initial shape after a load is first applied and then removed; steel, for example, has a distinct plastic range beyond its *elastic range*.

plastic moment *n.* In steel, the bending moment at a cross section within a structural element corresponding to a stress distribution in which all stresses are assumed to be equal to the yield stress, F_y , half in tension and half in compression.

point of infection *n.* A point along a structural element subject to bending marking the transition from positive to negative moment; a point of zero moment between regions of bending with opposite curvature.

ponding *ger.* A phenomenon associated with flat or low-slope roofs in which rain water, collecting in the deflected areas at the midspan of roof beams, causes increased deflection as it accumulates, leading to progressively larger deflections and, potentially, structural failure; can be prevented by providing adequate slope, proper drainage, and camber for large spans.

posts and timbers *n.* A subcategory of “timbers”; refers to lumber whose smaller nominal cross-sectional dimension exceeds 4 in. and whose other nominal cross-sectional dimension is the

same or no more than 2 in. bigger than the smaller dimension, thereby forming a relatively square shape appropriate for use as a column (post), but not limited to that use.

reaction *n.* For any structural element, the forces and moments at its supports necessary to resist the action of applied loads, thereby maintaining a condition of *equilibrium*.

redundant [see *indeterminate*]

reinforcement (steel) ratio[in reinforced concrete] *n.* The ratio of the area of reinforcing steel to the gross area, for columns; for beams, the ratio of the area of reinforcing steel to the area defined by the beam width times the beam depth measured from the face of concrete in the compression zone to the centerline of tensile steel reinforcement.

relative stiffness *n.* The stiffness of one element (stiffness defined for elements subjected to bending as the *modulus of elasticity* times the *moment of inertia*; for elements subjected to axial force, as the *modulus of elasticity* times the cross-sectional area) compared to that of another; where two or more elements combine to resist the same loads, those loads are resisted by each element in proportion to its relative stiffness.

residual stress *n.* Stress “locked in” to a structural element, usually as an unintended but unavoidable result of heating and cooling during the manufacturing process (e.g., hot-rolled steel sections), but sometimes as a deliberate technique for improving material qualities (e.g., tempered glass).

sag [of a cable] *n.* The vertical distance measured from the low-point of a cable to the level of the supports.

sag point *n.* The position along the length of a cable corresponding to the lowest point; see *sag*.

section modulus *n.* A cross-sectional property indicating that section’s relative strength in bending; equals the *moment of inertia* divided by half the height of the section (for symmetrical sections).

shear force *n.* An internal force within a cross section perpendicular to the longitudinal axis of the structural element.

side member *n.* Where two structural elements are connected using nails or lag screws, the member into which the fastener is first inserted; with bolts, the thinner of the two members, if any; or the two outside members in three-member (usually bolted) connections.

sign [of a *bending moment* or *shear force*] *n.* An arbitrary assignment of “positive” or “negative” corresponding to rotational direction (for a *bending moment*) or vertical direction (for *shear* in a beam); for beams, positive bending corresponds to tension on the bottom and compression on the top of the cross section, with a counterclockwise moment acting on the right side of a *free-body diagram*; positive shear corresponds to an downward-acting force on the same *free-body diagram*.

simply supported beam *n.* A beam supported by a hinge and a roller, the hinge preventing all translation but allowing rotation, and the roller preventing translation perpendicular to the longitudinal axis of the beam while allowing “horizontal” translation and rotation; such a model is commonly applied to ordinary steel and wood beams and joists, which both approximates their actual behavior and allows them to be analyzed as *statically determinate* structures.

shear lag *n.* A phenomenon encountered when a connection is made to only a portion of a steel element in tension so that the cross section in the vicinity of that connection is only partially, and incompletely, stressed.

slenderness ratio *n.* A dimensionless property of a structural element subjected to axial compression, indicating its susceptibility to buckling, and defined as the effective length divided by the radius of gyration; the more “slender” the element, the greater the tendency to buckle.

spandrel [beam or girder] *adj.* At the outside face of a building.

specific gravity *n.* A material property equal to the relative density of the material compared to that of water.

spiral [in a reinforced concrete column] *n.* A continuous steel wire in the shape of a spiral used to confine both longitudinal reinforcing steel and concrete within a round cross section.

stagnation pressure [see *velocity pressure*]

statically determinate [see *determinate*]

statically indeterminate [see *indeterminate*]

stud [steel or wood] *n.* One of a series of closely spaced and parallel posts comprising a wall; in wood-frame construction, studs are commonly made from *dimension lumber* and spaced at 16 in. or 24 in. on center.

tension-controlled member *n.* A reinforced concrete element in which failure is initiated by yielding of reinforcing steel in tension, rather than by crushing of concrete in compression.

thickness [of wood cross section] *n.* The smaller dimension of a wood cross section.

tie [in a reinforced concrete column] *n.* One of a series of steel reinforcing bars placed around the perimeter of reinforced concrete columns and used to confine both longitudinal reinforcing steel and concrete within rectangular cross sections.

timbers *n.* Lumber whose smaller nominal cross-sectional dimension is greater than 4 in.

torsion *n.* An effect on a structural element caused by the action of a moment about the element's longitudinal axis; also referred to as torque or twisting.

tributary area *n.* The floor or roof area assigned to each structural element, measured from the centerlines between those elements; used to determine the distribution of loads; results in accurate load values only in special cases without cantilevers or continuous (*indeterminate*) elements, and with symmetrical placement of loads; otherwise, still useful as an approximate means for assigning loads.

unbraced length [between lateral supports on a beam] *n.* The distance between lateral supports on a beam, used to determine the beam's susceptibility to lateral-torsional buckling and, therefore, the reduction in allowable bending stress.

under-reinforced [concrete beams] *adj.* Having the desirable property that failure is initiated by yielding of reinforcing steel in tension rather than by crushing of concrete in compression; such behavior is implemented by requiring a minimum steel strain at failure of 0.004 (or 0.005 to take advantage of the highest “strength reduction” factor for bending).

uniformly distributed [load] *adj.* Spread out evenly over a floor or roof (in which case it is measured in units of pounds per square foot), or over a linear element such as a beam (in which case it is measured in units of pounds or kips per linear foot).

unservicable *adj.* Not useful or adequate for its intended purpose, due to such things as excessive vibration or deflection under normal loads.

velocity (or stagnation) pressure *n.* The pressure (uniformly distributed load) assumed to act on the surface of a building, caused by the force of a constant wind; proportional to the square of the wind's speed.

weld *n.* A type of fastening used in steel construction in which molten steel deposited by an electrode cools and joins two structural steel elements together. *v.* To engage in the activity of depositing such electrode-steel in order to connect two steel structural elements together.

width [of wood cross section] *n.* The larger dimension of a wood cross section.

windward *adj.* Referring to the side of a building directly in the path of the wind; see *leeward*.

withdrawal *n.* A mode of failure for nails or lag screws caused by the action of a tensile force that pulls (withdraws) the fastener out from its intended position.

workability [of concrete] *n.* Being of a consistency that permits proper mixing and placement; not too stiff.

yielding [of steel] *ger:* A characteristic property of steel in the plastic range in which the material is able to strain without any increase in stress—that is, deformations can increase at a constant load; the stress at which yielding occurs, marking the end of the *elastic* range, is called the yield stress.

Index

A

Adjustment factor
 beam stability, 139, 275
 column stability, 109, 110, 270
 duration of load, 349
 flat use, 274
 geometry, 200, 202, 203, 206, 208, 214, 356
 group action, 350–5
 repetitive member, 275
 size, 139
 temperature, 267, 271, 277, 279, 282, 359
 toe-nail, 200, 359
 volume, 274–5
 wet service, 199, 279, 281, 350
Allowable strength design, 80, 150
Allowable stress design, 79–80, 133–4, 153, 311
Arch, three-hinged, 12–14, 29–30
Arch, two-hinged, 14
Area, effective net, 97, 99
Area, gross, 90, 96–9
Area, influence, 41, 42
Area, net, 90
Area, tributary, 2–7, 183

B

Beam, 2, 10, 18, 129, 193
Beam, continuous, 130, 131, 171
Beam, simply supported, 8, 10–12, 19–22, 130, 131, 171
Beams and stringers, 73
Bending, 8, 18, 131, 151–7, 173–5
Bending moment, *see* Moment
Bernoulli, Daniel, 49
Bolt, 88, 92, 98, 193, 194, 195, 196, 201, 204, 206, 209, 217, 226–7, 229, 284
Bolt hole, 87, 90, 97, 226, 227, 228–9
Bond, 165, 238, 240, 242, 245
Boundary layer, 50, 52
Brittleness, 70–1
Buckling, 37, 107, 108, 109, 115–17, 153–7

C

Cable, 14, 28, 30, 70
Cantilever, 23, 130
Column, 1, 5–7, 42, 77, 107–27, 193, 245, 246, 247, 317
Compact section, 153, 154, 156

Compression, 62, 87, 107, 244, 245, 247
Concrete, 61, 62, 70, 71, 75, 104, 120, 121, 122, 123, 124, 125, 126, 164, 169, 171, 174, 175, 179, 181, 187, 238
Concrete, reinforced, 70–1, 75–7, 81, 104–5, 120–7, 164–91, 238–47, 312, 328, 342, 343
Confinement, 121, 239, 245
Connection, 58, 193–247, 347–73
Constraint, 11, 13, 15, 31, 71, 75, 193, 194
Corrosion, 68, 122, 165
Couple, 134, 198
Cover, 10, 76, 105, 135, 165, 169, 176, 239, 240
Curing, 70, 71, 104
Cylinder strength, *see* Strength cylinder

D

Deflection, 4, 129, 160, 178–9
Deformation, 31, 33, 61, 97
Determinate, 7, 9, 10, 28, 33, 171, 175
Development length, 238–44, 372, 373
Diagram, free-body, 9–10, 14, 18, 20, 21, 24, 26, 29, 30, 31, 88
Diagram, load, 3, 4, 5, 11, 13, 15, 20, 23, 32, 41, 45, 48, 82, 83
Dimension lumber, *see* Lumber dimension
Ductility, 61, 68, 70

E

Earthquake, 1, 4, 6, 40, 46, 54, 55, 81, 194
Elastic, 36, 61, 68, 115–16, 117, 132, 151, 152, 153, 155
Elongation, 89, 129, 132, 133
Equilibrium, 7–10
Euler, Leonard, 107–8, 109, 110, 115
Exposure, 46, 47, 51

F

Fastener, *see* Connection
Fatigue, 65
Fireproofing, 105
Flexure, *see* Bending
Force, 1, 17, 18, 22, 28, 29, 30, 87, 92
Force, axial, 18, 19, 22, 28, 29, 30
Force couple, *see* Couple
Force, internal, 17–31, 87, 136
Force, shear, 18, 22, 91, 136, 137, 241
Fundamental period of vibration, 55, 262

G

Gage, 88
 Girder, 2, 3, 4, 5, 157, 162, 193, 242
 Glued-laminated lumber, 64, 65, 139, 265, 266, 267, 268, 271, 272–3, 274, 277, 278, 279
 Grain, 63, 65, 198, 222, 224, 225
 Gust factor, 52

H

Hinge, 9, 10, 12, 29, 193, 194, 226
 Hinge, internal, 13–14
 Hollow structural section (HSS), 69, 75, 163, 302, 304
 Hook, 241, 242, 243, 372

I

I-joist, 67
 Importance factor, 46, 50, 254, 257, 263
 Indeterminate, 7, 29, 31–3, 171
 Inelastic, 69, 115–17, 155
 Inflection, point of, 244

K

Knot, 63, 64, 65

L

Lag screw, 90, 92, 194, 195, 198, 201, 212, 222, 347, 348
 Laminated veneer lumber (LVL), 65–6
 Lap splice, *see* Splice
 Leeward, 48, 52, 54, 255, 256
 Length, effective, 98, 122, 139, 233, 317
 Length, unbraced, 108, 110, 117, 122, 153, 154, 156, 157
 Lignin, 63
 Line of action, 8, 11
 Linear, 1, 57, 61, 62, 132, 133
 Live load, *see* load, live
 Live load element factor, 42
 Live load reduction, 6, 42, 43
 Load, 1, 2, 39–60, 65, 82, 83
 Load, concentrated, 4, 5, 139
 Load, dead, 39–41
 Load, distributed, 2, 3, 23
 Load, earthquake, 46
 Load, environmental, 46–60, 253
 Load, live, 41–5, 46, 252
 Load, seismic, 54–60
 Load, snow, 46–9, 254
 Load, wind, 49–54
 Load factor, 80–1, 199, 311
 Load path, 6–7, 57

Load resistance factor design, 81
 LRFD, *see* load resistance factor design
 Lumber, dimension, 73–4, 139, 140, 147, 265

M

Main member, 90, 196, 213, 217, 360–4
 Method of sections, *see* Section method
 Modulus of elasticity, 61, 62, 68, 132, 279, 280
 Moisture content, 64, 199
 Moment, 17–31, 107, 108, 134–5, 140, 142, 161
 Moment, elastic, 132, 151, 152, 153, 154
 Moment, internal, 10
 Moment, plastic, 133, 135, 151, 152, 153, 154, 156
 Moment arm, 11
 Moment of inertia, 34–5

N

Nail, 90, 193, 194, 196, 198, 200, 201, 215, 222, 223
 Neutral axis, 63, 132, 133, 137–8
 Newton, Isaac, 1, 7
 Nonlinear, 57, 61, 132, 133, 166

O

Open-web steel joist (OWSJ), 69–70
 Oriented strand board (OSB), 67

P

Parallel strand lumber (PSL), 66
 Period, *see* Fundamental period of vibration
 Plastic, 36, 61, 151, 153, 154
 Plate, 194, 195, 209, 237
 Plate, gusset, 97, 100
 Plate, pin-connected, 99, 103–4
 Plywood, 66, 67
 Ponding, 129
 Posts and timbers, 73, 266, 268, 272, 288
 Pressure, velocity, 49, 50, 51–2

R

R-value, 47
 Radius of gyration, 37, 98, 108, 122
 Reaction, 1, 9, 10–17
 Rebar, *see* Reinforcing bar
 Redundant, *see* Indeterminate
 Reinforcement ratio, 121, 126
 Reinforcing bar, 70, 75, 164, 165, 175, 176, 177, 193, 238, 239, 244
 Response modification factor, 56
 Roof, 1, 46–7, 194
 Rupture, 68, 87, 97, 98–9

S

Sag, 14, 16
 Section method, 28–9
 Section modulus, 36, 134–5, 151, 153
 Seismic, *see* Earthquake
 Seismic design category, 259, 263
 Seismic load, *see* Load earthquake
 Seismic response coefficient, 263
 Seismic weight, *see* Weight seismic
 Shear, 18, 19, 22, 23, 91, 145, 157–9, 185–91, 196–221, 228, 229
 Shear, double, 196, 198, 199, 206, 209, 217, 361, 363
 Shear, single, 196, 197, 198, 201, 204, 212, 215, 360, 365
 Shear lag, 97, 313
 Shrinkage (of concrete), 71, 178
 Side member, 196, 198, 199, 365, 366, 367
 Sign convention, 10, 11, 13
 Slenderness ratio, 98, 108, 110, 115–16
 Space frame, 70
 Spandrel, 2, 4, 5
 Spiral, 76, 77, 121, 245, 328
 Splice, 97, 244, 245, 246, 247
 Stagnation pressure, *see* Pressure velocity
 Statics, 1–37, 249–50
 Steel, 61, 68–70, 74–5, 96–104, 115–20, 121, 150–64, 226–38
 Steel ratio, *see* Reinforcement ratio
 Stiffness, 33, 35, 55
 Stiffness, relative, 7
 Stirrup, 76, 185, 186, 187, 189
 Story, soft, 57
 Story, weak, 57
 Strain, 61–2, 68, 123, 132, 133, 165, 166
 Strength, 33–7, 70, 109, 122, 151, 165, 234
 Strength, cylinder, 70, 104, 167
 Strength design, 80–5, 150, 153, 168, 187, 311
 Strength reduction factor, 80–1, 312
 Stress, 61, 68, 79, 151, 153
 Stress, axial, 87, 107
 Stress, bending, 130–8
 Stress, buckling, 108, 109, 115, 116
 Stress, compressive, 69, 70, 107, 109, 224
 Stress, residual, 68–9, 115
 Stress, shear, 92, 136, 137, 138, 139, 157, 185
 Stress, tension, 90, 133, 157–8, 164–5
 Stress block, 44, 168, 171, 173

Stringers, *see* Beams and stringers

Structure, axial-force, 18, 28–9, 30

Structure, plane, 7, 8

Structure, rigid-body, 9

Stud, 69, 73

Symmetry, 7, 10, 36, 232

T

Tear-out, group, 91, 92, 94, 315

Tear-out, row, 91, 92, 94, 315

Tension, 22, 64, 87–105, 229, 238–44, 244–5, 265, 284, 313

Tension-controlled, 173, 343

Ties, 121, 328

Timbers, 73, 141

Truss, 28–9, 67, 100

U

Under-reinforced beam, 165, 166, 173, 175

Units, 1, 375–6

Unserviceable, 129

V

Velocity pressure, *see* pressure, velocity

W

Weight, seismic, 55, 58–9, 60

Weld, 98, 193, 226, 230–8

Weld, fillet, 230, 231, 232, 233–4, 371

Weld, groove, 230

Weld, plug, 230

Weld, slot, 230

Whitmore section, 97, 98

Whitney, C.S., 167

Wind, 1, 4, 6, 46, 51, 52, 194

Wind speed, 46, 49, 50

Windward, 51

Wood, 61, 62, 63–7, 73–4, 89–96, 109–15, 139–50, 185, 194–226

Workability, 71

Y

Yield limit equations, 199

Yielding, 68, 69, 96, 97, 98, 115, 122, 158, 165, 173, 186, 198